

---

## 2014 Center Console Owner's Manual

---

# ROBALO BOATS

## OWNER'S/OPERATOR'S MANUAL

P.O. Drawer 928  
300 Industrial Park Blvd.  
Nashville, GA 31639

Phone: 229-686-7481

Fax: 229-686-3660

This manual has been compiled to help you operate your boat with safety and pleasure. It contains details of the craft, typical equipment supplied or fitted, its systems and information on its operation and maintenance. Please read it carefully and familiarize yourself with your boat before using it.

If this is your first boat, or you are changing to a new type, for your own

comfort and safety please ensure that you obtain handling and operating experience before "assuming command" of the boat. Your dealer or national sailing federation or yacht club will be pleased to advise you of local sea schools or competent instructors.

**Please keep this manual in a secure place and hand it over to the new owner when you sell the craft.**

For a complete list of standard and optional features and equipment, consult your local Robalo dealer. Due to a policy of continual product improvement, specifications are subject to change without notice. The weights and volumes shown are estimated and can vary from boat to boat because of equipment, etc.  
Robalo boats meet or exceed both NMMA and U.S. Coast Guard standards.

Est. 9/5/13

---

## **Model Information**

---

This manual contains information on the following models:

- R180
- R200
- R206 Cayman

The information refers to standards and options available on the 2014 model year.

***Thank you for selecting a Robalo Center Console!***

A large, stylized 3D logo of the word "ROBALO" in a metallic, brushed metal finish. The letters are thick and have a slight shadow, giving them a three-dimensional appearance. The logo is centered horizontally on the page.

---

# ROBALO BOATS OWNER'S MANUAL

---

Model Information	2	BILGE PUMP	4-3
<b>HAZARD COMMUNICATION LABELS</b>	<b>i</b>	RUNNING AND NAVIGATIONAL LIGHTS	4-3
<b>INTRODUCTION</b>	<b>1-1</b>	STEREO SOUND SYSTEM	4-3
WELCOME ABOARD!	1-1	FIRE EXTINGUISHERS	4-3
ABOUT THIS MANUAL	1-1	<b>UNDERWAY</b>	<b>5-1</b>
CONSTRUCTION & STANDARDS	1-2	TRANSPORTING YOUR BOAT	5-1
RESPONSIBILITIES	1-4	LAUNCHING AND LOADING	5-2
LAWS AND REGULATIONS	1-5	BOARDING YOUR BOAT	5-4
OWNER'S LOGS AND RECORDS	1-6	FUELING	5-5
WARRANTY TRANSFER POLICY	1-6	OPERATING YOUR BOAT	5-6
FUEL USAGE CHART	1-9	ANCHORING YOUR BOAT	5-11
TRAVEL PLAN LOG	1-10	MOORING YOUR BOAT	5-12
<b>BOATING SAFETY</b>	<b>2-1</b>	SHUTTING DOWN THE ENGINE	5-12
HAZARD COMMUNICATION	2-1	<b>PREVENTIVE MAINTENANCE AND REPAIR</b>	<b>6-1</b>
SAFETY RECOMMENDATIONS	2-1	ENGINE	6-1
SAFETY EQUIPMENT	2-4	TUNE-UP	6-2
RUNNING AND NAVIGATION LIGHTS	2-5	FUEL SYSTEM	6-2
SAFETY AFLOAT	2-5	MONTHLY INSPECTION	6-2
WATER SPORTS	2-12	OUTBOARD DRIVE UNIT	6-2
WAKEBOARD TOWER AND HOLDERS	2-13	PROPELLERS	6-3
<b>SYSTEMS</b>	<b>3-1</b>	BILGE	6-3
ELECTRICAL SYSTEMS	3-1	<b>TROUBLESHOOTING</b>	<b>7-1</b>
FUEL SYSTEM	3-4	<b>INTERIOR AND EXTERIOR CARE</b>	<b>8-1</b>
MARINE SANITATION DEVICES	3-4	FIBERGLASS AND GELCOAT	8-1
<b>COMPONENTS</b>	<b>4-1</b>	HULL BOTTOM MAINTENANCE	8-2
DASHBOARD AND INSTRUMENT PANEL	4-1	BOTTOM PAINT (ANTI-FOULING)	8-2
HYDRAULIC STEERING SYSTEM	4-2	DECK HARDWARE AND FITTINGS	8-2
MULTIFUNCTION NAVIGATION DISPLAY SYSTEM	4-2	WINDSHIELD AND PORTHOLE	8-3
THROTTLE	4-2	CARPET	8-3
CONTROLS	4-2	SEAT COVERINGS AND VINYL	8-3
POWER TRIM	4-2	CANVAS (WEATHER COVERINGS)	8-4





Table of Contents continued on next page

<b>WINTERIZING AND STORAGE</b>	<b>9-1</b>
LIFTING THE BOAT	9-1
DRY STORAGE AND PREPARATION	9-1
SYSTEMS AND COMPONENTS	9-2
ENGINE	9-2
FUEL SYSTEM	9-2
BATTERY	9-2
RECOMMISSIONING	9-3
<b>NAUTICAL GLOSSARY</b>	<b>10-1</b>
<b>WARRANTY</b>	<b>11-1</b>
<b>WIRING SCHEMATICS</b>	<b>12-1</b>

# HAZARD COMMUNICATION LABELS

Some or all of the hazard communication labels shown on the following pages can be found in various locations on your boat. If your boat is missing any of these labels, notify your Robalo dealer for replacement.

Note: Respective labels are determined by the standard and optional equipment actually installed on your boat upon delivery.

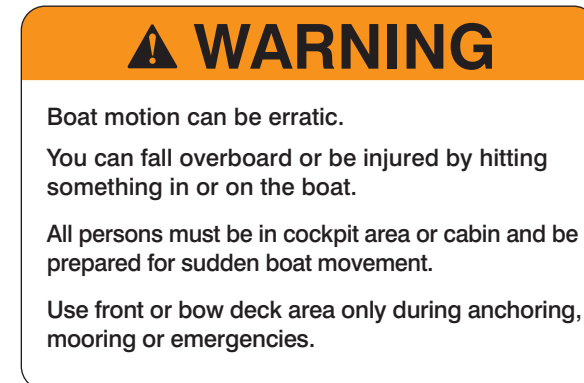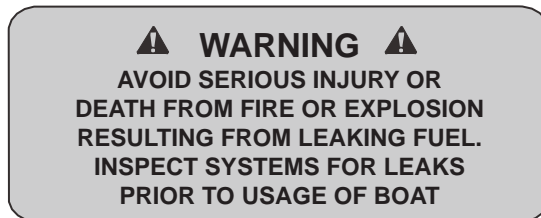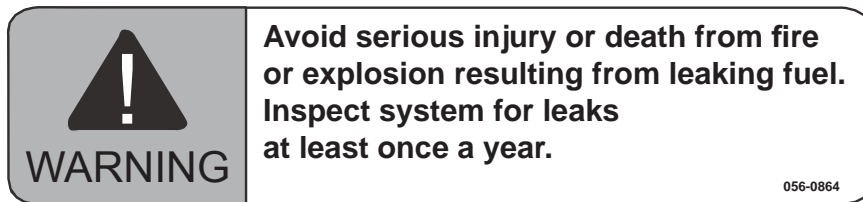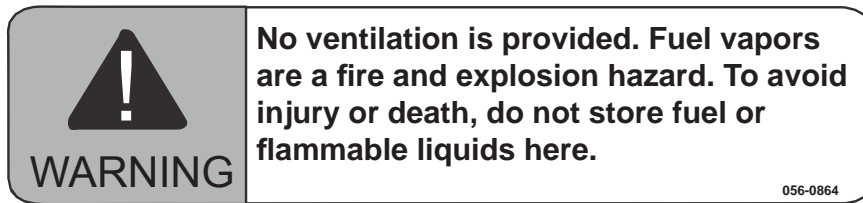

**⚠ WARNING ⚠**  
 OPEN DOORS MAY CAUSE  
 DAMAGE TO BOAT, AND/OR  
 PERSONAL INJURY  
 SECURE ALL DOORS WHEN UNDERWAY

**⚠ DANGER ⚠**  
 ANCHOR MAY MOVE  
 CAUSING BOAT DAMAGE OR  
 SEVERE PERSONAL INJURY  
 SECURE ANCHOR


**⚠ DANGER ⚠**  
 USING BOARDING LADDER WHILE  
 ENGINE IS RUNNING CAN RESULT  
 IN SEVERE PERSONAL INJURY  
 TURN OFF ENGINE BEFORE USING LADDER

**⚠ DANGER ⚠**  
 USING SKI EYE FOR TOWING, LIFTING,  
 OR PARASAILING WILL RESULT IN  
 DAMAGE TO BOAT AND SEVERE  
 PERSONAL INJURY  
 USE ONLY TO PULL WATERSKIERS

**⚠ WARNING ⚠**  
 LID MAY CLOSE SUDDENLY AND  
 MAY CAUSE DAMAGE TO BOAT,  
 AND/OR PERSONAL INJURY  
 CHECK SURROUNDING AREA BEFORE CLOSING UP


**⚠ WARNING**  
 AVOID DAMAGE TO YOUR FUEL SYSTEM  
 DO NOT USE FUEL OR ADDITIVES CONTAINING MORE  
 THAN 10% ALCOHOL BY VOLUME (Methanol or Ethanol)  
 DAMAGE AND LOSS OF WARRANTY MAY RESULT

**⚠ WARNING**



**Carbon monoxide (CO)** can cause brain damage or death.  
 Carbon monoxide can be present in the cabin.  
 Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.  
 Get fresh air if anyone shows signs of carbon monoxide poisoning.  
 Get fresh air if carbon monoxide detector alarm sounds.  
 Carbon monoxide detector must be functioning at all times.


NW-205-05

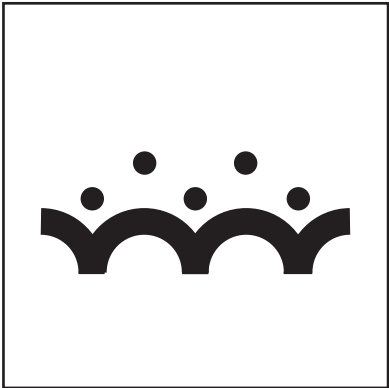


Waste Water Sewage




Fresh Water

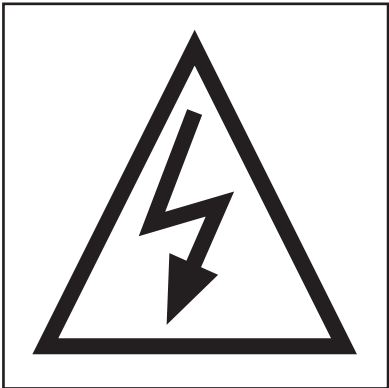


Electrical Hazard

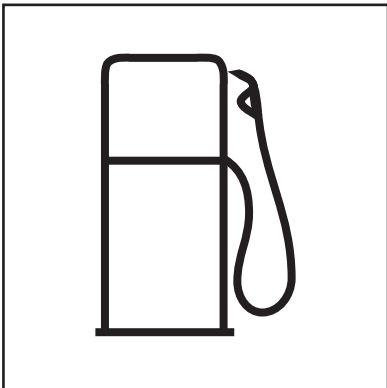

Fuel

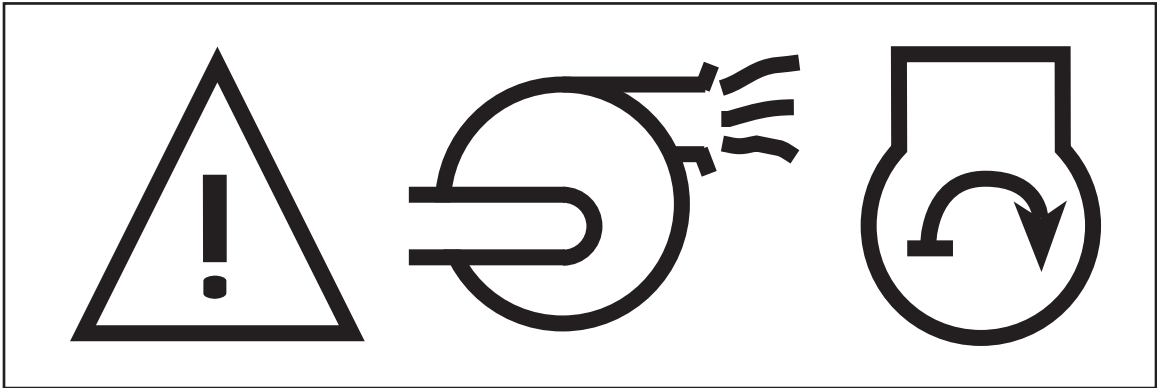

Blower Warning

<b>⚠ DANGER</b>	
	<p><b>Carbon monoxide (CO)</b> can cause brain damage or death.</p> <p>Engine and generator exhaust contains odorless and colorless carbon monoxide gas.</p> <p>Carbon monoxide will be around the back of the boat when engines or generators are running.</p> <p>Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness</p> <p style="text-align: right;"><small>NW-206-06</small></p>

<b>⚠ DANGER ⚠</b>
<p><b>CARBON MONOXIDE IS PRODUCED BY ALL GASOLINE ENGINES AND GENERATOR SETS. AVOID BRAIN DAMAGE OR DEATH FROM CARBON MONOXIDE. KEEP COCKPIT AND CABIN AREAS WELL VENTILATED. AVOID BLOCKAGE OF EXHAUST OUTLETS. SIGNS OF EXPOSURE INCLUDE NAUSEA, DIZZINESS, AND DROWSINESS. SEE BOAT OWNER'S MANUAL FOR MORE DETAILS.</b></p>
<p><b>USING BOARDING LADDER WHILE ENGINE IS RUNNING CAN RESULT IN SEVERE PERSONAL INJURY. TURN OFF ENGINE BEFORE USING LADDER</b></p>
<b>⚠ DANGER ⚠</b>
<p><b>THE OPERATOR OF THIS VESSEL IS RESPONSIBLE FOR THE ACTIONS OF PERSONS IN AND AROUND THIS VESSEL SAFETY IS THE OPERATORS RESPONSIBILITY</b></p>
<p><b>USING SWIM PLATFORM, FORWARD SUN PAD, OR SUN DECK WHILE BOAT IS UNDERWAY COULD RESULT IN SEVERE PERSONAL INJURY. STOP BOAT AND TURN OFF ENGINES BEFORE USING.</b></p>



**DISCHARGE OF OIL  
PROHIBITED**

THE FEDERAL WATER POLLUTION CONTROL ACT PROHIBITS THE DISCHARGE OF OIL OR OILY WASTE INTO OR UPON THE NAVIGABLE WATERS AND CONTIGUOUS ZONE OF THE UNITED STATES IF SUCH DISCHARGE CAUSES A FILM OR SHEEN UPON, OR DISCOLORATION OF, THE SURFACE OF THE WATER, OR CAUSES A SLUDGE OR EMULSION BENEATH THE SURFACE OF THE WATER.

**VIOLATORS ARE SUBJECT TO A  
PENALTY OF \$25,000**

**! DANGER !**

CARBON MONOXIDE IS PRODUCED BY ALL GASOLINE ENGINES AND GENERATOR SETS. AVOID BRAIN DAMAGE OR DEATH FROM CARBON MONOXIDE. KEEP COCKPIT AND CABIN AREAS WELL VENTILATED. AVOID BLOCKAGE OF EXHAUST OUTLETS. SIGNS OF EXPOSURE INCLUDE NAUSEA, DIZZINESS, AND DROWSINESS. SEE BOAT OWNER'S MANUAL FOR MORE DETAILS.

USING BOARDING LADDER WHILE ENGINE IS RUNNING CAN RESULT IN SEVERE PERSONAL INJURY. TURN OFF ENGINE BEFORE USING LADDER

**! WARNING !**

THE OPERATOR OF THIS VESSEL IS RESPONSIBLE FOR THE ACTIONS OF PERSON IN AND AROUND THIS VESSEL. SAFETY IS THE OPERATOR'S RESPONSIBILITY.

USING SWIM PLATFORM, FORWARD DECK, OR SUN DECK WHILE BOAT IS UNDERWAY COULD RESULT IN SEVERE PERSONAL INJURY. STOP BOAT AND TURN OFF ENGINES BEFORE USING.

AVOID SERIOUS OR FATAL INJURY DUE TO ROTATION OF SEAT. LOCK SWIVEL WHEN SPEED EXCEEDS 5 M.P.H.

INTERRUPT SWITCH MUST BE ATTACHED TO OPERATOR WHILE ENGINE IS RUNNING. QUALIFIED OPERATOR MUST BE IN CONTROL AT ALL TIMES. READ OWNERS MANUAL BEFORE USE.

**BOATMAN'S CHECKLIST**

For maximum enjoyment and safety, check each of these items BEFORE you start our engine:

- DRAIN PLUG (Securely in place?)
- LIFE-SAVING DEVICES (One for every person on board?)
- STEERING SYSTEM (Working smoothly and properly?)
- FUEL SYSTEM (Adequate fuel? Leaks? Fumes?)
- BATTERY (Fully charged? Cable terminals clean and tight?)
- ENGINE (In neutral?)
- CAPACITY PLATE (Are you overloaded or overpowered?)
- WEATHER CONDITIONS (Safe to go out?)
- ELECTRICAL EQUIPMENT (Lights, horn, pump, etc.?)
- EMERGENCY GEAR (Fire extinguisher, bailer, paddle, anchor & line, signaling device, tool kit, etc?)

---

# INTRODUCTION

---

---

## WELCOME ABOARD!

---

Congratulations!...

on your wise decision to purchase a Robalo boat. We welcome you to the family of thousands of other Robalo boat owners. Since your boat is a substantial investment, we are sure you selected your Robalo because of its value, style, comfort, and performance. This manual contains valuable information concerning your boat's operation, maintenance, and care plus tips on boating safety and seamanship.

---

## ABOUT THIS MANUAL

---

More and more people are joining the ranks of boat owners. This manual is written for the first-time boat owner or operator. Even if you are an experienced boater, you will find much valuable information regarding the safe operation and maintenance of your new Robalo boat. Keep this manual on your boat for ready reference.

Due to our policy of continuous product improvement, the illustrations used in this manual may not be identical to the components, controls, gauges, etc. on your boat, as they are intended to be representative reference views. Some controls, indicators, or information may be optional and not included on your boat model.

The precautions in this manual can't and don't cover every boating situation. If a specific method or procedure is not covered, you must make sure that what you do is safe for you and others. Always use common sense when boating! Remember, too, that every safe boating excursion is a happy experience.

This manual is part of your boat's equipment. Print a copy and keep it on board the boat at all times. If you transfer ownership of this boat to someone else, be sure to give this manual to the new owner.

Your owner's packet contains the manual for the boat you selected. Also in this packet are instruction manuals from the suppliers of standard and optional equipment for your boat. Examples of these manuals include the engine, electrical equipment, pumps, and cabin amenities. The suppliers of these products maintain their own manufacturer's warranty and service facilities. Be sure to fill out each warranty card and mail it to the manufacturer to validate the warranty. Record all information regarding these products on the "Boat Data Record." A copy of this form is near the end of this chapter under Logs & Records.

***Important: Keep the completed Boat Data Record in a safe place at home. Do not keep it aboard the boat.***

Read this manual as well as the manuals for the systems and components on your Robalo boat. They provide the information needed for safe operation and proper maintenance. The information in the manuals provided by the manufacturers takes precedence over any information in this manual if there is a conflict.

Following are summaries of each chapter in this manual:

### 1. Introduction

Included in this chapter is a summary of the manual plus general information about construction and standards, dealer and owner responsibilities, laws and regulations, logs and records, and the warranty for your boat.

### 2. Boating Safety

This chapter discusses potential hazards associated with boating, safety recommendations, safety information and practices, and water sports safety. It also discusses safety equipment needed to provide a safe operating environment.

**Note: For your safety, this manual has specific safety warnings and comments where appropriate. Be sure to read the entire manual.**

### 3. Systems

Here you will find detailed information about the electrical and fuel systems needed to operate your boat. This chapter discusses the fresh water system and marine sanitation devices which make your boating experience more comfortable.

### 4. Components

Standard features and optional equipment for your Robalo boat are discussed in this chapter. In general, these pertain to equipment and amenities which make your boat a “home away from home.”

### 5. Underway

The intent of this chapter is to explain what you need to do before, during, and after your boating excursion to make it an enjoyable and safe experience.

### 6. Preventive Maintenance & Repairs

Preventive maintenance is the key to troublefree operation and helps protect your investment. This chapter explains what you should do to maintain your boat and how to make adjustments and repairs.

### 7. Troubleshooting

Every boater encounters an operating problem at one time or another. This chapter provides solutions to problems you can correct.

### 8. Interior & Exterior Care

This chapter tells you how to inspect, clean, and maintain your boat's interior and exterior.

### 9. Winterizing & Storage

What do you do when you need to winterize or store your boat for extended periods of time? This chapter provides the necessary information.

### 10. Nautical Glossary

The Nautical Glossary defines terms associated with your boat and terms you may encounter during your boating experience.

## **CONSTRUCTION & STANDARDS**

All Robalo boats meet or exceed the construction standards set by the U.S. Coast Guard, the National Marine Manufacturers Association (NMMA), and the American Boat and Yacht Council (ABYC) concerning:

- Navigation lights
- Factory installed fuel systems
- Engine and fuel tank compartment ventilation
- Flotation
- Steering systems
- Backfire flame arresters

NMMA certification means that the boat complies with applicable federal regulations set forth by the U.S. Coast Guard. These regulations are based on American Boat and Yacht Council (ABYC) standards and recommended practices.

Most Robalo models can be certified to carry the CE mark. The CE mark certifies that the boat meets relevant parts of the European Directive for Recreational Craft 94/25/EC of the European Parliament, including the International Organization for Standards (ISO) and Recreational Marine Agreement Group (RMAG) guidelines in effect at the time of manufacture.

We recommend that you see your dealer if you wish to modify factory-installed equipment or add new equipment. Your dealer is qualified to make such modifications or additions without placing the safety or design integrity of your boat at risk and without invalidating the warranty.

Robalo builds exceptionally high quality boats. We offer numerous extras you won't see at a boat show. We've created a list for your review.

### **Gelcoat**

The advanced technology polyester we use offers superior weathering resistance to surface yellowing and chalking. It will also help protect and maintain the original glossy luster of your boat's finish. Robalo uses a premium quality gelcoat which offers improved flexibility over other gelcoats, minimizing the potential for cracking.

### **Resin**

It's an age-old problem. Water penetrates the gelcoat and blisters the bottom. The key is the resin. To cut costs, most use a general purpose resin. Robalo uses a premium quality resin in the hull skin coat of every boat in our line because of its superior bonding characteristics and exceptional flex.

### **Plywood**

The plywood Robalo uses throughout our boats is pressure treated with a wood preservative and fungi inhibiting chemical before it is kiln dried.

### **Loom Wrap Wiring**

Attention to rigging detail is a Robalo hallmark. Instead of routing the engine wiring harness haphazardly in the bilge in black tape, we rely on automotive style flexguard loom that not only keeps things neat but also protects against abrasion.

### **Through Bolted Stainless Steel Cleats**

It's one of the most often used components on your boat, but most people think a cleat is a cleat, right? Wrong. Robalo's cleats are stainless steel so they won't corrode and so they won't twist. Also, ours are big enough to accept a full-sized looped line.

### **Heavy Duty Rub Rail**

A rub rail is supposed to protect your boat. Robalo uses a heavy-duty PVC rub rail with stainless steel insert that absorbs far more impact without denting.

### **Acrylic Tops**

Ours are acrylic because it's a superior material that won't crack, peel, or mildew. Further, our acrylic tops won't shrink or expand, which means they look and fit better in all weather conditions.

### **Stain Resistant Fabrics**

Accidents happen. Spilled drinks, wet bathing suits and soggy towels are a fact of life on a boat. All our cabin fabrics are stain resistant. Buyers can choose from a wide variety of colors. When it comes to interior fabrics, we have the one that's right for you.

### **Superior Plastics vs. Wood**

Robalo prides itself on building seats that are not only comfortable, but durable. We use plastic seats because they hold their shape and don't retain water, reducing the potential for foam deterioration.

### **Flotation Requirements**

All Robalo boats meet or exceed U.S. Coast Guard requirements for flotation.

## Additional Requirements

All Robalo boats also meet or exceed U.S. Coast Guard requirements for the following:

- Engine and Fuel Tank Compartment Ventilation (requirements for flame arresting devices)
- Factory-Installed Fuel Systems
- Navigation Lights
- Steering System
- Wiring Specifications

## RESPONSIBILITIES

Robalo's quality service does not end when you buy one of our boats. Through our dealer network we do everything possible to ensure that you are satisfied with your purchase. Every Robalo dealer has a responsibility to you, the boater.

### Dealer

Dealer responsibilities include the following:

1. Discuss with you the terms of all warranties and stress the importance of registering warranties with the appropriate manufacturers.
2. Explain how you can obtain warranty service.
3. Complete new boat and pre-delivery inspection procedures. Sign the form to certify that all items were completed.

Your Robalo dealer can provide you with thorough instruction in the operation of your boat. Please feel free to ask for assistance.

### Boat Owner

Your responsibilities include the following:

1. Read this manual as well as all other manuals and information included in your owner's packet.
2. Schedule an appointment with your dealer to go over all warranties. After the appointment, complete the Robalo Boat limited warranty registration card in an envelope inside the Owner's Manual packet. Keep a record of the hull number for future reference.
3. Inspect the boat at the time of delivery to make sure all systems and components are operating properly. Robalo recommends that you refer to your engine warranty for initial inspection and service requirements.

The new boat and pre-delivery inspection form (found in your owner's manual) will help you as you inspect your new boat. After completing your inspection, sign the form to certify you have inspected the boat with your dealer.

4. Schedule an appointment with your dealer to go over the pre-delivery engine service record. Sign this record to indicate your dealer has explained this record to you.
5. Operate all equipment in accordance with the manufacturer's instructions.
6. Become familiar with all federal, state, and local laws affecting your boat and its operation.
7. Perform or provide for the appropriate periodic maintenance outlined in the manuals and service guides.

---

## LAWS AND REGULATIONS

---

This section of the manual includes general information about government regulations. You, the boater, are responsible for complying with the requirements of federal, state, and local laws. If you have any questions, contact the U.S. Coast Guard or other appropriate authority.

### Boat Registration

Federal and state laws require that every boat having propulsion machinery of any type must be registered in the main state of usage. Registration numbers and validation stickers must be displayed on the boat according to regulations. The registration certificate must be carried on board when the boat is in use.

### Safety Equipment

The following equipment is required on all boats:

- Display of Registration Numbers
- Fire extinguishers
- Personal flotation devices (PFDs)
- Navigation lights
- Visual distress signals
- Sound signaling device

See Chapter 2 for more information about safety equipment.

### Discharge of Oil

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable waters of the United States or the waters of the contiguous zone if such discharge causes a film or sheen upon, or a discoloration of, the surface of the water or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty.

### Disposal of Plastics & Other Garbage

Plastic refuse dumped in the water can kill fish and marine wildlife and can foul vessel propellers and cooling water intakes. Other forms of waterborne garbage can litter beaches and cause illness. U.S. Coast Guard regulations therefore strictly prohibit dumping plastic refuse or other garbage mixed with plastic into the water anywhere. Further, the regulations restrict the dumping of other forms of garbage within 12 miles from shore on the east coast, and 9 miles from shore on the west coast.

Within 3 miles of shore and in U.S. lakes, rivers, bays and sounds, it is illegal to dump plastic, dunnage, lining, and packing materials that float; and any garbage except dishwater, gray water, and fresh fish parts.

Between 3 and 12 miles it is illegal to dump plastic, dunnage, lining, and packing materials that float; and any garbage not ground to less than one square inch.

Between 12 and 25 miles it is illegal to dump plastic, dunnage, and packing materials that float.

Beyond 25 miles it is illegal to dump plastic.

The U.S. Coast Guard has issued these regulations to implement Annex V of the International Convention for the Prevention of Pollution from Ships, 1973, commonly known as Annex V of the MARPOL (Marine Pollution) Treaty 73/78. They apply to all U.S. vessels wherever they operate (except waters under the exclusive jurisdiction of a state), and foreign vessels operating in U.S. waters out to and including the Exclusive Economic Zone (200 miles).

If your boat is 26 feet or more in length, the regulations require U.S. recreational boaters attach one or more Coast Guard Trash Dumping Restrictions placards to your boat. The placard warns against the discharge of plastic and other garbage within U.S. navigable waters and specifies discharge restrictions beyond the territorial sea (generally within 3 or more nautical miles of shore).

The placard must also contain the warning that a person violating these requirements is liable for civil and criminal penalties. The placard must also state that local regulations may further restrict the discharge of garbage. You may purchase these placards from local marinas, boat dealers, or marine equipment suppliers.

The U.S. Coast Guard has also issued regulations requiring boats to have a sanitation system on board to control pollution. Wastes are to be stored in a holding tank or other device, such as a Porta-Potti, until the device can be pumped out or otherwise disposed of at a shore facility. Discharging this waste overboard is in most cases prohibited. Check with the Coast Guard regarding regulations in your area.

## OWNER'S LOGS AND RECORDS

---

At the end of this chapter are three forms which you will find very helpful.

Use the **Boat Data Record** to record all important information about your boat and the major components installed. Print a copy and after you have entered all the data, store it in a safe place. Do not keep this form aboard your boat.

The **Travel Plan Log** provides a record of your destination, departure and return times, boat description, passenger list, and other information about the trip you have planned. At the bottom of the form is space for listing emergency telephone numbers in case your return is delayed past the expected time. It also has space for indicating information about the person filing this report. Leave the completed form ashore with a responsible person. We recommend you print several copies of this form each boating season to ensure an ample supply.

The **Fuel Usage Chart** is a handy way to record information covering engine hours, fuel consumption, miles traveled, as well as RPM (revolutions per minute), Average MPH (miles per hour), and GPH (gallons per hour).

## WARRANTY TRANSFER POLICY

---

Your Robalo boat is backed by a Limited Express Warranty. It is important that you are aware of its terms. If a problem arises with your Robalo boat as a result of workmanship or materials, contact your dealer as soon as possible to determine whether correcting the problem may be covered by the warranty. Please have your hull identification number and necessary model numbers on hand for the items that may need service or repair. Your hull identification number is below the rub rail on the starboard aft corner of your boat.

The Robalo Limited Warranty Policy may be transferred to subsequent owner(s) providing the Ownership Transfer Record (OTR) is completed and returned to the Robalo Customer Service Office. The OTR is located after the Robalo Limited Warranty Policy in Section 11. Subsequent owner(s) will receive the balance of warranty available subject to a \$100.00 deductible per occurrence for claims filed in accordance with the Robalo Limited Warranty Policy. The Ownership Transfer fee varies depending on the boat model and size. See the Robalo Ownership Transfer Record for details and associated fees.



# CUSTOMER SATISFACTION NEW BOAT AND PRE-DELIVERY OPERATION RECORD (PDOR)

Boat ID Number

Boat Model: \_\_\_\_\_ Date of Sale: \_\_\_\_\_

Dealer Name: \_\_\_\_\_ City \_\_\_\_\_ State \_\_\_\_\_

Owner Name: \_\_\_\_\_ Delivery Promise Date/Time \_\_\_\_\_ Sales Person \_\_\_\_\_

## CHECK, INSPECT AND PERFORM THE FOLLOWING OPERATIONS

CHECK BOXES BELOW AS NEEDED  
 OK  
 NEEDS CORRECTION  
 COMPLETED

CHECK BOXES BELOW AS NEEDED

OK  
 NEEDS CORRECTION  
 COMPLETED

- Boat:**
- Boat gel coat and striping
  - Upholstery clean and free of defects
  - Windshield alignment
  - Canvas fit
  - Clearcoat removal from tape stripes
  - Check cabin/console doors, hatches, cabinets and head doors; latches work smoothly, H-top and T-top doors & latches work properly.
  - Check all thru hull fittings, vanity drain, galley drain, anchor well drain, drain plug-hull, toilet hoses, livewell

- After Starting Engine** (in water or tank test):
- Trim gauge sync
  - Check fuel line connectors for leaks
  - Idling speed set within proper range for engine
  - Gear shift works properly forward, reverse, neutral
  - Instruments register properly
  - Engine emergency shut off, engine stops when disconnected
  - Water is coming out of pitot tube properly
  - Engine charging batteries properly

- Equipment:**
- TV/DVD
  - Filler Cushion Fit
  - Running Light
  - Cabin Light
  - Mast Light
  - Cockpit Lights
  - Spreader Lights
  - Stereo
  - Stereo Remote
  - Anchor/Rode
  - Overhead Lights
  - Check water heater system
  - Water pressure system operates (Let pressure stand 15 minutes to see if pump goes on)

- Running Water Test:**
- Boat performance
  - Port engine performance
  - Starboard engine performance
  - Steering operates freely
  - Fuel flow working correctly
  - Power steering operates correctly (if equipped)
  - Trim tabs operate correctly
  - Engine trims correctly
  - Instruments register properly
  - Livewell systems operate correctly
  - Review gauge operation

- Engine:**
- Check fuel system for leaks
  - Primary steering system complete operational check
  - Steering system purged correctly
  - Throttle control cable, travel, and attached fasteners
  - Shifter control cable, travel, and attaching fasteners
  - Prop installed properly with nut, keys, cotter pins

- PRE-DELIVERY FINAL CHECK**
- All accessory equipment operates and on board
  - Carpets installed
  - All boat, engine, and accessory literature and manuals ready
  - Owner familiarized with operation and warranty policy
  - Warranty cards completed and mailed for owner
  - Boat properly cleaned, interior and exterior

**Prop Size:** Port \_\_\_\_\_ Std \_\_\_\_\_

Prop rotation \_\_\_\_\_

Safety neutral switch, engine will not start in gear \_\_\_\_\_

Engine emergency shut off, engine will not start when disconnected \_\_\_\_\_

Rigging hoses and fuel primer bulbs properly routed \_\_\_\_\_

Battery cables and ground wires connected properly \_\_\_\_\_

Above services performed by \_\_\_\_\_ Technician \_\_\_\_\_ Date \_\_\_\_\_

Dealer comments (refer to checklist by item) \_\_\_\_\_

Customer Signature \_\_\_\_\_

Comments \_\_\_\_\_



# Boat Data Record

## Purchase Dealership

Name \_\_\_\_\_ Sales Manager \_\_\_\_\_  
Address \_\_\_\_\_ Phone \_\_\_\_\_  
\_\_\_\_\_ Fax \_\_\_\_\_

## Service Dealership

Name \_\_\_\_\_ Service Manager \_\_\_\_\_  
Address \_\_\_\_\_ Phone \_\_\_\_\_  
\_\_\_\_\_ Fax \_\_\_\_\_

### General

\_\_\_\_\_ State of Registration \_\_\_\_\_  
Model Name

\_\_\_\_\_ Hull Identification Number

\_\_\_\_\_ Boat Name

\_\_\_\_\_ Hull Color(s)

\_\_\_\_\_ Length \_\_\_\_\_ Beam \_\_\_\_\_ Weight

\_\_\_\_\_ Draft (Drive Down) \_\_\_\_\_ Draft (Drive Up)

### Engine

\_\_\_\_\_ Manufacturer \_\_\_\_\_ Model Name/Number

\_\_\_\_\_ Oil Type/SAE \_\_\_\_\_ Quarts \_\_\_\_\_ Filter Type

\_\_\_\_\_ Serial Number \_\_\_\_\_ Transom Plate Serial Number

### Fuel System

\_\_\_\_\_ Tank Capacity

### Fresh Water

\_\_\_\_\_ Tank Capacity

### Propeller

\_\_\_\_\_ Manufacturer \_\_\_\_\_ Pitch

\_\_\_\_\_ Model Number

### Battery

\_\_\_\_\_ Manufacturer

\_\_\_\_\_ Model Number

### Radio

\_\_\_\_\_ Manufacturer \_\_\_\_\_ Type

\_\_\_\_\_ Model Number

\_\_\_\_\_ Serial Number

### Key Numbers

\_\_\_\_\_ Cabin

\_\_\_\_\_ Glove Box

\_\_\_\_\_ Ignition

Design Category: \_\_\_\_\_  
(circle one)      A      B      C      D

Maximum Rated Engine Power - kilowatts (horsepower)

Unladen Weight - kilograms (pounds): \_\_\_\_\_

Maximum Load: \_\_\_\_\_

Weight - kilograms (pounds) \_\_\_\_\_

Number of People \_\_\_\_\_

**FUEL USAGE CHART**

Date	RunTime (In Hours)	Fuel Used (In Gallons)	Distance Traveled (In Miles)	RPM	Average Miles per Hour	Gallons per Hour

Date	RunTime (In Hours)	Fuel Used (In Gallons)	Distance Traveled (In Miles)	RPM	Average Miles per Hour	Gallons per Hour

## TRAVEL PLAN LOG

The boat listed below should return by:  
 \_\_\_\_\_ at the latest.

Date

Time

If it has not, please call the emergency numbers  
 listed at the right.

Police \_\_\_\_\_  
 Coast Guard \_\_\_\_\_  
 Other Authority \_\_\_\_\_  
 Personal \_\_\_\_\_

### Trip Information

Departure Date/Time

Departure Location

Return Date/Time

Return Location

### Boat Description

Boat Name

Type

Registration Number

Manufacturer

Length

Hull Color

Deck (Color)

Cabin (Color)

Trim (Color)

Other Physical Characteristics

### Engine

Type

HP

Fuel Type

Fuel Capacity

### Safety & Emergency Equipment (YES/NO & NUMBER)

Life Jackets

Cushions

Distress Light

Flares

Smoke Signals

Flash Light

Mirror

Paddles

Anchor

Food

Water

Life Raft

### Radio

Onboard (Yes/No)

Type

Frequencies usually used or monitored

### Passenger List (Use Another Sheet If Necessary)

Full Name

Age/Sex

Phone Number

Complete Address

Full Name

Age/Sex

Phone Number

Complete Address

Full Name

Age/Sex

Phone Number

Complete Address

Full Name

Age/Sex

Phone Number

Complete Address

**ALWAYS FILL THIS SHEET OUT COMPLETELY—IN AN EMERGENCY ALL INFORMATION MAY BE HELPFUL**

# BOATING SAFETY

2

YOU are responsible for your safety and your boat, as well as the safety of passengers and other boaters.

## HAZARD COMMUNICATION

As you read this manual, please note the hazard warnings which alert you to safety precautions related to unsafe conditions or operating procedures. We have included these warnings because we are concerned about your safety and the safety of your passengers. Hazard statements generally have five parts:

1. The hazard symbol
2. A signal word which indicates the severity of the hazard
3. A concise description of the hazard
4. The results of ignoring the hazard
5. Steps for avoiding the hazard

The three signal words indicating the severity of the hazard are danger, warning, and caution. The meanings they convey are as follows:

**⚠ DANGER**

**DANGER:** calls attention to immediate hazards that WILL result in severe personal injury or death.

**⚠ WARNING**

**WARNING:** identifies hazards or unsafe practices that COULD result in severe personal injury or death.

**⚠ CAUTION**

**CAUTION:** indicates hazards or unsafe practices that COULD result in minor personal injury or product or property damage.

**Note: This is a general advisory statement relating to equipment operation and maintenance procedures. Its intent is to call attention to information more important than normal text.**

## SAFETY RECOMMENDATIONS

The popularity of boating and other water sports has grown tremendously in the past few years. Boating safety and the safety of your passengers are your responsibilities. You should fully understand and become familiar with the operating procedures and safety precautions in this manual and the other manuals in the owner's packet before you launch your Robalo boat.

Remember that along with the freedom and exhilaration of boating comes the responsibility that you have for the safety of your passengers and the other boaters who share the water with you. Throughout this manual specific precautions and symbols identify safety-related information. Be sure to pay close attention to them.

## Safe Operation

- Keep your boat and equipment in safe operating condition. Inspect the hull, engine(s), safety equipment, and all boating gear regularly.
- Be very careful when fueling your boat. Be sure you know the capacity of your boat's fuel tank and the amount of fuel you use when operating at frequently used engine speeds (RPMs). Ask your Robalo dealer about the capacity of your boat's fuel tank.
- Make sure you have enough fuel and outboard oil on board for anticipated cruising requirements. In general, use 1/3 of your supply to reach your destination and use 1/3 to return. Keep 1/3 in reserve for changes in your plans due to weather or other circumstances.
- Be sure lifesaving and fire extinguishing equipment is on board. This equipment must meet regulatory standards and it should be noticeable, accessible, and in safe operating condition. Your passengers should know where this equipment is and how to use it.
- Keep an eye on the weather. Be aware of possible changing conditions by checking local weather reports before your departure. Monitor strong winds and electrical storms closely.
- Always keep accurate, updated charts of the area on board your boat.
- Before you leave the port or harbor, file a Travel Plan with a family member, relative, friend, or other responsible person ashore.
- Always operate your boat with care, courtesy and common sense.
- Instruct at least one other passenger aboard in the basic operating procedures in handling your boat. This person can take over if you unexpectedly become unable to do so.
- Do not allow passengers to ride on parts of your boat other than designated seating areas.
- Ask all passengers to remain seated while the boat is in motion.

- Do not use the swim platform or boarding ladder while the engine or engines are running.
- Understand and obey the "Rules of the Road." Always maintain complete control of your boat.
- Do not overload or improperly load your boat.

The information on your boat's capacity plate does not override your responsibility for using common sense or sound judgment. Turbulent water and unfavorable weather conditions reduce the capacity of your boat.

## Swimming


1. Swim only in areas designated as safe for swimming. These are usually marked with a swim area buoy (see figure). Do not swim alone or at night.
2. Do not allow anyone near the propeller(s), even when the engine is off. Propeller blades can be sharp and can continue to turn even after the engine is off. Stay well away from areas marked by a diver down float (see figure).

## Safe Boating Courses

Your local U.S. Coast Guard Auxiliary and the U.S. Power Squadrons offer comprehensive safe boating classes several times a year. You may contact the Boat/U.S. Foundation at 1-800-336-BOAT (2628), or in Virginia 1-800-245-BOAT (2628). For a course schedule in your area you may also contact your local U.S. Coast Guard Auxiliary or Power Squadron Flotilla for the time and place of their next scheduled class.

U.S. Coast Guard Website: [www.uscg.mil](http://www.uscg.mil)

Power Squadron Website: [www.usps.org](http://www.usps.org)

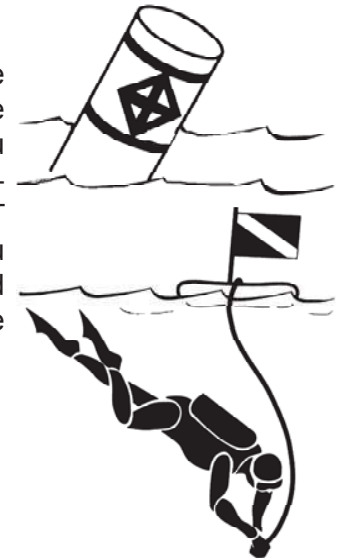

## Voluntary Inspections

State boating officials in many states or the U.S. Coast Guard Auxiliaries offer courtesy inspections to check out your craft. They will check your boat for compliance with safety standards and required safety equipment. You may voluntarily consent to one of these inspections and you are allowed time to make corrections without prosecution. Check with the appropriate state agency or the Coast Guard Auxiliary for details.

## Rules of the Road

All responsible boaters comply with the “Rules of the Road,” the marine traffic laws enforced by the U.S. Coast Guard. There are two sets of rules: the United States Inland Navigational Rules and the International Rules. The United States Inland Rules apply to all vessels inside the demarcation lines separating inland and international waters. The Coast Guard publishes the “Rules of the Road” in its publication “Navigational Rules, International-Inland.” You can get a copy from your local U.S. Coast Guard Unit or the United States Coast Guard Headquarters, 1300 E. Street NW, Washington, D.C. 20226.

Other helpful publications available from the U.S. Coast Guard include “Aids to Navigation” (U.S. Coast Guard pamphlet #123), which explains the significance of various lights and buoys; the “Boating Safety Training Manual”; and “Federal Requirements For Recreational Boats.” Check with your local Coast Guard station, your Robalo dealer, or a local marina about navigational aids unique to your area.

U.S. Coast Guard Website: [www.uscg.mil](http://www.uscg.mil)

California Coast Guard Website: [www.ccg-ggc.gc.ca](http://www.ccg-ggc.gc.ca)

If you have a marine radio telephone, heed storm warnings and answer any distress calls from other boats. The word “MAYDAY” spoken three

times is the international signal of distress. Monitor marine radio channel 16 which is reserved for emergency and safety messages. You can also use this channel to contact the Coast Guard or other boaters if you have trouble.

***Important: Never send a “MAYDAY” message unless there is a serious emergency and you are in need of immediate assistance.***

## Warning Markers

Always check with local authorities concerning regional hazardous areas and how they are marked. Other considerations include:

- Boat operators must be able to recognize marine flag designs and respond accordingly.
- Caution should always be exercised relative to swimmers. Swimming areas may not always be marked.
- Navigation markers identify navigable routes and indicate water hazards. Boat operators should familiarize themselves with these important navigational tools and operate their boats accordingly.
- Be prepared to assist anyone flying a ‘distress’ flag as they are requesting immediate assistance.

## Drugs and Alcohol

Drugs and alcohol affect a person’s ability to make sound judgments and react quickly. A responsible boater refrains from using drugs or alcohol while operating their boat. Operation of motorized vessels while under the influence carries a significant penalty. Drugs and alcohol decrease your reaction time, impair your judgement, and inhibit your ability to safely operate your boat.

---

## SAFETY EQUIPMENT

---

**Important:** Federal law requires you to provide and maintain safety equipment on your Robalo boat. As the boat owner, you are responsible for supplying all required safety equipment. Consult your Coast Guard, state, and local regulations to ensure your boat has all required safety equipment on board. Additional equipment may be recommended for your safety and that of your passengers. Make yourself aware of its availability and use.

### Personal Flotation Devices (PFDs)

There must be one United States Coast Guard approved wearable personal flotation device of Type I, II, or III for each person on board or being towed on water skis, water sports tubes, kneeboards, etc. and one Type IV throwable device on board. The PFDs must be of a suitable size for each person aboard and must be in serviceable condition and readily accessible.

**PFD Type I, Wearable:** This off-shore life jacket has the greatest buoyancy. It is most effective for all waters where rescue may be delayed. Its design allows for turning most unconscious persons in the water from a face down position to a vertical or face-up position.

**PFD Type II, Wearable:** This near-shore buoyant vest provides less buoyancy than a Type I PFD. It is intended for calm inland water or waters where there is a chance of quick rescue. It turns its wearer to a face-up position as does the Type I PFD, but the turning action is not as pronounced as the Type I, and it will not turn as many persons under the same conditions as a Type I.

**PFD Type III, Wearable:** Classified as a flotation aid, this PFD allows wearers to place themselves in a vertical or face-up position in the water. Type III has the same minimum buoyancy as a Type II PFD. It has little or no turning ability. People participating in water sports often prefer this PFD because it is intended for use in waters where quick rescue is possible and it is generally the most comfortable for continuous wear.

**PFD Type IV, Throwable:** You must also have aboard at least one throw-

able PFD Type IV device. The Type IV device can be thrown to a person in the water and grasped and held by the user until rescued. The design does not allow it to be worn. The most common Type IV PFDs are buoyant cushions or ring buoys. This PFD must be immediately available for use and in serviceable condition.

**PFD Type V:** Must be worn to be effective. When inflated, it provides buoyancy equivalent to Type I, II, or III PFDs.

### Fire Extinguishers

As the boat owner, you are responsible for making sure you have the required number of fire extinguishers. Fire extinguishers must be approved by the U.S. Coast Guard.

Boats longer than 26 feet and shorter than 40 feet: Two Type B-1 or at least one Type B-2 portable hand extinguishers. If your boat has a fixed fire extinguishing system approved by the U.S. Coast Guard, one Type B-1 extinguisher is required.

Boats longer than 16 feet and shorter than 26 feet: At least one portable hand Type B-I fire extinguisher.

All fire extinguishers should be mounted in a readily accessible location away from the engine compartment. Everyone on board should know where the fire extinguishers are and how to operate them.

If your fire extinguisher has a charge indicator gauge, cold or hot weather may affect the gauge reading. Consult the instruction manual supplied with the fire extinguisher to determine the accuracy of the gauge.

### Visual Distress Signals

The U.S. Coast Guard requires all boats operating on U.S. coastal waters have visual distress signal equipment on board. In general, coastal waters include all waters except rivers, streams, and inland lakes. The Great Lakes are considered coastal waters as is a river mouth more than two miles wide. Boats owned in the United States and operating on the high seas must also carry visual distress signal equipment.

Visual distress equipment must be in serviceable condition and stowed in a readily accessible location. Equipment having a date showing useful service life must be within the specified usage date shown. Both pyrotechnic and non-pyrotechnic equipment must be U.S. Coast Guard approved.

Pyrotechnic U.S. Coast Guard approved visual distress signals and associated equipment include:

- Red flares, hand held or aerial
- Orange smoke, hand held or floating
- Launchers for aerial red meteors or parachute flares

Non-pyrotechnic equipment includes an orange distress flag and an S-O-S electric distress light.

No single signaling device is ideal under all conditions for all purposes. Consider carrying various types of equipment. Careful selection and proper stowage of visual distress equipment are very important. If young children are frequently aboard, you should select devices with packages which children, but not adults, will find difficult to open.

## Sound Signaling Device

Your Robalo boat must have a device that can produce a sound signal when conditions require. For boats over 26 feet, the device must be able to produce a two-second blast which can be heard a mile away. For boats less than 26 feet, it must be able to produce a two-second blast which can be heard one-half mile away. It can be a hand, mouth or power operated horn or whistle. Refer to the U.S. Coast Guard's publication "Navigational Rules, International-Inland" for details about the appropriate signals.

## RUNNING AND NAVIGATION LIGHTS

Your boat must have running and navigation lights for safe operation after dark. Observe all navigation rules for meeting and passing. Do not run at high speeds during night operation. Always use common sense and good judgment.

## SAFETY AFLOAT

Once your boat is launched and your excursion is underway, you need to be aware of your surroundings and how they may affect your safety and that of your passengers. There is no substitute for good judgment and common sense.

### Weather

Storms rarely appear without advance notice. Check the weather forecast before you begin a day of boating. Be aware, however, that weather conditions can change rapidly. If you have a marine radio, listen to the weather reports issued by the U.S. Coast Guard and others. If you have a portable radio, keep it tuned to a station broadcasting frequent weather reports. Many boating clubs fly weather signals. Learn to recognize these signals and listen to your local forecasts before leaving port.

Your surroundings can also be a good indicator of changing weather conditions. Watch for changes in wind direction or cloud formations. There is no substitute for a good understanding of weather conditions and what to do when the weather takes a turn for the worse.

### Fog

Fog is a result of either warm-surface or cold-surface conditions. You can judge the likelihood of fog formation by periodically measuring the air temperature and dew point temperature. If the difference between these two temperatures is small, fog is likely to develop. Remember the following guidelines:

- Turn on running lights.
- Unless your boat is well equipped with charts, head for shore at the first sign of fog and wait until conditions improve. If you have charts on board, take bearings as fog sets in, mark your position, and continue to log your course and speed.
- Make sure all persons on board have put on their personal floatation devices.



- If your boat has sounding equipment, take soundings regularly and match them with depths shown on your charts.
- Station a person forward in the boat as a lookout.
- Reduce your speed. From time to time, stop engine(s) and listen for other fog signals.
- Sound the horn or fog bell intermittently to warn others.
- If there is any doubt in continuing your excursion, anchor. Listen for other fog signals while continuing to sound your fog horn or bell.

## Storms

The present and forecasted weather conditions are a primary consideration, and the possibility of storms should always be a concern. If storms are a possibility, keep a watch on the horizon, especially to the west, for approaching storms. Monitor the weather forecast on a marine channel or local weather station. The best possible situation is to return to a safe port if time allows.

Other steps to follow to weather the storm include:

- Close and secure port holes. Stow all loose gear below deck and tie down any gear on deck.
- Reduce speed as the seas build. Make sure all persons on board have put on their personal floatation devices.
- Trail a sea anchor from the bow. If you do not have a sea anchor aboard, use a canvas bucket, tackle box, or other object that will work like a sea anchor.
- Radar reflectors (if installed on your boat) should be 18 inches diagonally. They should be placed as far above waterline as possible. Otherwise, a boat with radar may have trouble “seeing” your boat.

## Man Overboard

Should someone in the boat fall overboard:

- Act quickly—treat every situation as an emergency.
- Move throttle to idle position and yell “Man Overboard”.
- Immediately throw a Type IV PFD to the person in the water.
- Have someone in the boat assume responsibility for watching the person in the water and keep them in sight while the boat maneuvers back to them.
- Approach the person into the wind and waves. When alongside, put the engine in neutral and throw them a Type IV PFD with a line attached or extend an oar or boat hook.

## Fire

***Important: A fire aboard your boat is a serious emergency. You must act immediately!***

Every boater should develop a fire response plan to determine what kind of fire (fuel, electrical, etc.) might break out, where it might break out, and the best way to react. Having a plan and assigning responsibilities to others results in quicker decisions and quicker reactions.

***Important: Everyone on board should know where fire extinguishers are and how to operate them.***

Any fire requires stopping the engine(s) immediately. Then:

- **Do not open the hatch to the rigging compartment!** The fire will flare up if the fresh air supply increases suddenly.
- Keep the fire downwind if possible. If the fire is aft, head into the wind.

- Have all persons on board put on their personal floatation devices.
- If you can get at the fire, aim the fire extinguisher at the base of the flames and use a sweeping action to put out the fire.
- If the fire gets out of control, make a distress signal, and call for help on the radio.

Deciding whether to stay with the boat or abandon ship will be difficult. If the decision is to abandon ship, all persons on board should jump overboard and swim a safe distance away from the burning boat.

#### Guidelines for Fire Prevention

- Check the bilge for fuel leaks
- Check cleaning products for flammability
- Ventilate when cleaning or painting
- Disconnect electrical system from power source when performing any type of maintenance

## **WARNING**

**WARNING:** Smoking, poor maintenance, or carelessness when refueling can cause hazardous conditions. Always follow proper refueling procedures for your boat.

- Use extra caution when using exposed flame around urethane foam
- Extinguish smoking materials carefully
- Ensure ventilation systems are not obstructed
- Use only approved marine cooking and heating systems
- Open flames demand constant attention
- Keep flammable materials in approved containers
- Replace circuit breaker fuse with one of the same amperage
- Electrical appliances must be within rated amperage of boat circuits
- A qualified marine electrician should service the electrical system

## Flooding, Swamping or Capsized Boat

Flooding or swamping is usually caused by the actions of an inattentive boat operator, or by hazardous weather or water conditions. To prevent boat flooding:

- Install drain plug before launching.
- Ensure proper bilge pump operation.
- Do not overload boat.
- Adjust boat speed and trim to match sea and weather conditions.
- Close all cabin hatches, doors, etc. while underway to prevent flooding due to heavy seas or rain. Ensure proper ventilation to avoid carbon monoxide poisoning. See carbon monoxide hazard information later in this chapter.
- When only using one anchor, it should be attached to the bow of the boat.
- When slowing down or moving in reverse do not allow wake or following seas to flood cockpit.

If your boat becomes swamped or capsizes, put on a PFD immediately and set off a distress signal. Chances are good that a capsized boat will stay afloat. For this reason, stay with the boat. Do not leave the boat or try to swim to shore except under extreme conditions. A capsized boat is easier to see than a swimmer, and the shore may be farther away than it appears.

More often than not, boats sink while docked. Any number of factors may contribute to these sinkings. There may have been a mechanical failure such as a failed bilge pump or an electrical problem such as a dead battery or tripped circuit breaker. Check your boat regularly if it is docked for an extended period of time to make sure everything is in order.

## Hypothermia

If a person falls overboard, hypothermia may be an immediate concern. Hypothermia means a person's body loses heat to the water faster than the body can replace it. If not rescued, the person will become exhausted or likely drown. In general, the colder the water, the shorter the time for survival. PFDs will increase survival time because they provide insulation.

Water Temperature (°F)	Exhaustion Unconsciousness	Expected Time of Survival
32.5	Under 15 min	Under 15-45 min
32.5-40	15-30 min	30-90 min
40-50	30-60 min	1-3 hr
50-60	1-2 hr	1-6 hr
60-70	2-7 hr	2-40 hr
70-80	3-12 hr	3 hr - Indefinite
Over 80	Indefinite	Indefinite

## Collision

If a serious collision occurs, first check the persons on board for injuries. then inspect the boat to determine the extent of damage.

- Prepare to help the other craft unless it places your passengers or boat in danger.
- If the bow of the other boat penetrated your boat's hull, prepare to plug the fracture once the boats are separated.
- Shore up the hole inside your boat with a spare life jacket or cushion.
- While plugging the hole, shift weight to get the hole above the water level.
- If your boat is in danger of sinking, have all persons put on their personal floatation devices.

- If your boat has a radio, contact the U.S. Coast Guard or other rescue authorities immediately (VHF channel 16 or 22 CB radio).

## Running Aground

If you run aground check everyone for injury and inspect damage to the boat and propeller(s). If possible, shift weight of passengers or gear to heel the boat while reversing engine(s). If towing becomes necessary, do not attach tow line to deck cleats. These are not designed to take full load of the boat. Robalo recommends using a commercial towing service.

## Carbon Monoxide Hazard During Operation

Carbon monoxide (CO) in the engine exhaust is a poisonous gas which is odorless, colorless, and heavier than air. Direct prolonged exposure can result in carbon monoxide poisoning which can be harmful and may be fatal.



**WARNING:** When towing another boat or having your boat towed, make sure the tow line is fastened securely to the bow or transom towing eyes. Never attach tow line to deck cleat or anchor windlass. Cleat or windlass may pull free from deck and cause serious personal injury or property damage.



**DANGER:** Exhaust fumes from engines contain carbon monoxide. Boats with canvas deployed are more likely to collect exhaust fumes. Avoid brain damage or death from carbon monoxide. Keep cockpit and cabin areas well ventilated. Signs of exposure include nausea, dizziness, and drowsiness.

Indications of excessive exposure to carbon monoxide concentrations may include nausea, dizziness and drowsiness. Carbon monoxide poisoning requires the operator's special and immediate attention! To prevent excess exposure and reduce the possibility of carbon monoxide accumulation in the cabin of the boat, ensure adequate ventilation by opening cabin hatches, cabin doors, cabin windows, and side windshield vents to increase air movement.

Some Robalo models are equipped with a CO detector. Follow the operating instructions supplied with the CO detector and test the unit to verify that it is functioning properly every time you use your boat. Refer to the information provided by the manufacturer in your owner's packet to determine replacement interval for your CO detector.

The following illustrations show how carbon monoxide can possibly accumulate in your boat while at the dock or underway. Become familiar with these examples and their precautions to prevent dangerous accidents from occurring on your boat.

## ! DANGER

**DANGER:** Blocked hull exhaust outlets near a pier, dock, sea wall bulkhead or any other means can cause excessive accumulation of poisonous carbon monoxide gas within the cabin areas. Make sure hull exhaust outlets are not blocked. (Figure 2.1)

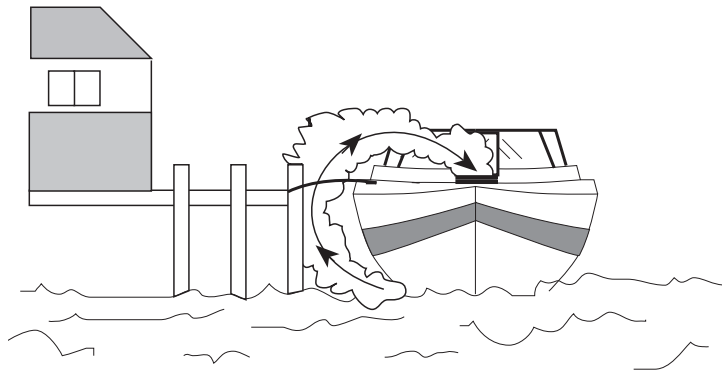


Figure 2.1 Running engine or generator in confined areas

## ! DANGER

**DANGER:** Generator or hull exhaust from other vessels alongside your boat, while docked or anchored, can emit carbon monoxide and cause excessive accumulation within the cabin and cockpit areas. Be alert for generator exhaust from other vessels alongside. (Figure 2.2)

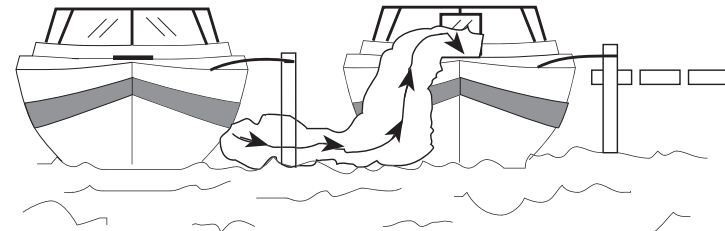


Figure 2.2 Exhaust Fumes from Vessel Alongside

## ! DANGER

**DANGER:** Engine exhaust from your boat while underway can cause excessive accumulation of carbon monoxide within the cabin and cockpit areas when using protective weather coverings. Provide adequate ventilation when the canvas top, side curtains, and/or back curtains are closed. (Figure 2.3)

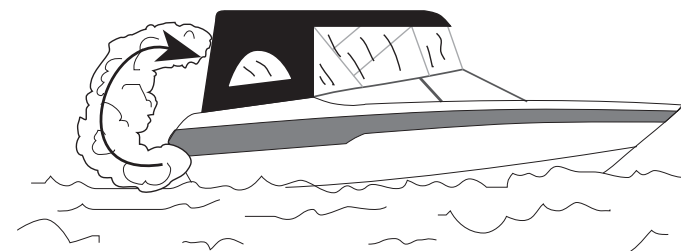



Figure 2.3 Exhaust Accumulation While Canvas is in Place

**⚠ DANGER**

**DANGER:** Engine exhaust from your boat while underway can cause excessive accumulation of carbon monoxide within the cabin and cockpit areas when operating at slow speed or stopped in the water. Tail wind can increase accumulation (force of wind entering from aft section of boat). Provide adequate ventilation or slightly increase speed if possible. (figure 2.4)


**⚠ DANGER**

**DANGER:** Engine exhaust from your boat while underway can cause excessive accumulation of carbon monoxide within cabin and cockpit areas or when operating boat with a high bow angle. Provide adequate ventilation, redistribute the load, or bring boat out of high bow angle. (Figure 2.4)

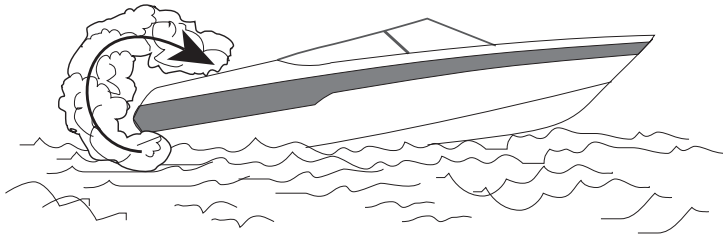

**Figure 2.4 Exhaust Accumulation due to High Bow Angle or Slow Speed**

Ensure proper ventilation aboard your boat (Figure 2.5) and be aware of the possibility of carbon monoxide poisoning. Keep your boat in safe operating condition. Periodically inspect the hull, engine and engine compartment, and all other equipment

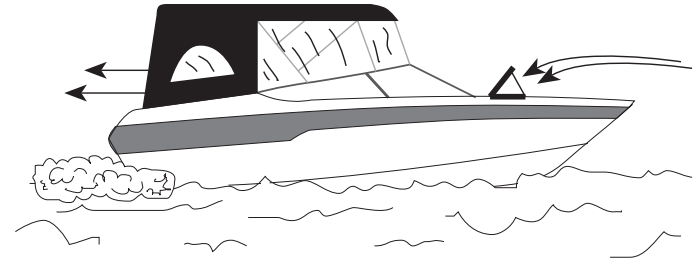

**Figure 2.5 Desired Ventilation Through the Boat**

### Navigational Aids Chart

Contains information about various signals, buoys, and warnings.

Robalo recommends you participate in a safe boating course to learn more about navigating your boat safely.

### Fuel System

Everyone who owns or operates a boat must practice fire safety. Each year, boat fires and explosions injure hundreds of individuals and cause millions of dollars in property damage. Many of these accidents can be prevented.

**⚠ WARNING**

**WARNING:** Avoid damage to your fuel system. Do not use fuel or additives containing more than 10% alcohol by volume (methanol or ethanol). Damage and loss of warranty may result.

Be alert for damage to your boat's fuel system. Over time, fuel fittings and fuel hoses wear out. Inspect these fittings and hoses regularly, especially near the engine where engine heat and vibration can accelerate deterioration.

## What to do

1. Schedule regular engine and exhaust system maintenance inspections by experienced and trained technicians.
2. Inspect fuel systems annually, particularly hoses, connections and tank surfaces. Use only USCG-approved fuel hoses.
3. Before fueling, shut down engines and auxiliary equipment and all electrical equipment. Also close all hatches and doors on board.
4. Do not allow equipment or gear to contact fuel-system components. Monitor side storage areas where fill and vent hoses are often located.
5. Do not store portable fuel tanks in enclosed areas, including the engine room compartment (even though it may be “ventilated”).
6. If your boat is equipped with a ventilation system, ensure that all blowers and hoses are operational and intact. Verify good airflow at the vent located on the boat.
7. Take a boating safety course and learn the correct type and use of a fire extinguisher aboard a boat.

## Each Trip

- Before starting the engine “sniff” your bilges. Getting down on your hand and knees and using your nose is the best fuel/vapor detector.
- Operate the bilge blower for AT LEAST FOUR MINUTES before starting an inboard or sterndrive engine. If you still smell fumes, try to locate the source and make repairs before starting the engine.
- Make sure all passengers know where to find your fire extinguishers and how to operate them.
- Before refueling, close all hatches, ports and other openings; shut off engines, motors, pumps and blowers; and DO NOT SMOKE. Fill all portable tanks on the dock.

- After refueling, wipe up or wash off any excess or spilled fuel; open all hatches and ports; and let the boat air out. “Sniff” your bilges. Operate the bilge blower for AT LEAST FOUR MINUTES before starting an inboard or sterndrive engine.
- On a boat with portable fuel tanks, make sure the vents can be closed and the tanks have a vapor-tight, leak-proof cap. The vent on a portable tank should be open when the motor is running. When the portable tank is not in use, the vent and the cap should be tightly closed.

***Important: Do not operate your boat until the source of a fuel leak is identified. Have a qualified service technician correct the condition. NEVER USE AN OPEN FLAME TO INSPECT FOR LEAKS.***

**At Least Annually:**

(Performed by a qualified marine technician)

- Replace fuel system components if any evidence of cracking, corrosion or deterioration is found.
- Inspect fuel tanks annually. Pay particular attention to bottom surfaces that may have contacted bilge water. Also, check to see if any part of the tank is corroded or damaged from rubbing and abrasion. Permanently installed fuel tanks must be vented to the atmosphere outside the boat. Closed compartments that contain fuel tanks and engines or non-ignition protected electrical components must be ventilated.
- Be sure the fill pipe is securely mounted, grounded and located where spilled fuel is directed overboard. Dry and cracked or soft and mushy fuel fill hoses should be replaced immediately.
- If your boat is equipped with bilge blowers, ensure they are working properly.
- Ensure heating and cooking appliances on board are secured and operate properly. Refer to the appliance owner's manual for guidance on inspecting for leaks in valves and connections. NEVER USE A MATCH to inspect for leaks.

- Ensure flammable items are stowed safely and cannot contact cooking or heating appliances or hot engine parts.
- Ensure fire extinguishers are USCG-approved and in good working order (i.e., gauges register and nozzles are clear).
- Repair all bare wires and loose electrical connections that might cause a short in your boat's electrical system and start a fire.
- Do not store disposable propane cylinders or charcoal lighting fluid on board the boat.
- When replacing starters, generators or other electrical equipment use only ignition-protected parts. Do not use automotive parts.

## **WARNING**

**WARNING:** Death or serious poisoning can result from exposure to carbon monoxide from engine exhaust. Turn off gasoline-powered generators that exhaust at or near the water level when the swim platform on the stern is in use. Swimmers should not enter the cavity beneath the swim platform.

## **WATER SPORTS**

Water skiing and other water sports, such as kneeboarding and riding on inflatable towable devices, require an increased safety awareness by all the people involved.

***Important: Remember that three people — not two — are required for safe water skiing: the boat operator, the skier, and an observer on the boat facing the skier. The observer relays signals from the skier to the operator. The operator can therefore give full attention to the operation of the boat and the waters ahead.***

Figure 2.6 shows a set of hand signals recommended by the American Water Ski Association (AWSA). The skier, the observer, and the boat operator should know and understand these 7 simple signals.

Following these guidelines helps make water skiing a safe and enjoyable experience:

1. Water ski only in safe areas away from other boats and swimmers, out of channels, and in water free of underwater obstructions.
2. Make sure anyone who water skis is a competent swimmer.
3. Be sure the skier is wearing a proper flotation device. A properly designed ski vest will keep a stunned or unconscious person afloat.
4. Approach a skier in the water from the lee side, and be certain to stop your motor before coming close to the skier.
5. Give immediate attention to a fallen skier. He or she is vulnerable in the water alone and is difficult to see by other boaters.

For more information about water skiing, Please contact the American Water Ski Association, 799 Overlook Drive, Winter Haven, Florida 33884 (1-800-533-2972) or [www.usawaterski.org](http://www.usawaterski.org).

## **WARNING**

**WARNING:** Serious injury may result from para-sailing, kiting, or similar water sports. Robalo Boats are not designed for towing para-sails, kites, or any other device designed to become airborne when towed behind a boat.

## Additional Equipment

You should consider having additional equipment on board to help make your boating experience safer and more enjoyable. Some examples include the following:

- Anchor and line
- Boat hook
- Bucket & sponge
- Commonly used spare parts
- Compass, navigation charts
- Distress signal kit
- Docking and towing lines
- Engine and accessory manuals
- Extra keys
- Fenders
- First aid kit
- Flashlight & extra batteries
- Fuses
- Manually operated bilge pump
- Owner's manual
- Paddle
- Replacement light bulbs
- Ship-to-shore radio
- Spare fuel and oil
- Spare propeller with fastening hardware
- Spare set of spark plugs and ignition parts
- Tool kit

## WAKEBOARD TOWER AND HOLDERS

---

Wakeboard tower and holders are optional on select models. If equipped, the tower provides a raised attach point (ski tow pylon) for the ski rope, rated at a 600 lbs maximum. The high attach point enables the skier to perform a wide variety of skills not capable with the lower transom attach point.

Some models are equipped with wakeboard tower speakers with amplifiers. It is the boat owner's responsibility to manage battery voltage while using this feature, to ensure battery/batteries are not drained to a point where engine will not start.

Robalo recommends that bimini tops be folded up and covered with the boot removed and stored when towing boats equipped with wakeboard towers.

The folded position of the wakeboard tower is for storage only. Do not tow wakeboard tower in the folded position to prevent damage. When towing boat on a trailer, Robalo recommends that the tower stays in the upright installed position to avoid damage to boat. When folding or raising tower, take care not to pinch electrical wiring.

***Important: Wakeboard holders extend out beyond the gunwale. Use care when towing, at dock and near other boats to avoid damage.***



**! DANGER**

**WARNING:** This wakeboard tower should be used for towing wakeboard and ski devices only. Improper use may overstress the wakeboard tower, imbalance the boat, or allow the tow rope to contact passengers. When using the tower, watch for low bridges, overhanging tree limbs or power lines that may come in contact with the tower. Do not use this tower for towing parasails, kites, or other watercraft. Do not tow more than one person at a time from this tow tower. Do not allow passengers to sit behind the rope attachment point when the tower is in use. Do not climb on, hang on, sit on top, jump or dive off this tower at any time. Check to be certain all bolts are in place and that they are tight before using the tower. Failure to adhere to these guidelines may cause personal injury or death.

**! WARNING**

**WARNING:** DO NOT USE TOWER FOR PULLING INFLATABLES. Use wakeboard tower for single skier/wakeboarder only. Use ski tow or stern eyes on transom for all other tow behind sports. Heavy loads could collapse tower causing personal injury.

1. Thumb Up: Speed up the boat.
2. Thumb Down: Slow down the boat.
3. Cut Motor/Stop: Immediately stop boat. Slashing motion over neck (also used by driver or observer).
4. Turn: Turn the boat (also used by driver). Circle motion—arms overhead. Then point in desired direction.
5. Return to Dock: Pat on the head.
6. OK: Speed and boat path OK. Or, signals understood.
7. I'm OK: Skier OK  after falling.


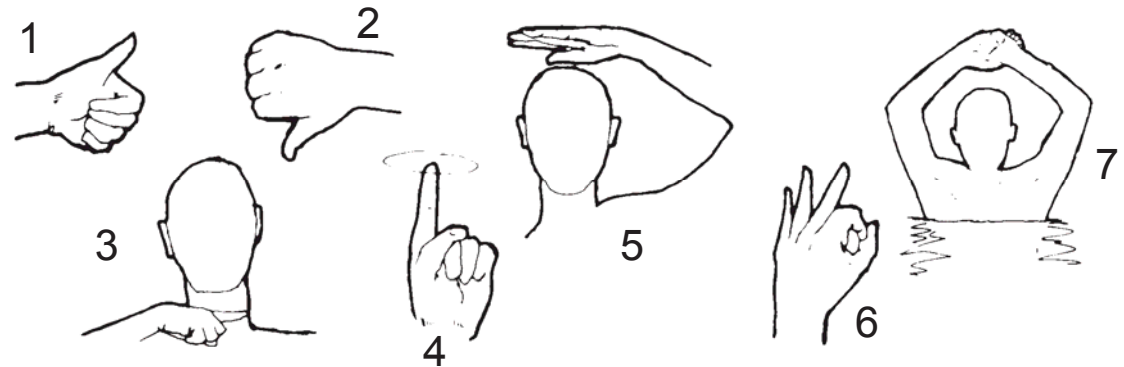


Figure 2.6 AWSA Water Skiing Signals

# NAVIGATIONAL AIDS CHART

## REMEMBER THESE RULES


- OVERTAKING - PASSING:** Boat being passed has the right-of-way. KEEP CLEAR.
- MEETING HEAD ON:** Keep to the right.
- CROSSING:** Boat on right has the right-of-way. Slow down and permit boat to pass.

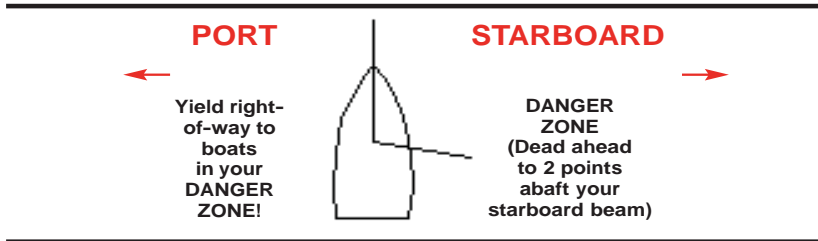


## WHISTLE SIGNALS

- ONE LONG BLAST:** Warning signal (Coming out of slip)
- ONE SHORT BLAST:** Pass on my port side
- TWO SHORT BLASTS:** Pass on my starboard side
- THREE SHORT BLASTS:** Engine(s) in reverse
- FOUR OR MORE BLASTS:** Danger signal



## BRIDGE SIGNALS

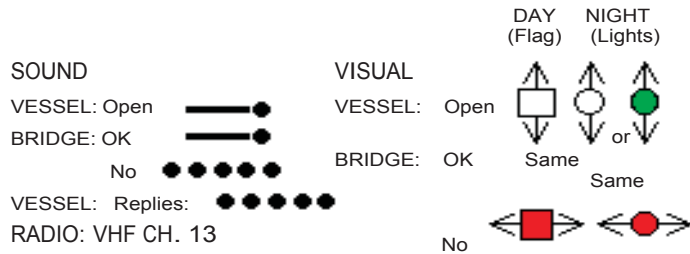

## STORM WARNINGS

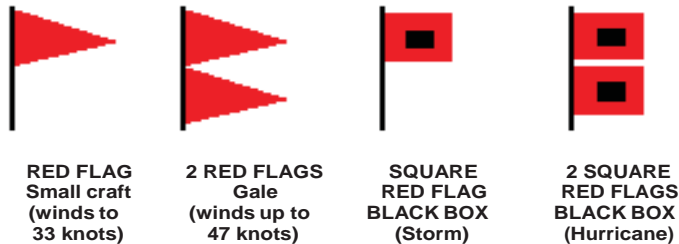

## LATERAL AIDS AS SEEN ENTERING FROM SEAWARD

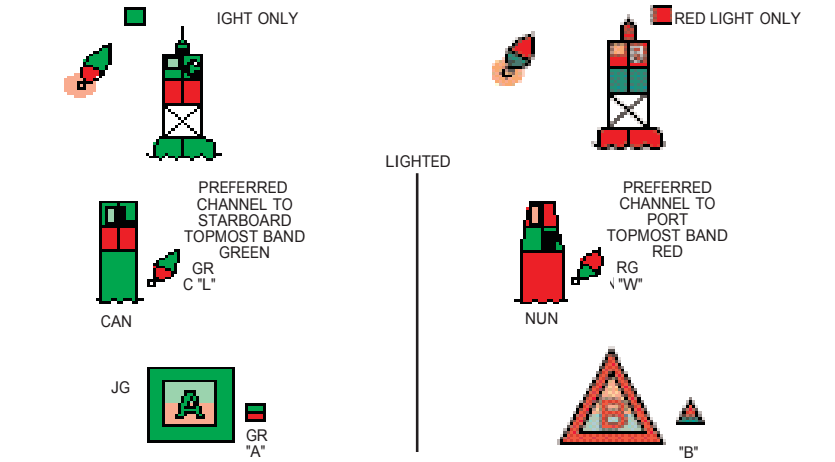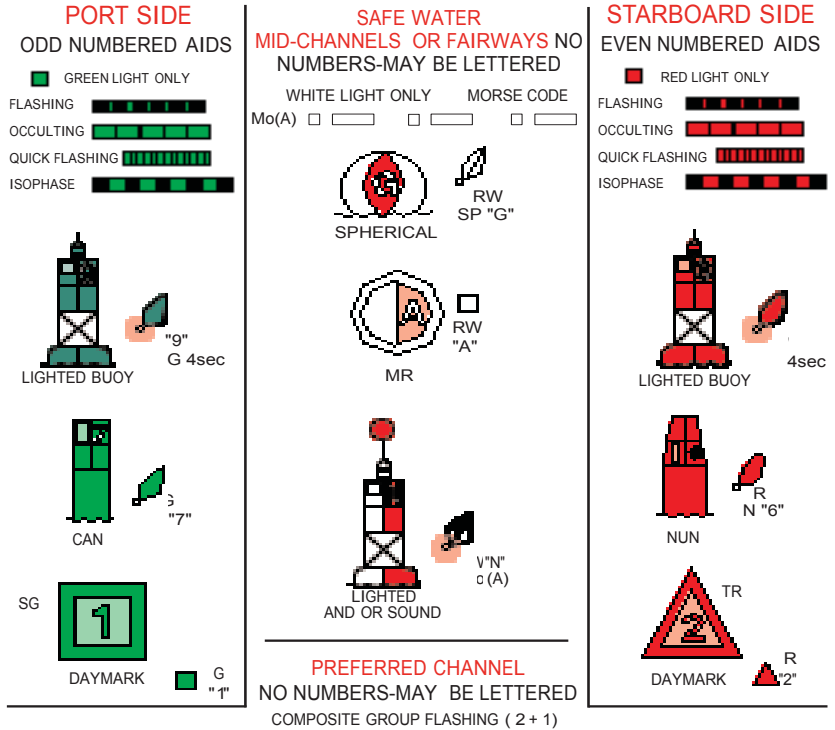

United States Coast Guard Website: [www.uscg.mil](http://www.uscg.mil)

# SYSTEMS

## ELECTRICAL SYSTEMS

Your Robalo boat has a 12 volt, direct current (DC) battery system.

### Safety Precautions

Follow these precautions when working with or on electrical systems or electrically powered equipment:

1. Shut off power supply before starting work.
2. Use insulated mats to prevent accidental grounding.
3. Make sure clothing is dry. Keep skin dry.
4. Remove all metal jewelry.

### 12 Volt DC Power

Batteries are the source of power for the 12 volt DC (direct current) electrical system. The batteries are charged through the engine-driven alternator. The voltmeter on the instrument panel in the dash shows the battery charging rate when the engine is running.

The negative terminal of each battery is connected to the grounding studs of the main engine(s). This type of negative ground system is the approved system for marine DC electrical systems. If you add additional equipment to your boat it must be adaptable to the negative ground system.

**NOTE:** Power feeds for accessory equipment must NOT be taken from the voltmeter terminals. A fuse block near the helm has been provided with additional accessory hookups. Consult your Robalo dealer for additional DC power needs on your boat.

## ⚠ CAUTION

**CAUTION:** When adding electrical equipment, be careful not to overload the fuse block.

**Note:** The appropriate fuse or circuit breaker must be used. Consult a qualified technician for proper fuse size.

## ⚠ WARNING

**WARNING:** Considerable care has been taken to design a safe electrical system to protect you from hazardous shocks. Always have a qualified technician make any modifications to the system.

## ⚠ DANGER

**DANGER:** Do Not disconnect or reconnect battery cables if gasoline fumes are present!

### Battery

**Note:** A dual battery system is standard equipment on some models.

The battery installed in your boat by your Robalo dealer supplies your boat with DC current for lights, engine starting, and accessories. When the engine is running, the alternator supplies the power needed to keep the batteries charged. Lights and accessories draw power from the batteries.

## Battery Isolator System

The models with a single engine and two batteries are standard with a battery isolator system to maintain a charge on the house battery while the engine is in operation. Models with twin engines and three batteries are standard with a battery isolator system to maintain a charge on the house battery while the starboard engine is in operations. The isolator for Yamaha powered boats is in the engine and for Honda powered boats, it is in the aft bilge.

## Battery Selector Switch

All models have a battery selector switch as standard equipment. If your boat has a battery selector switch, you will find it in the aft rigging area or in the console.

### Single Selector Switch with Two Batteries

A selector switch with two batteries is standard on some models. This battery selector switch has four positions:

OFF Power supplied to automatic bilge pump, CO detector (if so equipped), and stereo memory.


1. Use only Number 1 battery

ALL Use Number 1 and Number 2 batteries

2. Use only Number 2 battery

Recommended settings are as follows:


1. When boat is not in use or power is not required, turn the switch to OFF. The only power supplied at this setting is the automatic bilge pumps, carbon monoxide detector (if equipped), stereo memory, and optional corrosion protection system.

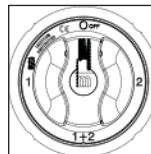

2. To start the engine, place switch in Number 1 position. With this setting, power will now be supplied to your boat from the Number 1 bat-

tery. This will allow the engine alternator to charge both batteries.


3. For cabin power with engine off, place the switch in the Number 2 position. Power will now be supplied to your boat from the Number 2 battery.

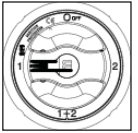


**Note: Robalo does not recommend leaving the switch in the ALL position when the engine is off. This will drain both batteries and you will not have a starting battery.**

4. If one battery is low, you still have the option of starting the engine from the other battery.

Example 1: If the Number 1 battery is low, place the switch in the Number 2 position. Then start the engine. Place switch in Number 1 position. This will allow the engine alternator to recharge both batteries.

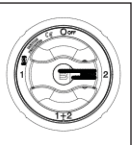

Example 2: If the Number 2 battery is low, place the switch in the Number 1 position. Then start the engine. This will allow the engine alternator to recharge both batteries.

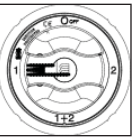

**Note: When recharging a low battery, be sure to run the engine for a sufficient amount of time to fully recharge the battery.**

**Note: Robalo does not recommend any other settings than mentioned because of possible damage to batteries or engine alternator.**

## AC/DC Converter and Battery Charger

Your Robalo boat may have an optional or standard battery charging system which may operate off of an extension cord or from the 120 or 220 volt AC power from shore power system. Turn the charger on at the main cabin electrical panel whenever your boat is connected to shore power to keep batteries fully charged. The AC-to-DC converting and charging system is fully automatic and permanently wired into the 12 volt DC system. If the monitored battery level drops under the full charge range, the charger

automatically turns ON and restores the battery to FULL charge status. If the battery is deeply discharged, the charger will deliver full output. Output automatically decreases as the battery is charged. If the battery is fully charged, the charger provides a trickle charge as needed.

Before you connect an extension cord to the battery charger 120 volt power supply, secure the extension cord to the boat. Connecting the cord to the boat first will prevent dropping a "hot" cord into the water. When you leave the dock remove the cord from the dockside power source first. If you have any questions, contact your Robalo dealer.

## 120 or 220 Volt AC Power

The alternating current (AC) electrical system operates off a standard 30 amp 120 or 220 volt, 60 or 50 cycle shore power system. The main distribution panel is in the cabin area.

## Lighting

Lighting operates off the 12 volt DC system. Turn lights on or off at the main electrical panel in the cabin or at the light fixture. See your Robalo dealer for information regarding bulb replacement.

## Electrolysis and Zinc Anodes

Many boaters are unaware of the problems associated with electrolysis and how to properly address corrosion issues. Electrolysis is a reaction between metal and electrical energy. Electrolysis occurs when electrical current is "leaking" into the water, and can come from a variety of things such as ship to shore power, sharing electrical wires, old electrical devices in contact with the water, batteries in boats, etc.

Electrolysis can also be caused by "stray currents" due to a fault in an electrical item, even though correctly grounded. Robalo boats that have shore power are equipped with a galvanic isolator which isolates the boat from the dockside electrical system.

Electrolysis/corrosion is a very real issue and expense for any boater, and boat owners must be aware of the proper protection and maintenance.

Corrosion will directly affect the performance of your boat within a very short period of time.

It is the boat owner's responsibility to check for and replace damaged parts due to galvanic deterioration. Refer to your Robalo dealer to investigate the source of stray corrosive currents.

Sacrificial anodes are installed on the outdrive and trim tabs to protect underwater hardware on your boat. Metals used in sacrificial anodes are less noble than the copper-based alloys and aluminum used in underwater fittings; therefore, the anodes will deteriorate first and protect the more noble parts. Metals commonly used in sacrificial anodes include aluminum, magnesium and zinc.

The type of metal needed for your boat's sacrificial anodes will depend on



**CAUTION:** Replace sacrificial anodes if they are corroded 50% or more.

your use of the boat. For instance, the type of water where you commonly go boating is a major factor in determining your need. Robalo recommends you consult your dealer and your engine manufacturer's owner's manual to determine the proper metal needed in your sacrificial anodes.

Zinc anodes generally require replacement about once a year, but may need to be replaced every six months in salt water areas. The need to replace anodes more frequently may indicate a stray current problem within the boat or at the slip or mooring. If zinc anodes are not replaced annually, they may not be providing the necessary protection.

**Note: Do not paint between the zinc and any metal it touches. Do not paint over the zinc.**

When an AC shore power system is connected to the boat, the underwater metal fittings will be connected through the water to grounded metals ashore. The zincs will be consumed at a faster rate unless the marina maintains a protective system to prevent this.

Placing a zinc in the water bonded to the metal outlet box on the dock will reduce zinc loss on the boat. Do not connect this zinc to the boat's ground system.

***Important: All electrically operated DC equipment and accessories must be wired so that the ground polarity of each device is the same as that of the battery. Robalo boats have a negative ground system, which is recommended practice throughout the marine industry. All metal items (fuel tanks, underwater hardware) in the boat are connected to the zinc anode by the green bonding wire.***

Once a year  
(Performed by a qualified marine technician)

Verify the integrity of the boat's entire AC shore power grounding system, including the connection to the DC system negative.

Verify that any galvanic isolators (if installed on your boat) meet current American Boat & Yacht Council (ABYC) standards and are fully functional.

Inspect shore power cords, adapters and boat receptacles for any signs of deterioration, including cord wear, loose connections, signs of sparking or overheating and bent or pitted blades. If there are any such signs, examine, correct, and test the equipment or replace it.

Operate the boat's electrical system at full load (everything on) and check for AC system leakage or voltage between the boat's underwater fittings (bonded system, if equipped) and the shore side AC

## **FUEL SYSTEM**

The internal fuel system on your Robalo boat meets all current Federal requirements.

Fuel lines, filters, and all other fuel system components should be checked at the start of each season and periodically thereafter, particularly after any work has been done aboard the boat which might have affected any part of the system. Be certain that all fuel system components are in proper condition and that the entire system is fuel tight. Each fuel tank

has a manual shut-off valves on the top of the tank to close off the fuel system in case of leakage or line failure. There is also a fuel valve on the fuel filter to prevent fuel leakage when changing the filter.

The fuel tank is located forward of the engine compartment under the cockpit floor. The fuel tank fill pipe is on the outside deck.

The fuel tank vent allows air to escape as the tank is being filled and helps equalize tank pressure as temperatures change.

Periodically, check the condition of the fuel tank components. Fuel tank fittings are accessible through the inspection plate of the cockpit floor.

**Note: The fuel fill cap has a built-in tank ventilation feature. If you should need to replace the cap, see your dealer for the exact cap to ensure proper fuel system operation.**

## **Fuel Recommendations**

The quality of the fuel is very important for satisfactory engine performance and long engine life. Fuel should be clean and free of contamination. Your fuel tanks should be kept full of fuel whenever possible. This will reduce the amount of water condensation and reduce the possibility of contamination.

## **MARINE SANITATION DEVICES**

### **Livewell Pump, Raw Water Pump and Filter**

Once the water pump switch is ON, the water pump supplies water under pressure to the raw water system. The filter keeps particles from entering the pump reservoir. Check the filter periodically and clean if necessary. A clogged filter may result in low water pressure to the system.

Before servicing the filter, turn the water system switch OFF. To clean the filter, remove screen and rinse with clean water. Replace and make sure the O-ring is seated properly when installing the cover.

**Note: Refer to the water pump manual for detailed operation and maintenance procedures.**

Optional Sanitation equipment with the boat model can include a Porta-Potti (Figure 3.4).

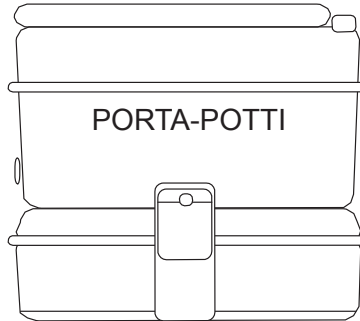


Figure 3.4: Porta-Potti

**Note:** See the owner's manual supplied by the manufacturer for safety precautions and for detailed operation, maintenance, and winterizing procedures. The manual is in your owner's packet.

The U.S. Coast Guard has also issued regulations requiring boats to have a sanitation system on board to control pollution. Wastes are to be stored in a holding tank or other device, such as a Porta-Potti, until the device can be pumped out and waste disposed of at a shore facility. Discharging this waste overboard is prohibited in most jurisdictions. Check with the Coast Guard regarding regulations in your area.


### Overboard discharge

**Important:** *Overboard discharge of untreated sewage within 12 miles of shore on the east coast and within 9 miles of shore on the west coast is prohibited by law. Check the local authorities for proper discharge procedures in your area. If your boat is going to be used on inland waters, have your dealer seal the overboard discharge portion of your waste system.*



### TYPICAL SYSTEMS LAYOUT

1. Bilge Pump and Float
2. Battery Selector Switch
3. Batteries (2 ea.)
4. Livewell/Raw Water Seacock
5. Sea Strainer
6. Livewell Pump
7. Raw Water Washdown Pump
8. Steering Helm
9. Fuel Tank

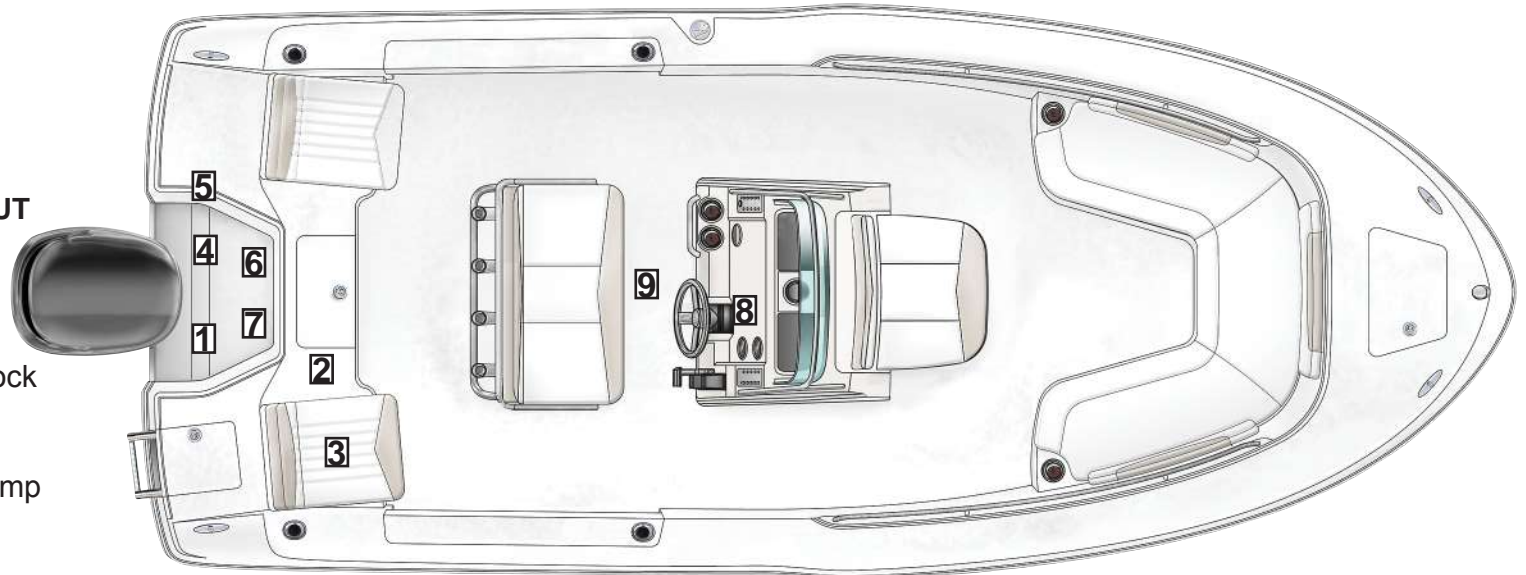

R200






### TYPICAL SYSTEMS LAYOUT

1. Bilge Pump and Float
2. Battery Selector Switch
3. Batteries (2 ea.)
4. Livewell/Raw Water Seacock
5. Sea Strainer
6. Livewell Pump
7. Raw Water Washdown Pump
8. Steering Helm
9. Fuel Tank




R180

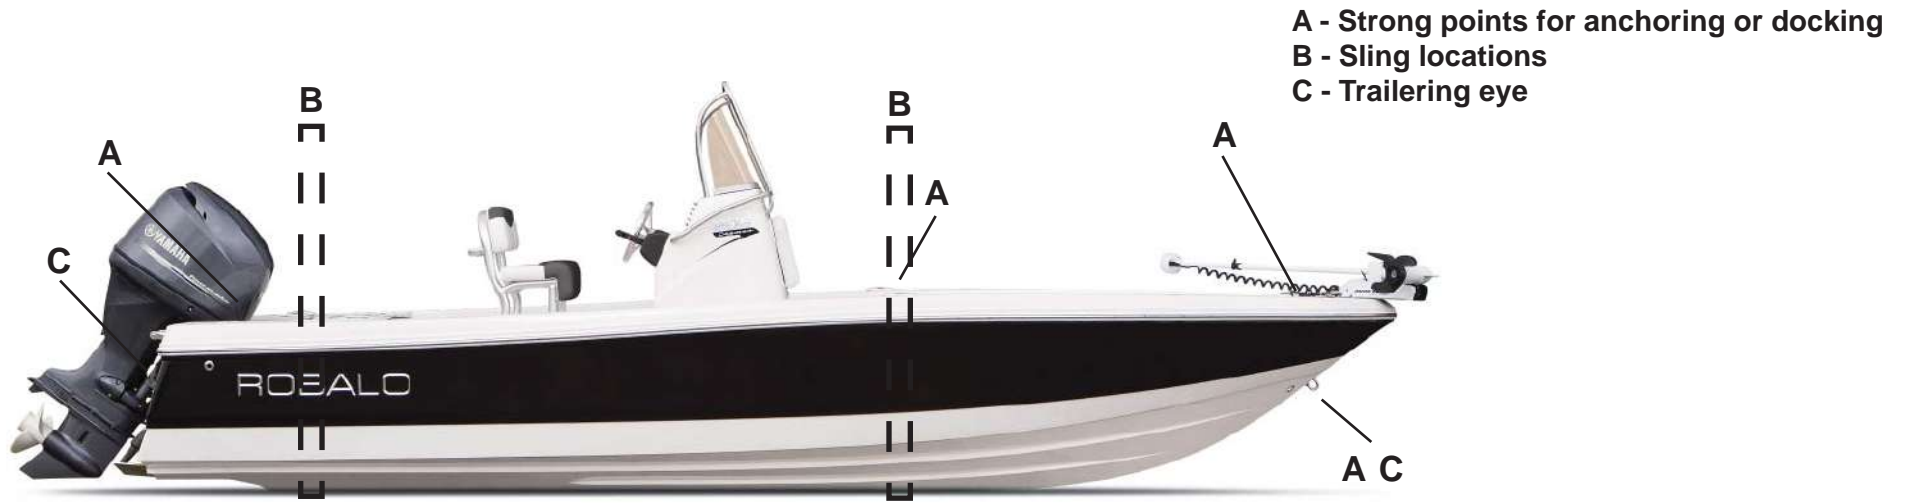

### TYPICAL SYSTEMS LAYOUT

1. Bilge Pump and Float
2. Sea Strainer
3. Livewell Pump
4. Fuel Tank
5. Raw Water Washdown Pump
6. Batteries
7. Battery Selector Switch
8. Livewell/Raw Water Seacock
9. Steering Helm

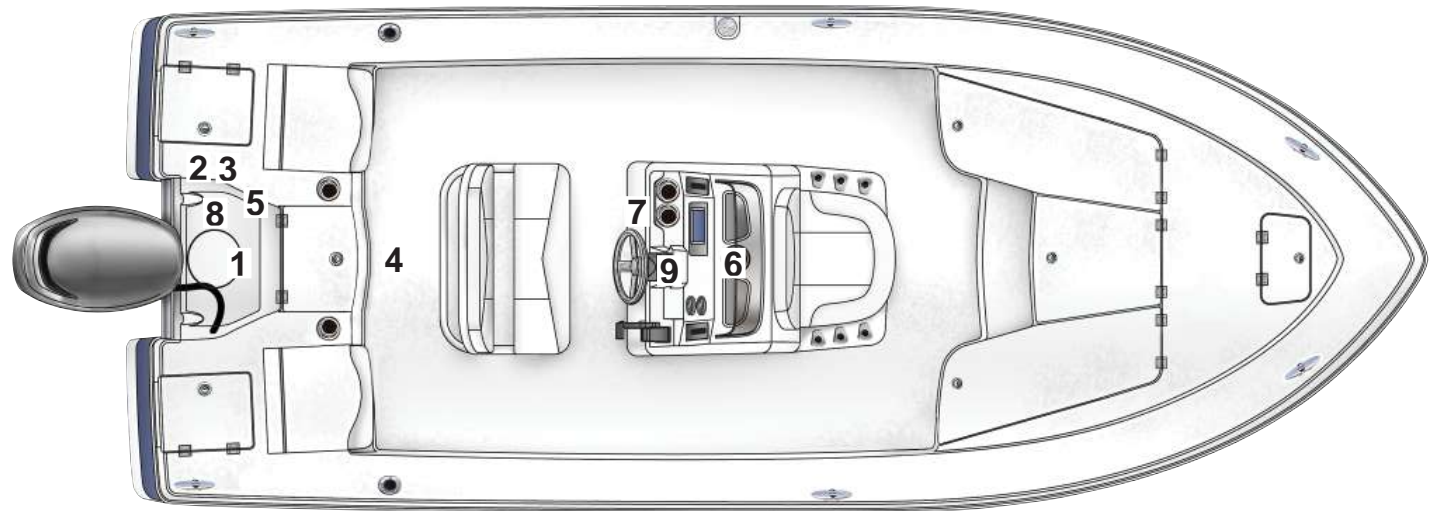

R206 Cayman

# COMPONENTS

This chapter describes standard and optional components factory installed on our fishing boats. Depending on how your boat is equipped, it may or may not have all of the equipment described in this chapter.

Be sure to read all operation, maintenance, and safety information contained in each component's manual before operation. The manuals are in your owner's packet.

**Important:** *Adhere to all safety precautions in the manufacturer's literature when operating the components.*

**Note:** "Engine" in this Robalo manual means one or two engines depending on how your boat is equipped.

## WARNING

WARNING: When using electrical components, observe safety precautions to reduce the risk of fire, electrical shock, personal injury or damage to your boat and/or component.

## DASHBOARD AND INSTRUMENT PANEL

Instruments on the dashboard are important for monitoring the performance of your boat and alerting you to possible problems or causes of problems.

Most Robalo boats are equipped with a Yamaha Instrument Operation. Please refer to the quick reference information at the end of this section for set up and usage instructions. For boats equipped with the Command Link Plus system, please see the component owner's manual for Command Link Plus provided by Yamaha.

The fuel gauge indicates the approximate amount of fuel in your fuel tank. The reading is most accurate when your boat is operating at idle speed. Be aware that you should compare gauge readings with hours of use versus known fuel consumption because the gauge is only an approximate reading of the amount of fuel in your boat's tank.

The voltmeter indicates battery voltage. When the engine is running, the meter should read between 12 and 15 volts. A significantly lower reading may indicate a battery or alternator problem or a heavy drain on the battery. If the voltmeter needle moves back and forth in wide swings, the alternator may not be charging properly.

The tachometer indicates the operating speed of the engine in revolutions per minute (RPM). It does not indicate the speed of your boat moving through the water. Do not exceed the maximum full throttle RPMs stated in the engine operator's manual.

The speedometer indicates the speed your boat is crossing the water in miles per hour. Water pressure from a water pickup at the boat's stern is measured and converted into a reading on the speedometer.

The compass indicates the direction or heading in which your boat is traveling. Have the compass calibrated by an experienced technician. See the manufacturer's instruction manual for details about proper operation and maintenance.

## CAUTION

CAUTION: Compass reading may be erroneous if compensator is not properly adjusted. Always make a deviation table and use it when navigating with compass.

---

## HYDRAULIC STEERING SYSTEM

---

Your boat has a hydraulic steering system. This system has two basic elements: helm pump and cylinder. The steering wheel is mounted to the shaft of the helm pump. Turning the steering wheel pumps hydraulic fluid to the steering cylinder. Extra hydraulic fluid prevents air from entering the system. A relief valve protects both the mechanical portion of the rudder (in case the rudder strikes a hard object) and the hydraulic system. This is a manual system, not a power steering system. The effort required to turn the wheel will increase as the system is called on to exert more force on the engines. At no time, should anyone expect this system to turn as easily as a car's power steering.

Check the level of hydraulic fluid in the helm regularly and replenish if necessary. All other maintenance should be performed by your dealer.

### Power Steering Unit

Your boat may have an optional or standard power steering unit for the hydraulic steering system. This unit is powered off of one engine only. If you lose power to the power steering system due to an engine or electrical issue, you will still maintain your normal hydraulic steering system.

---

## MULTIFUNCTION NAVIGATION DISPLAY SYSTEM

---

An optional high performance multifunction display is available on select models. Robalo provides one of the most powerful multi-function navigational displaysystems, packed with power and performance features. Boat owners will have access to 3D chart-plotting, HD Digital technology, Sirius Satellite Weather and more.



### CAUTION

CAUTION: Acceleration at full throttle is not recommended for certain periods of the engine "break-in period." Refer to the engine owners manual for details.

---

## THROTTLE

---

The throttle controls the boat's speed and the direction the boat travels. If the throttle is in its center neutral position, the boat will not move forward or aft with the engine running. Moving the throttle forward from center moves the boat forward. Moving the throttle aft moves the boat backward. The speed at which the boat moves is directly related to how far the operator pushes the throttle.

**Note: The throttle must be in its center neutral position before the engine will start. See your engine manufacturer's owner's manual for specific starting instructions.**

---

## CONTROLS

---

### Steering

Other than the common sense and good judgment of the operator, the steering system is the most important safety system on your boat. Factors requiring operator attention for safe steering include engine torque, trim tab settings, waves and speed.

---

## POWER TRIM

---

The power trim system allows the operator to raise and lower the engine to adjust the drive angle while underway. It also allows the operator to raise and lower the engine for trailering, beaching, and operation in shallow water. Control your trim setting with the trim switch on the control handle. Section 5 discusses the importance of proper trim while operating your boat.

**Note: Refer to your engine manufacturer's owner's manual for information concerning maintenance and operation.**

---

## BILGE PUMP

---

The automatic electric bilge pump(s) removes water from the bilge area. If the pump motor runs but does not remove any water, the pump may be clogged. If there is no visible debris clogging the pump and water is still not being removed, check the discharge hose for kinks or obstruction. The bilge pump can also be operated in a manual mode by the switches on the main electrical panel.

**Note: The Federal Water Pollution Act prohibits the discharge of oil or oily waste into or upon the navigable waters and contiguous zones of the United States if such discharge causes a film or sheen upon, or discoloration of, the surface of the water, or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty.**

---

## RUNNING AND NAVIGATIONAL LIGHTS

---

If you operate your boat at night, the law requires you to turn your boat's running lights ON. Your Robalo boat has one white, one red (port), and one green (starboard) light. Check running lights periodically for proper operation. Check them before heading out after dusk.

There are various running light combinations for the types of vessels you may encounter while boating. You should learn to identify what these combinations are and the type of vessel they are associated with. Robalo recommends participation in a "safe boating" course to learn more about the various light combinations.

The running/navigation lights are controlled at the helm station by a three position rocker switch. This allows for selection of the mast (white) light ON when anchored or moored, or to have the mast (white), port (red) and starboard (green) lights all ON while underway.

It is the boat owner's responsibility to manage battery voltage while using this feature, to ensure battery(s) are not drained to a point where engine will not start.

Refer to owner's manual packet for instructions and warranty information.

---

## STEREO SOUND SYSTEM

---

The stereo in your boat is equipped with an AM/FM radio, MP3 Jack, and premium water resistant speakers. The stereo also has an antenna lead. The stereo will turn off when motor is cranked. This is normal operation. The stereo memory has power at all times.

**Note: It is the boat owner's responsibility to manage battery voltage while using this feature to ensure battery/batteries are not drained to a point where engine will not start.**

Refer to owner's manual packet for instructions and warranty information.

---

## FIRE EXTINGUISHERS

---

As the boat owner, you are responsible for making sure you have the required number of fire extinguishers. Fire extinguishers must be approved by the U.S. Coast Guard.

Boats longer than 26 feet and shorter than 40 feet: Two Type B-1 or at least one Type B-2 portable hand extinguishers. If your boat has a fixed fire extinguishing system approved by the U.S. Coast Guard, one Type B-1 extinguisher is required.

Boats longer than 16 feet and shorter than 26 feet: At least one portable hand Type B-1 fire extinguisher.

All fire extinguishers should be mounted in a readily accessible location away from the engine compartment. Everyone on board should know where the fire extinguishers are and how to operate them.

If your fire extinguisher has a charge indicator gauge, cold or hot weather may affect the gauge reading. Consult the instruction manual supplied with the fire extinguisher to determine the accuracy of the gauge.

---

# UNDERWAY

---

This chapter discusses the operation of your boat from the beginning of a boating excursion to its end. We'd like to remind you to be kind to our environment while you're boating. Don't throw garbage and other refuse overboard. And do your best to keep harmful compounds like gasoline and antifreeze out of the water.

**Note:** The term "engine" in this chapter means one or two engines depending on how your boat is equipped.

**Note:** If your boat is equipped with a carbon monoxide detector, it should be tested to determine that it is functioning properly every time you use your boat.

## TRANSPORTING YOUR BOAT

---

A correctly selected trailer supports your boat properly, makes towing safer, and makes unloading and loading in varying weather conditions easier.

**Important:** *Improper trailering is one of the major causes for damage to the hull. The warranty does not cover damage of this type.*

**NOTE:** Ensure all snap-in carpet has been rolled up and secured prior to moving to prevent carpet damage.

The type and size of the side supports, or pads, are very important. Side supports run lengthwise to the boat and parallel to the keel. Side supports should only be tight enough to keep the boat from leaning side to side. Any unnecessary pressure will damage the hull. Newer trailers have self-adjusting side supports and a bow pad that can be easily adjusted. These eliminate the need for manually adjusting side supports and keel rollers every time you load your boat. Your Robalo dealer can help you select the best trailer for your boat.

Inspect your trailer regularly to make sure the side supports are in good working condition. Check bolts securing rollers and supports from time to time to make sure they are tight.

The trailer should be designed and built to carry the full weight of your boat, engine, and gear while providing support for the hull. Be sure not to overload your trailer by loading the boat with excess baggage, camping equipment, etc. Check the certification label on the frame of the trailer. It is required to show the gross vehicle weight rating. Be sure the total weight of your boat, engine, fuel, gear, and trailer does not exceed this rating. Make sure your towing vehicle has a hitch appropriate for the rating.

Distributing the weight on the trailer is important. Place the heaviest items at the bottom of the boat over a roller or chock, and secure them to keep them from shifting.

Balancing the load on the trailer is also important. If too much weight rests on the hitch, the towing vehicle will oversteer, a condition that causes the front end of the vehicle to sway. Conversely, too little weight on the hitch causes the trailer to fishtail. In both cases, the vehicle will be difficult to handle and at higher speeds the swaying or fishtailing can become uncontrollable and result in personal injury and damage to the boat, trailer, or towing vehicle.

Weight on the hitch, or tongue weight, should be 5% to 10% of the total weight of the loaded trailer to avoid overloading the tow vehicle and to provide adequate pressure on the hitch ball. If the weight of the loaded trailer is 2000 pounds, the weight on the tongue should be between 100 and 200 pounds. A weight distributing hitch transfers portions of tongue weight to a point between the front and rear wheels of the towing vehicle and to the trailer wheels.

**Important:** *Bumper hitches are not safe and are illegal in many states.*

**DISCLAIMER:**

**TOWING REGULATIONS REGARDING GROSS VEHICLE WEIGHT RATINGS VARY BY STATE AS WELL AS REQUIREMENTS FOR BRAKES. CHECK YOUR STATE REGULATIONS TO DETERMINE THE BRAKE REQUIREMENTS FOR YOUR BOAT, MOTOR AND TRAILER PACKAGE.**

**ROBALO ASSUMES NO LIABILITY FOR THE TRAILER REQUIREMENTS SPECIFIC TO YOUR STATE.**



**WARNING:** Improper towing can result in an accident causing personal injury and equipment damage. Become familiar with towing instructions in owner's manuals and with warnings supplied with your trailer and towing vehicle.

The brake system is usually completely self-contained on the trailer and no hook-up is required to the towing vehicle. Brakes are either drum or disc type. They work the same way as the brakes on a standard passenger vehicle, but the method of applying the brakes is different. Your Robalo or trailer dealer can explain how the brakes on your trailer work.

Make sure your boat is secure before towing it.

- Close all windows, hatches, and doors.
- Store equipment to keep it from shifting or falling.
- Remove and store convertible top if your boat is so equipped.
- Use a second safety chain to secure your boat's bow to the trailer tongue. Tie down the stern to the trailer.

Towing a boat requires extra caution by the vehicle's driver. Allow extra distance between vehicles. Obey speed limits. Some states have lower speed limits for vehicles with trailers. If you are traveling slower than

other traffic, pull over when it is safe to do so and allow traffic to pass. As with all other aspects of owning and operating your boat, use common sense and good judgment.

If you do not have experience backing a trailer, practice before you get into a confined public or private launch site. Take your trailer to an open area and get accustomed to using it. If possible, take someone with you who knows how to back a trailer.

Steering a trailer while backing it up works the opposite of steering a car. If the trailer needs to go to the right, turn the steering wheel to the left and vice versa. Inexperienced backers tend to turn the wheel too far. Do not oversteer. Turn the wheel gradually until you get the feel of safe backing.

## **LAUNCHING AND LOADING**

The handling of your boat and trailer at the ramp requires practice, skill and patience. With care and attention to the following tips, you can launch and relaunch your boat with relative ease.

**Important:** *Typically a beam of 8 feet 6 inches allows you to tow without a special permit in most places. These boats are considered "trailerable" for this reason. Other boats have wider beams and are still "trailerable", but, in most cases you need a permit to do so. Check with your state on permit requirements before towing.*

### **Roller Trailers – Launching & Loading**

Robalo recommends you follow the trailer manufacturer's guidelines for launching and loading your boat.

### **Bunk or Custom Trailers—Launching**

Here are some tips to remember when you are putting your Robalo boat in the water:

**Important:** *Before launching your boat, make sure the transom drain plug is installed. If it is not installed, the bilge could fill water quickly.*

1. Always prepare the boat for launching before you get to the ramp. Stop in a launching prep area near the ramp that doesn't block traffic and remove your tie-downs, tilt up your engine or drive unit, replace your transom drain plugs, etc.
2. Have someone at the ramp to give you directions. Slowly back the trailer down the ramp to the water. If there isn't a ramp available, use a solid area of ground to the shore, with a slope if possible. Avoid wet, soft sand. Always remember to launch your boat at a right angle to the shore.
3. Back the trailer down the ramp until there is enough water to make the boat float. Because the bunks generate more friction than rollers, you need to back the trailer further into the water.
  - Tie a mooring line to the boat so you will have control once it is floating.
  - Unfasten the boat bow safety chain. Hold the winch handle securely, reverse the winch lock and begin unwinding the line. Unwind it slowly and carefully.
  - On an average grade, the bunks on your trailer will allow your boat to gently slip back and float into the water. If your boat doesn't immediately move, try unwinding about six inches of line, lock your winch and give the boat a push. Then unlock the winch and try again. If this doesn't work, you might try backing the trailer deeper, if possible.
  - Care should be given when launching from trailers with bunks that are equipped with plastic-like materials. These materials make the bunk surfaces very slippery, and the boat may begin to unload as soon as tension is released on the winch cable/strap.

### Bunk or Custom Trailers—Loading

When loading, always prepare for the procedure prior to reaching the ramp. If the ramp is busy, preparation will shorten the time it takes for you to get your boat out of the water.



**WARNING:** If the winch handle slips out of your hand, let it spin. DO NOT try to stop it

You probably won't have to back the trailer into the water as far to load the boat as you did to launch it. In fact, the easiest way is to back your trailer up until the rear of the bunks is in the water. By not putting your trailer too deep in the water, your boat will actually center itself on the bunks about 1/3 to 1/2 the distance onto the trailer.

Connect the winch cable/strap to the bow eye of the boat. Lock your winch before attempting to wind the cable/strap in. Once your boat is aligned and is pulled firmly against the winch stand roller or vee block and your winch is in the locked position, connect the boat bow safety chain and you are ready to drive to the loading/preparation area near the ramp to connect all other tie-downs, lighting or electric brake connections, etc.

### Common Cause of Boat Misalignment

If your boat doesn't sit level in the water or your bunks or rollers are not adjusted properly, you may have misalignment problems with your boat when loading. Basic correction procedures are as follows:

#### Correction Procedures:

Re-measure all roller assemblies that set in a line across from each other. Make sure the distance to each roller from the centerline of the trailer is equal. In other words, the left side of your trailer should be exactly the same as the right side. This is true of bunk or roller trailers.

If your boat keeps going to the port (left) side, remove the boat and loosen the U-bolts and/or the through bolts that clamp the roller assemblies on the stern (back) section of the trailer. Force each assembly to the right as if you were trying to turn the handlebars of a bicycle. Hold each assembly in this turned position and retighten the U-bolts and/or through bolts.



This repositioning of the roller assemblies should correct the misalignment of the boat on your trailer. If your boat goes toward the starboard (right) side, reverse the procedure.

Another common reason for boats not centering themselves is putting the trailer too deep in the water, which does not allow the trailer adequate time to center the boat. This is especially true on roller style trailers. Please

**Note: Make sure your trailer is not too deep in the water or the boat will float over the rollers and be difficult to load and center.**

### **BOARDING YOUR BOAT**


The U.S. Coast Guard requires that a capacity plate be affixed to all boats up to 20 feet long. This plate states the maximum load capacity. The plate shows persons and gear in pounds the boat will handle safely under normal conditions. The U.S. Coast Guard establishes these load capacity ratings. Overloading and improper distribution of weight are significant causes of accidents. Keep weight below maximum limits for safety in turbulent water.

***Important: The presence of the capacity plate does not relieve the boat operator from the responsibility of using common sense or sound judgement. Turbulent waters and adverse weather conditions reduce the maximum load capacity rating of the boat.***


When loading your gear on board your boat, remember to distribute the load evenly, keep the load low and do not overload. Always step onto the boat, never jump! Have someone on the dock pass your gear aboard. Secure all gear firmly so that it will not move or interfere with operation of the boat.

The way your passengers are seated and gear stowed in the boat affects your boat's performance. Passengers should board the boat one at a time and find a seat. Passengers should remain seated during loading


of gear to maintain an even trim. Distribute your passengers and gear so that your boat is balanced side to side and front to rear (Figure 5.1).

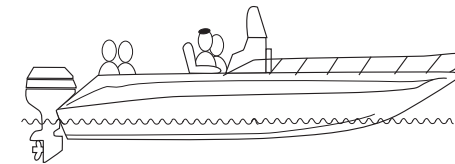

**CORRECT**  
Balanced load: gives maximum performance

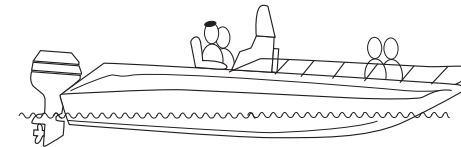

**INCORRECT**  
Overload forward: causes boat to "plow"

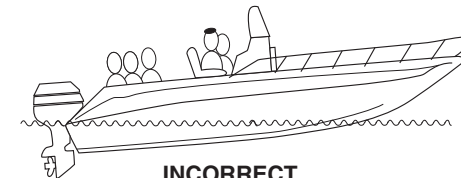

**INCORRECT**  
Overload aft: causes boat to "porpoise"

**Figure 5.1 Boat Loading**

As the operator, you are responsible for the safety of your passengers.

- Do not allow passengers to ride on the bow with feet hanging over the side.
- Do not allow passengers to ride sitting on the stern or gunwales. Falling from moving boats is a major cause of fatal recreational boating accidents.
- Do not allow passengers to sit in the bow rider area (if so equipped) while underway if doing so will obscure the operator's vision.

A shift in passenger weight changes the planing angle of the hull or the thrust of the propeller. This has the same affect on the boat as if the angle of the drive unit were changed. Minor deficiencies in your boat's ride can be quickly corrected by shifting passengers or gear forward or aft. By taking a little extra time to carefully place such gear as coolers, water jugs, tackle box, anchor, and tools, you create a more desirable trim. On planing-type boats, utilize stern loading in order to slightly raise the bow.

## FUELING

Improper fueling procedures are the most common cause of boat fires.

### WARNING

**WARNING:** Fuels with alcohol or alcohol derivatives can lead to hazardous leaks, fire, or explosion. Do not use this type of fuel

Ethanol-infused gasoline is widely available to today's boater. However, it may have harmful effects on marine engines and fuel delivery systems. Please refer to your engine manufacturer's owner's manual to find the recommended type and grade of fuel for your engine as well as a better understanding of the effects of ethanol on your engine.

Before fueling your boat, check the entire fuel system for leaks. Check for weakening, hardening, swelling, or corrosion of fuel system components. These include the fuel tank, fuel lines and fittings, fuel filter, and carburetor. Any sign of leakage or deterioration requires immediate replacement before further engine operation.

### DANGER

**DANGER:** Fuel vapors are explosive and can become trapped within the lower portions of the boat. Close all hatches, windows, doors and compartments while fueling your boat.

### WARNING

**WARNING:** Do not smoke, extinguish all open flames, STOP engine and other devices that could cause sparks. Do not use electrical switches or accessories.

### DANGER

**DANGER:** Fuel leaking from any part of the fuel system can lead to fire and explosion that can cause serious bodily injury or death. Inspect systems before refueling.

## Preliminary Procedures

1. Safely and securely moor your boat to the dock.
2. Turn off engine and all electrical equipment including lights, bilge pump, livewell, etc.
3. Extinguish all cigarettes, cigars, pipes, or other items that may produce a spark or flame.
4. Close all hatches, windows, doors, and compartments.
5. Make sure a fire extinguisher is readily available.

## Fueling Procedures

1. Always fuel in an area which has sufficient lighting. Gasoline spills are hard to see when lighting is poor or it is dark.

**Important:** When fueling or having someone else fuel your boat, be sure a fishing rod holder is not mistaken for a fuel fill plate. Also, make sure a fishing rod holder is not mistaken for a fuel fill plate.

2. Your Robalo boat has fittings for filling the fuel tank. Remove fuel fill plate. Insert the fuel supply nozzle. Allow nozzle to stay in contact with fitting to prevent possible static-produced sparks.
3. After pumping approximately 5 gallons of fuel into tank, inspect bilge and fuel tank area for any signs of fuel leakage. Continue fueling if you do not detect any leaks or other problems.
4. Allow space at the top of the tank for thermal expansion. Do not overfill tank so that fuel comes out fuel tank vent.

**Note:** Do not over fill tank, causing fuel to spill onto water.

5. If fuel can not be pumped in at a reasonable rate, check for a plugged fuel vent plug or kink in the line.

## Post-Fueling Procedures

1. When you have finished fueling, replace fuel fill cap and wash off any fuel spillage around fuel fill area. Discard, in a safe place, any rags you may have used to wipe off fuel spills.
2. Open bilge compartment and all hatches, windows, doors and compartments closed during fueling. Inspect these areas for fuel fumes or fuel line leakage visually and by smelling. Check out any sign of fuel leakage or any indication of fumes and correct problem before starting the engine.

## OPERATING YOUR BOAT

### Starting the Engine

**Important:** Falls from moving boats are a major cause of fatal recreational boating accidents. Do not allow passengers to ride on the bow with feet hanging over the side or ride while sitting on the stern, gunwales, or seat backs. The Coast Guard considers these acts to be negligent or grossly negligent operation and prohibits them by law.

The following information is only a general guide. Chapter 3 has specific starting instructions for boats with battery selector switches. Detailed instructions are also in the engine owner's manual. Be sure to read and follow all of those instructions.

1. Secure boat to the dock or mooring slip before attempting to start engine. Keep boat secure until engine is running and warmed up.
2. Check lubricating fluid levels. Check fuel supply and outboard oil to make sure you have enough fuel for your planned excursion.
3. Make sure the throttle is in the neutral position.
4. Start the engine. Refer to your engine owner's manual for recommended procedures for break-in, service, and other related operation.

## **! DANGER**

**DANGER:** Carbon Monoxide Hazard! A cold engine produces more carbon monoxide than a warm engine. Provide adequate ventilation in the cabin and cockpit to prevent exposure and reduce the possibility of carbon monoxide accumulation. Open all hatches, doors, windows, and side vents to increase air movement

- Turn ignition key to START, pressing choke if required. Release key and allow to return to RUN after engine starts. If engine fails to start, wait one minute. Move throttle only once to maximum position then back to the neutral position. Try to start engine again.

**Note:** Transmission must be in neutral position before engine will turn over.

**Important:** Do not operate starter continuously for more than 15 seconds without pausing. Allow starter to cool at least three minutes between start attempts.

- Warm up a cold engine by running it at fast idle speed (as recommended in engine manual) approximately one to two minutes.

## Leaving the Dock

After the engine has warmed up, you are ready to leave the dock. Before you cast off, check all gauges for proper readings. Check the operation of the steering by turning the steering wheel to full port and to full starboard while observing engine movement. Check that charging system is working properly. Check again for fuel and oil leaks.

When you are sure your boat is ready, check wind, tide, current or other forces that will affect the way you maneuver your boat away from the dock. The cast off mooring lines and stow fenders.

Shift your boat's engine into forward or reverse depending on whether you want to move the bow or the stern away from the dock first. Move the throttle lever to neutral position. Then push forward quickly and firmly to shift into forward gear or backward to shift to reverse. Your engine should be running at a slow speed as you move away from the dock. If you move the bow out first, watch that the swim platform does not swing into the dock or a piling.

## Getting Up To Cruising Speed

After slowly motoring from the dock area to open water, you can safely accelerate to cruising speed. Advance throttle to setting which provides your desired engine speed (RPMs). As you move the throttle forward, engine RPMs increase, and your boat moves faster through the water.

**Important:** Acceleration at full throttle is not recommended during the engine "break-in period." This "break-in period" coincides with the engine "20-hour check-up." Do not attempt full throttle acceleration during the first 20 hours of operation.

When you throttle up and accelerate, your boat increases the trim angle and causes the boat to ride bow-high. From a maximum angle, the boat levels out to its planing attitude as you continue to accelerate. (Figure 5.2)

The maximum angle is commonly known as the "hump." You should get over the hump as quickly as possible because visibility, handling, and performance are limited until you do. Only a few seconds at full throt-

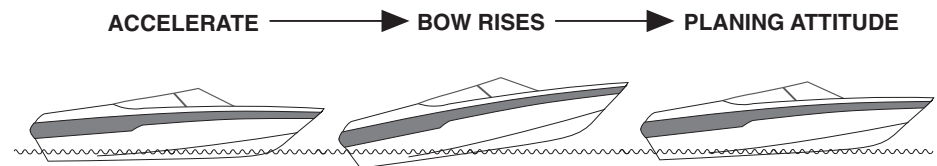


Figure 5.2: Boat Acceleration and attitude

tle should be needed; however, the way your boat is loaded, the wind, and sea conditions affect the time required. When the boat gets over the hump, it reaches its planing attitude. Then, accelerate until your boat reaches a comfortable plane and then throttle down to cruising speed. This also provides for better fuel efficiency.

When maneuvering at low speeds you can reverse (move throttle forward or aft) the shift mechanism. This will react in a braking action.



**CAUTION:** When shifting between forward and reverse, always pause in neutral for a few seconds before reversing the rotation of the propeller. This will prevent unnecessary damage to the drive system.



**CAUTION:** High speed acceleration in reverse can create a wake that could wash over the transom and flood the boat.

## Trimming Your Boat

Trim refers to the way a boat floats on the water. Your boat will work best when it is trimmed to run at an angle between 3 to 5 degrees to the water. You can trim your boat by shifting gear or passengers or, if your boat is so equipped, by adjusting the drive unit angle or the trim tabs.

### Power Trim

The operator can adjust this boat to the ideal boat angle for load and water conditions by trimming the drive unit (Figure 5.3). The power trim

system allows the operator to adjust the drive angle while underway by changing the angle of the outdrive in relation to the boat's transom. It also allows the operator to raise and lower the drive for trailering, beaching, launching, or operation in shallow water.

**Note:** Refer to your engine manufacturer's owner's manual for information concerning maintenance and operation.

### Drive Angle

The drive angle of the boat is the relationship between propeller thrust to the planing surface of the hull's bottom. You can improve the performance of the same boat under varying conditions by adjusting the drive angle.

Moving the drive unit angle towards its innermost adjustment brings the propeller in as close as possible to the transom. The angle of the propeller causes an upward thrust which pushes the boat's bow downward as shown in Figure 5.3.

By gradually shifting the drive unit from its innermost adjustment towards the outermost adjustment, the propeller thrust pushes in a downward motion. This motion, the opposite of that shown in Figure 5.3, tends to lift the bow.

After reaching plane, under certain load conditions, your boat could have a tendency to bury its forward V-ed section. The boat will begin to plow and lose speed. If the water is choppy the boat will yaw. A boat will spin out if its bow is excessively buried. The only way to correct this situation is to increase the angle and swing the drive unit outward.

If the drive unit is angled out too far, your loaded boat will be sluggish in coming to plane. Once on plane, your boat will tend to porpoise. To correct this motion, move the propeller inward to decrease the angle between the drive shaft and the transom.

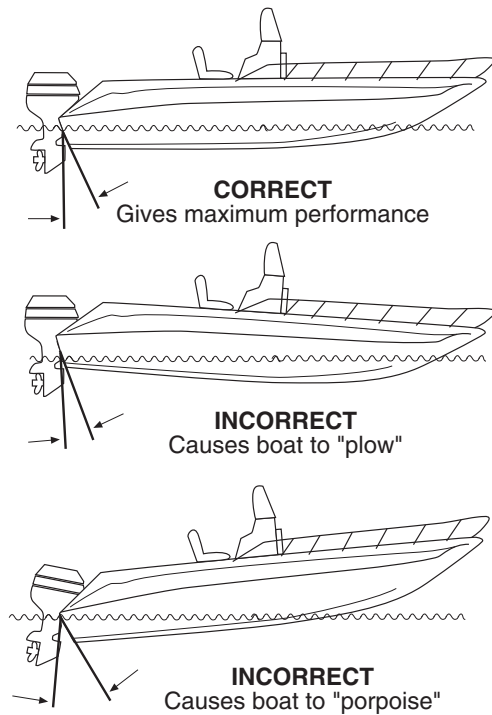


Figure 5.3 Trimming the Drive Angle

Very often, the optimum drive unit angle setting for the highest speed while carrying a light load will be just short of the porpoise point. However, such a setting is unsuitable when you have a heavy load or are pulling skiers. By reducing the drive angle, you will find it easier to maneuver.

### Trim Tabs

Trim tabs also help the operator trim the boat. Trim tabs are mounted on the port and starboard transom below the water line. The operator can control the trim tabs at the helm with rocker switches. (Figure 5.4) Pushing the switch activates the system which moves its tab up or down.

If the trim tabs are angled down, they cut into the water as it passes under the hull to force the stern up and the bow down (Figure 5.5).

Trim tabs also compensate for uneven loads in the boat by allowing the operator to trim up one side of the boat or the other.

### Lenco retractor feature


Lenco marine's trim tab retractor feature operates from either a 12v-24v signal or from an engine's analog tach signal. The purpose of the accessory signal input is to turn the trim tab control box on and off. When the control box is turned off, the trim tabs will retract.

### Turn-on condition

When the Lenco accessory input is connected to either a 12v-24v signal or an analog tach signal, the control box turns on and the trim tab becomes active. At this time the boat operator can run the trim tabs up or down.



**WARNING:** Excessive trim decreases maneuverability, changes steering characteristics, and may cause "porpoising" (bow oscillates up and down) or "chine walking" (rocking side to side). Use power trim with care.

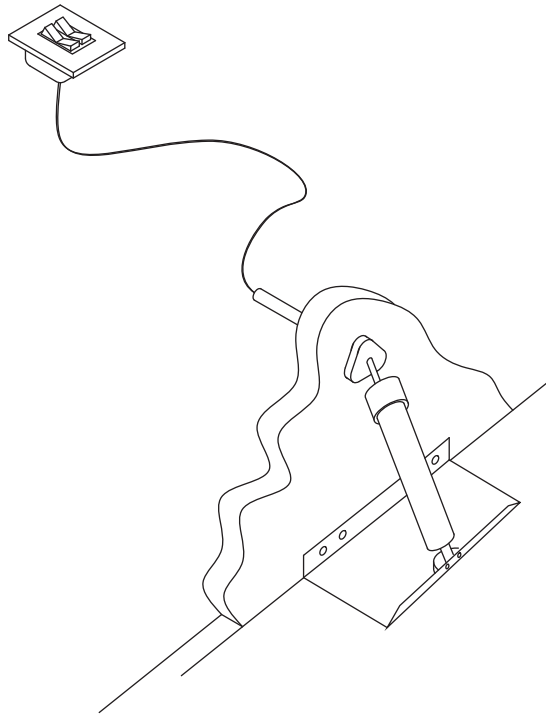

**Figure 5.4 Trim Tab and Switch**


### Turn-off condition

If the Lenco accessory input is connected to an analog tach signal, the control box will shut down when the tach signal is lost (i.e. engine stalls, stops). If the Lenco accessory input is connected to a 12v-24v source, the control box will shut down when the voltage source is removed.

### Test mode

Lenco marine's trim tab system includes a test mode feature that allows the boat operator to bypass the accessory input signal by holding down all four buttons on the key pad simultaneously for approximately three to four seconds. This will turn on the control box and allow the trim tabs to run up or down.

**Tabs extended, water passes under hull, hits tabs and forces stern up and bow down.**

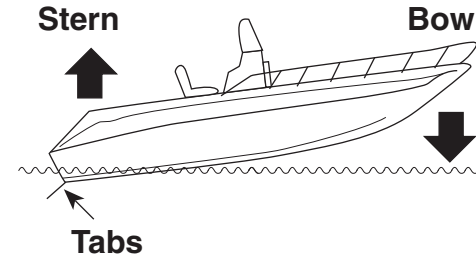

**Figure 5.5 Trim Tab Operation**

Once the control box is turned on in the test mode, the boat operator can turn the control box off by holding down all four buttons on the key pad simultaneously.

**Important:** *If the control box is turned on in the test mode and subsequently receives a signal to turn it on via the accessory input, the boat operator can not turn off the control box by holding down all four buttons on the key pad. The box will only turn off by removing the signal from the accessory input.*

**Note:** Refer to your engine manufacturer's owner's manual for information concerning maintenance and operation.

### Stopping Your Boat

A boat has no brakes. Stop the boat by allowing it to slow down to less than 5 miles per hour and then putting the engine in reverse. Slowly increasing reverse power will allow you to stop the boat in a short distance. Remember that a boat does not respond to steering in reverse as well as it does when going forward.

## **WARNING**

**WARNING:** Check behind you before coming OFF plane. Many accidents occur each year as a result of a driver coming off plane while being followed by a boat that is unable to slow down in time to avoid a collision.

### Additional Underway Information

- Always be aware of local laws on noise limits. Noise means engine noise, radio noise or even yelling by people on your boat. Good seamanship demands that you operate your boat quietly so as not to infringe on the rights of others.
- You are responsible for any damage or injury caused by your boat's wake. Observe no wake speed zone warnings. Operate your boat with regard for the safety of other boats and people in your boating area.
- Keep your engine well tuned to decrease exhaust hydrocarbon emissions that pollute the air and water.

### ANCHORING YOUR BOAT

Anchoring is necessary if you stop for recreation or an emergency. Practice anchoring techniques to make sure you know what to do when an emergency occurs. The size and weight of your boat govern the weight of the anchor and the diameter of the anchor line. Your Robalo dealer can help you select the proper anchoring equipment for your boat.

Use a burying anchor, such as a Danforth or plow anchor, which grips into the bottom and holds your boat secure. Holding power should be more important than weight. For anchoring in relatively quiet waters, you can use a mushroom anchor as an alternative.

The length of the anchor line should be six to eight times the depth of the water to ensure that the anchor bites into the bottom. The bottom end of the anchor line should be galvanized chain which holds up well as the line moves back and forth on the bottom. The rest of the line should be nylon anchor line which stretches to soften the impact of wind and waves on your boat.

Following are general guidelines for anchoring your boat:

- Secure the anchor line to the bow eye or deck cleat. Do not tie line to hardware not designed to support this stress.
- Use two or more anchors if anchoring overnight or extended periods of time. Otherwise, make sure your boat has enough space to swing full circle in case of shifting winds.
- Keep the anchor and line in an area where it will be readily available in an emergency.

## **WARNING**

**WARNING:** Keep anchor secure while underway to prevent damage or injury if boat's attitude changes suddenly. If your boat has a power winch, do not use it as the primary source for securing anchor or anchor line. See the power winch instruction manual for details about operation and maintenance.

### Dropping Anchor

1. Have a crew member carefully lower anchor, keeping a slight tension on the line as the anchor drops. Maintain tension after the anchor reaches the bottom. Simply throwing the anchor overboard usually fouls the line and requires starting over.



2. Maneuver the boat backwards slowly until the proper length of line is run out.
3. Fasten the anchor line around the bow eye or deck cleat. Anchor flukes should dig into bottom and hold boat in position.
4. Check shoreline landmarks at the time anchor is dropped and check again 30 minutes later. If position has changed, anchor is dragging and must be reset.

## Weighing Anchor

Weighing, or pulling in the anchor, requires moving the boat in the direction of the anchor and pulling in the anchor as the boat moves. For this reason, the engines should be running. When the line is vertical, pull up firmly on the anchor line to free the flukes from the bottom. If the anchor remains stuck, feed out a few feet of line and attach it to the bow cleat. Maneuver the boat around the anchor, keeping the line taut, until you find an angle that will pull the anchor free.

## Docking Your Boat

***Important: When operating or docking in close quarters, maneuver your boat at idle speed. Proceed with caution in congested areas.***

As you approach the dock or other mooring area, slow down your boat in time to allow your wake to subside before it reaches other boats or docks. As you get close to the dock, check for wind or currents, and allow them to carry the boat toward the dock if you can. When approaching, check that lines are attached to the cleats on the mooring side and that fenders are lowered on that side. Be sure fenders are at the proper height. If you can, have one person at the stern and one person at the bow, each with a boot hook and a mooring line attached to a cleat. Never approach a dock at a speed at which you would not want to bump the dock.

To dock a boat to the starboard side:

1. Approach at an angle approximately 45 degrees to the dock.
2. When the bow is within a few feet of the dock, bring the stern alongside the dock by turning hard to port.
3. Turn to starboard and, at idle speed, put the engine in reverse to bring the stern closer to the dock.

Reverse these steps to dock to the port side.

## MOORING YOUR BOAT


When attaching mooring lines to deck cleats on your boat, make a loop in one end of the mooring line. Then, pass it through the hole in the base of the deck cleat. Next, pass the loop back over the deck cleat. The mooring line can now safely be used to secure your boat. Mooring lines may remain attached to the cleats on your boat while underway. The lines must be coiled and placed where they cannot get tangled in deck gear or the propellers.

When you tie up, run the mooring line from your boat around the dock cleat and then back to your boat. This enables you to untie the mooring line without leaving your boat. Just throw off one end of the mooring line and then bring the entire length of mooring line back into the boat. (Figure 5.6)

## SHUTTING DOWN THE ENGINE

Following are general instructions for engine shutdown. Refer to your engine owner's manual for specific instructions.

1. Allow engine to idle so engine cools gradually.
2. Turn engine off.

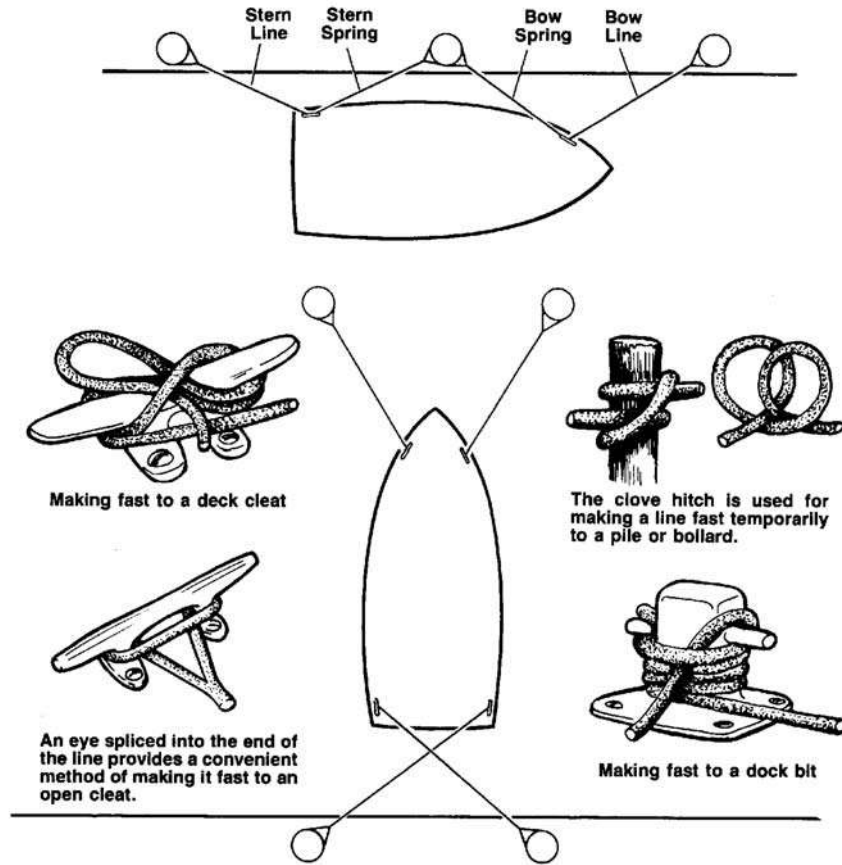

**Figure 5.6: Mooring Lines**

**Note:** Manila rope, the standard for many years is not as strong as some ropes made of synthetic materials. For mooring, its ability to stretch is an advantage, but it tends to shrink whenever it gets wet. Nylon rope is strong and elastic. Because of its elasticity, it works well for mooring lines and anchor lines. Rope made of high tensile strength polyester fibers like Dacron™ is just about as strong as nylon rope, but it does not stretch. Kevlar rope is strong and does not stretch, but it is quite expensive. Polypropylene rope tends to deteriorate rapidly when it is exposed to sun light. Because it floats, it is well-suited for use as a tow rope for water skiing. Use for other nautical purposes is not recommended.

---

# PREVENTIVE MAINTENANCE AND REPAIR

---

# 6

Do not attempt any repairs on your boat unless qualified to do so. Only use approved marine replacement parts available from your Robalo dealer. Robalo recommends having an authorized Robalo dealer do your maintenance and repair work. Your dealer is qualified to make repairs or modifications to your boat in such a manner as to not compromise safety, design integrity, or warranty coverage. This chapter includes information you can use to do general maintenance and repair. If you choose to do your boat's maintenance and repairs, always refer to the product manuals for detailed information.

## ENGINE

---

Refer to the engine owner's manual for detailed information about engine maintenance and repair. That manual has a maintenance and service schedule for the engine on your boat.

### Checking the Oil (On 4-Stroke Models)

**NOTE:** During the engine 10-hour break-in period, or as recommended by the engine manufacturer, Robalo recommends that you check the oil level every two hours.

To check the oil:

1. Make sure boat is in the water and engine is stopped.
2. Put the outboard motor in an upright position (not tilted).
3. If engine is warm, let it cool for ten minutes to allow oil to drain back into the engine oil pan. This will make the check more accurate.

4. Pull engine oil dipstick out of its sleeve, wipe clean, and push dipstick back into the sleeve. Make certain the dipstick is pushed all the way back in.
5. Pull dipstick out again and check oil level on dipstick. The oil level must be between the ADD and FULL marks on the dipstick.
6. If oil level is at or below the ADD mark you must add oil.
7. Push dipstick back down into the sleeve. Be sure it is all the way in and properly seated.

### Adding Oil

To add oil:

1. Remove oil fill cap.
2. Add oil as required to raise the oil level up between the ADD and FULL marks on the dipstick. Do not overfill.
3. Check oil level after adding oil.

**NOTE:** Robalo Boats recommends that you use a funnel when you add oil to prevent spillage and to help keep your engine free of surface grime and dirt.

***Important: The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable waters of the United States or the waters of the contiguous zone if such discharge causes a film or sheen upon or a discoloration of the surface of the water or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty.***

## Fuel Filter

### **WARNING**

**WARNING:** Gasoline vapor explodes easily. Explosion is likely to cause fire and may burn you and damage your boat. Always STOP engine and do not smoke or allow open flames in area when changing filter.

Refer to your engine owner's manual for detailed information about checking and maintaining the fuel filter.

The engine exhaust system removes harmful gas created by the engine during combustion. Inspect the system for leaks before each use of the boat. Make sure all hose clamps and connections are tight and there are no cracks in any exhaust system component that would allow carbon monoxide gases to escape.

## TUNE-UP

Tune-ups at recommended intervals keep your engine in top-notch operating condition and help assure the highest possible performance from your engine.

Refer to your engine owner's manual for detailed information.

## FUEL SYSTEM

This information describes the fuel system excluding the engine. The fuel system provides a clean, continuous supply of fuel to the engine, in addition to helping prevent possible fire and explosion. All fuel systems installed at the Robalo factory meet federal requirements.

**Note:** Refer to your engine owner's manual for detailed information about checking and maintaining the fuel system.

The fuel system must be inspected frequently and maintained regularly. Check for leaks and/or vapors and repair any problems immediately. Keep fuel tank filled during the boating season to prevent moisture from condensing in the tank.

## MONTHLY INSPECTION

**Note:** A trained marine mechanic should replace parts or repair the fuel system. See your Robalo dealer for parts and repair.

1. Starting at the fuel tank, check the entire fuel system for leaks or vapors.
2. Check fuel lines and hoses for wear, kinks, cracks, or deterioration.
3. Inspect fuel line fittings, carburetor, and fuel pump to make sure mounting brackets are tight.
4. Check fuel ventilation ducts and clamps for wear or damage.
5. Check fuel tank vent screens (located outside of hull) for any obstruction.

## OUTBOARD DRIVE UNIT

Refer to the engine owner's manual for recommended frequency for checking drive unit and its oil.

### **CAUTION**

**CAUTION:** Hot oil in operating drive unit can burn you. Do not remove oil vent plug immediately after using boat. Hot oil expands and flows rapidly from vent plug opening if oil vent plug is removed.

## PROPELLERS

**NOTE: Refer to the propeller manufacturer's manual for installation, removal, and further detailed information.**

The propeller shipped with your boat is the size Robalo recommends for the best overall performance. However, factors such as altitude, temperature, load, bottom growth, and propeller condition can affect your boat's performance. Consult your Robalo dealer regarding your specific performance requirements.

Periodically check propeller for excessive wear and damage. Repair or replace, if required.

### Steering System

Your boat has a hydraulic steering system, it needs periodic maintenance to be trouble free and safe. Regular checks of the complete system are essential.

Lubricate, inspect, and maintain system regularly.

1. Rinse off your steering cylinder thoroughly with fresh, clean water after each use.
2. Remove, clean and grease the support rod annually with quality marine grease.
3. Check the steering fluid level in the helm.
4. Replace any hoses showing signs of wear and remove the cause or re-route hoses.
5. Check fittings and seal locations for leaks, damage, and service as necessary

Consult your Robalo dealer regarding all repairs or replacement parts.

## BILGE

### Inspection

Check the bilge before you use your boat—every time! A small amount of water in the bilge is normal and not a cause for concern. If the amount of water is excessive, check for water leaks. Repair leaks immediately.

If the bilge is ever filled with fuel or oil, check engine, hoses, fuel tank(s), etc. for leaks. Repair immediately.

***Important: Pumping fuel or oil overboard into the water violates the Federal Clean Water Act. Pump into suitable container and dispose of properly.***

### Cleaning

Run bilge until pump is dry. Remove all sand, silt, dirt, or foreign material. Make sure all limber holes are open and strainers are clean. Use bilge cleaner to remove any obvious oil stains.

***Important: Never use any flammable solvents for cleaning the bilge. Check with your Robalo dealer for recommended cleaners.***



**WARNING:** Gasoline or vapors in bilge can explode. Remove all sources of ignition. Do not start engine, repair immediately.

# TROUBLESHOOTING

The troubleshooting procedures listed in this chapter are designed to correct minor malfunctions for engine performance issues. Troubleshooting is a process of elimination. The troubleshooting chart displays areas that could be at fault and are presented in the order of probable occurrence.

Use good common sense and always refer to the manufacturer's Engine Owner/Service Manual. If the malfunction(s) appears too complicated or unsafe, contact your Robalo dealer. If underway, and contacting your Robalo dealer is not practical, contact the local marina for information regarding available marine mechanic service.

## CAUTION

**CAUTION:** Disconnect battery cables before performing all inspections, checks, and repairs to avoid possible personal injury and damage to equipment.


PROBLEM	CAUSE	SOLUTION
Engine will not crank (Ignition system)	<ol style="list-style-type: none"> <li>1. Ignition fuse tripped</li> <li>2. Neutral safety switch not making proper contact</li> <li>3. Throttle lever in wrong position</li> <li>4. Loose wire in starting circuit</li> <li>5. Ignition switch defective</li> <li>6. Defective solenoid</li> <li>7. Dead battery</li> <li>8. Battery switch in wrong position</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace fuse on engine.</li> <li>2. Have your Robalo dealer inspect throttle assembly.</li> <li>3. Check position of throttle lever, ensure it's in the "neutral" position.</li> <li>4. Tighten all wiring connections.</li> <li>5. Test switch continuity. Replace switch as required.</li> <li>6. Replace solenoid.</li> <li>7. Recharge or replace battery.</li> <li>8. Turn selector switch to battery on position.</li> </ol>

<b>PROBLEM</b>	<b>CAUSE</b>	<b>SOLUTION</b>
Engine cranks but will not start (Fuel system)	<ol style="list-style-type: none"> <li>1. Lack of fuel</li> <li>2. Improper starting procedure</li> <li>3. Clogged fuel filter</li> <li>4. No fuel reaching carburetor (providing all fuel valves are open)</li> <li>5. Engine flooded</li> <li>6. Contaminated fuel</li> <li>7. Spark plug(s) fouled or broken</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean fuel filter, check fuel level; check anti-siphon valve, if equipped.</li> <li>2. See Engine Owner/Service Manual to review starting procedure.</li> <li>3. Check and replace fuel filter.</li> <li>4. Check fuel pump, fuel pump filter, carburetor fuel filter and fuel tank line for cracked flanges or restricted fittings.</li> <li>5. Do not attempt to start engine for at least 5 minutes. For hot engine, fully advance throttle, (make sure throttle lever is in neutral) and crank engine.</li> <li>6. Inspect for water or other contaminants in fuel. If contaminated, drain tank and flush with fresh fuel.</li> <li>7. Clean, adjust gap, or replace.</li> </ol>
Low cranking speed	<ol style="list-style-type: none"> <li>1. Loose or dirty electrical connections or damaged wiring</li> <li>2. Bad battery</li> <li>3. Engine oil too heavy for prevailing temperatures</li> </ol>	<ol style="list-style-type: none"> <li>1. Check all related electrical connections and wires.</li> <li>2. Test battery (See Engine Owner/Service Manual).</li> <li>3. Drain oil and refill with correct grade and viscosity oil (See Engine Owner/Service Manual).</li> </ol>
Starter will not crank engine(s)	<ol style="list-style-type: none"> <li>1. Discharged battery</li> <li>2. Corroded battery cables</li> <li>3. Loose connection in starting circuit</li> <li>4. Defective starter switch</li> <li>5. Starter motor brushes dirty</li> <li>6. Jammed "starter drive"</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge battery.</li> <li>2. Clean battery terminals.</li> <li>3. Check and tighten all connections.</li> <li>4. Replace switch.</li> <li>5. Clean or replace brushes.</li> <li>6. Loosen starter motor, then free stuck gear.</li> </ol>

PROBLEM	CAUSE	SOLUTION
Poor acceleration	<ol style="list-style-type: none"> <li>1. Accelerating pump</li> <li>2. Throttle not fully open</li> <li>3. Ignition or carburizing</li> <li>4. Air intake obstructed</li> <li>5. Engine overheating</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace.</li> <li>2. Inspect cable and linkages for binding obstructions, or loose fasteners.</li> <li>3. Service ignition system and carburetor.</li> <li>4. Check air intake.</li> <li>5. Check engine temperature (See Engine Owner/Service Manual).</li> </ol>
Engine runs but misfiring	<ol style="list-style-type: none"> <li>1. Fouled spark plug(s)</li> <li>2. Wet spark plug wires</li> <li>3. Loose ignition wires</li> <li>4. Defective fuel pump</li> <li>5. Partially clogged fuel filter</li> <li>6. Incorrect carburetor mixture</li> <li>7. Contaminated fuel</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove, clean, or replace.</li> <li>2. Wipe dry, inspect and replace damaged wires.</li> <li>3. Inspect all wire connections.</li> <li>4. Repair or replace as required.</li> <li>5. Clean or replace fuel filter.</li> <li>6. See Engine Owner/Service Manual for proper carburetor adjustment.</li> <li>7. Drain fuel tank, flush clean and replace fuel filter.</li> </ol>
Excessive fuel consumption	<ol style="list-style-type: none"> <li>1. Faulty fuel pump</li> <li>2. Spark plugs bad or set improperly</li> <li>3. Incorrect timing</li> </ol>	<ol style="list-style-type: none"> <li>1. Repair or replace as required.</li> <li>2. Clean and set or replace spark plugs.</li> <li>3. Time engine.</li> </ol>
Blue exhaust smoke	<ol style="list-style-type: none"> <li>1. Lube level too high</li> <li>2. Oil too thin</li> <li>3. Oil overheated</li> </ol>	<ol style="list-style-type: none"> <li>1. Drain off excessive oil.</li> <li>2. Drain and replace oil (See Engine Owner/Service Manual).</li> <li>3. Check cooling system.</li> </ol>
White exhaust smoke	<ol style="list-style-type: none"> <li>1. Engine misfiring</li> <li>2. Spark plugs dirty or not gapped correctly</li> </ol>	<ol style="list-style-type: none"> <li>1. See Engine Owner/Service Manual.</li> <li>2. Clean, adjust gap, or replace.</li> </ol>
Low oil pressure	<ol style="list-style-type: none"> <li>1. Insufficient oil in crankcase</li> <li>2. Excessive oil in crankcase</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and add correct grade and viscosity oil. Visually check engine for leaks.</li> <li>2. Check and remove required amount of oil. Check for cause of excessive oil (improper filling, bad fuel pump, etc.)</li> </ol>



PROBLEM	CAUSE	SOLUTION
Low oil pressure (cont)	<ol style="list-style-type: none"> <li>3. Diluted or improper grade and viscosity oil</li> <li>4. Oil leak in pressure line</li> </ol>	<ol style="list-style-type: none"> <li>3. Change oil and oil filter; be sure to use the correct grade and viscosity oil.</li> <li>4. Inspect all oil lines and tighten all connections as necessary.</li> </ol>
No oil pressure	<ol style="list-style-type: none"> <li>1. Defective gauge, gauge tube, or oil line</li> <li>2. No oil in engine</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace gauge, or tube, and tighten or replace line as necessary.</li> <li>2. Fill with proper grade and viscosity oil (See Engine Owner/Service Manual).</li> </ol>
High oil pressure	<ol style="list-style-type: none"> <li>1. Too heavy grade of oil</li> <li>2. Dirt or obstruction in oil line</li> </ol>	<ol style="list-style-type: none"> <li>1. Drain oil and replace with proper grade (See Engine Owner/Service Manual).</li> <li>2. Drain and clear oil system. Check for bent or flattened oil lines and replace as required.</li> </ol>
Knocking or pinging	<ol style="list-style-type: none"> <li>1. Incorrect type fuel</li> <li>2. Incorrect timing</li> <li>3. Pre-ignition</li> <li>4. Overheated engine</li> <li>5. Cooling system trouble</li> </ol>	<ol style="list-style-type: none"> <li>1. Drain tank and replace with proper fuel.</li> <li>2. Time engine (See Engine Owner/Service Manual).</li> <li>3. Clean or replace spark plugs; check engine timing.</li> <li>4. Check engine cooling system.</li> <li>5. Check water intake for blockage.</li> </ol>
Rough Running	<ol style="list-style-type: none"> <li>1. Faulty fuel pump</li> <li>2. Idle speed too low</li> <li>3. Faulty ignition system components</li> <li>4. Clogged fuel filter</li> <li>5. Contaminated fuel</li> </ol>	<ol style="list-style-type: none"> <li>1. Refer to Engine Owner/Service Manual for fuel pump testing procedures.</li> <li>2. Check idle speed and adjust</li> <li>3. Service ignition system (See Engine Owner/Service Manual).</li> <li>4. Replace fuel filter.</li> <li>5. Inspect fuel for water or other contaminants. If contaminated, drain tank and flush with fresh fuel.</li> </ol>

PROBLEM	CAUSE	SOLUTION
Rough running (cont)	6. Kinked or clogged fuel lines, or fuel tank vent line  7. Air intake obstructed	6. Use compressed air, at not more than 20 psi, to blow-out obstruction. Replace line if kinked.  <div style="text-align: center;">  <b>WARNING</b> </div> WARNING: Wear protective eye wear when performing compressed air cleaning.  7. Check air intake.
Engine overheating	1. Bad sending or receiving unit 2. Loose wiring connections at sending or receiving unit 3. Worn or broken impeller in sea water pump  4. Clogged oil cooler 5. Exhaust lines plugged 6. Ignition timing late 7. Restricted water intake	1. Replace unit(s). 2. Tighten all connections.  3. Replace impeller.  4. Remove obstruction. 5. Remove obstruction. 6. Time engine. 7. Clean water intake.
Sludge in oil	1. Infrequent oil changes  2. Dirty oil filter	1. Drain and refill with proper grade and viscosity oil. 2. Replace oil filter.
Poor Performance	1. Damaged or improper impeller 2. Excessive water in bilge area  3. Boat overloaded or improper distribution of load 4. Fouled or damaged hull bottom	1. Inspect propeller and replace if required. 2. Pump out bilge area. Inspect for causes related to excess water. 3. Reduce load or redistribute load.  4. Inspect, clean, or repair as required.
Vibration	1. Loose engine mounting bolts 2. Damaged propeller shaft 3. Propeller bent or pitch out of true	1. Inspect and tighten as required. 2. Replace shaft. 3. Inspect propeller and replace as required.

---

# INTERIOR AND EXTERIOR CARE

---

The following information will help you keep the interior and exterior of your boat in tip-top shape. If you need more specific information, contact your Robalo dealer.

**Note: Before you use a particular cleaning solution or method, test the material to be cleaned in a hidden or inconspicuous area for possible adverse reactions. Use cleaning agents sparingly. Never discharge cleaning solutions into the waterways. Do not use products containing phosphates, chlorine, solvents, or nonbiodegradable or petroleum based products.**

## FIBERGLASS AND GELCOAT

The hull and deck are made of fiberglass. The outer layer of the hull and deck is a color pigmented polyester resin, called gelcoat. Gelcoat is highly resistant to scratches that occur during normal boat use. Nevertheless, during the life of your boat, some damage to the gelcoat is bound to occur.

### Gelcoat Maintenance

To remove and prevent the buildup of most salt, soil, and grime, clean the hull and deck regularly with household detergent and water.

**Note: Make sure household detergent does not contain ammonia or chlorine. Because ammoniate or abrasive cleaners dull and discolor the gelcoat surface, they are not recommended for routine maintenance.**

Gelcoat surfaces are very resistant to deep stains. To remove minor stains, wash the affected area with a soft cloth and household detergent. Then rinse thoroughly with clear water. If deep stains do occur, use a special fiberglass cleaner and stain remover.

Waxing the gelcoat surface regularly will help prevent soiling and pre-

serve its luster. Robalo recommends a fiberglass wax that fills the gelcoat pores. Chemicals in fiberglass wax screen out harmful ultraviolet rays that cause fading of the gelcoat color.



**CAUTION:** Waxed gelcoat is slippery. Falls causing bodily injury or falls overboard are possible. Never wax deck surfaces that require sure footing.

### Repairing Gelcoat Damage

#### Minor Scratches

Repair minor scratches with automotive rubbing compound or polishing wax. Follow the manufacturer's instructions. Although the scratches may not disappear completely, they should not be as noticeable. Apply rubbing compound or polishing wax to a damp, soft cloth. Rub the gelcoat surface with the damp, soft cloth in a circular motion.

#### Chips, Hairline Cracks, and Small Patches

Your Robalo dealer has qualified personnel capable of making this type of repair.

Robalo uses the finest gelcoats and resins available to prevent gelcoat crazing and hairline cracks. Over time your boat may develop slight hairline cracks in the outermost gelcoat layer. These usually do not damage the structure of your boat or affect its integrity.

---

## HULL BOTTOM MAINTENANCE

---

If your boat will be in water continuously for the majority of the boating season, Robalo recommends sealing the hull bottom with a high quality barrier coating. Repairing water blister damage is not covered under the Robalo Boat Warranty. Your Robalo dealer can recommend the best barrier coating product for your boat.

Never use wire brushes, scouring pads, or other abrasive materials or solutions on the bottom surface of your boat. They cause small scratch marks that will collect dirt, silt, sand, marine growth and other foreign materials.

Keep the hull bottom of your boat clean. Checking it regularly for any signs of excessive wear or damage. Make needed repairs to the hull bottom as soon as possible. Accumulation of natural coatings from water and marine growth can create drag and limit the efficiency of your boat.

---

## BOTTOM PAINT (ANTI-FOULING)

---

***Important: Consult your Robalo dealer for recommended bottom paints and local laws that govern your area. Many states regulate the chemical content of bottom paints to meet environmental standards and regulations.***

Anti-fouling bottom paint is designed to prevent marine growth by dissolving slowly. As a result, the bottom of your boat will usually need painting after the boating season. Some variables to consider when selecting a protective bottom paint are the water temperature, water pollution, salinity, current, and organic matter in the water. To protect and repaint the boat bottom, perform the following:

- Remove boat from water once a year. Scrub bottom with a soap and water solution and a bristled brush.

Note: Repainting the bottom is not necessary each time the bottom is scrubbed, as long as no bare areas are visible in the bottom paint.

- Sand entire bottom surface of the boat.
- Fair (smooth out) all rough areas as required.
- Clean bottom surface to remove all dust and foreign materials.
- Make sure bottom surface is completely dry.
- Apply new coat of bottom paint.

Allow new bottom paint to dry 24 to 36 hours. Never attempt to haul, paint, and launch on the same day.

---

## DECK HARDWARE AND FITTINGS

---

**Note: Always follow the manufacturer's recommendations (found in your owner's packet) for cleaning and maintaining deck hardware and fittings. These recommendations include the proper cleaning methods and cleaning agents.**

### Inspection

Inspect hardware and fittings to make sure they are tight. All screws, bolts, clamps, cleats, etc., should be secure.

### Cleaning and Care

- Always clean stainless steel frequently with soap and water. Any cleaner safe for glass is usually safe for stainless steel.
- Always remove rust spots as soon as possible with a brass, silver, or chrome cleaner. Irreversible pitting will develop under rust that remains on stainless steel for any period of time.
- Always use a cleaner, like a good car wax, for added beauty and protection.
- Never use coarse abrasives like sandpaper or steel wool on stainless steel. These may actually cause rusting.

- Never clean with mineral acids or bleaches.
- Never leave stainless steel in contact with iron, steel, or other metals which cause contamination leading to rust or corrosion.

## WINDSHIELD AND PORTHOLE

---

Clean windshield safety glass with a glass cleaner or ammonia water; then rinse with plenty of clear water.

***Important: Solvents can penetrate glass or porthole surfaces and cause hazing. Hazing obstructs visibility. Never use acetone, benzine, carbon tetrachloride, lacquer thinner, or similar solvents to clean glass or portholes.***

The canvas or weather covering windows are made of a synthetic material. Wash any Plexiglass, clear vinyl or other synthetic materials with a mild detergent or dishwashing liquid and water solution, then rinse with plenty of clear water.

When stowing plastic or vinyl windows, be sure they are dry. Make sure the vinyl is rolled and not folded or creased. Store them in a bag that will breathe.

## CARPET

---

After a boating excursion, allow carpet to dry completely in the sun to prevent mildew.

Snap in carpet should be rolled and stored prior to trailering boat as damage may occur if left during transportation.

Vacuum carpeting frequently. Clean up spills as quickly as possible. Remove spots before they dry. Clean indoor/outdoor carpet with a mild detergent or dishwashing liquid and warm water solution and a scrub brush. After cleaning, thoroughly rinse carpet with clear water. Your owner's packet has more detailed information provided by the manufacturer. Follow the manufacturer's recommendations for cleaning and stain removal.

## SEAT COVERINGS AND VINYL

---

Because seat coverings and trim are made of expandable vinyl, extreme temperatures have little effect on them.

**Note: Follow the manufacturer's recommendations (found in your owner's packet) for cleaning and seat covering and removing stains. These recommendations include the proper cleaning methods and cleaning agents.**

### Care

Place removable exterior cushions inside the boat when they are not in use.

### Cleaning

Remove stains as soon as possible to eliminate any possible reaction between the staining agent and the vinyl. Wipe away dirt and smudges with mild soap and warm water. If additional cleaning is required, scrub with a soft bristle brush to remove dirt from textured patterns. Dry with a soft, lint-free cloth or towel.

Follow manufacturer's instructions closely. Never use steel wool, powdered abrasive cleaners, or bleaches. They will mar the surface and leave an unsightly appearance.

Never use bleaches or solvents of any kind on monogram parts. Use mild soap and water only. Bleaches and solvents will cause monogram to fade.

To store cushions onboard boat for winter or extended periods of time, open zippers and elevate cover away from foam padding. Place a small rounded object (for example, a plastic bowl) inside to allow for air circulation.

---

## CANVAS (WEATHER COVERINGS)

---

The canvas, or weather coverings, are 100% acrylic yarn. Besides its resistance to mildew, rot and weather, canvas also resists industrial pollutants and the effects of ultraviolet light from the sun.

### Care

- Keep the top up when boat is not in use or when it's raining. Never trailer your boat with the canvas up. None of the canvas or covers supplied with your boat were designed for the stress of highway speed trailering, and to do so may damage the canvas.
- Keep canvas clean. Acrylic fabric will not support mildew growth, but dirt and dust on the canvas will.
- Lubricate zippers with paraffin and snaps with petroleum jelly.
- If canvas or seams leak, apply a light coating of a fluorocarbon based water repellent, or "303 High Tech Fabric Guard," available at most marine dealers.
- Allow all canvas to air dry before storing. Never store canvas damp or wet. Provide proper ventilation to limit the possibility of mildew.
- Avoid mooring under trees.
- Do not tow your boat with the top in the raised position.
- Be careful not to scratch clear vinyl windows. Dry well before stowing. When stowing clear vinyl, make sure the vinyl is rolled and not creased.

### Cleaning

- Wet down all canvas material. Scrub with a soft bristle brush and a solution of mild soap and water. Never use a detergent or bleach on your canvas.
- Brush or sweep the underside of the top. Spray with Lysol or other disinfectant to prevent mildew.

# WINTERIZING AND STORAGE

This chapter tells you how to winterize and store your Robalo boat in regions where temperatures fall below freezing. If you keep your boat in an area not requiring winter storage, Robalo recommends you perform an annual inspection, similar to the preparation for storage as indicated in this chapter. With proper care, you will have many years of enjoyable boating with your Robalo boat.

## LIFTING THE BOAT



**WARNING:** Lift slings may slip on the hull and result in serious injury or death from dropped load. Exercise extreme caution if in the vicinity of such activity. If possible, slings should be tied together before lifting.

Unless your boat is trailerable, have your dealer or qualified marina personnel lift your boat out of the water for you. Each boat has main frame components designed to support the boat when it is being lifted out of the water. Severe gelcoat crazing or more serious hull damage can occur if the lifting slings exert pressure on the gunwales. Flat, wide belting-type slings should be used. Don't use cable-type slings. The spreader bar at each sling should be as long as the distance across the widest point the sling surrounds.

- Never hoist the boat with more than a minimal amount of water in the bilge.
- Before lifting the boat, empty fuel and water tanks, especially if they have large capacities.
- Do not use deck cleats or bow or stern eyes for lifting the boat.

- Be sure boat remains level while being lifted to avoid sling movement or boat damage.
- If using any boat lifting device other than slings, position lifting device so as not to put pressure on any underwater hull component including trim tabs.

## Cradle

A cradle is the ideal support for your boat whenever it is not in the water. Properly designed and located, the cradle will support the boat under the main frames. Support at these points is essential for preventing damage to the hull. Purchase a cradle from your dealer to ensure that your boat has the correct support.

## DRY STORAGE AND PREPARATION

**Note:** Refer to Chapter 8, Interior and Exterior Care, for specific cleaning solutions and procedures.

### Deck

- Wash the deck and walkway surfaces.
- Clean all deck hardware, and apply a coat of rust inhibitor.
- Clean the indoor/outdoor carpet.

### Hull

- Scrape off any barnacles or crusted marine growth.
- Scrub hull thoroughly to remove marine growth, scum and loose bottom paint.

- Inspect underwater gear and propeller for excessive wear or damage.
- Apply fresh coat of bottom paint.
- Remove hull drain plug; store it in a safe place. Allow bilge water to drain, raise bow of boat during period of storage.

## General Housekeeping

- Clean boat interior including all cabinets and drawers.
- Remove all cushions, mattresses, curtains, blankets and sheets, pillows, towels and linens, clothing, and any other items that can hold moisture and cause mildew.

Note: Leave mattresses and cushions onboard only if air can circulate around them.

- Lay all cushions with plastic substrates flat.
- Make sure cabin is well ventilated.
- Check for adequate air circulation around life jackets and other safety equipment left onboard.
- Clean and dry bilge. Remove any materials such as rags, sponges, or other cleaning material.
- Weather permitting, open all doors, hatches, portals, and windows to air out the interior for a day or two.
- If covering boat while in storage, use a cover constructed of fabric that allows for plenty of ventilation.

## SYSTEMS AND COMPONENTS

In regions where temperatures fall below freezing, winterization of the systems and components is necessary. Failure to do so will seriously damage them. They include, but are not limited to: generator, air condi-

tioner, strainers, hot water heater, sump pump, Porta-Potti, head, holding tank, water tank, sewer system, and water systems. Refer to the owner's manual for each component or system listed above for detailed information on winterization.

**Note: Robalo strongly recommends having a qualified dealer perform winterization procedures for your boat.**

## ENGINE

**Important: In regions where temperatures fall below freezing, winterizing your engine may be necessary. Failure to do so will seriously damage the engine. Refer to your engine owner's manual for detailed winterization information.**

Change engine oil before storing your boat. Refer to the instructions in your engine owner's manual.

## FUEL SYSTEM

Add a gasoline stabilizer solution to the fuel tank. Follow the product manufacturer's recommended procedure.

## BATTERY

Remove battery from boat and store battery in a cool dry place away from freezing temperatures.



**WARNING:** Battery electrolyte can cause severe eye damage and burn your skin. Wear goggles, rubber gloves and a protective apron when working with battery. If electrolyte spills, wash area with a solution of baking soda and water.



- Cover battery terminals with rubber or plastic caps to prevent accidental contact between battery posts and metal objects.
- Clean outside battery case, terminals, and battery clamps with a baking soda and water solution. Do not allow solution to enter battery cells.
- Clean battery posts and clamps with fine grit emery cloth. Use a light sanding motion when cleaning.
- Apply a light coat of petroleum jelly to cover end of battery cables.
- Recharge battery monthly or trickle charge continuously while battery is stored.

## RECOMMISSIONING

---

**NOTE: For detailed information on recommissioning your boat's systems and equipment, refer to the owner's manual for each system or component.**

1. Inspect, visually and by smelling, the fuel system and all associated components for proper connections, wear, leaks, or other damage and needed repair.

***Important: Inspection of the fuel system at recommissioning is very important. We cannot overemphasize our concern for your safety.***

2. Clean battery terminal posts with wire brush or steel wool before re-installation.
3. Check charge on battery. Recharge or replace if necessary.
4. Inspect all battery wiring. Repair or replace if necessary.
5. Attach battery cables, and tighten cable clamps.
6. Apply petroleum jelly or marine grade grease on battery posts and clamps to eliminate air pockets and possible acid buildups.
7. Reinstall hull drain plug after coating threads with petroleum jelly.
8. Clean bilge area.
9. Inspect all wiring for fraying, wear, loose connections, or other damage. Repair or replace if necessary.
10. Test operation of navigation lights and other lighting onboard. Inspect all switches, controls, and other related equipment for proper operation. Repair or replace as necessary.
11. Inspect all life jackets, anchor lines, and other safety equipment for proper operation and physical condition. Repair or replace if necessary.

# NAUTICAL GLOSSARY

<b>Abaft</b>	Toward the stern.	<b>Aweigh</b>	Off the bottom, said of an anchor.
<b>Abeam</b>	Amidships, at a right angle to the keel.	<b>Aye</b>	Yes, while aboard a boat or ship. Means "I understand."
<b>Aboard</b>	On, in or into a boat.	<b>Bail</b>	To remove water from a boat by pump or bailer.
<b>ABYC</b>	American Boat and Yacht Council, Inc., the organization that sets voluntary safety and construction standards for small craft in the USA.	<b>Ballast</b>	Heavy material such as iron, lead, or stone placed in the bottom of the vessel.
<b>Adrift</b>	Without motive power and without anchor or mooring.	<b>Beacon</b>	A post or buoy placed over a shoal or bank to warn vessels, also a signal mark on land.
<b>Afloat</b>	On the water.	<b>Beam</b>	Imaginary line amidships at right angles to keel of vessel. Also vessel's maximum width.
<b>Aft</b>	Describing the after section of a vessel, or things to the rear of amidships and near the stern.	<b>Bearing</b>	The direction or point of the compass in which an object is seen.
<b>Aground</b>	Touching bottom.	<b>Belay</b>	To make fast to a cleat or belaying pin; to cancel an order.
<b>Amidships</b>	In the center, the center portion of a vessel.	<b>Below</b>	Beneath, or under, the deck. One goes below when going down into the cabin.
<b>Anchor</b>	A forging or casting shaped to grip the sea bottom and, by means of a cable or rope, hold a boat in a desired position.	<b>Bend</b>	To fasten by means of a bend or knot.
<b>Anchorage</b>	A customary, suitable and (usually) designated harbor area in which vessels may anchor.	<b>Berth</b>	A position, as a place to sleep or in which a vessel may be made fast; a margin of safety, as "a wide berth."
<b>Astern</b>	Toward the stern. An object that is aft of a boat is said to be astern of the boat.	<b>Bilge</b>	The lower internal part of a boat's hull.
<b>Athwart</b>	Across.	<b>Bollard</b>	A strong post for holding lines fast.

<b>Bow</b>	The forward part of front of the boat.	<b>Chine</b>	The intersection of sides and bottom of a boat.
<b>Breakers</b>	Waves cresting as they reach shallow water, as at or on a beach.	<b>Cleat</b>	A piece of wood or metal with projecting ends to which lines are made fast.
<b>Breakwater</b>	A structure, usually stone or concrete, built to create a harbor or improve an existing one.	<b>Clinker</b>	A method of planking in which the lower edge of each strake overlaps the upper edge of the strake next below. (Also called lapstrake.)
<b>Bulkhead</b>	Vertical partion in a boat.	<b>Coaming</b>	A raised edge, as around part or all of a cockpit, that prevents seawater from entering the boat.
<b>Burdened Vessel</b>	Former term for the vessel which must stay clear of vessels with the right-of-way.	<b>Coast Guard</b>	The federal marine law enforcement and rescue agency in the U.S.
<b>Caulking</b>	Forcing filler material into the seams of the planks in a boat's deck or sides, to make them water tight.	<b>Cockpit</b>	A well or sunken space in the after deck of a small boat for the use of the helmsman and crew.
<b>Camber</b>	The arch of a deck, sloping downward from the center toward the sides.	<b>Companionway</b>	A hatch or entrance, from deck to cabin.
<b>Capsize</b>	To turn over.	<b>Compass</b>	The instrument which shows the heading of a vessel.
<b>Carburetor Backfire Flame Arrestor</b>	Required equipment on all motorboats except outboards and diesels. Reduces chance of fire caused by backfires in internal combustion engines.	<b>Cowls</b>	Hooded openings used for ventilation.
<b>Cardinal Points</b>	The four main points of a compass: north, east, south, and west.	<b>Cradle</b>	A frame used to support a vessel on land.
<b>Ceiling</b>	The inside lining of the hull.	<b>Current</b>	The movement of the water in a horizontal direction.
<b>Certificate</b>	Government paper, such as a boat's license.	<b>Deadrise</b>	The rise of the bottom of a midships frame from the keel to the bilge.
<b>Chart</b>	A map of a body of water that contains piloting information.	<b>Deck</b>	Any permanent covering over a compartment.
		<b>Deep-six</b>	To discard or throw overboard.

<b>Depth Sounder</b>	An electronic depth-finding instrument, measuring the time a sound wave takes to go from the vessel to the bottom and return, then displaying the result in feet, fathoms, or meters.	<b>Fathom</b>	Six feet.
<b>Dinghy</b>	A small, open boat.	<b>Fenders</b>	Objects placed along the side of the boat to protect the hull from damage
<b>Displacement Hull</b>	Type of hull that plows through the water even when more power is added.	<b>Flare</b>	The outward spread of the boat's sides from the waterline to the rail at the bow. Also, a pyrotechnic signaling device that can indicate distress.
<b>Dock</b>	An enclosed or nearly enclosed water area; all the port installations; a place where vessels can moor, as a pier, wharf, or floating dock.	<b>Fore</b>	Used to distinguish the forward part of a boat or things forward of amidships. It is the opposite of aft or after.
<b>Documented Vessel</b>	Vessel registered with the U.S. Coast Guard.	<b>Forward</b>	Toward the bow.
<b>Dolphin</b>	A small group of piles, in the water, generally used for mooring or as a channel marker.	<b>Frame</b>	Ribs of the hull, extending from the keel to the highest continuous deck.
<b>Draft</b>	The depth of the vessel below the water line, measured vertically to the lowest part of the hull.	<b>Freeboard</b>	The vertical distance measured on a boat's side from the waterline to the gunwale.
<b>Dunnage</b>	Mats, boughs, pieces of wood, or other loose materials placed under or among goods carried as cargo in the hold of a ship to keep them dry and to prevent their motion and chafing; cushioning or padding used in a shipping container to protect fragile articles against shock and breakage; baggage or personal effects.	<b>Galley</b>	The kitchen area of a boat.
<b>Ebb</b>	An outgoing tide.	<b>Gimbals</b>	Swivels used to keep equipment level.
<b>Estuary</b>	An inlet or arm of the sea.	<b>Give-Way Vessel</b>	The one which must stay clear of vessels which have the right-of-way.
		<b>Grab Rail</b>	A convenient grip, on a cabin top or along a companion ladder.
		<b>Gunwale</b>	The upper edge of a boat's side. (pronounced gunnel.)
		<b>Harbor</b>	A safe anchorage, protected from most storms; may be natural or man-made, with breakwaters and jetties; a place for docking and loading.

<b>Hatch</b>	An opening in a boat's deck for persons or cargo to go below.	<b>Launch</b>	(1) To put a vessel into the water; (2) a small open powerboat, mainly used for transportation between a vessel and shore.
<b>Head</b>	A marine toilet.	<b>Lee</b>	The side opposite to that from which the wind blows.
<b>Headway</b>	Forward motion of a vessel through the water.	<b>Leeward</b>	Situated on the side turned away from the wind. (Opposite of windward.)
<b>Helm</b>	The wheel or tiller by which a ship is steered.	<b>Leeway</b>	The amount a boat is carried sideways by the wind's force or current.
<b>Holding Tank</b>	Storage tank for sewage, so that it will not be pumped overboard into the water.	<b>List</b>	(1) A continuous leaning to one side, often caused by an imbalance in stowage or a leak into one compartment; (2) A light list is a printed listing of aids to navigation, in geographical order, or inclining of a vessel toward the side.
<b>Hull</b>	The body of a boat.	<b>LOA</b>	Length over all; the maximum length of a vessel's hull, excluding projecting spars or rudder.
<b>Hypothermia</b>	A physical condition where the body loses heat faster than it can produce it.	<b>Locker</b>	A storage place, a closet.
<b>Inboard</b>	More toward the center of a vessel; inside; a motor fitted inside the boat.	<b>Log</b>	A record or diary of a vessel's journey.
<b>Inland Rules</b>	Rules of the road that apply to vessel operation in harbors and certain rivers, lakes, and inland waterways.	<b>Lubber's Line</b>	A mark or permanent line on a compass that shows the course of the boat.
<b>Intracoastal Waterways</b>	ICW: bays, rivers and canals along the coasts (such as Atlantic and Gulf of Mexico coasts), connected so that vessels may travel without going into the open sea.	<b>Making Way</b>	Making progress through the water.
<b>Jetty</b>	A structure, usually masonry, projecting out from the shore; a jetty may protect a harbor entrance.	<b>Marina</b>	A place, essentially a dock area, where small recreational craft are kept; usually floats or piers, as well as service facilities, are available.
<b>Keel</b>	The permanently positioned, fore-and-aft backbone member of a boat's hull.		
<b>Knot</b>	To bend a line. Also, a unit of speed equal to one nautical mile (6,076.10 feet) an hour.		

<b>MAYDAY</b>	A radio distress call, from the french m'aidez (help me); SOS in Morse Code.	<b>Overall Length</b>	The extreme length of a vessel, excluding spars or rigging fittings. See LOA.
<b>Mooring</b>	Commonly, the anchor chain, buoy, pennant, etc., by which a boat is permanently anchored in one location.	<b>Painter</b>	A rope attached to the bow of a boat for making it fast.
<b>Motor</b>	A source of mechanical power.	<b>PFD</b>	Personal Flotation Device.
<b>Motorboat</b>	Any watercraft 65 feet or less in length propelled by machinery, whether or not such machinery is the principal source of propulsion.	<b>Pier</b>	A structure, usually wood or masonry, extending into the water, used as a landing place for boats and ships.
<b>Navigation</b>	The art of conducting a ship from port to port.	<b>Pile</b>	A vertical wooden or concrete pole, driven into the bottom; may be a support for a pier or floats; also used for mooring.
<b>Nautical Mile</b>	6076.12 feet, or 1852 meters, an international standard; the geographical mile, the length of one minute of latitude at the equator, is 6087.20 feet.	<b>Piling</b>	A structure of piles.
<b>Nun Buoy</b>	A conical, red buoy bearing an even number and marking the starboard side of a channel from seaward.	<b>Pitch</b>	(1) The up and down movement as the bow and stern rise and fall due to wave action; (2) The theoretical distance advanced by a propeller in one revolution.
<b>Oar</b>	A long, wooden instrument with a flat blade at one end, used for propelling a boat.	<b>Planing Hull</b>	Type of hull that is shaped to lift out of the water at high speed. and ride on the surface.
<b>Outboard</b>	(1) a propulsion unit for boats, attached at the transom; includes motor, driveshaft, and propeller; fuel tank and battery may be integral or installed separately in the boat; (2) outside or away from a vessel's hull; opposite of inboard.	<b>Port</b>	The left side of a boat when you are facing the bow, also a destination or harbor.
<b>Outdrive</b>	A propulsion system for boats, with an inboard motor operating an exterior drive, with driveshaft, gears, and propeller; also called stern-drive and inboard/outboard.	<b>Privileged Vessel</b>	Former term for the vessel with the right-of-way.
		<b>Propeller</b>	Wheel or screw. Mechanism that pushes water aft to propel the boat.
		<b>Rigging</b>	The general term for all lines (ropes) of a vessel.

<b>Roll</b>	The sideward motion of a boat caused by wind or waves.	<b>Stern</b>	The after end or back of the boat.
<b>Rules of the Road</b>	The nautical traffic rules for preventing collisions on the water.	<b>Stow</b>	To store items neatly and securely.
<b>Scope</b>	The length of the anchor rope or chain. 6 to 1 scope means that the length of the anchor rope from the boat to the anchor is 6 times the depth of the water.	<b>Strake</b>	Planks running fore and aft on the outside of a vessel.
<b>Scupper</b>	A hole allowing water to run off the deck.	<b>Taffrail</b>	The rail around a boat's stern.
<b>Sea Anchor</b>	A floating canvas cone, held open by wire rings, with an opening in the smaller end, and a rope bridle at the larger end attached to a line leading to the vessel; used in storm condition to (a) keep the bow of the boat to the wind, and (b) slow downward drift of the boat.	<b>Tide</b>	The alternate rise and fall of waters caused by the gravitational attraction of moon or sun.
<b>Seacock</b>	A through-hull valve, a shut-off on a plumbing or drain pipe between the vessel's interior and the sea.	<b>Topsides</b>	(1) The sides of a vessel above the waterline; (2) On deck as opposed to below deck.
<b>Slip</b>	(1) A berth for a boat between two piers or floats; (2) The percentage difference between the theoretical and the actual distance that a propeller advances when turning in water under load.	<b>Transom</b>	The transverse planking which forms the afterend of a small, square-ended boat. (Outboard motors are usually attached to a transom.)
<b>Sole</b>	The cabin or cockpit floor.	<b>Trim</b>	To arrange weights in a vessel in such a manner as to obtain desired draft at bow and stern.
<b>Spar Buoy</b>	A channel marker that looks like a tall, slender pole.	<b>Trimaran</b>	Boat with three hulls, the center one is the largest.
<b>Stand-On Vessel</b>	The vessel with the right-of-way.	<b>Unbend</b>	To cast-off or untie.
<b>Starboard</b>	The right side of a boat when you are facing the bow.	<b>Underway</b>	Vessel in motion, i.e., when not moored, at anchor or aground.
		<b>USPS</b>	United States Power Squadron, a private membership organization that specializes in boating education and good boating practices.

<b>Vessel</b>	Every kind of watercraft, other than a seaplane on the water, capable of being used as a means of transportation on water.	<b>Windward</b>	Situated on the side closest to the wind. (Opposite of leeward.)
<b>VHF Radio</b>	A Very High Frequency electronic communications and direction finding system.	<b>Yaw</b>	To swing or steer off course, as when running with a quartering sea.
<b>Wake</b>	Moving waves, created by vessel motion. Track or path that a boat leaves behind it, when moving across the water.		
<b>Wash</b>	The loose or broken water left behind a vessel as it moves along; the surging action of waves.		
<b>Waterline</b>	The intersection of a vessel's hull and the water's surface; the line separating the bottom paint and the topsides.		
<b>Way</b>	Movement of a vessel through the water. Technically it is underway when not at anchor, aground, or made fast to the shore. The common usage is interpreted as progress through the water. Headway when going forward and Sternway when it is going backwards.		
<b>Well</b>	Area at the rear of a boat where the motor may be located.		
<b>Wharf</b>	A structure, parallel to the shore, for docking vessels.		
<b>Wheel</b>	(1) The steering wheel; (2) the propeller.		
<b>Whistle Signal</b>	A standard communication signal between boats, to indicate change of course, danger, or other situations.		



---

**WARRANTY**

---

**ROBALO BOATS LLC LIMITED WARRANTY**  
**2014 and Subsequent Model Years**  
**P. O. Box 928**  
**Nashville, GA 31639**

Upon delivery, owner shall complete the Limited Warranty Registration Card and return it to Robalo LLC, P. O. Drawer 928, Nashville, Georgia 31639 (“Robalo”) within fifteen (15) days of delivery of a new Robalo boat from an authorized Robalo dealer.

**DEFINITIONS OF TERMS CONTAINED IN THE LIMITED WARRANTY**

**Hull:** The single molded fiberglass shell that rests in the water below the hull flange and its structural components consisting of the stringers and the transom  
**Structurally Defective:** The presence of a defect in material or workmanship that causes the hull to be unsafe or unfit for use under normal operating conditions.  
**Original Purchaser:** Consumer(s) who purchase a new Robalo boat, retail, from an authorized Robalo dealer.  
**Subsequent Purchaser:** Purchaser(s) who acquire a used Robalo boat from the Original Purchaser, or an authorized Robalo dealer, as evidenced by a Bill of Sale and an Ownership Transfer Record completed by the original retail purchaser/ dealer.  
**Date of Delivery:** The date that the new boat was actually delivered to the first retail purchaser.  
**Demonstrator Boat:** An untitled /unregistered boat with 20 or more hours usage.  
**Fair Market Value:** Defined by [www.nadaguides.com](http://www.nadaguides.com) “Average Retail” as of the date of the Owner’s claim.

**THE WARRANTIES**

**ORIGINAL OWNER TEN YEAR LIMITED STRUCTURAL HULL WARRANTY**

Subject to the conditions, exclusions and limitations set forth below, Robalo warrants to only the *Original Purchaser* of a new Robalo boat that either Robalo or its authorized dealer will, at Robalo’s option, repair the fiberglass hull manufactured by Robalo if it is found to be Structurally Defective for a period of ten (10) years after the date of delivery. Robalo’s obligation to repair a hull is limited to the fair market value of the owner’s boat as of the date of the owner’s claim.

**TRANSFERABLE FIVE-YEAR LIMITED STRUCTURAL HULL WARRANTY**

Subject to the conditions, exclusions and limitations set forth below, Robalo warrants to the first subsequent purchaser that Robalo, or its authorized dealer will, at Robalo’s option, repair or replace the fiberglass hull manufactured by Robalo if it is found to be Structurally Defective within five (5) years after the date of delivery to the *original* retail purchaser. Robalo’s obligation to repair or replace a hull is limited to the fair market value of the owner’s boats as of the date of the owner’s claim.

To register the above referenced transfers, the Subsequent Purchaser must mail the following to Robalo Warranty Transfer, P. O. Drawer 928, Nashville, GA 31639 no later than thirty (30) days after the purchase from the Original Purchaser:

- (1) An Ownership Transfer Record (included in the Owner’s Manual) completed by the Original Purchaser and the Subsequent Purchaser;
- (2) A copy of the bill of sale or other evidence of purchase of the boat from the Original Purchaser, including the model and hull identification number; and,

(3) The warranty transfer fee of \$500.00 for models less than 26 feet and \$1,000 for models 26 feet or greater.

### **TRANSFERABLE ONE-YEAR LIMITED WARRANTY**

Subject to the conditions and limitations to coverage and liability discussed below, Robalo warrants to the *original* and first subsequent purchaser who has registered the transfer with Robalo in the manner provided above under “TRANSFERABLE FIVE-YEAR LIMITED STRUCTURAL HULL WARRANTY”, for a period of one year from the date of delivery to the *original* purchaser, that each new fiberglass boat manufactured by Robalo is free from defects in material and workmanship.

Please note that engines, outdrives, transom assemblies, controls, batteries, propellers, air conditioners, generators, refrigerators, certain electronics and certain other accessories or components on your boat are not warranted by Robalo under this Limited Warranty, but may be warranted by manufacturers other than Robalo. Please refer to the Robalo Owner’s Packet to locate Owner’s Manuals for these specific items and instructional information about possible warranties from manufacturers other than Robalo. Except as expressly set out herein, all warranties provided by the manufacturers and distributors of these accessories and components are hereby assigned to the owner, to the extent permitted by the accessory or component manufacturer, as the owner’s sole and exclusive remedy with respect to such items. Please note that coverage under any of these other independent warranties is contingent upon your compliance with the warranty registration requirements of the manufacturer of such item.

### **CONDITIONS TO COVERAGE**

In addition to any other conditions to coverage contained herein, the responsibility of Robalo under each of the foregoing limited warranties is also subject to the following conditions:

- (1) The owner must first notify the dealer from whom the boat was purchased of any claim under this warranty within the applicable warranty period and within thirty (30) days after the defect is or should have been discovered.
- (2) All costs of any nature for delivering any boat to a Robalo dealer, the Robalo factory, or any other point of repair authorized by Robalo and the return thereof shall be paid by the boat owner and are not covered under this warranty. Such cost may include but are not necessarily limited to transportation, freight, haul-outs, blocking and storage.
- (3) All repairs, corrections or replacements shall be performed by Robalo or a dealer or repair facility authorized by Robalo at its sole discretion.

### **DEALER RESPONSIBILITIES VS. FACTORY WARRANTY COVERAGE**

Robalo Dealers are responsible for keeping inventory in new condition at all times prior to sale of the boat. Any damage that occurs to a boat in a dealer’s inventory from weathering, theft, vandalism or failure to adequately protect the boat from environmental conditions will not be covered under any Robalo factory warranty.

### **STATUTE OF LIMITATIONS**

To the extent permitted by applicable State law, any lawsuit with respect to any breach of warranty claim seeking revocation of acceptance or rescission, whether express or implied, must be filed within one (1) year after the cause of action has occurred regardless of the time remaining in the warranty period under the Limited Warranty.

## LIMITATION OF COVERAGE FOR AGED INVENTORY

Robalo reserves the right to modify the warranty on any boat based on the amount of time the boat has remained in dealer inventory. Items that are affected by the passage of time may be voided from the warranty. Such items may include, but are not limited to cosmetic issues such as oxidation of gel, fading of plastics, deterioration of vinyl, deterioration of canvas, deterioration of isinglass, drying of rubber seals / caulking, and corrosion of metal parts. Component warranties may be limited based on availability of replacement parts.

Robalo applies the following policy so that customer's may fully understand the nature of their warranty prior to purchasing the boat:

<b>Invoice Date (to dealer)</b>	<b>Warranty Status</b>
< 2 years	Full Written Warranty Applies
2 to 3 years	Warranty based on inspection of boat condition. Warranty for cockpit upholstery, canvas, and gel coat <u>may</u> be limited. Cosmetic deterioration of powder coated, painted, and anodized surfaces is not warrantable.
3 to 5 year	Cockpit upholstery, canvas, and gel coat have no warranty. Other components normally covered by the One Year Warranty will be honored based on part availability.
> 5 years	Structural Hull Warranty Only

## LIMITATION OF COVERAGE FOR DEMONSTRATION MODELS PURCHASED FROM ROBALO DEALERS

Original retail purchaser(s), who otherwise comply with this Warranty Statement, receive the balance, as they exist at the time of purchase, of the Five-Year Transferable Limited Structural Hull Warranty and the One-Year Transferable Limited Warranty, only. The period of such limited warranties shall commence on the date the boat was first used for in-water demonstration purposes by the Dealer. ALL OTHER WARRANTIES ARE EXCLUDED. Warranty Transfer fees are waived for demonstrator boats.

## LIMITATION OF REMEDIES

- (1) Robalo's obligation under this warranty is limited to the cost of repair of the warranted item or replacement thereof, at Robalo's sole option, when returned prepaid to Robalo or other point of repair authorized by Robalo.
- (2) Robalo is not liable for loss of use, loss of time, inconvenience, economic loss, commercial loss or any consequential, incidental, general and/or special damages.

## EXCLUSIONS

### THE LIMITED WARRANTIES SET FORTH ABOVE DO NOT COVER:

- 1) Any boat that has been subject to any type of repossession.

- 2) Any boat not purchased by an original retail purchaser, or a subsequent purchaser, as defined herein,
- 3) Any failure or defect resulting from normal wear and tear, climatic conditions, use under other than normal conditions or the lack of proper maintenance;
- 4) Any boat which has been powered or loaded in excess of the manufacturer's maximum horsepower and/or capacity recommendations;
- 5) Any boat used or once used for racing, boat clubs, yacht clubs, law enforcement, military, rental, charter or commercial purposes;
- 6) Any boat that has been subject to misuse, negligence, an accident, or structural modifications;
- 7) Plexiglas windshield breakage, windshield breakage, windshield leakage,
- 8) Fuel gauges and fuel gauge systems, or fuel tanks;
- 9) Defects in paint or gel coat finishes including blisters below the waterline, cracking, crazing, or minor discoloration;
- 10) Defects in upholstery, canvas, vinyl, and other materials;
- 11) Damage, rot, mildew or other damage to upholstery, canvas, vinyl, plywood, carpet and other materials and components within the interior as a result of water damage including, without limitation, condensation or precipitation;
- 12) Installation of engines, or other parts or accessories installed by anyone other than Robalo;
- 13) Any boat that has been used after the discovery of a defect is or should have been discovered and such continued use causes additional or other damage to the boat; and
- 14) Except as described in the Limitations to Coverage above, any boat that has been used by the dealer for demonstration purposes.
- 15) Any defect or repair requiring redesign of the Boat, except pursuant to the recall provision of the United States Federal Boat Safety Act of 1971 or the recall laws of any other foreign jurisdiction.
- 16) Any Robalo boat acquired by a retail sales outlet from any sources other than the Robalo factory.
- 17) Damage, shrinkage, wear and tear, or deterioration of upholstery, carpet, graphics, and exterior canvas tops, enclosures, and weather covers (including rainwater leakage)
- 18) Rainwater leakage including rainwater leakage through canvas tops and enclosures.
- 19) Engines, controls, gauges, hard-top frames, T-top frames, batteries, propellers, air conditioners, generators, refrigerators, electronics and other accessories, components or other equipment which have been manufactured or purchased from other manufacturers, whether subject to a separate warranty or not, by such other manufacturers;
- 20) Estimates that relate to speed, fuel consumption, weight or statements made by any person other than Robalo Boats.
- 21) Any boat owned by anyone other than the original retail purchaser unless an Ownership Transfer Record has been properly filed with Robalo.
- 22) Electrolysis, galvanic corrosion, crevice corrosion or any other deterioration of underwater components.

### **TRANSFERABILITY OF COMPONENT MANUFACTURE'S WARRANTIES**

Engines, controls, batteries, propellers, air conditioners, generators, refrigerators, certain electronics and certain other accessories or components on your boat may be warranted by manufacturers other than Robalo. Please refer to the Robalo Owner's Packet to locate Owner's Manuals for these specific items and instructional information about possible warranties from manufacturers other than Robalo. Except as expressly set out herein, all warranties provided by the manufacturers and distributors of these accessories and components are hereby assigned to the owner, to the extent permitted by the accessory or component manufacturer, as the owner's sole and exclusive remedy with respect to such items. Please note that coverage under any of these other independent warranties is contingent upon your compliance with the warranty registration requirements of the manufacturer of such item.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE FOREGOING LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.**

**OTHER THAN THOSE LIMITED WARRANTIES CONTAINED HEREIN, ROBALO MAKES NO OTHER WARRANTIES. ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ANY COMPONENT OF THE BOAT IS LIMITED TO THE DURATION OF THE LIMITED WARRANTY APPLICABLE TO SUCH COMPONENT, AS SET FORTH ABOVE.**

**SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG ANY IMPLIED WARRANTY LASTS, SO THE FOREGOING LIMITATION MAY NOT APPLY TO YOU.**

**OWNER'S OBLIGATION:**

Warranty repairs, unless otherwise authorized by Robalo, should be performed by the selling Robalo dealer. In the event a boat is out of the Owner's possession for more than 15 days for warranty repair, the Owner must notify Robalo. The Owner must also notify Robalo for any claimed defect that is not corrected after one repair attempt. Robalo requires written notice from the Owner of any warranty claim prior to the expiration of the limited warranty. The Owner must allow Robalo an opportunity to repair or replace parts pursuant to the terms of this Limited Warranty.

**BY ACCEPTING DELIVERY OF THE BOAT COVERED BY THIS LIMITED WARRANTY, THE BOAT OWNER UNDERSTANDS AND AGREES AS FOLLOWS:**

- (1) No dealer or any other person is authorized to make on Robalo's behalf any other warranty other than those expressly set forth herein.
- (2) Robalo reserves the right, without notice, to make changes to or discontinue models and Robalo shall be under no obligation to equip or modify boats built prior to such changes.
- (3) Robalo will discharge its obligations under this warranty as rapidly as possible, but cannot guarantee any specified completion date due to the different nature of claims that may be made and services that may be required.
- (4) Robalo is the registered trademark of Robalo Boats LLC.
- (5) Owner has inspected the boat, or if not was given an opportunity to do so, and is satisfied with the boat and its component parts.

**PLEASE READ THIS STATEMENT OF WARRANTY CAREFULLY. IF YOU HAVE ANY QUESTIONS REGARDING YOUR RIGHTS AND OBLIGATIONS UNDER THIS WARRANTY, PLEASE CONTACT YOUR ROBALO DEALER OR ROBALO'S CUSTOMER SERVICE DEPARTMENT AT (229) 686-7481.**

---




# WIRING SCHEMATICS

---

**PROPRIETARY RIGHTS**


THIS DOCUMENT DRAWING DISCLOSES SUBJECT MATTER IN WHICH BH ELECTRONICS INC HAS PROPRIETARY RIGHTS. THE INFORMATION AND DESIGN DISCLOSED HEREIN WERE ORIGINATED BY AND ARE THE PROPERTY OF BH ELECTRONICS INC. NEITHER RECEIPT NOR POSSESSION THEREOF CONFERS OR TRANSFERS ANY RIGHT TO REPRODUCE, COPY, OR DISCLOSE THE DOCUMENT OR ANY PART THEREOF. ANY INFORMATION CONTAINED THEREIN OR TO CONSTRUCT PANELS OR HARNESSES FROM IT, EXCEPT BY WRITTEN PERMISSION FROM OR WRITTEN AGREEMENT WITH BH ELECTRONICS INC. THIS DOCUMENT IS TO BE RETURNED UPON REQUEST TO BH ELECTRONICS INC.

REV		DESCRIPTION	REVISIONS	DATE	MADE BY	ECN NO.
-		DELETE THE 3/8 LW & FINISH NUT FROM BDM. (NOT NEEDED)		8-16-12	RM	-

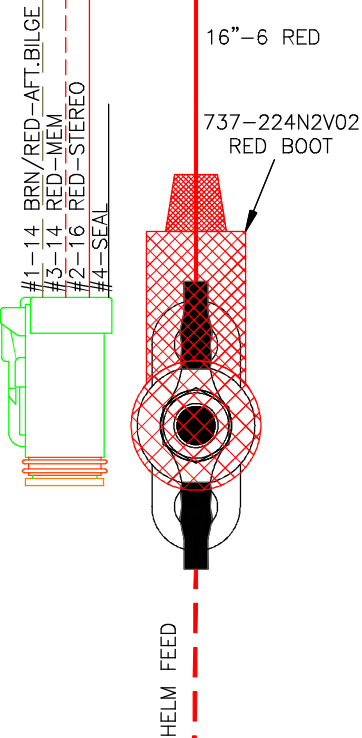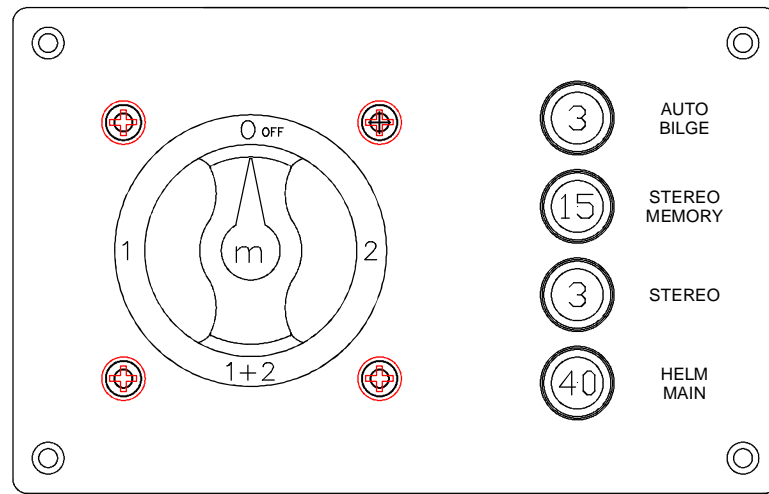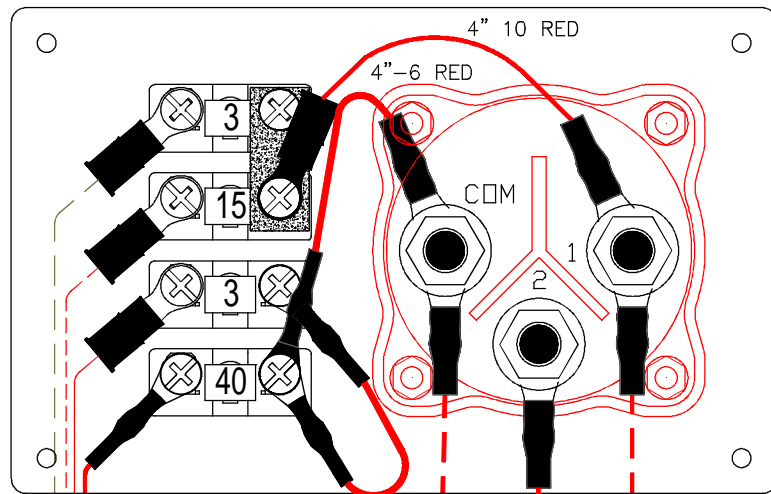

STARTER  
BATT 2  
BATT 1  
CUST CONNECTIONS

12" OFF BOTTOM OF PANEL

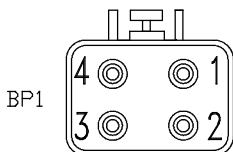

4-Way Deutsch DT Series Plug  
Plug DT06-4S  
Secondary Lock W4S

- #1-14 BRN/RED-AFT.BILGE
- #2-16 RED-STEREO
- #3-14 RED-MEMORY
- #4-SEAL

INSERT INTO POLYBAG & ATTACH TO PNL PRIOR TO SHIPMENT

1	650-0108102	POLY BAG - 8 X 10
4	420-NONSS06CBX	#6 NYLON FLAT WASHER - BLACK
4	420-M6X1KTPS	#6 X 1 TRUSS HEAD SMS BLACK SS - SCREW
4	420-WEXSU06	#6 EXT TOOTH LOCK WASHER
1	455-JB38163	RED J TYPE STUD
6	420-WESU08	#8 EXT TOOTH LOCK WASHER
5	420-PPMSSS8C25	8-32 X 1/4 PHIL PAN MS SS
1	420-A3X38KPPS	10-32 X 3/8 PHIL PAN MS SS
2	420-10SWXXX	#10 EXT TOOTH LOCK WASHER
4	420-MIX7KCPX	6/32 X 3/4 BLK CS PHIL FT HD - SCREW
4	420-A14SYLNXX	6/32 NYLON INSERT JAM LOCKNUT
2	200-CS-02-0750	2 POSITION COPPER STRIP (.75 C-C)
1	737-AME2121J	JOMEX 3/8-24 CB BREAKER BOOTS
3	737-1300400	CARLING 3/8-27 CB BREAKER BOOTS
1	352-CLB40327W	40A CLB BREAKER
1	352-CBCKJ153	15A CB 90 SCREW TERM CBM 153-27G3N-BJ
2	352-CBCKJ033	3A CB 90 SCREW TERM CMB 033-27G3N-BJ
1	735-6007001B	BLU SEA MINI DUAL BATTERY SW
1	202-00888-A	PIGTAIL
1	201-00313	FACEPLATE




QTY	PART NUMBER	DESCRIPTION
		CUSTOMER: <b>ROBALO</b>
		MODEL: <b>2012 R180/R200</b>
		PART NAME: <b>DUAL BATTERY SW PNL</b>



**PROPRIETARY RIGHTS**


THIS DOCUMENT DRAWING DISCLOSES SUBJECT MATTER IN WHICH BH ELECTRONICS INC HAS PROPRIETARY RIGHTS. THE INFORMATION AND DESIGN DISCLOSED HEREIN WERE ORIGINATED BY AND ARE THE PROPERTY OF BH ELECTRONICS INC. NEITHER RECEIPT NOR POSSESSION THEREOF CONFERS OR TRANSFERS ANY RIGHT TO REPRODUCE, COPY, OR DISCLOSE THE DOCUMENT OR ANY PART THEREOF. ANY INFORMATION CONTAINED THEREIN OR TO CONSTRUCT PANELS OR HARNESSES FROM IT, EXCEPT BY WRITTEN PERMISSION FROM OR WRITTEN AGREEMENT WITH BH ELECTRONICS INC. THIS DOCUMENT IS TO BE RETURNED UPON REQUEST TO BH ELECTRONICS INC.

REV		DESCRIPTION	DATE	MADE BY	ECN NO.
-	CHGD	BRKR WIRING FOR HELM MAIN (FLAT PACK CHG)	3-19-12	RM	-
-	DEL 1	EA 420-C375LV 420-C375I6NT ADD 1 420-11300001 NYLOK NUT	9-17-12	JBR	-

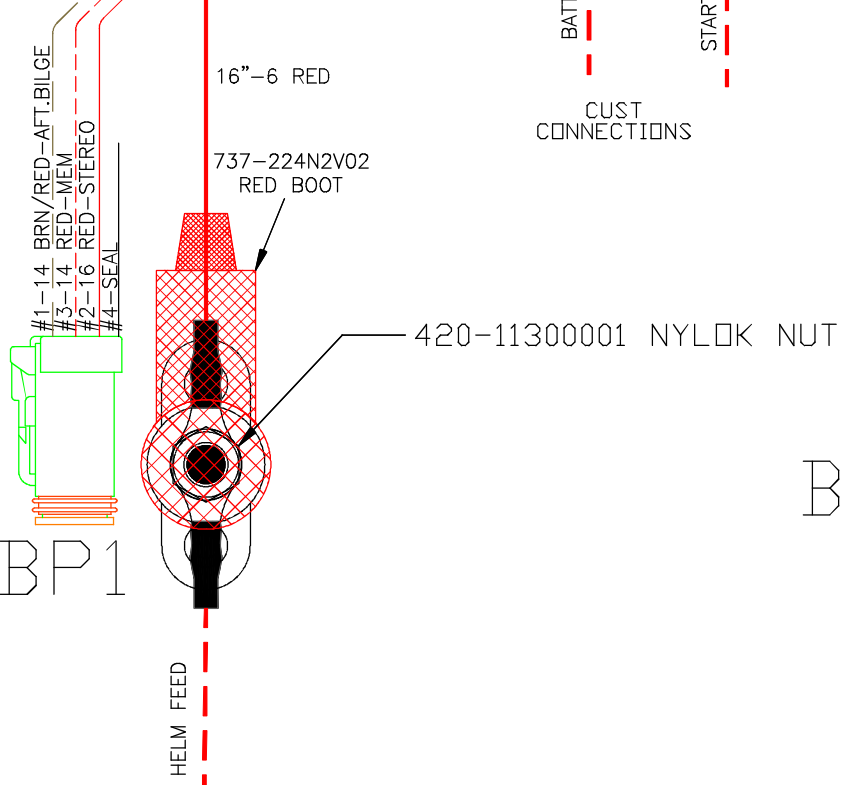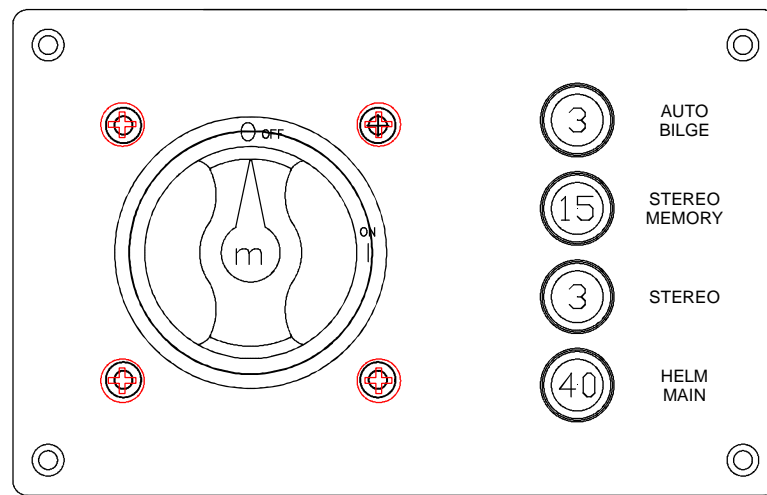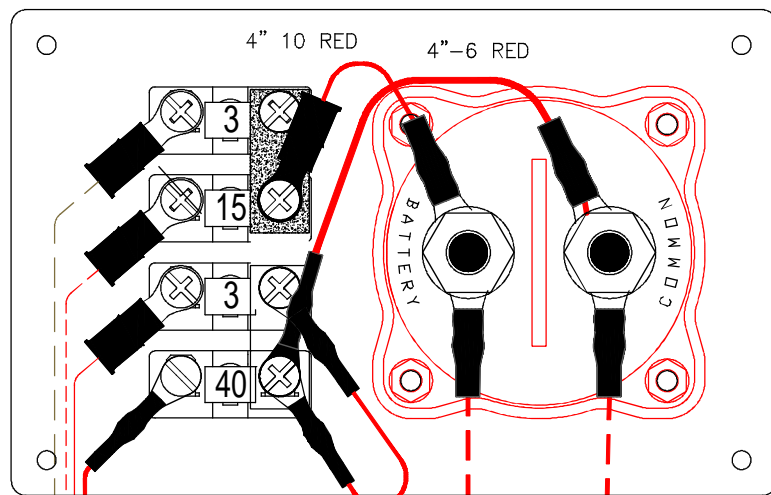

BATT 1  
STARTER  
CUST CONNECTIONS

12" OFF BOTTOM OF PANEL

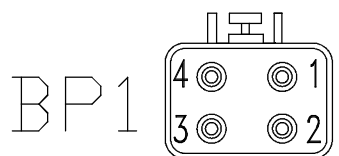

4-Way Deutsch DT Series Plug  
Plug DT06-4SP012  
Secondary Lock W4SP012

- #1-14 BRN/RED-AFT.BILGE
- #2-16 RED-STEREO
- #3-14 RED-MEMORY
- #4-SEAL

INSERT INTO POLYBAY & ATTACH TO PNL PRIOR TO SHIPMENT


1	650-0108102	POLY BAG - 8 X 10
4	420-NONSS06CBX	#6 NYLON FLAT WASHER - BLACK
4	420-M6X1KTPS	#6 X 1 TRUSS HEAD SMS BLACK SS - SCREW
4	420-WXSU06	#6 EXT TOOTH LOCK WASHER
1	455-JB38163	RED J TYPE STUD
1	420-11300001	3/8-16 BRASS N.P. NYLOK NUT
6	420-WESU08	#8 EXT TOOTH LOCK WASHER
5	420-PPMSSS8C25	8-32 X 1/4 PHIL PAN MS SS
1	420-A3X38KPPS	10-32 X 3/8 PHIL PAN MS SS
2	420-10SWXXX	#10 TOOTH LOCK WASHER
4	420-MIX7KPCS	6/32 X 3/4 BLK CS PHIL FT HD - SCREW
4	420-A14SYLNXX	6/32 NYLON INSERT JAM LOCKNUT
1	200-CS-02-0750	2 POSITION COPPER STRIP (.75 C-C)
4	737-1300400	CARLING 3/8-27 CB BREAKER BOOTS
1	352-CLB40327W	40A CB 90 SCREW TERMINAL CLB BRKR
1	352-CBCKJ153	15A CB 90 SCREW TERM CBM 153-27G3N-BJ
2	352-CBCKJ033	3A CB 90 SCREW TERM CMB 033-27G3N-BJ
1	735-6006001B	BLU SEA MINI BATTERY SW (ON-OFF)
1	202-00888-A	PIGTAIL
1	201-00313	FACEPLATE

QTY	PART NUMBER	DESCRIPTION
<b>BH ELECTRONICS</b>		
DRAWN BY JBR		DATE 8-3-11
REV BY JBR		DATE 9-17-12
FILE NAME 205-01772-A.DWG		DWG NO. 205-01772
CUSTOMER ROBALO		MODEL R180/R200
PART NAME SINGLE BATTERY SW PNL		REV A

**PROPRIETARY RIGHTS**

THIS DOCUMENT DRAWING DISCLOSES SUBJECT MATTER IN WHICH BH ELECTRONICS INC HAS PROPRIETARY RIGHTS. THE INFORMATION AND DESIGN DISCLOSED HEREIN WERE ORIGINATED BY AND ARE THE PROPERTY OF BH ELECTRONICS INC. NEITHER RECEIPT NOR POSSESSION THEREOF CONFERS OR TRANSFERS ANY RIGHT TO REPRODUCE, COPY, OR DISCLOSE THE DOCUMENT OR ANY PART THEREOF, ANY INFORMATION CONTAINED THEREIN OR TO CONSTRUCT PANELS OR HARNESSES FROM IT, EXCEPT BY WRITTEN PERMISSION FROM OR WRITTEN AGREEMENT WITH BH ELECTRONICS INC. THIS DOCUMENT IS TO BE RETURNED UPON REQUEST TO BH ELECTRONICS INC.

REV	DESCRIPTION	REVISIONS	DATE	MADE BY	ECN NO.
B	CHG RAW WTR WIRING FROM 16GA TO 12GA. ECR R01401		7-15-13	RM	2533

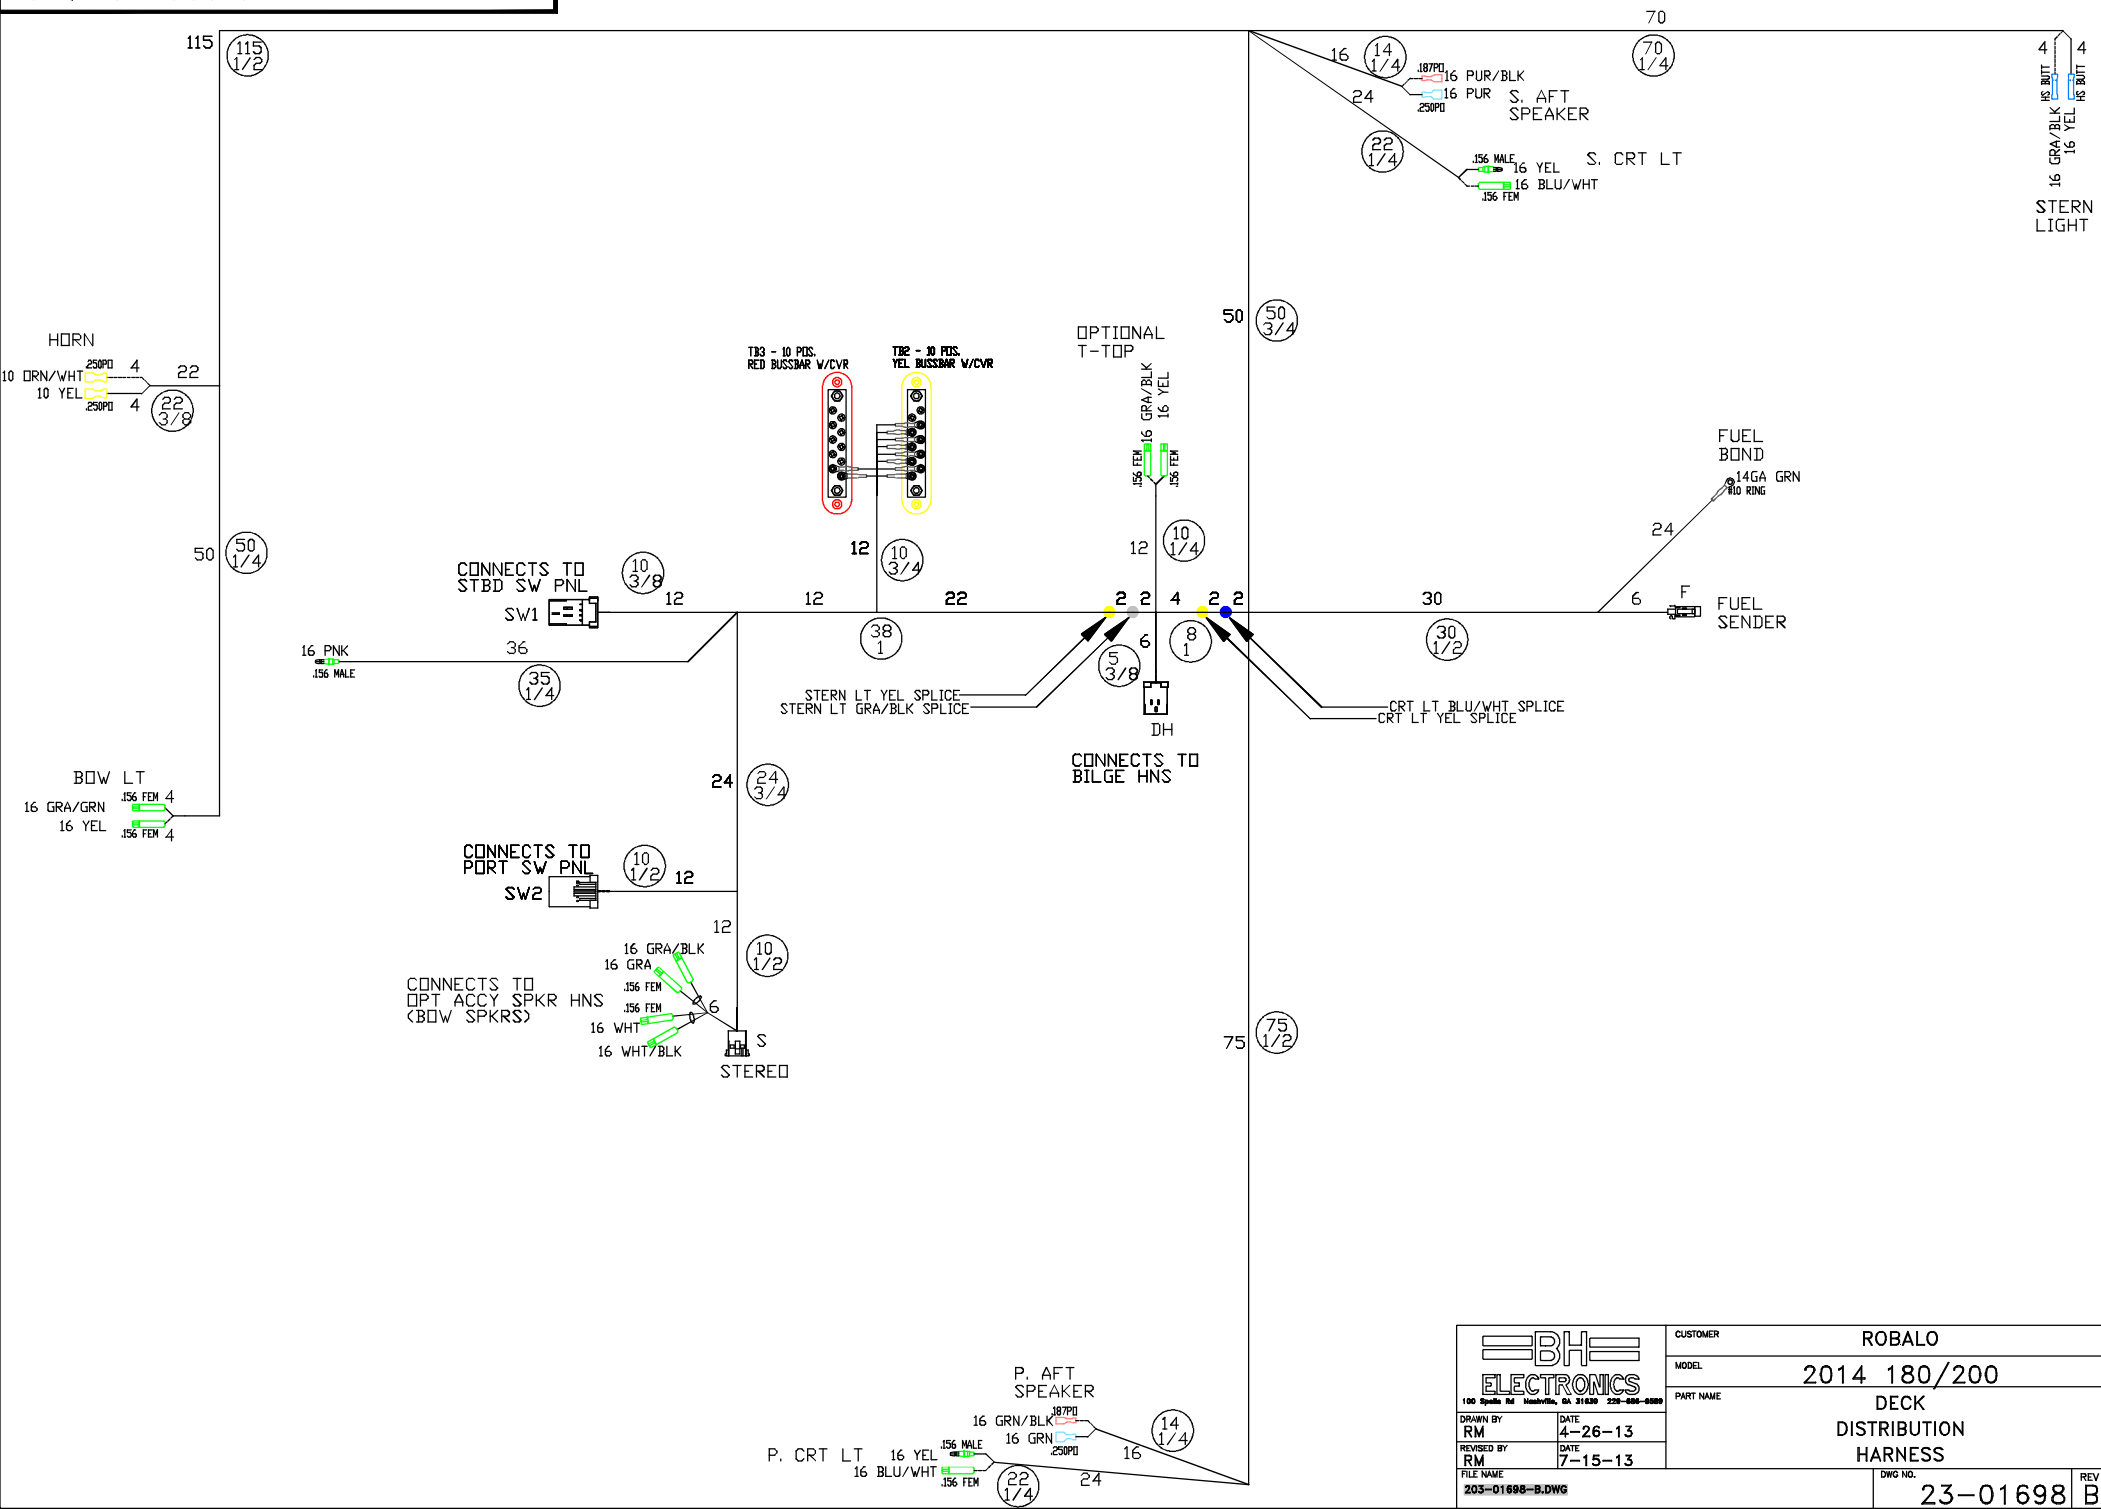


		CUSTOMER	ROBALO
		MODEL	2014 180/200
100 Sparks Rd. Marietta, GA 30060 770-686-6880 DRAWN BY: RM DATE: 4-26-13 REVISOR BY: RM DATE: 7-15-13		PART NAME	DECK DISTRIBUTION HARNESS
		FILE NAME	203-01698-B.DWG
REV 4 16 GRN/BLK 16 YEL 16 BLU/WHT			ECN NO. 2533 REV 23-01698-B


**PROPRIETARY RIGHTS**

THIS DOCUMENT DRAWING DISCLOSES SUBJECT MATTER IN WHICH BH ELECTRONICS INC HAS PROPRIETARY RIGHTS. THE INFORMATION AND DESIGN DISCLOSED HEREIN WERE ORIGINATED BY AND ARE THE PROPERTY OF BH ELECTRONICS INC. NEITHER RECEIPT NOR POSSESSION THEREOF CONFERS OR TRANSFERS ANY RIGHT TO REPRODUCE, COPY, OR DISCLOSE THE DOCUMENT OR ANY PART THEREOF, ANY INFORMATION CONTAINED THEREIN OR TO CONSTRUCT PANELS OR HARNESSES FROM IT, EXCEPT BY WRITTEN PERMISSION FROM OR WRITTEN AGREEMENT WITH BH ELECTRONICS INC. THIS DOCUMENT IS TO BE RETURNED UPON REQUEST TO BH ELECTRONICS INC.

REVISIONS		DATE	MADE BY	ECN NO.
A	REDLINES FOR PROTON2, PER K.F. 9-2-11	9-7-11	RM	
A	REDLINES MARKUPS, CHAP ECR R01208	10-17-11	RM	MEMO
B	CHGD FUEL SEPARATOR BOND TO 1/4R FROM #10R. ECR R01209	11-4-11	RM	2486
C	ADD BOND JUMPER TO THRU HULL BOND CHG TERM TO 1/4R FROM #10. ECR R01212	12-13-11	RM	2490
D	CHG RAW WTR FROM BLU BUTT TO 2V BT PLUG (RW), CHG WIRE GA FROM 16 TO 12. ECR PR441	7-11-13	RM	2533

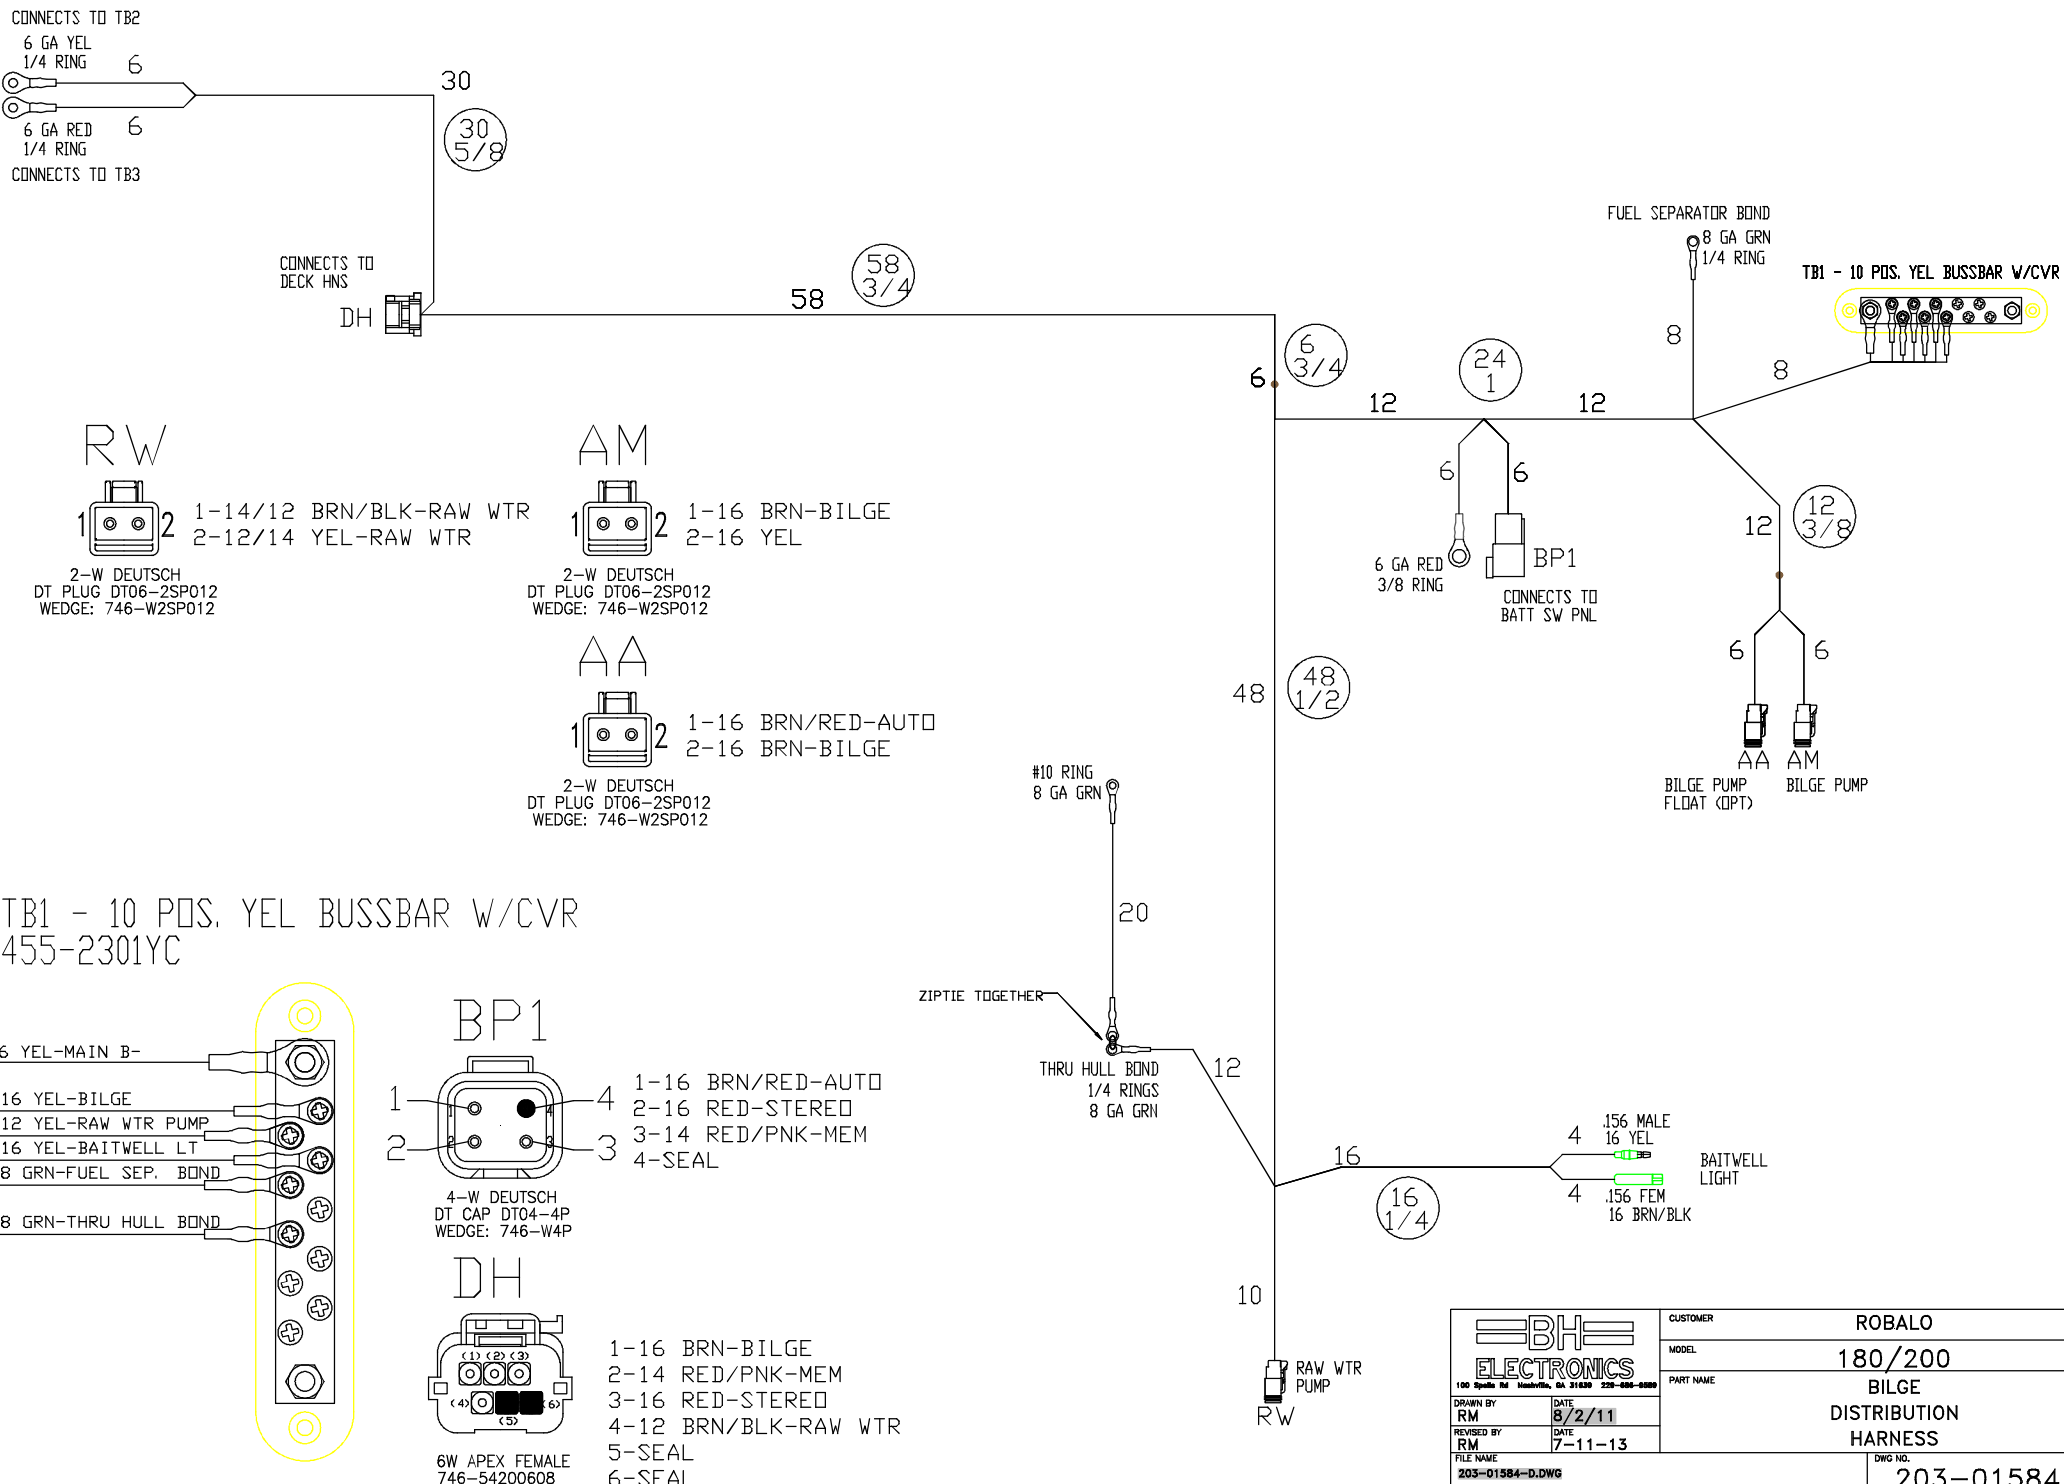


 100 Sparks Rd Marietta, GA 30067 770-426-6889	CUSTOMER	ROBALO
	MODEL	180/200
	PART NAME	BILGE DISTRIBUTION HARNESS
	DWG NO.	203-01584
DRAWN BY	DATE	REV
RM	8/2/11	
REVISIONS	DATE	
RM	7-11-13	
FILE NAME	203-01584-D.DWG	

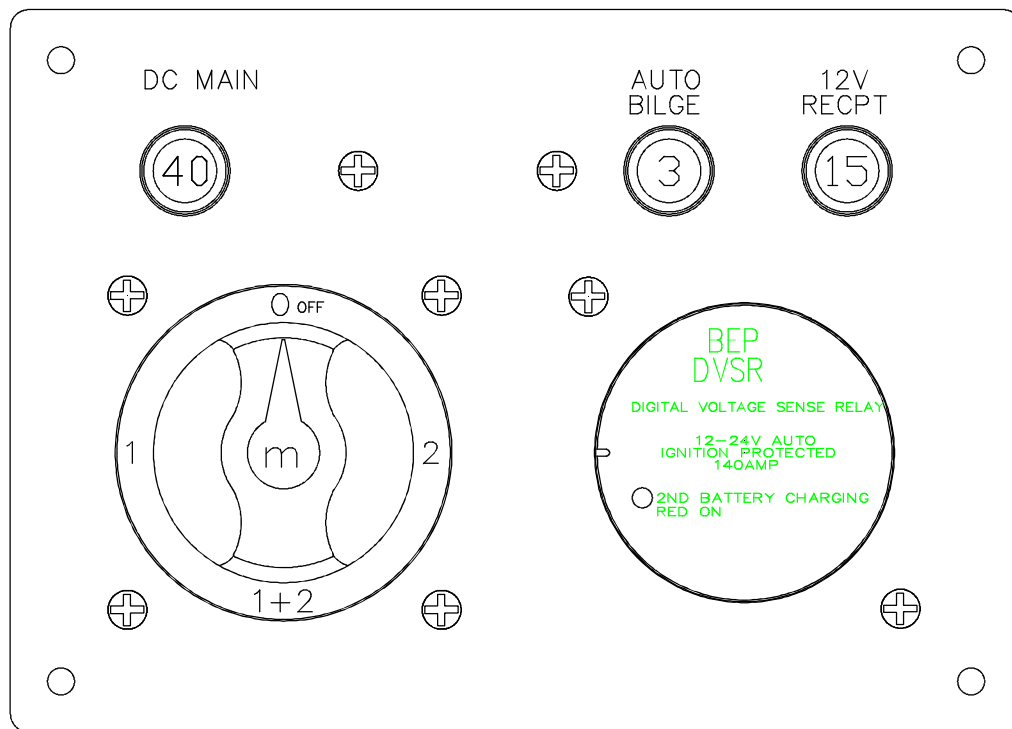

1	650-AAPB	4 X 4 POLYBAG
4	420-8375KNFW	#8 NYLON FLAT WASHER - BLACK (MTG)
4	420-A8X1KTPS	#8 X 1 TRUSS HD SMS SCREW BLK (MTG)
1	746-1062140122	1614 DEUTSCH DT FEMALE SOCKET (VSR)
1	748-SIR38BHC	3/8 RING - 18-22 (VSR)
6	420-8EXTSTAR	#8 EXT TOOTH LOCKWASHER (BRKRS)
6	420-PPMSSS8C25	8-32 X 1/4 PHIL PAN MS SS (BRKRS)
6	420-WFLSS06	#6 SS FLAT WASHER
2	420-A1NIXXX	6-32 X 5/16 SS HEX NUT - VSR
6	420-A14SYLNXX	6-32 NYLON NUT
6	420-M1X7KCPS	SCREW 6-32X3/4 PH FLT BLK
2	420-PFMSSS06C32BX	SCREW 6-32X2 PH FLT BLK - VSR
1	420-11300001	3/8-16 NYLOCK NUT BRASS
1	455-JB38163	3/8 RED STUD POST
3	737-1300400	BLACK CIR BKR BOOT 3/8-27
1	352-CLB40327W	40A CIR BKR 90° SCREW TABS
1	352-CBCKJ153	15A CB 90° SCREW TERM CMB
1	352-CBCKJ033	3A CB 90° SCREW TERM CMB
1	735-710114AB	DIGITAL VSR
1	735-6007001B	BLUE SEAS DUAL BATTERY SW(6007)
1	202-01252-A	PIGTAIL
1	200-00530	VSR SPACER
1	200-01442	FACEPLATE

QTY	P/N	DESCRIPTION
		CUSTOMER: <b>ROBALO</b>
		MODEL: <b>R206</b>
		PART NAME: <b>DUAL BATTERY PANEL ASSEMBLY</b>

DRAWN BY <b>JBR</b>	DATE <b>6/25/13</b>	DWG NO. <b>205-02260</b>	REV <b>A</b>
REVISED BY -	DATE -	FILE NAME <b>205-02260-A DUAL BATT PNL.DWG</b>	

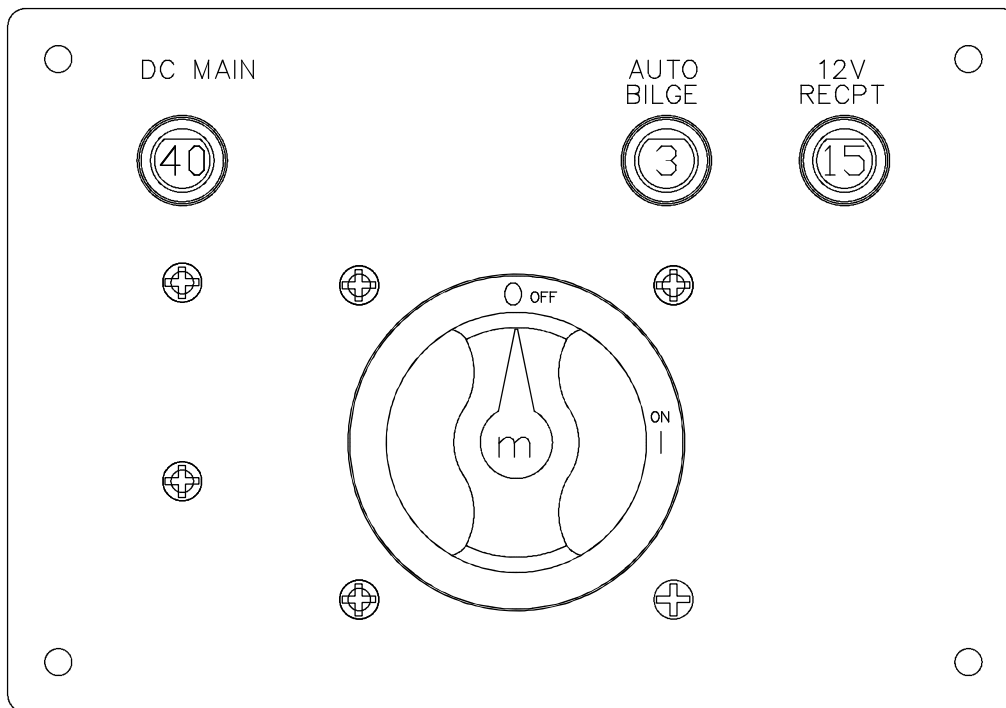

1	650-AAPB	4 X 4 POLYBAG
4	420-8375KNFW	#8 NYLON FLAT WASHER - BLACK (MTG)
4	420-A8X1KTPS	#8 X 1 TRUSS HD SMS SCREW BLK (MTG)
6	420-8EXTSTAR	#8 EXT TOOTH LOCKWASHER (BRKRS)
6	420-PPMSSS8C25	8-32 X 1/4 PHIL PAN MS SS (BRKRS)
6	420-WFLSS06	#6 SS FLAT WASHER
6	420-A14SYLNXX	6-32 NYLON NUT
6	420-M1X7KCPS	SCREW 6-32X3/4 PH FLT BLK
1	420-11300001	3/8-16 NYLOCK NUT BRASS
1	455-JB38163	3/8 RED STUD POST
3	737-1300400	BLACK CIR BKR BOOT 3/8-27
1	352-CLB40327W	40A CIR BKR 90° SCREW TABS
1	352-CBCKJ153	15A CB 90° SCREW TERM CMB
1	352-CBCKJ033	3A CB 90° SCREW TERM CMB
1	735-6006001B	BLUE SEAS SINGLE BATTERY SW(6006)
1	202-01251-A	PIGTAIL
1	200-01441	FACEPLATE

QTY	P/N	DESCRIPTION
 100 Spella Rd Nashville, GA 31639 229-686-9599		CUSTOMER
		ROBALO
		MODEL
		R206
		PART NAME
		SINGLE BATTERY PANEL ASSEMBLY
DRAWN BY	DATE	
JBR	6/25/13	
REVISED BY	DATE	
-	-	

FILE NAME	DWG NO.	REV
205-02259-A SING BATT PNL.DWG	205-02259	A

PROPRIETARY RIGHTS  
 THE INFORMATION CONTAINED HEREIN IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE BY AN INDICATOR AND SHALL BE RELEASED UNLESS SPECIFICALLY NOTED OTHERWISE BY THE PROPERTY OF THE ELECTRONICS CORPORATION. THIS DOCUMENT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE BY AN INDICATOR AND SHALL BE RELEASED UNLESS SPECIFICALLY NOTED OTHERWISE BY THE PROPERTY OF THE ELECTRONICS CORPORATION. THIS DOCUMENT IS UNCLASSIFIED EXCEPT WHERE SHOWN OTHERWISE BY AN INDICATOR AND SHALL BE RELEASED UNLESS SPECIFICALLY NOTED OTHERWISE BY THE PROPERTY OF THE ELECTRONICS CORPORATION.


REV	DESCRIPTION	REVISIONS	DATE	MADE BY	ECN NO.
-	BOAT #2 MARKUPS		8-10-13	RM	-
-	BOAT #3 MARKUPS (FIRST PRODUCTION BOAT)		8-21-13	RM	-

**AFT BILGE (MAN)  
PLUG AM**



2-Way Deutsch DT Series Plug  
 Plug DT06-2SP012  
 Secondary Lock W2SP012  
 1-14 BRN-BILGE  
 2-14 YEL-BILGE

**PLUG NL**

 


A-14 GRA/BLK-SNAV (BOW) LT  
 B-14 YEL-NAV (BOW) LT

**AFT BILGE (AUTO)  
PLUG AA**



2-Way Deutsch DT Series Plug  
 Plug DT06-2SP012  
 Secondary Lock W2SP012  
 1-14 BRN/ORN-AUTO  
 2-14 BRN-BILGE

**PLUG PL**

 

A-14 GRA/BLK-STERN/POLE LT  
 B-14 YEL-STERN/POLE LT

**LVWL/RAW WTR PUMP  
PLUG LP**



2-Way Deutsch DT Series Plug  
 Plug DT06-2SP012  
 Secondary Lock W2SP012  
 1-14 TAN/BLK-LVWL/RAW WTR  
 2-14 YEL-LVWL/RAW WTR

**PLUG F**




1-16 PNK-FUEL  
 2-16 YEL-FUEL



10V FEMALE  
 746-54201009  
**TO HELM  
DIST HNS**

**PLUG DH**

- 1-14 BRN-BILGE
- 2-14 BRN/BLU-LVWL LTS
- 3-16 PNK-FUEL
- 4-14 GRA/BLK-STERN/POLE LT
- 5-14 TAN/BLK-LVWL/RAW WTR
- 6-14 GRA/GRN-NAV LTS
- 7-14 BRN/ORN-AUTO
- 8-SEAL
- 9-SEAL
- 10-SEAL

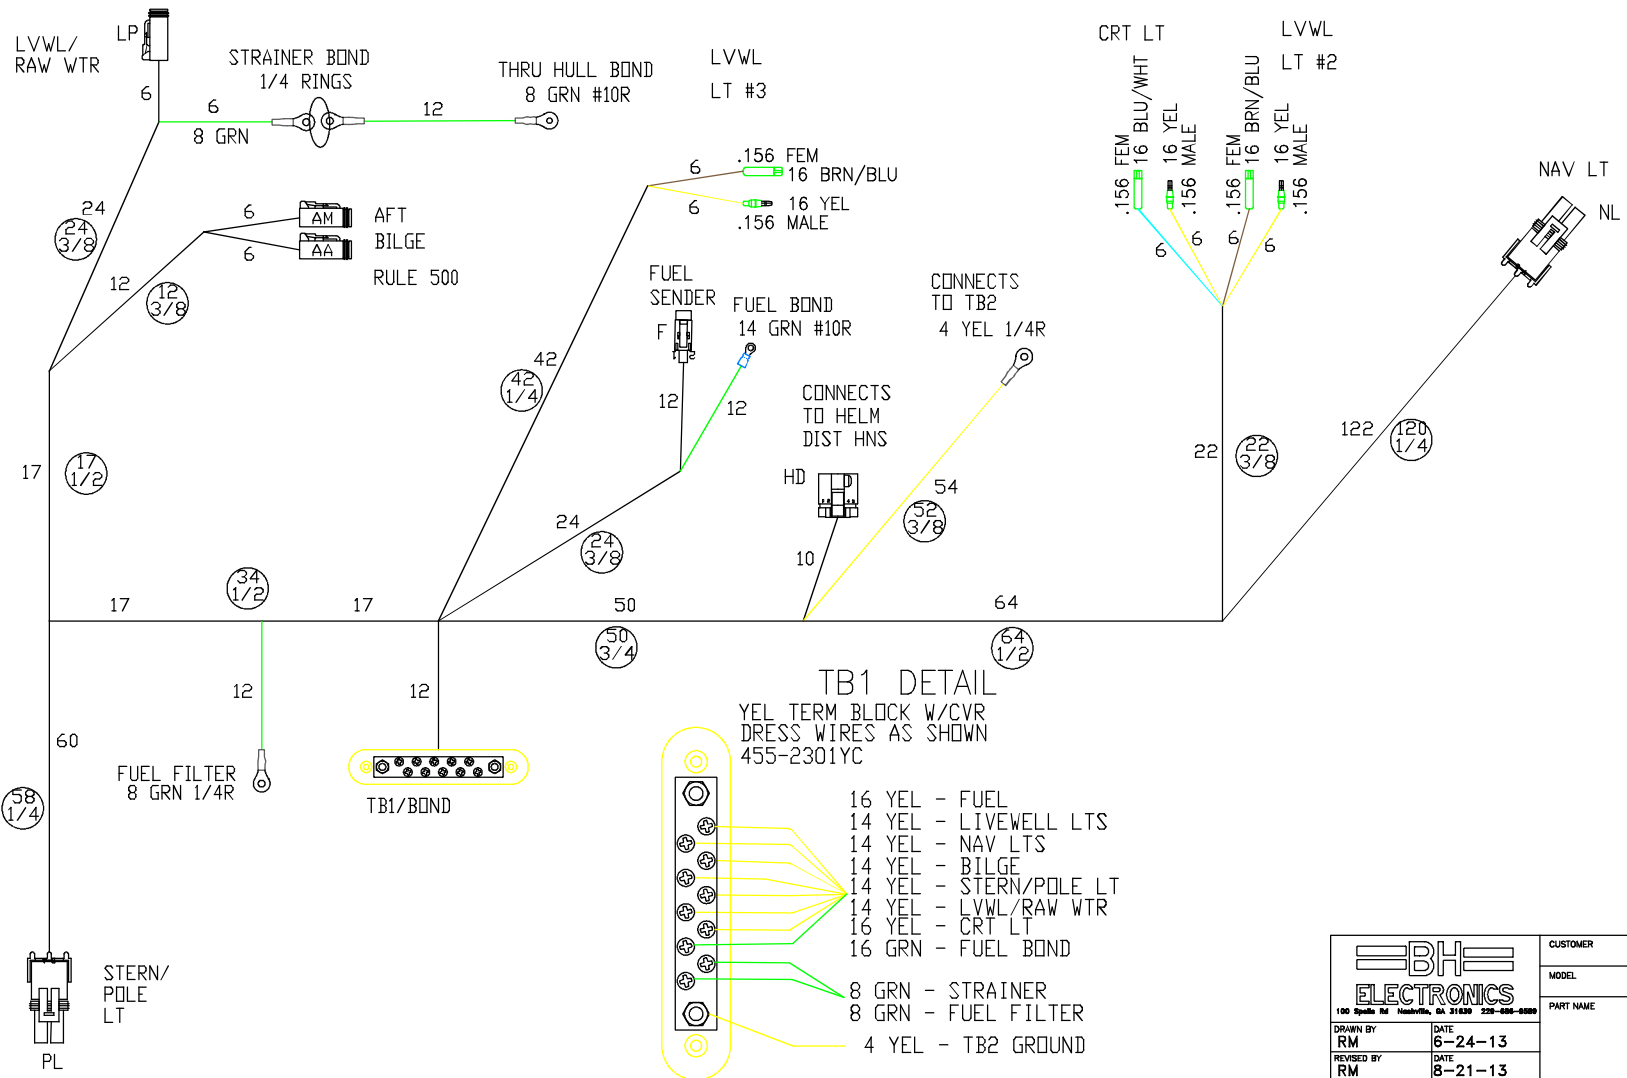

**TB1 DETAIL**

- YEL TERM BLOCK W/CVR  
 DRESS WIRES AS SHOWN  
 455-2301YC
- 16 YEL - FUEL
  - 14 YEL - LIVEWELL LTS
  - 14 YEL - NAV LTS
  - 14 YEL - BILGE
  - 14 YEL - STERN/POLE LT
  - 14 YEL - LVWL/RAW WTR
  - 16 YEL - CRT LT
  - 16 GRN - FUEL BOND
  - 8 GRN - STRAINER
  - 8 GRN - FUEL FILTER
  - 4 YEL - TB2 GROUND

 
**BHE ELECTRONICS**  
 100 Spaulds Rd. Huntsville, GA 31800 256-886-6889

DRAWN BY RM	DATE 6-24-13
REVISED BY RM	DATE 8-21-13
FILE NAME 203-01711-A.DWG	

CUSTOMER	ROBALO
MODEL	2014 R206
PART NAME	AFT DIST HNS
DWG NO.	203-01711
REV	

PROPRIETARY RIGHTS  
 THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF BENTON & BOWLES, INC. AND IS TO BE USED ONLY FOR THE PROJECT AND VESSEL SPECIFICALLY IDENTIFIED HEREIN. NO PART OF THIS DOCUMENT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF BENTON & BOWLES, INC. THE DOCUMENT IS TO BE RETURNED TO BENTON & BOWLES, INC. UPON COMPLETION OF THE PROJECT.

REV	DESCRIPTION	REVISIONS	DATE	MADE BY	ECN NO.
-	BOAT #2 MARKUPS		7-10-13	RM	-
-	REPLACED TB3 STUD W/10 PDS. RED BUSS BAR. PER JB DDUM		7-19-13	RM	-




- PLUG SW2**  
 1-14 BRN-BILGE  
 2-14 TAN/BLK-LVWL/RAW WTR  
 3-10 RED/PUR-CB FEED  
 4-16 PNK-FUEL

TO STBD SW PNL




- PLUG SW1**  
 1-14 GRA/GRN-NAV LTS  
 2-14 GRA/BLK-STERN/POLE LT  
 3-14 BLU/WHT-CRT LTS  
 4-14 BRN/BLU-LVWL LTS  
 5-14 YEL-HORN  
 6-16 YEL-MAST LT/COMP  
 7-10 RED/PUR-CB FEED  
 8-14 RED/ORN-12V RECPT  
 9-14 YEL-12V RECPT  
 10-SEAL

 TO PORT SW PNL




- PLUG HD**  
 1-14 BRN-BILGE  
 2-14 BRN/BLU-LVWL LTS  
 3-16 PNK-FUEL  
 4-14 GRA/BLK-STERN/POLE LT  
 5-14 TAN/BLK-LVWL/RAW WTR  
 6-14 GRA/GRN-NAV LTS  
 7-14 BRN/ORN-AUTO  
 8-16 BLU/WHT-CRT LT  
 9-SEAL  
 10-SEAL

 TO AFT DIST HNS





**TB2 DETAIL**  
 YEL TERM BLOCK W/CVR  
 DRESS WIRES AS SHOWN  
 455-2301YC

 - 16 YEL - MAST/COMP LT
- 16 YEL - VSR
- 16 YEL - CON. LVWL LT
- 14 YEL - H. CRT LT
- 14 YEL - 12V RECPT
- 14 YEL - HORN



**TB3 DETAIL**  
 RED TERM BLOCK W/CVR  
 DRESS WIRES AS SHOWN  
 455-2301RC

 - 4 RED-DC MAIN
- 10 RED/PUR-P. SW
- 10 RED/PUR-S. SW

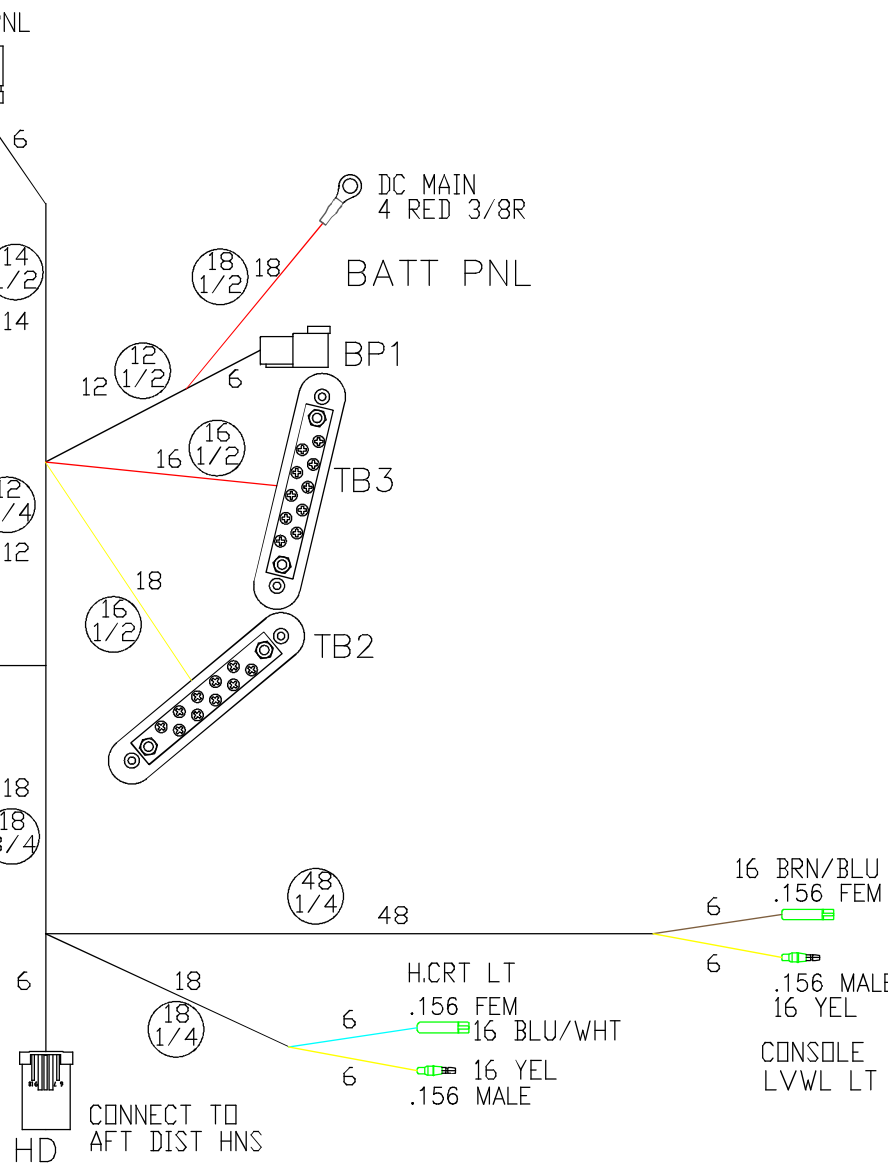

 100 Sparks Rd. Huntsville, GA 31800 256-886-8888		CUSTOMER	ROBALO
		MODEL	2014 R206
DRAWN BY RM REVISIONS RM FILE NAME 203-01710-A.DWG	DATE 6-24-13 DATE 7-19*-13	PART NAME	HELM DIST HNS
P.1 OF 1		DWG NO.	203-01710
		REV	A