


Quick Reference Guide

WARNING: The depth sounder is not to be used for navigation or as a device to avoid grounding which may result in boat damage or personal injury. Always use caution operating in shallow areas and maintain a very slow speed. Be aware that depths may change too quickly for you to react and avoid grounding.

Pilot System

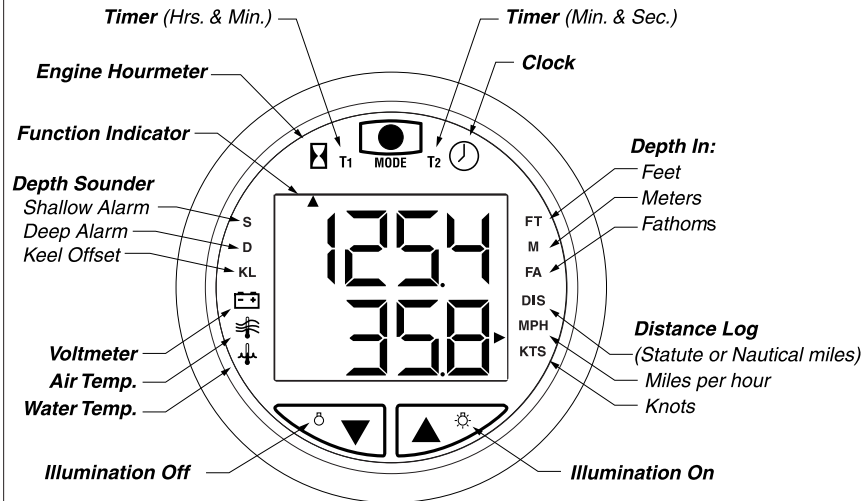

Key Pad Functions

Power ON or OFF

On, press . To turn Pilot off, press and hold until display goes blank.

Illumination On or OFF:

On, press (▲). Off, press (▼).

Select Function: Press quickly. The Pilot will beep and selected display will blink.

Select Upper or Lower Display:

While display is blinking, press (▲) to select upper display or (▼) to select lower display.

Select Desired Function:

While blinking press quickly again until (▶) points to desired function.

Editing a Function: Press and hold until Pilot beeps. Edit Mode will activate.

Select Units for Any Active Function: Depth Sounder / Speedometer and Distance Log / Temperature:

Press and hold until Pilot beeps. Press quickly until selected display reads "U" (units). Press (▲) / (▼) to move function indicator to either Feet (F), Meters (M), Fathoms (FA) / Miles Per Hour (MPH), Knots (KTS) / Fahrenheit (F), Centigrade (C).

Set Shallow or Deep Alarm and Keel Offset:

Press and hold until Pilot beeps. Continue pressing quickly until Function Indicator points to "S", "D", or "KL". Press and hold (▲) / (▼) to adjust reading to the desired depth.
NOTE: To deactivate an alarm, reset it to zero.

Calibrate the Speedometer or Distance Log Units:

Press and hold until Pilot beeps. Press quickly until lower display reads "C" (calibration). Press (▲) / (▼) to change speed reading to desired speed.

Clear Distance Log:

Press and hold until Pilot beeps. Continue pressing quickly until lower display reads "CLR" (clear). Press (▲) / (▼) to clear Log reading to zero.

Timer:

Select Timer Functions.

Press quickly. Press (▲) to Select upper display. Continue pressing until the Function Indicator is pointing to either hours and minutes or minutes and seconds.

Start or Stop Timer.

Press (▲) / (▼) to start or stop timer at any time.

Reset Timer.

Press and hold until Pilot beeps.

Set clock:

Press and hold until Pilot beeps. Press (▲) / (▼) to select minute. Press and hold (▲) / (▼) to select hours.