


Sea Ray Owner's Manual

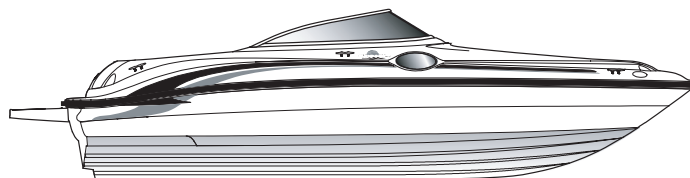

240 Sundeck®



Owner's Manual Part Number: MRP 1806424

240 SUNDECK®

OWNER'S MANUAL

Welcome

Congratulations on becoming the new owner of the world's most prestigious boat. We at Sea Ray® Boats, Inc. welcome you into our worldwide and ever-expanding family of boating enthusiasts.

The Owner's Manual Packet, to be kept on board your Sea Ray, gives you important information on all the features of your Sea Ray, for years of trouble-free boating take the time to carefully review the information in your Owner's Manual Packet and really get to know your boat. **Have everyone who will operate your boat read this manual.**

The Owner's Manual Packet contains the following:

- **Owner's Manual :** The Owner's Manual gives you important operating and safety information, as well as reminding you about your responsibilities as a boat owner/operator.
- **Original Equipment Manufacturer (OEM) Information:** This section of your Owner's Manual Packet contains information from the manufacturers of equipment installed on your boat. Examples include the engine, engine control and steering system. Throughout the Owner's Manual you will be referred to information provided by manufacturers of specific systems.

Because your purchase represents a substantial investment, we know you will want to take the necessary measures to protect its value. We have outlined a program for proper operation, periodic maintenance and safety inspections. We urge you to follow these recommendations. If you have questions which are not fully covered by the Owner's Manual Packet, please consult your authorized dealer for assistance.

Thank You For Selecting A Sea Ray®!

Bon Voyage

Sea Ray 





INTRODUCTION

1. THIS MANUAL

The material here and in the rest of the Owner's Manual Packet:

- Gives you basic safety information;
- Describes the features of your boat;
- Describes the equipment on your boat;
- Describes the fundamentals of boat use; and
- Contains service and maintenance information.

You must learn to operate this boat as well as read, understand and use this manual.

What this manual does not give you is a course in boating safety, or how to navigate, anchor or dock you boat. Operating a power boat safely requires more skills, knowledge and awareness than is necessary for a car or truck.

2. YOUR RESPONSIBILITIES

For your safety, the safety of your passengers, other boaters and people in the water, you must:

- Take a boating safety course;
- Get instruction in the safe and proper handling of your boat;
- Understand and follow the "rules of the road";
- Learn how to navigate.

3. SOURCE OF INFORMATION

In North America, contact one of the following for boating courses:

- U.S. Coast Guard Auxiliary
- U.S. Power Squadron
- Canadian Power and Sail Squadrons
- Red cross
- State Boating Offices

- Yacht Club

Contact your dealer or the Boat/U.S. Foundation at 1-800-336-2628

Outside of North America, contact your boat dealer and/or your governmental boating agency for assistance.

A book that provides a comprehensive background in boating is Chapman - Piloting, Seamanship and small Boat handling, by Elbert S. Maloney, published by Hearst Marine.

4. DEALER RESPONSIBILITIES

In addition to a pre-delivery check and service of the boat, your dealer is to give you:

- A description and demonstration of the safety systems, features, instruments and controls on your boat;
- An orientation in the general operation of your boat;
- An "In Service Form" completed by you and the dealer after your inspection of the boat;
- A review of all warranty information and how to obtain warranty service;
- The complete Owner's Manual Packet.

If you do not receive all of these materials, or have any questions, contact your dealer or call 1-800-SRBOATS.

5. WARRANTIES


Your boat comes with several warranties. Each component and/or system on your boat has its own warranty that will be found with the specific information and manual for that component. These are included with your Owner's Manual Packet. Locate and read the individual warranties; then put them together for easy future reference. The Sea Ray® warranty is on the warranty information card in your packet and is repeated on the next page.



6. HULL IDENTIFICATION NUMBER (HIN)

The “Hull Identification Number” located on the starboard side of the transom, is the most important identifying factor and must be included in all correspondence and orders. Failure to include it creates delays. Also of vital importance are the engine serial numbers and part numbers when writing about or ordering parts for your engine. Refer to the Engine Operator’s Manual for locations of engine serial numbers and record them for future reference.

HULL IDENTIFICATION NUMBER LOCATION
(FIG. IV.1)

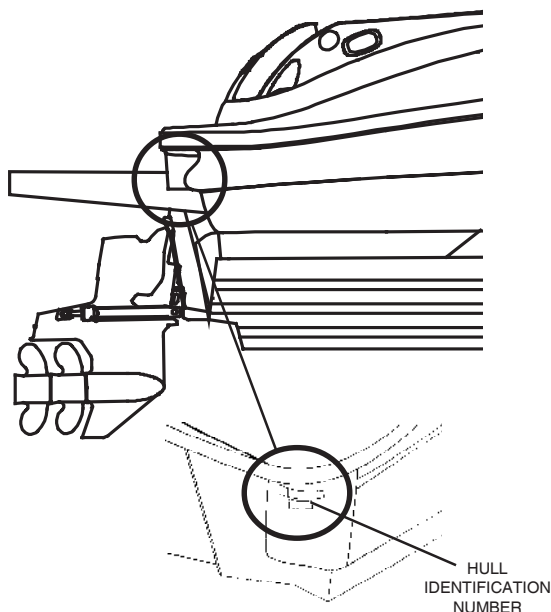

7. MANUFACTURER’S CERTIFICATION

A CE mark means that your Sea Ray® Boat has been certified to meet the applicable International Organization for Standardization directives.

NMMA certification means that your Sea Ray® Boat has been judged by the National Marine Manufacturers Association to be in compliance with applicable federal regulations and American Boat and Yacht Council standards.

Boat Model:	_____
Design Category:	<input type="checkbox"/> Ocean <input type="checkbox"/> Offshore <input type="checkbox"/> Inshore <input type="checkbox"/> Sheltered Waters
Hull Identification Number:	_____
Maximum Recommended Load:	_____
Recommended Number of Passengers:	_____
Maximum Rated Engine Power:	_____
<u>Engine Installed</u>	
Manufacturer:	_____
Model and Number:	_____
<u>Weight of Craft</u>	
W/Engine & Permanently Attached Items:	_____
Without Engine:	_____

The following information is furnished in compliance with ISO directives and RSG guidelines in effect as of the date of publication of this manual. Sea Ray® will provide additional information as standards are amended. The following information, required for export of the vessel, must be filled out by the dealer.

8. SERVICE, PARTS AND REPAIR FOR YOUR BOAT

When your boat needs service, parts or repair, take it to an authorized Sea Ray® dealer. To find a dealer in your area call:

Domestic/International
1-800-SRBOATS
Fax: 1-314-213-7878

To find repair and parts facilities for the equipment installed on your boat, refer to the manual for that component.

If a problem is not handled to your satisfaction:

1. Discuss any warranty-related problems directly with the service manager of the dealership or your sales person. Give the dealer an opportunity to help the service department resolve the matter for you.
2. If a problem arises that has not been resolved to your satisfaction by your dealer, contact Sea Ray® Boats at 1-800-SRBOATS and the appropriate customer service department information will be provided to you.



ABOUT YOUR LIMITED WARRANTY

Sea Ray offers an express limited warranty on each new Sea Ray sport boat purchased through an authorized Sea Ray dealer. A copy of the Sea Ray Sport Boat Limited Warranty ("Limited Warranty") was included in your owner's packet. If for any reason, you did not receive a copy of the limited warranty, please contact your local dealer or call 1-800-SRBOATS for a replacement copy. This is a summary of several provisions of the Limited Warranty. Please read the Limited Warranty, which is the controlling document.

Under the Limited Warranty, Sea Ray covers: (a) structural fiberglass deck or hull defects which occur within five (5) years of the date of delivery; (b) parts found to be defective in factory material or workmanship within one (1) year of the date of delivery; (c) laminate blisters resulting from defects in factory material or workmanship for five (5) years on a pro-rated basis.

On Sport Boats, Sea Ray provides additional warranty coverage to its five-year structural hull/deck coverage with a limited life-time structural hull/deck warranty. This limited lifetime structural coverage provides repairs of any Structural Fiberglass Hull/Deck Defect for as long as the original owner owns the Sport Boat. Sport Boat models and Hull/Deck Defects are defined in the Limited Warranty.

Sea Ray's obligation under its Limited Warranty is limited to repair or replacement of parts that are judged defective by Sea Ray and does not include transportation, haul out, or other expenses. The foregoing is the **sole and exclusive** remedy provided by Sea Ray.

The Limited Warranty does not cover engines, stern drives, controls, propellers, batteries, trailers, or other equipment or accessories carrying their own individual warranties, nor does the Limited Warranty cover engines, parts or

accessories not installed by Sea Ray. The Limited Warranty does not cover cosmetic gel coat finish. Boats used for commercial purpose are excluded from coverage. **See the Limited Warranty for other exclusions.**

SEA RAY EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY. NEITHER SEA RAY NOR THE SELLING DEALER SHALL HAVE ANY RESPONSIBILITY FOR LOSS OF USE OF THE BOAT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR CONSEQUENTIAL DAMAGES.

The unexpired term on the limited one-year parts and components coverage and the limited five-year pro-rated blister coverage of the Limited Warranty may be transferred to a subsequent owner upon the new owner's written request. Coverage for Structural Fiberglass Hull/Deck Defects on Sport Boats may be transferred once to a second owner upon the second owner's request, however upon transfer, this coverage will expire ten (10) years from the date of original purchase by the first retail owner, as reflected in Sea Ray's records.

The new owner can submit a request for warranty transfer, free of charge, via the searay.com website. Alternatively, the new owner can submit a written request to the Sea Ray Division of Brunswick Corporation, 2600 Sea Ray Blvd., Knoxville, TN 37914, accompanied by a \$50 processing fee.

Thank you for your decision to buy a Sea Ray.

The Limited Warranty is subject to change at any time at Sea Ray's discretion. The information contained herein is general information about the Limited Warranty for the owner's general knowledge, and does not alter or amend the terms of the Limited Warranty.



240 SUNDECK® OWNER'S MANUAL • TABLE OF CONTENTS

INTRODUCTION

1. This Manual	iii
2. Your responsibilities	iii
3. Source of Information	iii
4. Dealer Responsibilities	iii
5. Warranties	iii
6. Hull Identification Number (HIN)	iv
7. Manufacturer's Certification	iv
8. Service, Parts and Repair for Your Boat	iv
About Your Limited Warranty	v

SECTION 1 • SAFETY

SAFE Boating Means	1.1
1. Safety Labels	1.1
2. Legally Mandated Minimum Required Equipment	1.2
3. Fire Extinguishing Equipment	1.2
4. Carbon Monoxide	1.2
A. Carbon Monoxide Monitor	1.3
5. Life Saving Equipment	1.3
A. PFD Classifications	1.4
6. Additional Recommended Equipment for	
Safe Operation	1.5
7. Impaired Operation	1.5
8. Load Capacity	1.6
9. Power Capacity	1.6
10. Stability	1.7
11. Maintain Control	1.7
A. General Considerations	1.8
12. Weather	1.8
A. Ocean	1.8
B. Offshore	1.8
C. Inshore	1.8
D. Sheltered Waters	1.8
13. Chart Your Course	1.9
14. Water Sports	1.9
A. Swimming	1.9
B. Skiing	1.10
C. Diving	1.10
15. Emergency Situations	1.11
A. Medical Emergency	1.11
B. Water Rescue	1.11
C. Fire	1.12
D. Flooding, Swamping and Capsizing	1.12
E. Collisions and Leaking	1.12
F. Grounding	1.12
G. Propulsion, Control or Steering Failure	1.13
16. Safety Hotlines	1.13
17. International Requirements	1.13
18. Environmental Considerations	1.13
A. Fuel and Oil Spillage	1.14
B. Waste Disposal	1.14

C. Excessive Noise	1.14
D. Wake / Wash	1.14
19. Nautical Terms	1.15
20. Key to Symbols on Control & Prints	1.16
21. Warning Label Locations	1.17

SECTION 2 • GENERAL BOAT ARRANGEMENT

1. Docking/Lifting/Trailing	2.1
A. Supporting The Boat	2.1
2. Passenger Locations	2.2
3. Propulsion System	2.3
4. Basic Boat Dimensions and Clearances	2.4
5. Deck Layout	2.5
6. Helm, Gauge and Switch Layout	2.6
7. Function and Location of Thru-Hull Cutouts	2.7
8. Description of Major Controls	2.8
A. Gear Shift and Throttle Control	2.8
B. Power Trim Unit and Gauge	2.8
C. Trailer Switch	2.9
D. Transom Trailer Trim Switch (Optional)	2.9
E. Trim Tabs	2.10
F. Ignition Shutdown Switch	2.11
G. Engine Alarm System	2.11
9. Important Gauges	2.11
A. SmartCraft™ Gauge System	2.11
B. Tachometer	2.12
C. Oil Pressure, Water Temperature,	
and Fuel Gauge	2.12
D. Magnetic Compass	2.12
10. Navigation and Anchor Lights	2.13

SECTION 3 • USING YOUR BOAT

1. Pre-Launch, Launch and Post-Launch Checklist ...	3.1
2. Trailer Launching and Loading	3.2
3. Fueling the Boat	3.2
4. Boarding	3.3
5. Personal Flotation Devices (PFDs)	3.4
6. Passenger Instruction and Location	3.4
7. Starting the Engines	3.4
8. Shifting to Drive the Boat	3.6
9. Stopping the Engines	3.6
10. Steering System	3.6
11. Anchoring	3.8
A. Anchoring Arrangement	3.8

SECTION 4 • BILGE & UNDERWATER GEAR

1. Bilge	4.1
A. Fuel & Oil Spillage	4.1
B. Drain Plug	4.1
C. Bilge Pumps	4.1



240 SUNDECK® OWNER'S MANUAL • TABLE OF CONTENTS

D. Bilge Blowers	4.2
E. Engine and Stern Drive	4.3
F. Bilge Layout	4.5

SECTION 5 • FUEL SYSTEM

1. Fuel System	5.1
A. Electric Fuel Valves	5.2
2. Fueling Precautions	5.2
A. General	5.2
B. Before & During Fueling - Checklist	5.2
C. After Fueling - Checklist	5.3

SECTION 6 • ELECTRICAL SYSTEM

1. Electrical System	6.1
A. Direct Current (DC)	6.1
B. Recommended Batteries	6.3
C. Battery Switch	6.3
2. Ignition Protection	6.3
3. Breakers and/or Fuses	6.4
4. Accessory Fuse Block	6.4
5. Fuse Sizes	6.5
6. 12 Volt Accessory Receptacle	6.6
7. Lighting	6.6
8. Electrolytic Corrosion And Zinc Anodes	6.8
9. Marine Electronic Cathodic Anti-Corrosion System (Mercathode®)	6.9
10. Electrical Schematics and Wiring Harnesses	6.9

SECTION 7 • OPTIONS & ACCESSORIES

1. Layout and Accessory Locations	7.1
2. Corsa™ Thru-Hull Exhaust System (Option)	7.1
3. Water System	7.2
A. Sanitizing The Water System	7.2
B. Winterizing The Water System	7.2
C. Water Pump And Filter	7.3
4. Toilet (Head) System	7.5
A. Pump-Out Head	7.5
5. Stereo System	7.5
6. Fire Extinguisher Discharge Port	7.6
7. Automatic Fire Extinguisher System (Option)	7.6
8. Canvas	7.7
A. Installation Tips	7.9
B. Trailering with canvas	7.9
C. Canvas Care and Maintenance	7.9
9. Horn	7.9
10. Docking Lights (Option)	7.9

SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

1. Summary Guide for Inspection, Service and Maintenance	8.1
2. Useful Service Information	8.3
3. Inspection, Service and Maintenance Protocol	8.4
A. Bilge Area	8.4
B. Topside and Supplies	8.5
4. Winterization Checklist for Boats Stored on Land ..	8.5
A. Boat Storage	8.5
B. Engines	8.5
C. Battery(ies)	8.5
D. Head System	8.6
E. Water System	8.6
F. Fuel Systems	8.7
5. Fitting Out After Storage	8.7
A. Fuel System	8.7
B. Battery(ies)	8.7
C. Miscellaneous	8.7
6. Security Considerations	8.8
7. Seacock Lubrication	8.8
8. Power Steering System Maintenance	8.8
9. Engine Oil Change System	8.9
10. Quick Reference Checklist	8.10
A. Boarding The Boat	8.10
B. Preparing To Depart And After Lanuching ...	8.11
C. While Underway	8.12
D. Returning To Port	8.12
E. Securing The Boat	8.13
F. If The Engine Does Not Start	8.13
G. Operating The Generator	8.14
11. After Market Equipment Checklist	8.15
12. Maintenance Log	8.16

SECTION 9 • CARE & REFINISHING

1. Paint, Cleaning Agents and Other Substances	9.1
2. Fiberglass & Gelcoat	9.1
3. Stains & Scratches	9.1
4. Permanently Moored or Docked Boats	9.2
5. Care for Bottom Paint	9.2
6. Topside Areas	9.2
A. Stainless Steel and Alloy Fittings	9.2
B. Salt Crystals	9.2
7. Acrylic Plastic Sheeting (Plastic Glass)	9.3
8. Canvas and Clear Vinyl	9.3
9. Exterior Upholstery Fabric	9.3
10. Interior Upholstery Fabric	9.3



240 SUNDECK® OWNER'S MANUAL • TABLE OF CONTENTS

Information in this publication is based upon the latest product specifications available at printing. Sea Ray® Boats, Inc. reserves the right to make changes at any time, without notice, in the colors, equipment, specifications, materials and prices of all models, or to discontinue models. Should changes in production models be made, Sea Ray® is not obligated to make similar changes or modifications to models sold prior to the date of such changes.

240 Sundeck® Owner's Manual
Printed in the U.S.A June 2004, August 2005
© Sea Ray Boats, Inc. • A Brunswick Company
MRP #1806424

Sea Ray Boats, Inc. 2600 Sea Ray Blvd., Knoxville, TN 37914
For information call 1-800-SRBOATS or fax 1-314-213-7878

Internet Address: <http://www.searay.com>

Note: Not all accessories shown in pictures or described herein are standard equipment or even available as options.
Options and features are subject to change without notice.

The following are registered trademarks of the Brunswick Corporation: Sea Ray® & The SR Wave Logo

Sea Ray 



SECTION 1 • SAFETY

SAFE boating means:

- Knowing the limitations of your boat;
- Following the rules of the road;
- Keeping a sharp lookout for people and objects in the water;
- Not boating in water or weather conditions that are beyond the boat's and the operator's capability;
- Never boating when the operator is under the influence of drugs or alcohol;
- Being aware of your passenger's safety at all times; and
- Reducing speed when there is limited visibility, rough water, nearby people in the water, boats, or structures.

Boating in beautiful weather and calm water conditions can be a wonderful experience. Pleasurable boating, however, requires considerably greater skills than operating a land vehicle. To obtain these skills, you must:

- Take a Coast Guard, U.S. Power Squadron or equivalent boating safety course. **Call the Boat/U.S. Foundation at 1-800-336-2628 for information on available courses.**
- Get hands-on training on how to operate your boat properly.

In addition:

- Maintain your boat and its safety and other systems as recommended in this manual.
- Have the boat inspected by a qualified mechanic or dealer, at least annually.
- Ensure that the Coast Guard required safety equipment is on board and functions. (See page 1.2).

1. Safety Labels

Safety precautions are given throughout this manual and labels are mounted at key locations throughout the boat. This safety information advises the owner/operator and passengers of imperative safety precautions to follow when operating and/or servicing equipment. engine serial numbers and part numbers when writing about or ordering parts for your engine. Refer to the Engine Operator's Manual for locations of engine serial numbers and record them for future reference.

- Figure 1.17.1 - 1.18.1 shows the location of the safety labels on your boat.
- Do not remove or obstruct any safety label.
- Replace any label which becomes illegible. Replacement safety labels can be obtained by calling your dealer or Sea Ray at 1-800-SRBOATS for information on how to contact the manufacturing facility for your boat.

The meaning associated with each of the four basic types of label is:

DANGER

DANGER – Immediate hazards which **WILL** result in severe personal injury or death if the warning is ignored.

WARNING

WARNING – Hazards or unsafe practices which **COULD** result in severe personal injury or death if the warning is ignored.

CAUTION

CAUTION – Hazards or unsafe practices which could result in minor injury or product or property damage if the warning is ignored.

NOTICE

Information which is important to proper operation or maintenance, but is not hazard-related.



SECTION 1 • SAFETY

2. LEGALLY MANDATED MINIMUM REQUIRED EQUIPMENT

Consult your national boating law enforcement agency.

The following equipment is the minimum required by the U.S. Coast Guard for a boat less than 26' [7.9 meters] in length.

Personal Flotation Devices (PFD's): One Coast Guard approved Type I, II or LLL device is mandatory for each person aboard. One throwable Type LV device is also required to be on board. A Type V device is acceptable if worn for approved use. See Page 1.5 for a description of these PFD classifications. **Always wear a PFD when boating.**

Fire Extinguisher - Portable: If no fixed fire extinguishing system is installed in the engine and generator spaces, the U.S. Coast Guard requires **one (1) Type B-1** fire extinguisher be on board. The American Boat and Yacht Council (ABYC) recommends that you have **two (2) Type ABC** fire extinguishers on board. One is to be located at the helm station and the other in the cabin, near the cockpit door.

Whistle, Horn: You must have on board some means of making a loud sound signal, for example, whistle or horn.

Visual Distress Signals: If you operate your boat in coastal waters or on the Great Lakes, you must have visual distress signals for day and night use on board. At least three (3) U.S. Coast Guard approved pyrotechnic devices marked with date showing service life must be carried, be readily accessible, in serviceable condition and not expired. Store pyrotechnic signals in a well-marked waterproof container in a dry location.

Other: Your Sea Ray is equipped with the required navigation lights, engine exhaust and ventilation systems.

3. FIRE EXTINGUISHING SYSTEM

The Automatic Fire Suppression System is an option on your boat. If your boat is equipped with an automatic fire extinguisher system it is located in the engine compartment. In the event of a fire, the heat sensitive automatic head in the engine compartment will release a fire-extinguishing vapor, totally flooding the area.

The dashboard contains an indicator light for the automatic fire extinguishing system. The light will be ON when the ignition is on and indicates that the system is ready. If the light goes out while the ignition is on, the system has discharged.

WHEN DISCHARGE OCCURS, IMMEDIATELY SHUT DOWN ALL ENGINES, POWERED VENTILATION, ELECTRICAL SYSTEMS AND EXTINGUISH ALL SMOKING MATERIALS. DO NOT IMMEDIATELY OPEN THE ENGINE COMPARTMENT!! THIS FEEDS OXYGEN TO THE FIRE AND THE FIRE COULD RESTART.

Wait at least fifteen (15) minutes before opening the engine compartment. This permits the fire-extinguishing vapor to "soak" the compartment long enough for hot metals and fuels to cool. Have portable extinguishers at hand and ready to use in case the fire reignites. Do not breathe fumes or vapors caused by the fire.

4. CARBON MONOXIDE

Symptoms of carbon monoxide poisoning are dizziness, ears ringing, headaches, nausea and unconsciousness. A poisoning victim's skin often

DANGER

Fumes from engine, generators, and other equipment and appliances using burning fuel contain carbon monoxide.

Carbon Monoxide can kill you.

Open all doors, curtains, windows, and hatches to let fresh air circulate, when running engine, generator or burning any fuel when boat is anchored, moored or docked.



SECTION 1 • SAFETY

DANGER

Even in rainy cold weather ventilation must be maintained to avoid Carbon Monoxide poisoning. You will get wet and/or cold.

DANGER

Sleeping on boat requires a operating Carbon Monoxide detection system in each sleeping location.

turns cherry red. Because carbon monoxide gas (CO) is odorless, colorless and tasteless, it is unlikely to be noticed until a person is overcome.

Dangerous concentrations of carbon monoxide will be present if:

- the engine and/or generator exhaust systems leak;
- insufficient fresh air is circulating where people are present; and
- fumes move from the rear of the boat into the cockpit and cabin area.

Figure 1.4.1 gives examples of boat operating conditions that can lead to high concentrations of carbon monoxide gas.

To minimize the danger of CO accumulation when the engine and/or generator are running, or using burning fuel applications.

- Be sure to have sufficient ventilation when using canvas or window-type side curtains when underway, anchored, moored or docked.
- If the convertible top is installed, operate with the forward hatch open and leave cabin door open.
- Operate all burning fuel appliances, such as charcoal, propane, LPG, CNG or alcohol cooking devices in areas where fresh air can circulate. Do not use such devices where there is no noticeable air movement, especially in the cabin, when anchored, moored or docked.

- Do not idle engine without moving boat for more than 15 minutes at a time.
- Inspect the exhaust system regularly. (See Section 8, Required Inspection, Service and Maintenance.

If CO poisoning is suspected, have the victim breath fresh air deeply. If breathing stops, resuscitate. A victim often revives, then relapses because organs are damaged by lack of oxygen. Seek immediate medical attention.

A. CARBON MONOXIDE MONITOR

Your boat has a carbon monoxide (CO) monitor mounted in the sleeping berth . The CO monitor is an electronic instrument that detects CO. When there is a buildup of CO, the monitor will alert the occupants by a flashing DANGER light and alarm. The CO monitor is wired through a breaker on the DC distribution panel.

It is extremely important that you become totally familiar with your CO monitor and its functions.

Read and understand the CO monitor information and operating instructions located in your Owner's Manual Packet.

5. LIFESAVING EQUIPMENT

Even strong swimmers can tire quickly in the water and drown due to exhaustion, hypothermia, or both. The buoyancy provided by a personal flotation device (PFD) will allow the person who has fallen overboard to remain afloat with far less effort and heat loss, extending survival time necessary to find and retrieve them.


Boat operators are required to carry one wearable personal flotation device (Type I,II,III or V) for every person on board. Boats must also have at least one throwable device (Type IV).

The law requires that PFD's must be readily accessible, if not worn. "Readily accessible" means




SECTION 1 • SAFETY

EXAMPLES OF HOW HIGH LEVELS OF CARBON MONOXIDE MAY ACCUMULATE (FIG. 1.4.1)

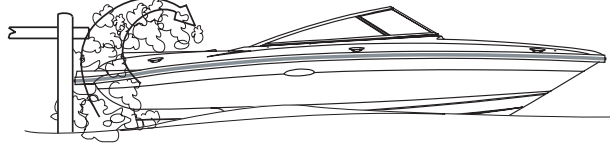


BLOCKING HULL EXHAUSTS. OPERATING AT SLOW SPEED OR DEAD IN THE WATER.

ILLUSTRATION #A

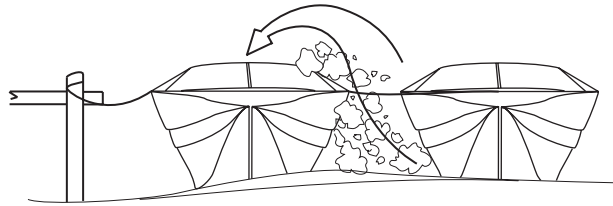


OPERATING ENGINE AND/OR GENERATOR IN CONFINED SPACES.

ILLUSTRATION #D

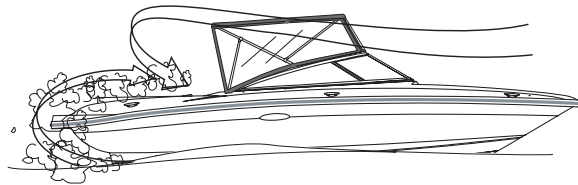


USING CANVAS CURTAINS.

ILLUSTRATION #B

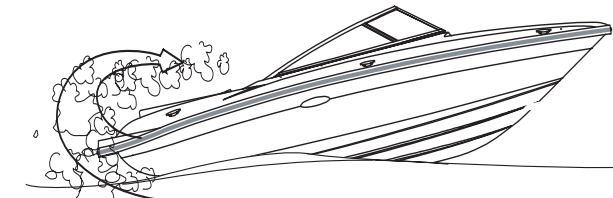


OPERATING WITH THE BOW HIGH.

ILLUSTRATION #E

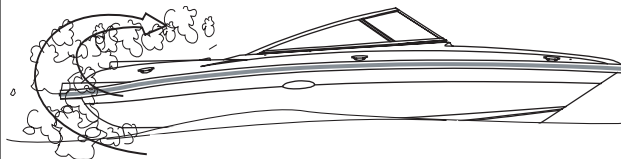

WINDS BLOWING EXHAUST TOWARD BOAT OCCUPANTS.

ILLUSTRATION #C

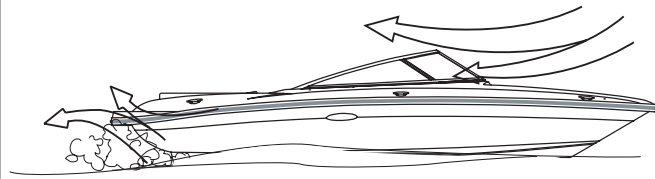

GOOD VENTILATION.

ILLUSTRATION #F

removed from storage bags and unbuckled. But, children and nonswimmers must wear PFDs at all times when aboard. It is common sense to have everyone on board wearing PFDs. A throwable device must also be right at hand and ready to toss.


A. PFD CLASSIFICATIONS

(FIG. 1.4.2)



Off-Shore Life Jacket (Type I) – most buoyant, it is designed to turn an unconscious person face up; used in all types of waters where rescue may be slow, particularly in cold or rough conditions.

(FIG. 1.4.3)

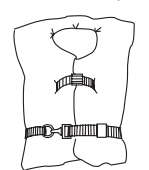


Near-Shore Life Vest (Type II) – “keyhole” vest with flotation-filled head and neck support is also designed to turn a person face up, but the turning action is not as pronounced; used in calm, inland waters or where quick rescue is likely.

(FIG. 1.4.4)



Flotation Aid (Type III) – vest is designed so conscious wearers can turn face up; often designed for comfort while engaged in sports such as skiing.

(FIG. 1.4.5)

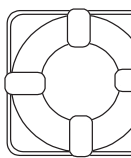

Throwable Devices (Type IV) – horseshoe buoys, ring buoys and buoyant cushions are designed to be grasped, not worn.

(FIG. 1.4.6)



Special-Use Devices (Type V) – sailboat harnesses, white-water vests, float coats, and hybrid vests which have minimum inherent buoyancy and an inflatable chamber.

SECTION 1 • SAFETY

Before purchasing PFDs, ensure that there is an attached tag indicating they are approved by the U.S. Coast Guard or by your national boating law enforcement agency.

Children and nonswimmers must wear PFDs at all times when aboard. All passengers and crew should wear them. A loose PFD is often useless in an emergency.

The operator is responsible for instructing everyone aboard on the location and use of PFDs.

Size PFDs for the wearer. Children require special attention in the use of PFDs.

Test PFD buoyancy at least once a year.

6. ADDITIONAL RECOMMENDED EQUIPMENT FOR SAFE OPERATION

In addition to legally mandated equipment, the following items are necessary for safe boating, especially if your boat is out of sight of land.

- First aid kit
- Visual distress signals for day and night use (required in some areas; consult local regulations)
- Charts of your intended cruising area
- Compass
- GPS or Loran position locating devices
- Marine VHF radio with weather channels
- Emergency position-indicating radio beacon (EPIRB)
- Manual bilge pump
- Moisture repellent
- Anchors, chain and line (The anchors must be properly sized for your boat. Ask your dealer or marine supply store for recommendations).
- Mooring lines
- Fenders
- Boat hook

- Waterproof flashlight(s)
- Extra batteries for flashlights and portable electronic devices
- High power spotlight, if you intend to boat at night
- Spare keys
- Instruction manuals for engine and accessories
- Lubricating oil
- Tool kit:
 - Assorted screwdrivers (Phillips and flat blade)
 - Pliers (regular, vise-grip, and tongue & groove)
 - Wrenches (box, open-end, allen, adjustable)
 - Socket set (metric or U.S. Standard as appropriate)
 - Electrical tape and duct tape
 - Hammer
 - Utility Knife
- Spare parts kit (spark plugs, fuses, hose clamps and ask your dealer to recommend other parts)
- Extra propeller

7. IMPAIRED OPERATION

Drugs and/or alcohol will prevent you from operating your boat safely. This single factor is involved in more marine accidents and deaths than any other. The detrimental effects of alcohol and drugs are increased by the wind, waves and sun, quickly impairing your ability to react properly and promptly in an emergency.

WARNING

Drugs and/or alcohol impair the operator's ability to control the boat safely.

Death or serious injury can result from improper boat operation.




SECTION 1 • SAFETY

8. LOAD CAPACITY

The certification plate (See fig. 1.6.1) located near the helm indicates maximum weight and number of persons your boat can handle under calm sea conditions. **Do not exceed the load capacities stated.** The number of people on board must be reduced if you go out in poor weather and rough water.

The information present on the certification plate does not relieve the operator from responsibility. Use common sense and sound judgement when placing equipment and/or passengers in your boat.

- Do not load to capacity in poor weather or rough water.
- The number of seats does not indicate how many people a boat can carry in poor weather and rough water.
- Above idle speed, all passengers must be seated on the seats provided.

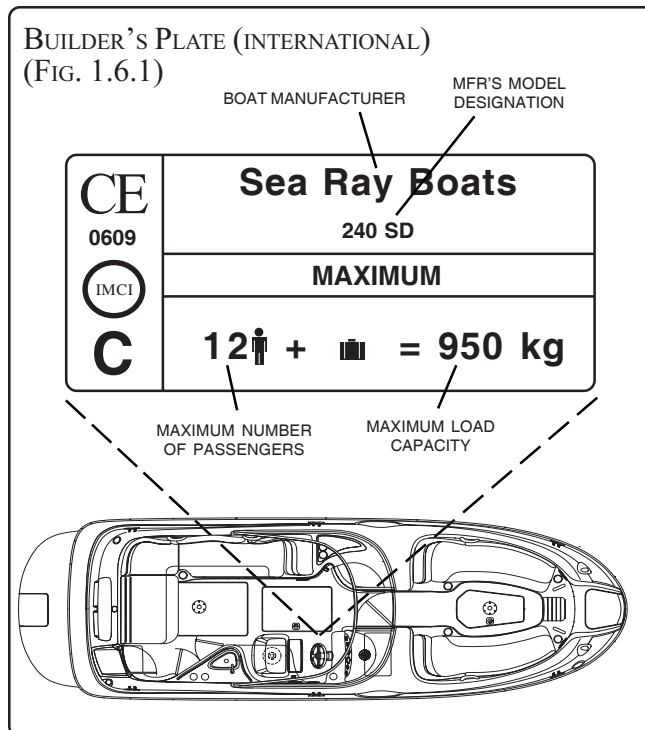

! WARNING

When engine is running, keep passengers away from areas not designed for riding, such as seat backs, bow, gunwales, transom platform, swim platform, front and rear decks and on sun pads.

Passengers can fall overboard if not seated properly on the seats provided.

! DANGER

Never carry more weight or passengers than indicated on the certification plate, regardless of weather or water conditions.

The boat can capsize, swamp or sink.

BUILDER'S PLATE (DOMESTIC) (FIG. 1.6.2)

MAXIMUM CAPACITIES	
12 PERSONS OR 2000 LBS. 2100 POUNDS, PERSONS, GEAR	
THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION MANUFACTURER: SEA RAY BOATS, INC. VONORE, TN	
MODEL: 240SD	
DESIGN COMPLIANCE WITH NMMA REQUIREMENTS BELOW IS VERIFIED. MFR. RESPONSIBLE FOR PRODUCTION CONTROL	
LOAD AND CAPACITY • COMPARTMENT VENTILATION STEERING, FUEL AND ELECTRICAL SYSTEMS INTERNATIONAL LIGHTS • BASIC FLOATATION MANEUVERABILITY	
NATIONAL MARINE MANUFACTURERS ASSN.	

9. POWER CAPACITY

Do not exceed the maximum engine power rating stated on the certification plate. Your boat will be difficult to handle and will be less stable.

Your Sea Ray® has been equipped with a propeller which our tests have shown to be the best suited for general use with our engine under normal conditions and load. Do not change the pitch of your propeller without getting your dealer's recommendations first. If you change to a different propeller pitch, **under no circumstances use a propeller which allows the engine to operate at**



SECTION 1 • SAFETY

higher than recommended RPM. (your engine manual specifies the maximum recommended (RPM)).

To maintain rated power, propellers should be free of nicks, excessive pitting and any distortions that alter them from their original design. Badly damaged propellers should be replaced, but those that are chipped, bent or merely out of shape can be reconditioned by your marine dealer.

It is advisable to carry an extra propeller aboard in case you damage the one in use.

10. STABILITY

Your boat was manufactured to specific stability and flotation standards for the capacity shown on the certification plate. Any increase from the recommended load capacities will put your boat in jeopardy of capsizing, swamping and/or sinking.

IN ADDITION:

- Stability may be substantially reduced if equipment is added above the deck.
- Stability is substantially reduced by loose fluids or weight within the hull. Keep bilge area as dry as possible, and close all openings, hatches and windows in rough weather.

WARNING

Distribute passengers and gear as uniformly as possible from front to rear and left to right.

The manufacturer's load rating is the maximum allowed under calm conditions.

Reduce boat loading if weather, water or other conditions are adverse.

11. MAINTAIN CONTROL

On the water there are no marked traffic lanes, no traffic signs or lights, and boats have no turn signals. The boat operator must keep her or his attention focused not only on what's ahead but what's on the left, right and behind the boat.

The operator must always be alert to approaching boats (from the rear, right and left sides, as well as those ahead). There can be people in the water, partially submerged debris, and other navigational hazards such as rocks, sand bars, dangerous currents, to name a few.

Your passengers are relying on you to operate and maneuver the boat safely so that they are not in danger of going overboard. If you turn too quickly, increase or decrease speed abruptly, your passengers are at risk of being thrown overboard or thrown about the boat.

When visibility becomes impaired because of weather, time of day or high bow angle you must slow down so that you have sufficient time to react if an emergency occurs. Nearby boats face similar risks in avoiding a collision with you.

WARNING

Death or serious injury can result if you fail to observe these safety rules:

- **Anyone who controls the boat must have taken a boating safety course and have trained in the proper operation of the boat.**
- **Always operate the boat at speeds that will not put people or property in danger.**
- **Be constantly aware of conditions in all directions when underway and before turning.**
- **Reduce speed, use a lookout to identify possible hazards or difficulties, and turn on navigation lights when:**
 - visibility is impaired;
 - in rough water; and
 - in congested waterways.
- **Watch your wake. It can capsize a small boat or damage moored boats or other property. You are responsible for damage caused by your wake.**



SECTION 1 • SAFETY

A. GENERAL CONSIDERATIONS

- Know how your boat handles under different conditions. Recognize your limitations and the boat's limitations. Modify speed in keeping with weather, sea and traffic conditions.
- Instruct passengers on location and use of safety equipment and procedures.
- Instruct passengers on the fundamentals of operating your boat in case you are unable to do so.
- You are responsible for passenger's actions. If they place themselves or the boat in danger, immediately correct them.

Observe the safety rules listed below.

12. WEATHER

There are four design categories of boats based upon their ability to withstand wind and sea or water conditions:

A. Ocean

Wind speed: above 40 knots (46 mph)
Wave height: above 4 meters (13 feet)
Boat may be used for extended ocean voyages.

B. Offshore

Maximum wind speed: 40 knots (46 mph)
Maximum wave height: 4 meters (13 feet)
Boat can be used offshore, but not for extended ocean voyages.

C. Inshore

Maximum wind speed: 27 knots (31 mph)
Maximum wave height: 2 meters (6.5 feet)
Boat use is limited to coastal waters, large bays, estuaries, lakes and rivers.

D. Sheltered waters

Maximum wind speed: 15 knots (18 mph)
Maximum wave height: 0.5 meters (1.5 feet)
Boat use is limited to small lakes, rivers and canals.

Your 240 Sundeck® is Design Category C.

The wind speed and wave height specified as the upper limit for your category of boat does **not** mean that you or your passengers can survive if your boat is exposed to these conditions. It is only the most experienced operators and crew that may be able to operate a boat safely under these conditions. You must always be aware of weather conditions and head for port or protected waters in sufficient time to avoid being caught in high winds and rough water. **Do not take chances!**

DANGER

DO NOT ATTEMPT TO BOAT IN
SEVERE WEATHER CONDITIONS

DEATH OR SERIOUS INJURY CAN OCCUR

GET TO SHORE BEFORE
THE WEATHER TURNS BAD

Getting caught in severe weather is hazardous. Bad weather and/or rough sea or water conditions can cause an unsafe situation. Consult local weather information, or listen to the NOAA weather reports for the latest weather conditions or any impending deterioration of the weather before setting out and while underway. Following are a few basic weather-related rules:

- Check the weather forecast and the water conditions before leaving and while underway.
- A sudden change in wind direction or speed or an increase in wave height indicates deteriorating weather.
- Have everyone wear a personal flotation device.
- If a storm approaches, immediately seek a safe harbor.
- If a storm hits, have everyone sit in the cabin or on the cockpit deck in the boat. Head the bow into the wind with enough power to maintain slow headway.
- If you encounter fog, determine your position,



SECTION 1 • SAFETY

set a safe course, slow down and alert other boats of your presence with a sound signal.

- If a lightning storm approaches, the safest action is to dock and disembark. If you cannot return to shore, have passengers go **inside** the cabin and remain there until the storm passes.
- Lightning seeks a ground when it strikes. The best protection is a properly grounded lightning rod placed high enough over the deck to provide a protective umbrella over the hull. Depending upon the likelihood of your being in a lightning storm, consult your dealer for installation of a lightning rod. Stay clear of the lightning rod, all attached wiring and all metal parts of the boat.
- Stay out of the water during a lightning storm. If caught swimming during a storm, get back into the boat and remain there until the storm passes.

13. CHART YOUR COURSE

WARNING

Hitting an object in or under the water or boating in dangerous currents can cause serious injury or death to boat occupants.

You must know where the hazards are and avoid them.

In uncharted waters, boat very slowly and post a lookout.

To avoid boating in unsafe areas where there are underwater obstructions, shallow water, unnavigable conditions such as dangerous currents, and others, **you must chart a course**. This means having and using the National Oceanic and Atmospheric Administration (NOAA) charts for coastal waters, observing and understanding all navigational aids, using the knowledge and guidance of experienced boaters, and being aware of the tide times where appropriate.

If you are in an unfamiliar area without knowledge of the hazards, proceed very slowly and have someone watch for hazards.

WARNING

Shut engine off if an object is struck or if you run aground.

Check for hull leaks and drive line damage, before restarting engines.

Use hand pump if bilge pumps don't remove water.

Boat very slowly, if you must proceed with a damaged drive line.

Let others know where you are going. A float plan describes your intended cruising course and itinerary, boat description, and your expected time and date of return. Give the float plan to a friend or relative, so they can give the information to a national boat agency, like the U.S. Coast Guard, in the event you fail to return.

14. WATER SPORTS

WARNING

Your boat can kill or injure persons in the water.

Always stay away from areas designated for swimming or diving. Unless you are towing a skier, stay away from water ski areas. Recognize markers used for such areas.

When engine is running, close and lock transom door and do not permit anyone to use boarding ladder and swim platform.

A. SWIMMING

- Do not permit anyone to swim from a moving boat, or a boat with an engine running.
- Many localities prohibit swimming from boats except in designated areas.
- Make sure boat's engines are turned off before allowing people to swim anywhere near your boat. Shut the engine OFF and remove the key from the ignition switch so that nobody will accidentally start the engine while swimmers are nearby.
- Turn off engines when taking swimmers or skiers aboard or when they are entering the



SECTION 1 • SAFETY

water. Never permit use of the transom or swim platform while engines are running.

- Slow down and look for swimmers or skiers when cruising in an area where there might be persons in the water.

B. SKIING

WARNING

Skiers must wear an approved PFD.

It is advised that you become familiar with water skiing safety and hand signals as you will most likely, on occasion, find yourself in the vicinity of or engaging in water skiing activity.

- Anyone who water skis must know how to swim.
- Never drive the boat directly behind a water skier. At 22 knots (25 m.p.h.), it takes only 5 seconds to overtake a fallen skier who was 60 meters (200 feet) in front.
- Keep a downed skier in sight and on the operator's side of the boat when approaching the skier. Never back up to anyone in the water.
- Learn the signals to communicate with a skier. The skier is to control the boat through hand signals (Fig. 1.10.1).

Turn – Arm raised, circle with index finger extended.

Skier in Water – Extend one ski vertically out of water.

Back to Dock – Pat top of head.


Cut Motor – Draw finger across throat.

Slow Down – Thumb pointed down or palm down, move hand up and down.

Faster – Thumb pointed up or palm up, move hand up and down.

OK – Raise arm and form a circle with thumb and index finger.

SKIING SIGNALS
(FIG. 1.10.1)

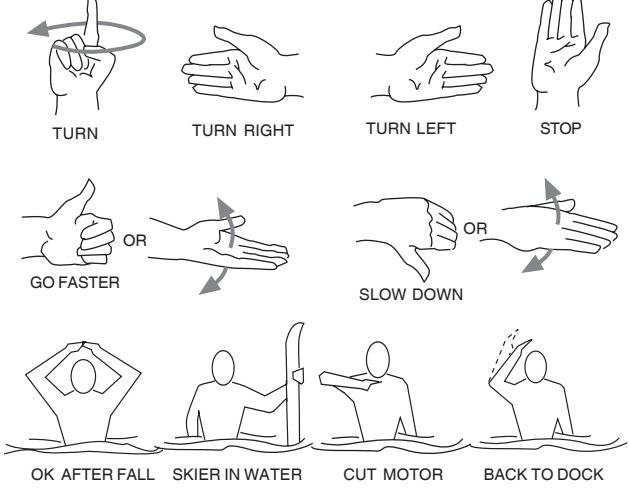

Stop – Raise arm with palm vertical and facing forward.

Turn Right – Extend arm out from body to the right.

Turn Left – Extend arm out from body to the left.

OK After a Fall – Clasp hands together overhead.

- If the skier suddenly releases the tow rope, it can backlash into cockpit. Spotters who are watching the skier must be aware of this fact and be prepared to deflect the rope by hand to avoid injury.

C. DIVING


- Recognize and respect diving flags (Fig. 1.10.2). Keep at least 30 meters (100 feet) away.

Sport Divers Flag – Red flag with diagonal white stripe marks a diver in the water.

Code Alpha Flag – Blue and white pennant designates boat being used in dive operations.

SECTION 1 • SAFETY

DIVERS FLAGS
(FIG. 1.10.2)

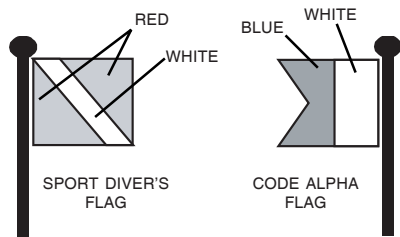

IN GENERAL

When engaged in water sports, be safe and courteous to others sharing the water:

- Be considerate to fishermen.
- Do not water ski in congested areas.
- Keep the boat and skier away from navigation markers.
- Stay well clear of other boats and skiers.

15. EMERGENCY SITUATIONS

Prevention is the safest approach. We hope that you are never involved in an emergency situation.

ASSISTING OTHER BOATERS

All boaters have a legal obligation to help other boaters who are in distress, as long as rendering assistance does not endanger you, your passengers or your boat.

If you are involved in an emergency situation, it is imperative that you know how to react, in order to protect the lives in your care.

A. MEDICAL EMERGENCY

You may be far from professional medical help when you are boating. At least two people on board your boat should be CPR certified, and should have taken a first aid course. Equip your boat with a first aid kit.

B. WATER RESCUE

A person who has fallen overboard will die from hypothermia in water temperatures below 70°F if not rescued quickly. Water rescue consists of three steps: returning to the victim, making contact with the victim, and getting the victim back on board.

RETURNING TO THE VICTIM

- Immediately make everyone aware of the incident and keep the victim in sight.
- Slow the boat and keep pointing toward the person overboard. At night, direct the best available light source at the person.
- Throw a life preserver, even if the person is wearing a PFD. It will serve as another marker.

MAKING CONTACT

- Stop or slow the boat and circle toward the victim.
- Try to approach heading into the wind or into the waves.
- Keep the victim constantly in sight.
- When almost alongside, stop the engine in gear to prevent propeller “windmilling.”

GETTING BACK ABOARD

- Try to reach the victim with a pole, or by throwing a life preserver. Do not swim to rescue the victim, except as a last resort.
- Assist the person in boarding the boat. The person should normally be brought in over the stern.
- If the person is injured or cannot get into the boat, a rescuer should put on a PFD with a safety line attached to the boat and enter the water to assist the victim.
- Handle the victim with care. Spinal injuries may have occurred.



SECTION 1 • SAFETY

C. FIRE

Fire is a serious boating hazard. Boats will burn quickly. Do not remain on board and fight a fire for more than a few minutes. If the fire cannot be extinguished within a few minutes, abandon the boat.

Have fire extinguishers handy. A small fire can be extinguished quickly with the right size and type of fire extinguisher.

- Extinguish smoking materials, shut off blowers, stoves, engines and generators.
- Throw burning materials overboard, if possible.
- If the fire is accessible, empty the contents of fire extinguishers at the base of the fire.
- If the fire is in the engine compartment and you have an automatic extinguisher for the engine, wait 15 minutes before opening the compartment. Have a portable extinguisher ready in case the fire flares up.
- Signal for help.
- Grab distress signals and survival gear. Put on PFDs. Prepare to abandon ship.

D. FLOODING, SWAMPING AND CAPSIZING

In the event of flooding, swamping or capsizing:

- Try to shut off engines, generators and blowers, before leaving the boat.
- Have everyone put on Personal Flotation Devices (PFD's).
- Account for all who were on board.
- If the boat is floating stay with the boat. Hang on, or climb on the boat and signal for help.
- Only as a last resort should you attempt to swim to shore - it is further away than it looks and you can tire and drown.

E. COLLISIONS AND LEAKING

In the event of collision and leaking:

- Slow down or stop to reduce water intake, unless maintaining speed will keep the hole above water.
- Switch on bilge pumps.
- If equipped, operate the manual bilge pump if the powered bilge pumps can't handle the water flow.
- Account for everyone on board and check for injuries.
- Have everyone put on PFDs.
- Stay with the boat.
- Signal for help.
- If a leak patch is attempted, it should be done from the outside.
- In the event of a collision, you are required to file an accident report. Contact a state enforcement agency or the nearest Coast Guard office. If you are boating outside of U.S. waters, consult the nation you are visiting for accident reporting requirements.

F. GROUNDING

In the event of running aground:

- Check for leaks. If water is coming in, stop the intake of water before attempting to get the boat free.
- Inspect for damage to the hull, propulsion and steering systems.
- Determine if the tide, wind and current will drive the boat harder aground or will help to free it.
- Determine the water depth all around the boat, and the type of bottom (sand, mud, rocks, etc.). If it can be done without exposing persons to risk of injury, the boat should be moved away from hard obstructions and toward open water with soft ground.



SECTION 1 • SAFETY

- Do not attempt to have your boat towed by other than a trained and competent service, such as the Coast Guard or a salvage company. Recreational craft are not designed to tow other recreational craft.

G. PROPULSION, CONTROL OR STEERING FAILURE

If the drive train fails, or controls or steering do not respond properly at all:

- Shut off engine.
- Put out the anchor to prevent drifting.
- Determine whether or not you can repair the problem yourself. See the proper manuals for assistance in troubleshooting the engine, steering and engine controls.
- If you are not sure you can fix the problem, or if conditions are adverse, signal for help.

16. SAFETY HOTLINES

The safety information in the preceeding pages gives only the general areas of concern for boating safety. It is not intended to be, nor can it be, exhaustive. You must take a boating safety course, and get hands-on instruction in the proper and safe operation of your boat from experienced persons before cruising.

The U.S Coast Guard offers many pamphlets on safety and other information not covered in this book. Contact your local Coast Guard unit or call the toll-free safety hotlines below for information.

- U.S. Coast Guard 1-800-368-5647
- Canadian Coast Guard 1-800-267-6687

In other countries, ask your marine dealer for information on how to contact the national boating law enforcement agency.

17. INTERNATIONAL REQUIREMENTS

This vessel and its systems have been constructed in accordance with standards and specifications in effect at the time of manufacture as published by the various regulatory authorities listed below.

1. Ministere De La Mer - France
2. Registro Italiano Navale - Italy
3. Det Norske Veritas - Norway
4. Securite des Nauires - Canada
5. J.C.I. (Japan Craft Inspection) - Japan
6. N.K.K. (Nippon Kaiji Kyokai) - Japan
7. B.S.I. (British Standards Institute) - England
8. Ministerio Obras Publicas Y Transporters - Spain
9. EC Recreational Craft Directive - European Community.

Further information concerning these requirements may be obtained from Sea Ray® Customer Service: 1-800-SRBOATS.

18. ENVIRONMENTAL CONSIDERATIONS

The following warning is offered for boats sold in the State of California in accordance with California Health & Safety Code §§ 25249.5-.13:

WARNING

A wide variety of components used on this vessel contain or emit chemicals known to the State of California to cause cancer and birth defects and other reproductive harm.

EXAMPLES INCLUDE:

- Engine and generator exhaust
- Engine and generator fuel, and other liquids such as coolants and oil, especially used motor oil
- Cooking fuels
- Cleaners, paints, and substances used for vessel repair
- Waste materials that result from wear of vessel components
- Lead from battery terminals and from other sources such as ballast or fishing sinkers

TO AVOID HARM:

- Keep away from engine, generator, and cooking fuel exhaust fumes.



SECTION 1 • SAFETY

A. FUEL AND OIL SPILLAGE

Regulations prohibit discharging fuel or oily waste in navigable waters. Discharge is defined as any action which causes a film, sheen or discoloration on the water surface, or causes a sludge or emulsion beneath the water surface. A common violation is bilge discharge. Use rags or sponges to soak up fuel or oily waste, then dispose of it properly ashore. If there is much fuel or oil in the bilge, contact a knowledgeable marine service to remove it. Never pump contaminated bilge overboard. Help protect your waters.

Fill tank(s) less than rated capacity. Allow for fuel expansion.

B. WASTE DISPOSAL

- Many areas prohibit overboard sewer discharge. Close and disable flow-through waste systems to prevent discharge in such areas.
- Bag all refuse until it can be disposed of ashore. Regulations prohibit disposal of plastic anywhere in the marine environment and restrict other garbage disposal within specified distances from shore.

NOTICE

- There is a possibility of being fined for having an operable direct overboard discharge of waste in some waters. Removing seacock handle, in closed position, or other means must be used to avoid fine.
- It is illegal for any vessel to dump plastic trash anywhere in the ocean or navigable waters of the United States.

CAUTION

FOR BOATS WITH VACUFLUSH® HEADS ONLY

Do not place facial tissues, paper towels or sanitary napkins in head. Such material can damage the waste disposal system and the environment.

C. EXCESSIVE NOISE

Many areas regulate noise limits. Even if there are no laws, courtesy demands that boats operate quietly.

D. WAKE / WASH

WARNING

SPEED HAZARD - Watch your wake. It might capsize a small craft. You are responsible for damage caused by your wake.

Power boat wakes can endanger people and vessels. Each power boat operator is responsible for injury or damage caused by the boat's wake. Be especially careful in confined areas such as channels or marinas. Observe "no wake" warnings.

CAUTION

**Reduce speed in congested waterway.
Be alert for No Wake markers.**



SECTION 1 • SAFETY

19. NAUTICAL TERMS

Abeam – object 90 degrees to center line on either side of boat.

Abaft – a point on a boat that is aft of another.

Aft – toward the rear or stern of the boat.

Beam – the width of a boat.

Bow – the fore part of a boat..

Bow Eye – Bolt with looped head mounted on extreme forward part of bow.

Bulkhead – vertical partition in a boat.

Chine – meeting juncture of side and bottom of boat.

Chock – deck fitting, used as guides for mooring or anchor lines. Also, a wedge to stop wheels from rolling.

Cleat – deck fitting with arms or horns on which lines may be made fast.

Cockpit – an open space from which a boat is operated.

Deck – upper structure which covers the hull between gunwales.

Draft – depth of water required to float boat and its propulsion system.

Fathom – six feet.

Fenders – rope or plastic pieces hung over the side to protect the hull from chafing.

Freeboard – height of exposed hull from water line to deck.

Ground tackle – general term referring to anchors, anchor lines, etc.

Gunwale (pronounced gun'l) – meeting juncture of hull and deck.

Hatch – an opening in deck to provide access below.

Head – toilet or toilet area in a boat.

Headroom – vertical distance between the deck and cabin or canopy top.

Helm – steering console.

Hull – the basic part of a boat that provides buoyancy to float the weight of the craft and its load.

Keel – the major longitudinal member of a hull; the lowest external portion of a boat.

Knot – unit of speed in nautical miles per hour.

Lee – the side that is sheltered from the wind.

PFD – Personal Flotation Device; life preserver.

Port – term designating left side of the boat.

Rudder – Movable fixture at the stern used for steering.

Scupper – hole permitting water to drain overboard from deck or cockpit.

Sheer – curve or sweep of the deck as viewed from the side.

Snub – to check or tighten a line suddenly.

Starboard – term designating right side of the boat

Stern – the aft end of a boat.

Stern drive – outboard unit of an inboard/outboard (I/O) engine installation.

Stringer – longitudinal members fastened inside the hull for additional structural strength.

Transom – transverse part of stern.

Wake – disturbed water that a boat leaves behind as a result of forward motion.

Windward – toward the direction from which the wind is blowing.



SECTION 1 • SAFETY

20. KEY TO SYMBOLS ON CONTROLS & PRINTS

These symbols may be found on your controls and gauges and/or used in this owner's manual. This page is to help you understand what the symbols mean.

0. KEY TO SYMBOLS ON CONTROLS & PRINTS


These symbols may be found on your controls and gauges and/or used in this owner's manual. This page to help you understand what the symbols mean.


				 <p>LIFT POINT OR PROPER LOCATION OF SLING</p>	 <p>LIFT POINT</p>
 <p>ENGINE</p>	 <p>ENGINE START</p>	 <p>ENGINE STOP</p>	 <p>EMERGENCY START SWITCH (TWIN ENGINE ONLY)</p>	 <p>ENGINE EXHAUST CONTROL</p>	 <p>ENGINE ROTATIONAL SPEED</p>
 <p>ENGINE COOLANT</p>	 <p>ENGINE (COOLANT) WATER JACKET TEMPERATURE</p>	 <p>ENGINE OIL PRESSURE</p>	 <p>FUEL, GENERAL</p>	 <p>DIESEL FUEL</p>	 <p>FUEL LEVEL</p>
 <p>FUEL FILTER</p>	 <p>LEADED FUEL</p>	 <p>UNLEADED FUEL</p>	 <p>BILGE BLOWER</p>	 <p>BILGE PUMP</p>	 <p>OIL</p>
 <p>ELAPSED TIME</p>	 <p>INTERIOR LIGHT</p>	 <p>RUNNING LIGHTS UNDER POWER</p>	 <p>ANCHOR LIGHT</p>	 <p>FRESH WATER BASED COOLANT</p>	 <p>WASTE WATER/SEWAGE</p>
 <p>WINDSHIELD WIPER</p>	 <p>WINDSHIELD WIPER</p>	 <p>WINDSHIELD WIPER AND WASHER</p>	 <p>COMPASS</p>	 <p>ANCHOR</p>	 <p>HORN</p>
 <p>PROPULSION SYSTEM TRIM</p>	 <p>PROPULSION SYSTEM TRIM BOW UP</p>	 <p>PROPULSION SYSTEM TRIM BOW DOWN</p>	 <p>TRIM TAB TRIMMING OPERATION</p>	 <p>SINGLE LEVER CONTROL (THROTTLE & SHIFT)</p>	 <p>CONTROL LEVER OPERAT- ING DIRECTION</p>
 <p>ROTARY CONTROL (QUANTITY INCREASES WITH WIDTH OF SYMBOL)</p>	 <p>BATTERY</p>	 <p>WARNING ELECTRICAL HAZARD</p>	 <p>FIRE RISK</p>	 <p>NO OPEN FLAME NO SMOKING</p>	 <p>PROPELLER</p>



21. 240 Sundeck® Warning Label Locations

WARNING LABEL LOCATIONS
(FIG. 1.17.1)

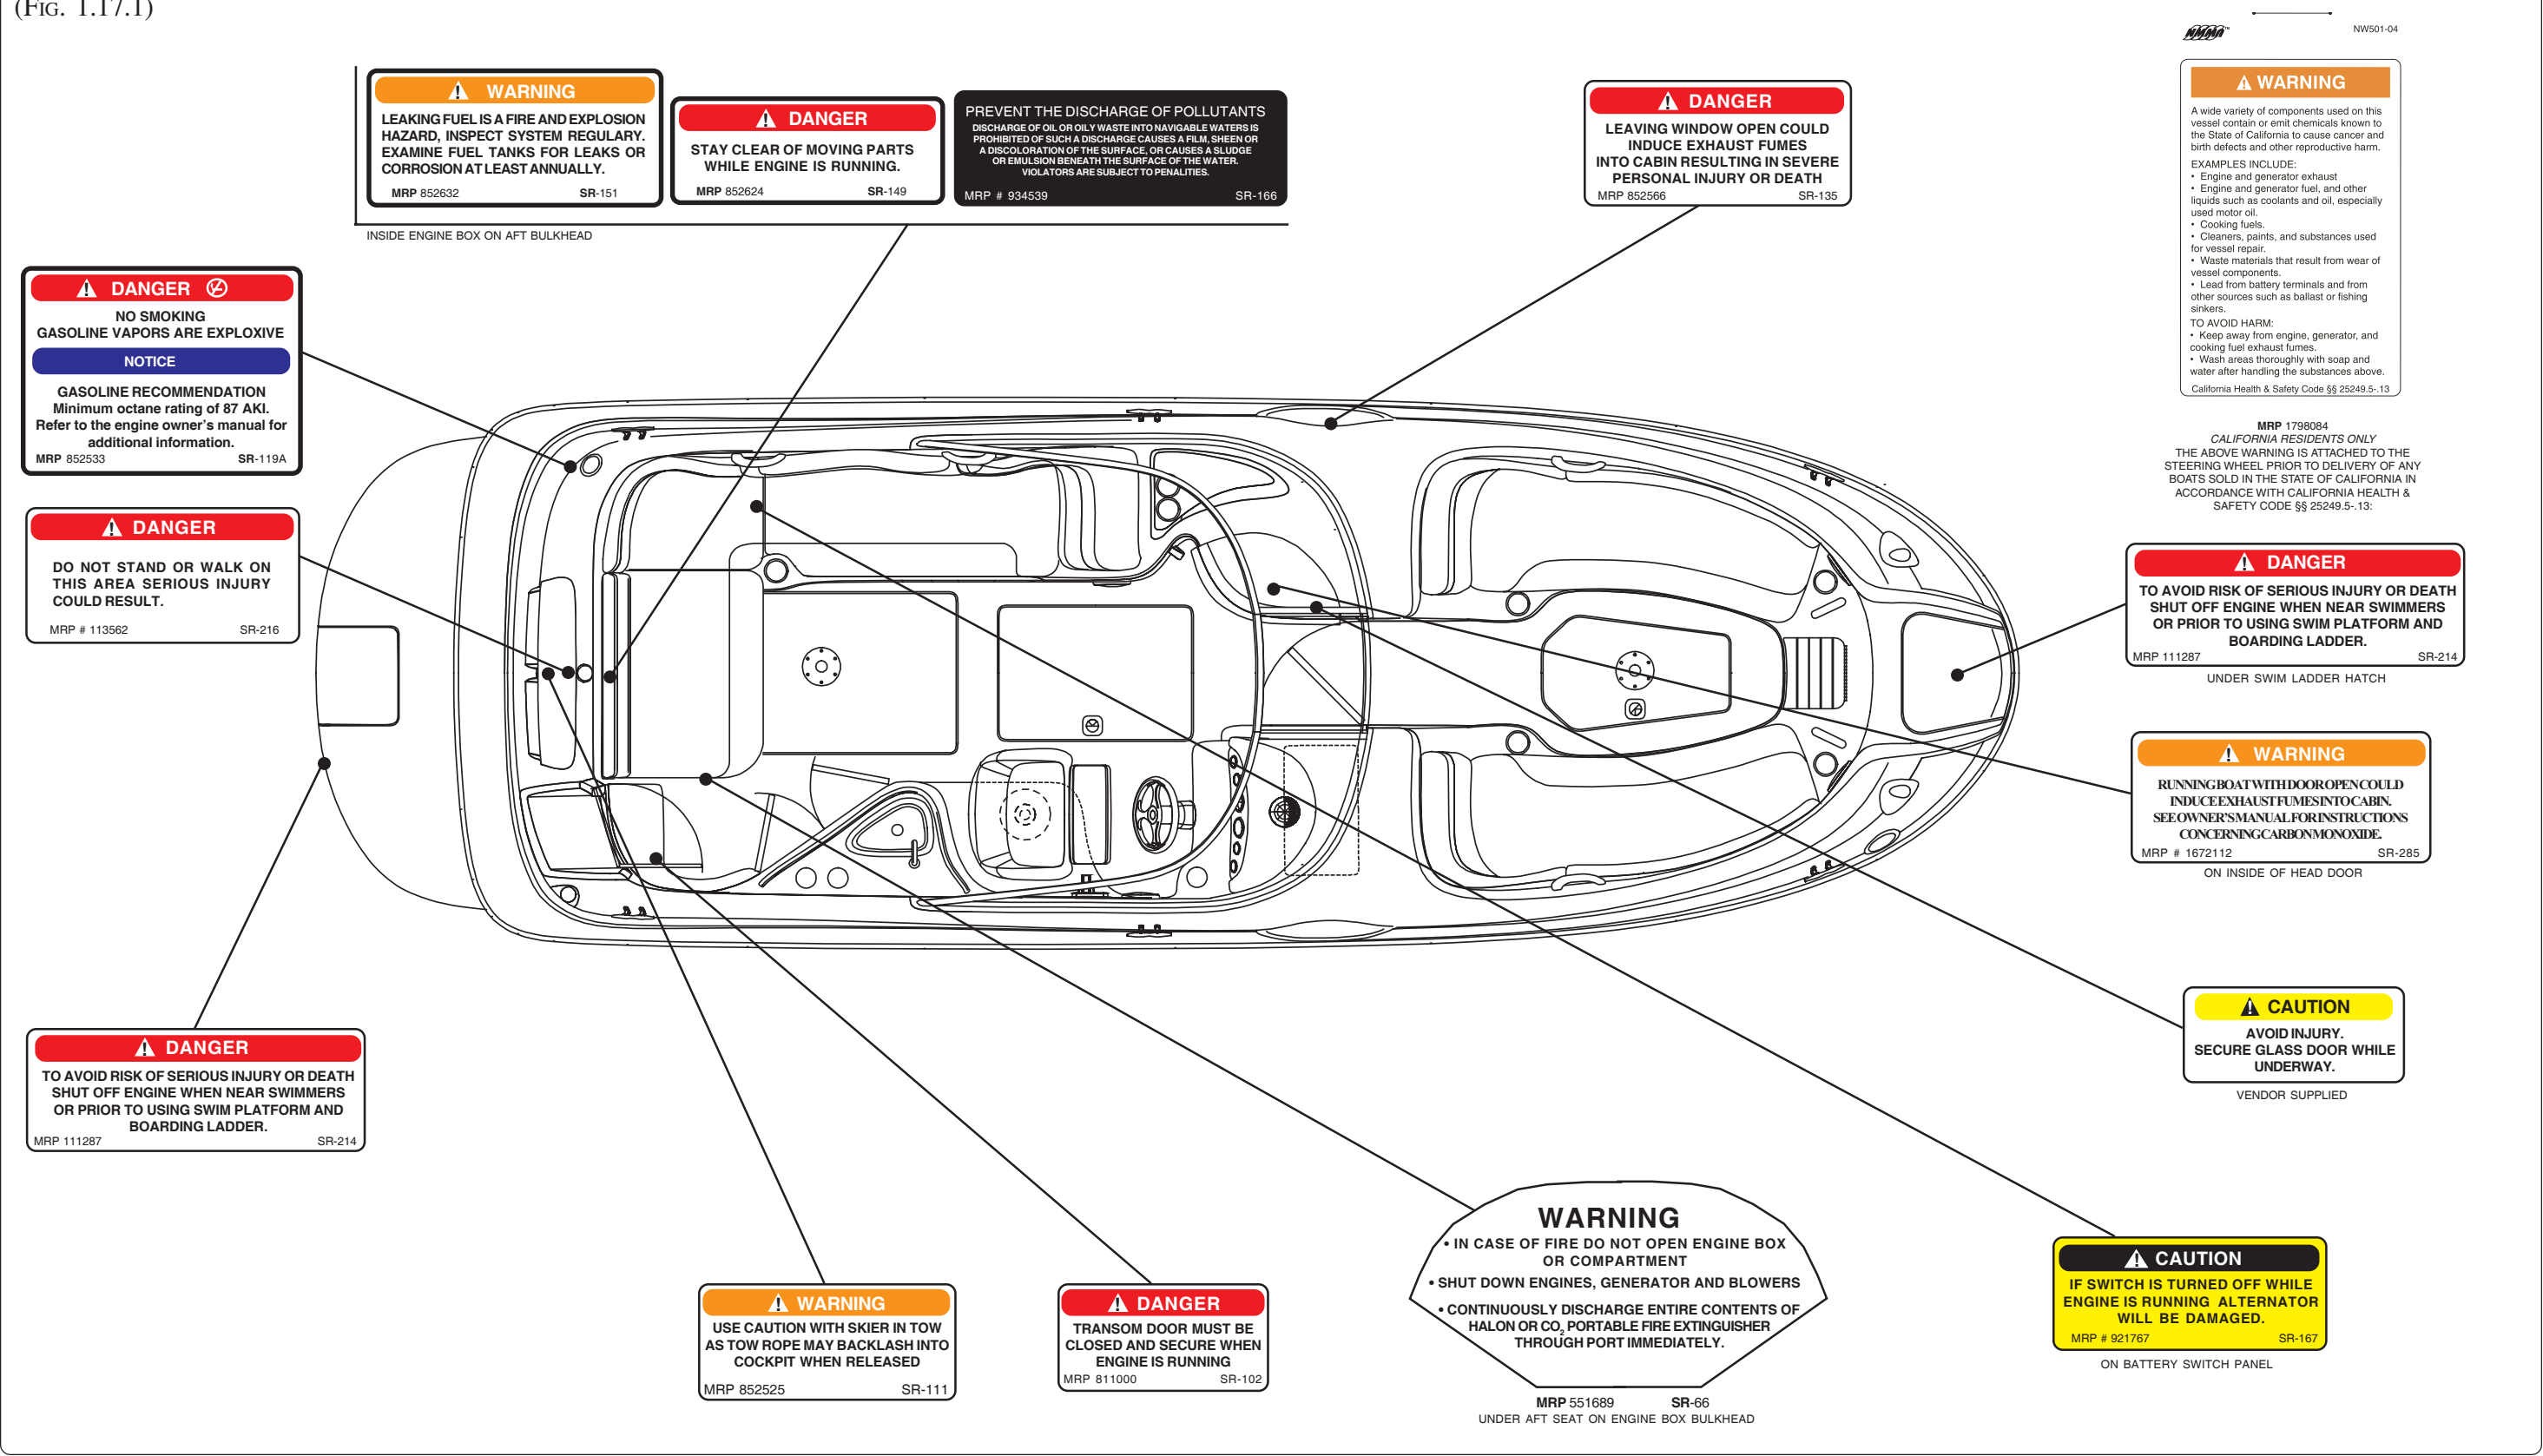

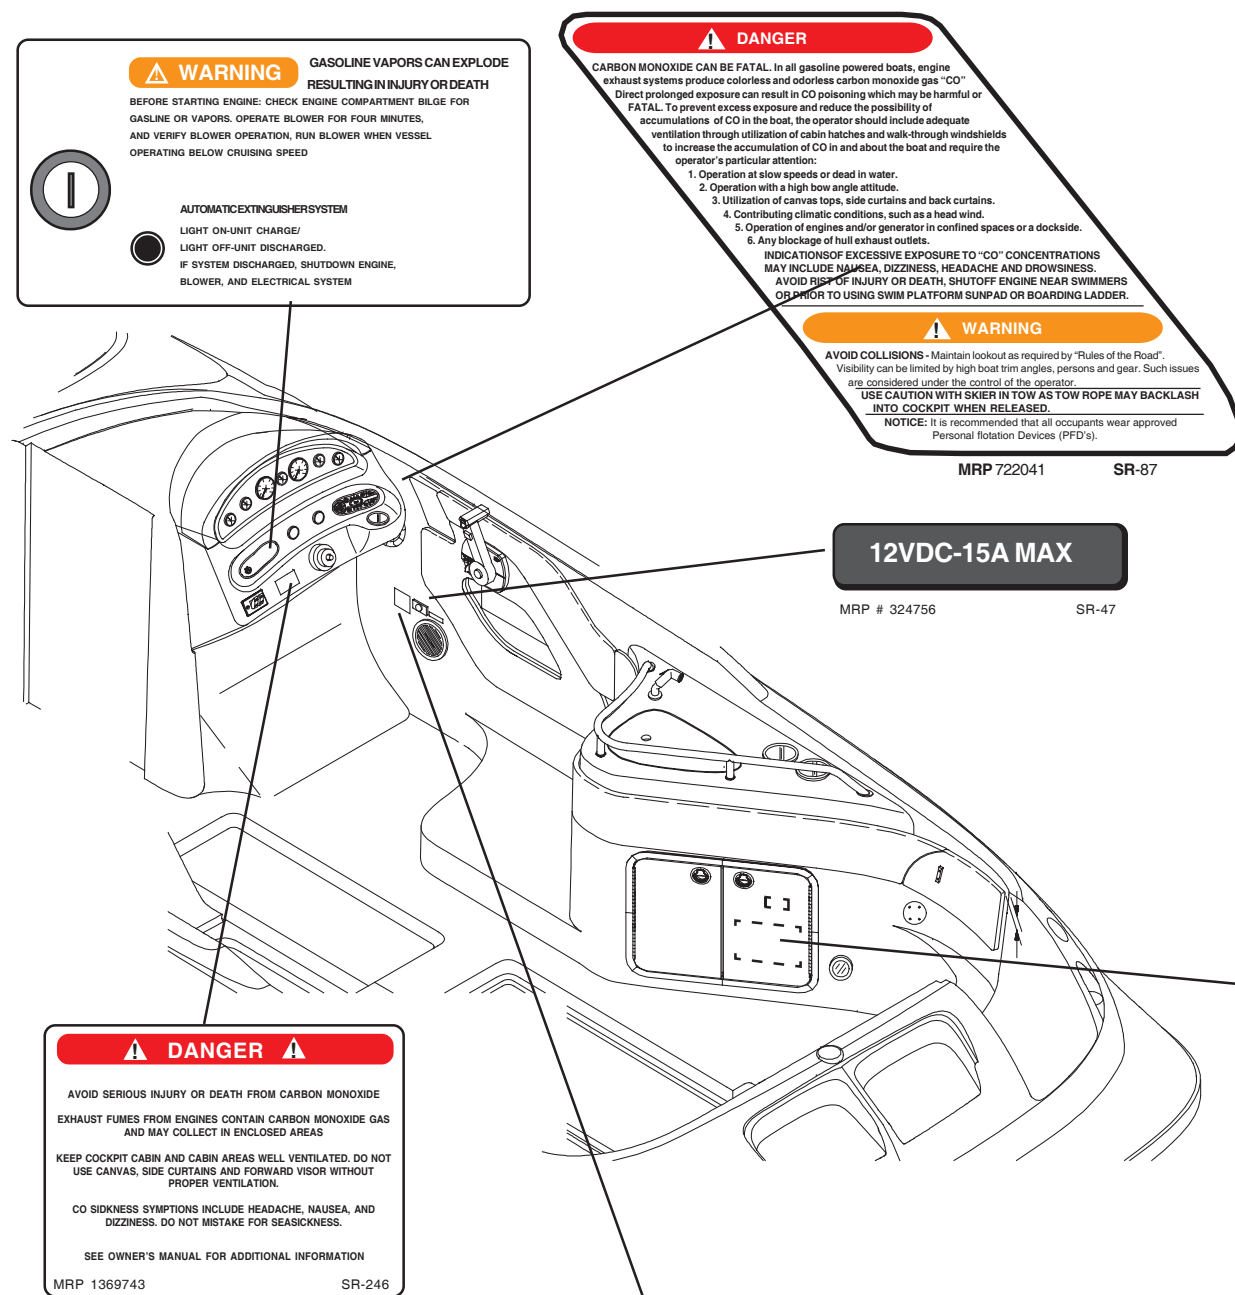

 For information on replacement products, brochures, dealers, locations, etc ...call
1-800-SRBOATS
(772-6287)
OR
FAX 1-636-326-3282 www.SEARAY.com

Save Our Seas

It is *illegal* to dump plastic trash anywhere into the ocean or navigable waters of the United States. Violation of these requirements may result in civil penalty up to \$25,000, a fine of \$50,000 and imprisonment for up to five years. Regional, state and local restrictions on garbage discharge may also apply.

PLASTIC - Includes but is not limited to: plastic bags, styrofoam cups and lids, sixpack holders, stirrers, straws, milk jugs, egg cartons, synthetic fishing nets, ropes, lines, and bio or photo degradable plastics.

GARBAGE - Means paper, rags, glass, metal, crockery (generated in living spaces aboard the vessel-what we normally call trash), and all kinds of food, maintenance and cargo-associated waste.

"Garbage" does not include fresh fish or fish parts, dishwater, and gray water.

INSIDE 3 MILES

(and in U.S. Lakes, Rivers, Bays and Sounds)

PLASTICS

DUNNAGE, LINING AND PACKING MATERIALS THAT FLOAT
ANY GARBAGE EXCEPT DISHWATER/GRAYWATER/FRESH FISH PARTS

3 TO 12 MILES

PLASTICS

DUNNAGE, LINING AND PACKING MATERIALS THAT FLOAT
ANY GARBAGE NOT GROUND TO LESS THAN ONE SQUARE INCH

12 TO 25 MILES

PLASTICS

DUNNAGE, LINING AND PACKING MATERIALS THAT FLOAT


12 TO 25 MILES

PLASTICS

DUNNAGE- Material used to block and brace cargo, and is considered a cargo associated waste.

DISHWATER- Means the liquid residue from the manual or automatic washing of dishes and cooking utensils which, have been pre-cleaned to the extent that any food particles adhering to them would not normally interfere with the operation of automatic dishwashers.

GRAYWATER - Means drainage from a dishwasher, shower, laundry, bath, and washbasin, and does not include drainage from toilets, urinals, hospitals, and cargo spaces.

 **Sea Ray Boats**
240 SD
MAXIMUM
12 + 1 = 950kg.

THIS TAG REPLACES DOMESTIC CERTIFICATION TAG (ABOVE) WHEN BOAT IS ORDERED WITH INTERNATIONAL (CE) OPTION.


MAXIMUM CAPACITIES
12 PERSONS OR 2000 LBS.
2100 POUNDS, PERSONS, GEAR

THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION
MANUFACTURER: SEA RAY BOATS, INC.
VONORE TN

MODEL: 240 SUNDECK®

DESIGN COMPLIANCE WITH NMMA REQUIREMENTS BELOW IS VERIFIED. MFR. RESPONSIBLE FOR PRODUCTION CONTROL

LOAD AND CAPACITY * COMPARTMENT VENTILATION
STEERING, FUEL AND ELECTRICAL SYSTEMS
INTERNATIONAL LIGHTS * BASIC FLOATATION

 NATIONAL MARINE MANUFACTURERS ASSN.



SECTION 2 • GENERAL BOAT ARRANGEMENT

1. DOCKING/LIFTING/TRAILERING

CAUTION

Do Not use cleats for lifting.

BOW AND STERN CLEATS: (See Figure 2.1.1)
Cleats must not be used for lifting the boat, they are intended for docking or mooring use only.


BOW AND STERN EYES: (Figure 2.1.1). The bow eye must be used to haul the boat onto a trailer. The stern eyes must be used as tie down points for trailering the boat. The bow and stern eyes may be used for short term lifting of the boat such as for service. Long term lifting with the bow and stern eyes may cause stress on the fiberglass and gel coat.

For long term storage, use flat, wide belt-type slings and spreaders long enough to keep pressure from gunwales. Do not place slings where they may lift on underwater fittings.


A. SUPPORTING THE BOAT

A cradle is the ideal support for the boat whenever it is not in the water. Properly designed and constructed, it will provide support at the proper points, which is essential to avoid stress on the hull. Boat placement on the cradle should line up as closely as possible to the sling tags on the side of the deck. Do not rest boat on underwater fittings.



CLEAT / BOW & STERN EYE LOCATIONS
(FIG. 2.1.1)

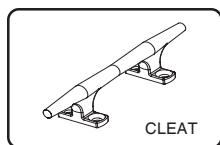

CLEAT

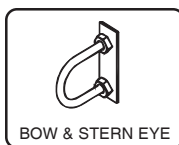


BOW & STERN EYE

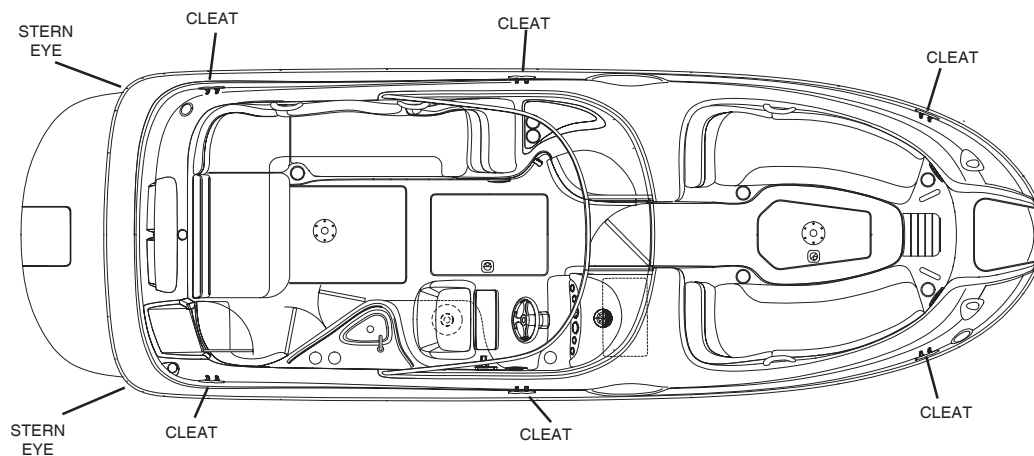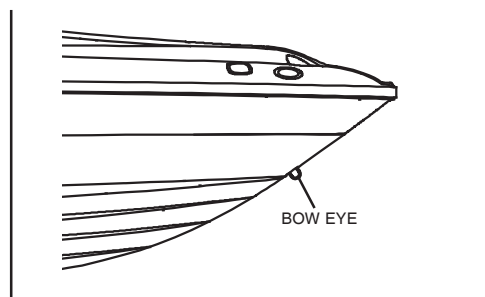

SECTION 2 • GENERAL BOAT ARRANGEMENT

PROPER STORAGE
(FIG. 2.2.1)

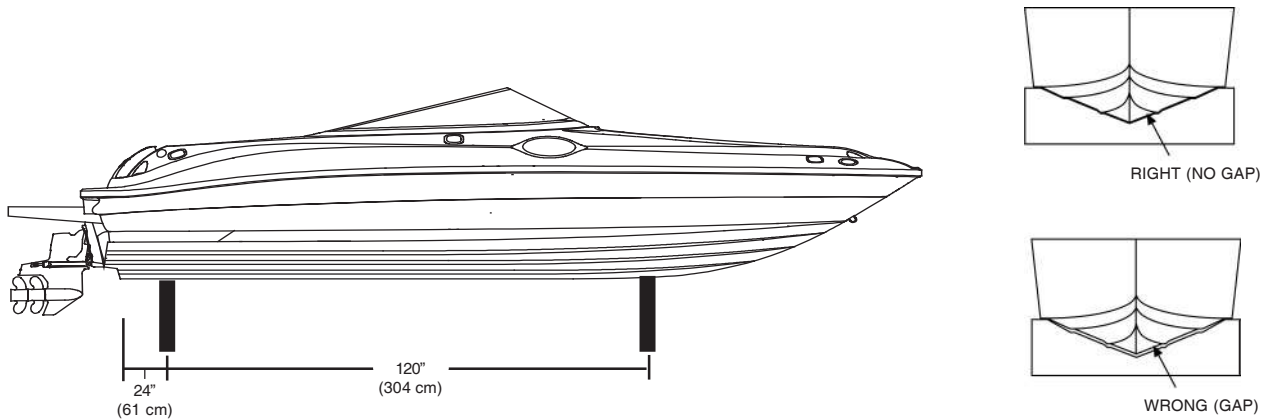

2. PASSENGER LOCATIONS

WARNING

Boat motion can be erratic.

You can fall overboard or be injured by hitting something in or on the boat.

All persons must be in cockpit area or cabin and be prepared for sudden boat movement.

Use front or bow deck area only during anchoring, mooring or emergencies.

WARNING

Wet decks are slippery.

You can be seriously injured if you slip and fall.

Wear slip resistant footwear secured to your feet and hold on to rails or boat structure.


1. When the boat is moving, all passengers must be in the cockpit area or in the cabin and must be on seating provided or, if standing, holding on firmly (See Figure 2.2.1).




While the person at the wheel must alert passengers before any sudden or erratic boat movement, such as crossing wakes, rapid turns, sudden acceleration or deceleration, etc., an emergency action may be necessary before passengers can be warned. All passengers must be prepared for rapid boat movement and be able to hold on to prevent loss of balance.

2. When persons are on the working deck area, for anchoring, mooring or in emergencies, they must be holding on and be positioned so as to prevent falling. In bad weather and/or rough water, if it is essential to be on deck, persons should be closely tied to cleats, railing stanchions or other securely fastened boat hardware.
3. Engines must be turned off if the boat is near swimmers or persons are on the swim platform or the swim ladder.

SECTION 2 • GENERAL BOAT ARRANGEMENT

PASSENGER LOCATIONS
(FIG. 2.3.1)

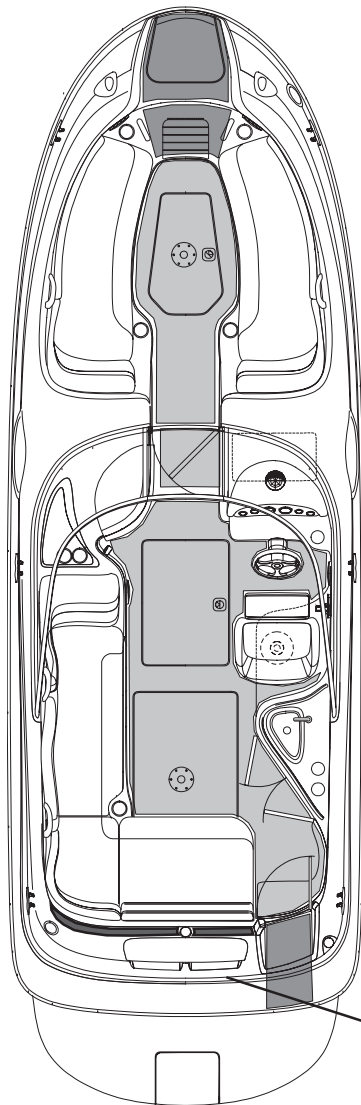

-  WORKING DECK
(DECK AREA INTENDED FOR
OCCUPATION DURING ANCHORING,
MOORING AND EMERGENCY
OPERATION ONLY)
-  ACCOMODATION DECK
(DECK AREA INTENDED FOR
OCCUPATION DURING NORMAL
OPERATION)
-  DO NOT WALK ON THIS AREA

WARNING

Wet decks are slippery.

You can be seriously injured if you slip and fall.

Wear slip resistant footwear secured to your feet and hold on to rails or boat structure.

DANGER

Rotating propellers can injure or kill you.

Shut off engine when persons are in water, near boat, on swim platform or ladder.


WARNING

You can be seriously injured if you stand or walk here.

3. PROPULSION SYSTEM

Your boat is equipped with a stern drive propulsion system also known as an inboard-outboard engine (Figure 2.3.2). This type of propulsion system has the engine inside the boat secured to the hull's stringers at the rear end of the hull. The stern drive unit, also called the lower unit because it hangs below the hull, is part of the propulsion system that attaches to the outside of the hull or transom. The stern drive unit pivots to steer the boat.


STERN DRIVE (INBOARD-OUTBOARD) ENGINE
(FIG. 2.3.2)

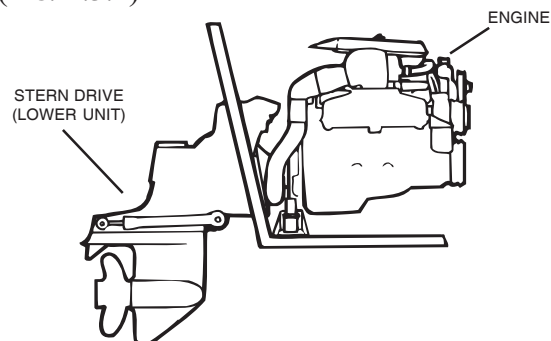

SECTION 2 • GENERAL BOAT ARRANGEMENT

4. BASIC BOAT DIMENSIONS AND CLEARANCES

BOAT DIMENSIONS AND CLEARANCES
(FIG. 2.4.1)

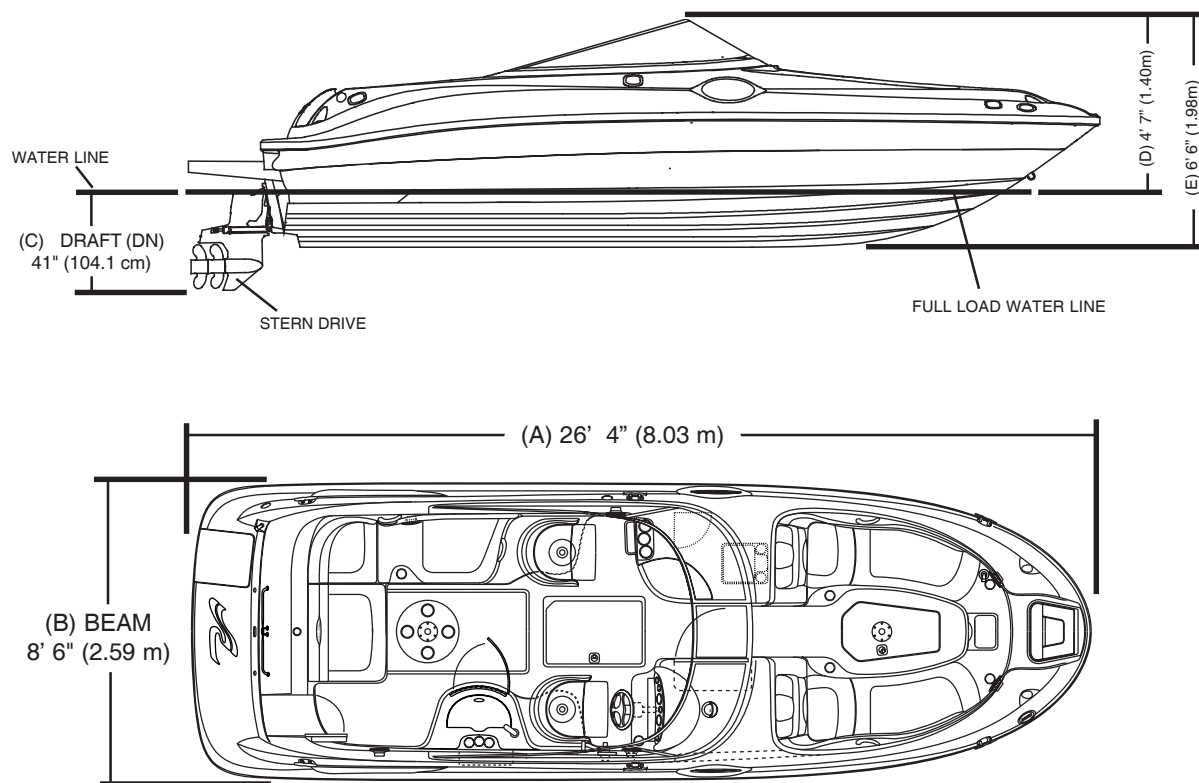

240 SUNDECK SPECIFICATIONS

(A) Overall Length	26ft. 4in.	8.03m
(B) Beam (Width)	8ft. 6in.	2.59m
(C) Draft (Stern Drive Down)	41"*	104.1cm*
*MINIMUM WATER DEPTH TO PREVENT RUNNING AGROUND		
(Stern Drive Up)	25"	63.5cm

Dry Weight	4,680 lbs.	2,122.8 kg.
Fuel Capacity	65 gal.	246 liters
Useable Fuel	61 gal.	230.9 liters
Water Capacity	20 gal.	75.7 liters
Dead Rise	21°	

HEIGHT DIMENSIONS


(D) Waterline to Top of Windshield	4ft. 7in.	1.40 m
(E) Keel to Top of Windshield	6ft. 8in.	1.98 m



SECTION 2 • GENERAL BOAT ARRANGEMENT

5. DECK LAYOUT


GENERAL LAYOUT
(FIG. 2.5.1)

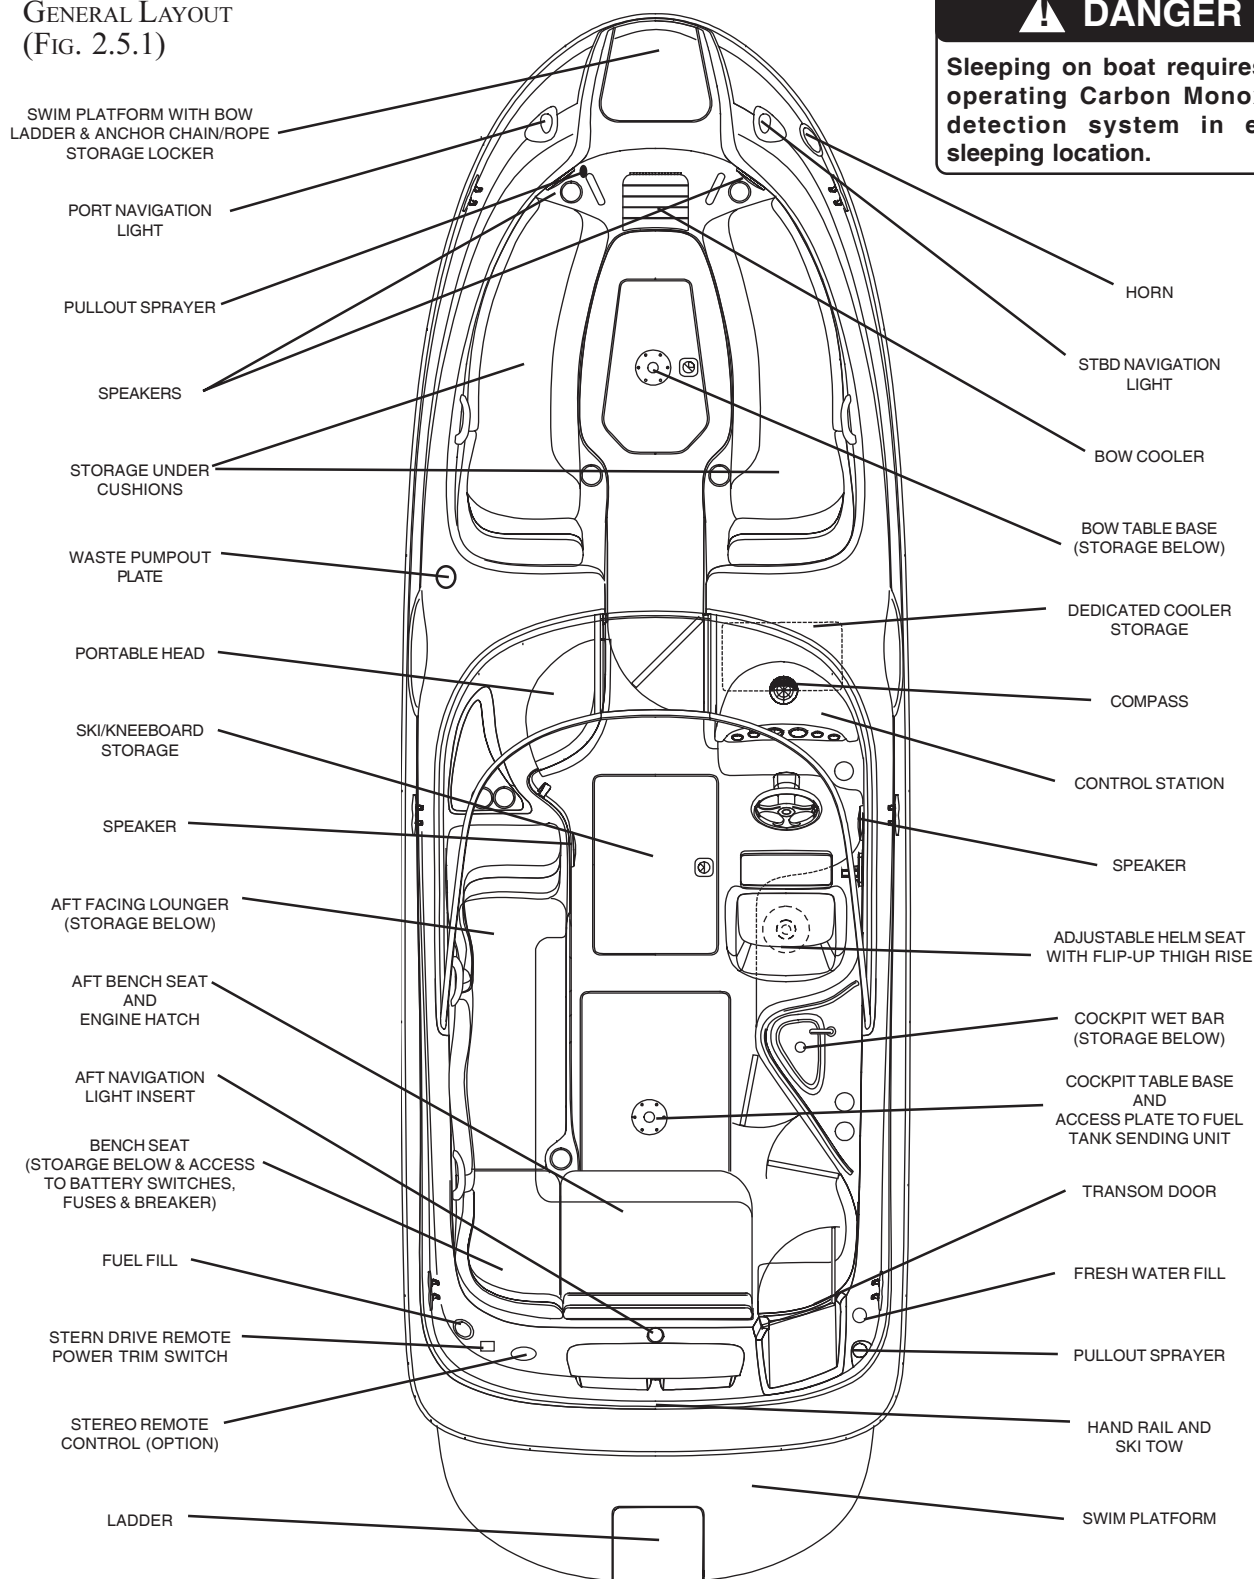

SECTION 2 • GENERAL BOAT ARRANGEMENT

6. HELM GAUGE AND SWITCH LAYOUT


HELM GAUGES AND SWITCHES
(FIG. 2.6.1)

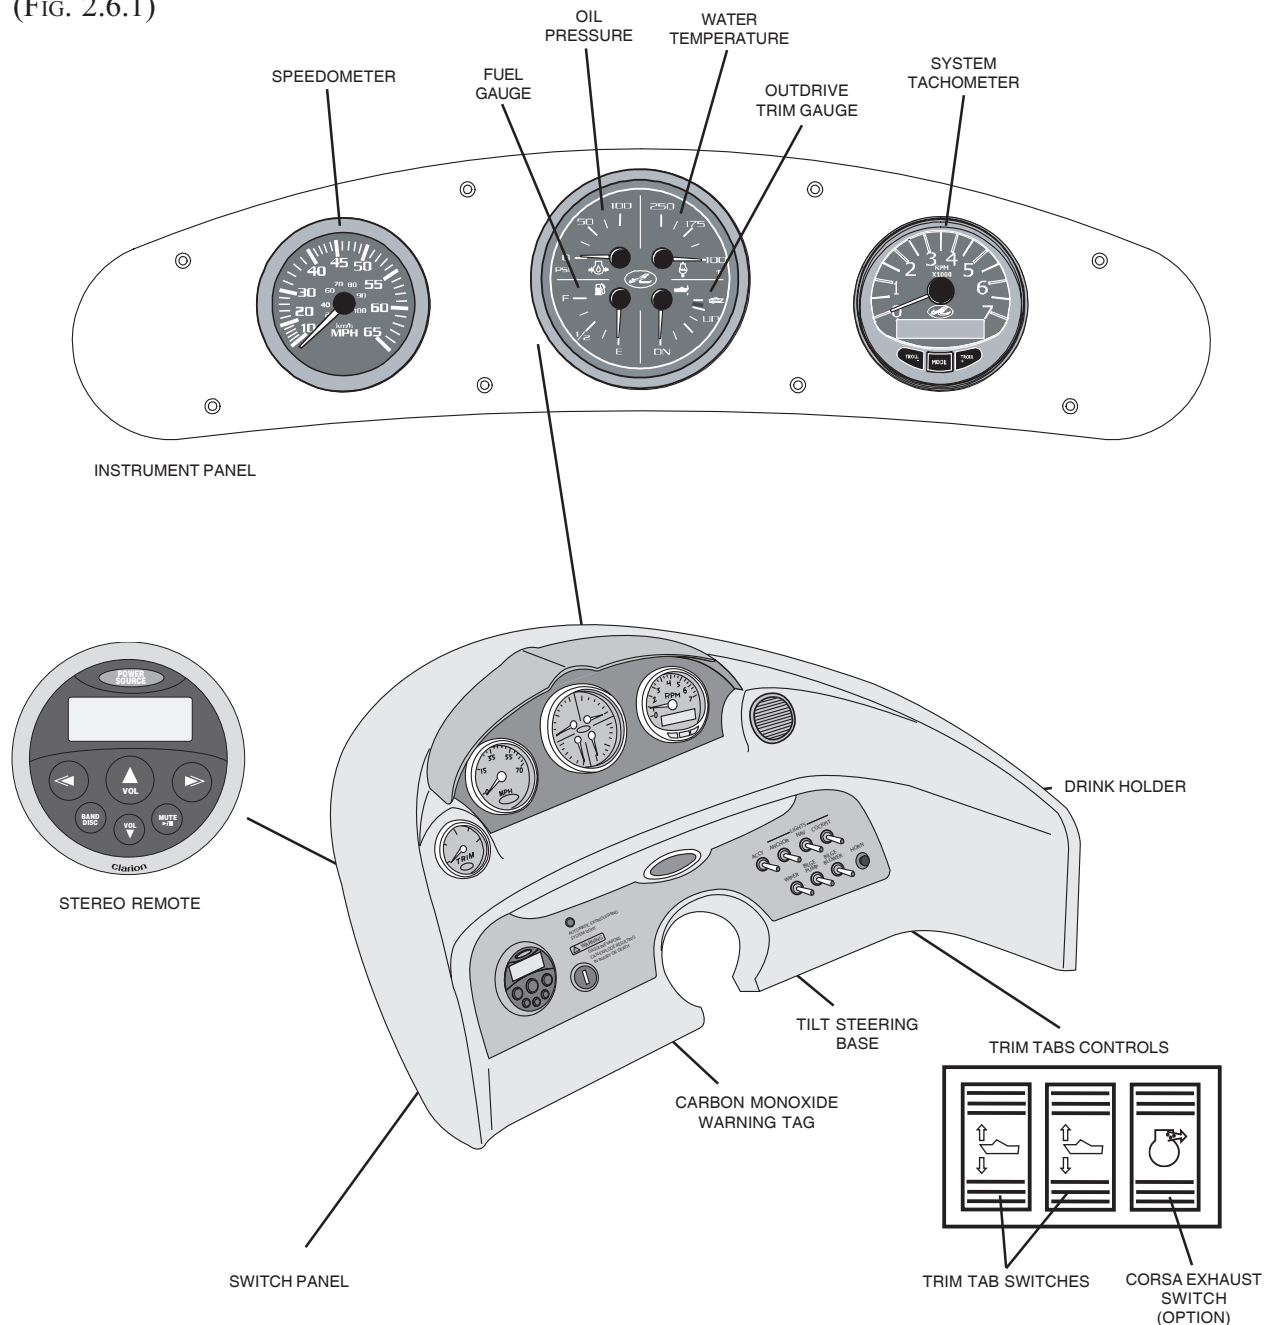


SECTION 2 • GENERAL BOAT ARRANGEMENT

7. FUNCTION AND LOCATION OF THROUGH-HULL CUTOUTS


STARBOARD THROUGH-HULL CUTOUTS
(FIG. 2.7.1)

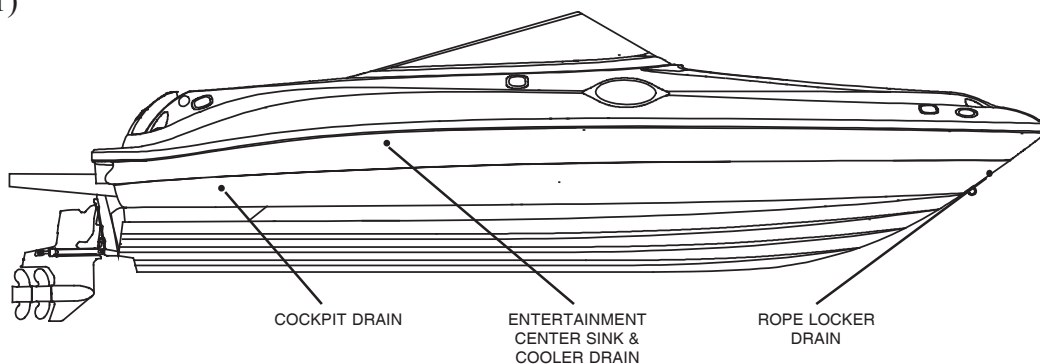


PORT THROUGH-HULL CUTOUTS
(FIG. 2.7.2)

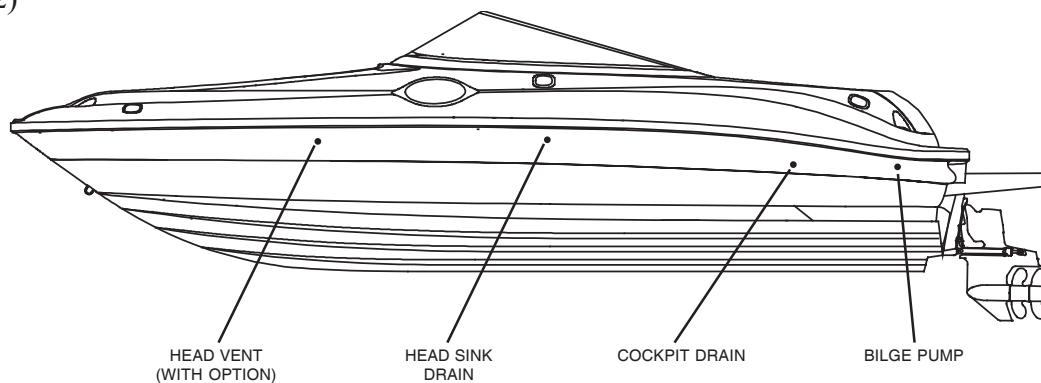

BILGE THROUGH-HULL CUTOUTS
(FIG. 2.7.3)

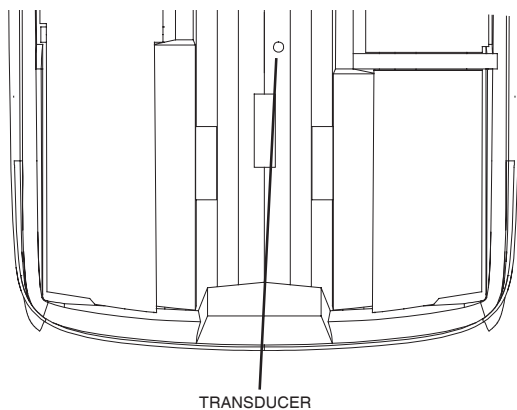

TRANSOM THROUGH-HULL CUTOUTS
(FIG. 2.7.4)

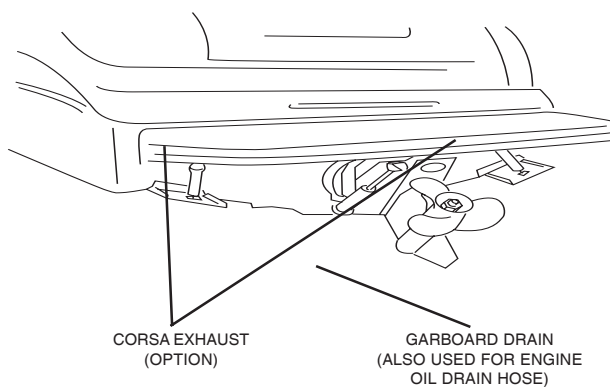


SECTION 2 • GENERAL BOAT ARRANGEMENT

8. DESCRIPTION OF MAJOR CONTROLS

A. GEAR SHIFT AND THROTTLE CONTROL

The shift/throttle control unit for the engine activates by the the shifting mechanism and the throttle. The control must be in neutral position to start your engine. Moving the lever forward first engages the forward gear. Further forward movement increases engine speed and propeller RPM, moving the boat faster. To shift to reverse, bring the control lever back to the neutral position, then move it further back to engage the reverse gear. Further rearward movement of the lever increases engine speed and propeller RPM, moving the boat faster in reverse.

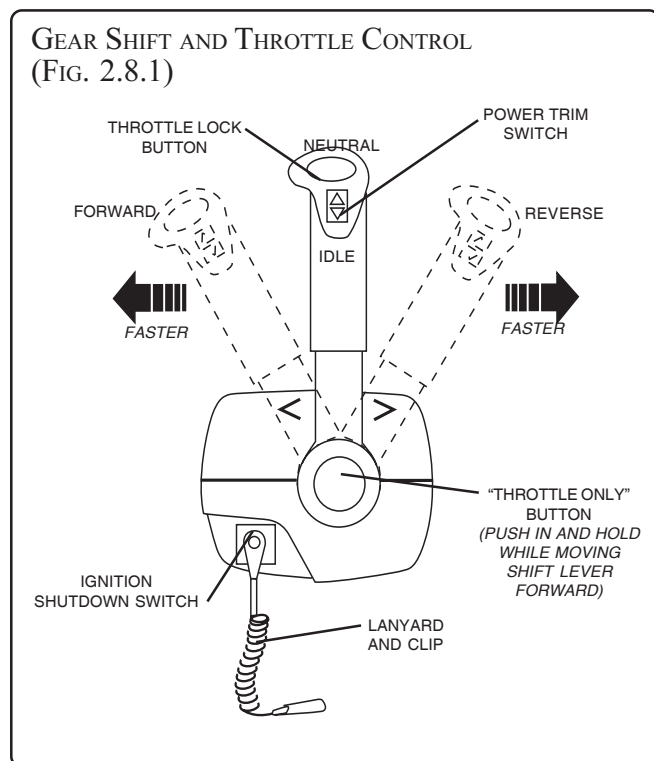

Shift/throttle controls are equipped with a “throttle only” mechanism which allows the shift mechanism to be disengaged from the throttle. This allows the throttle to be advanced without shifting the transmission when starting. It may be necessary to use the “throttle only” button in order to pump fuel into the engine for ease in starting.

The “throttle Only” mechanism (Figure 2.8.1) may differ from one style gear/throttle unit to another. Refer to your Gear Shift & Throttle Manual for proper operation of this feature.

The throttle control adjusts the RPM of the engine and thus, the rotational speed of the propeller. Regulating the RPM of the engine controls the speed of the boat.

Forward motion creates forward moving water called a “following” wake. If the boat is moving forward and the shift/throttle is moved quickly from forward to reverse, the boat will stop rapidly and then move backward. The following wake continues to move forward and can rise above the transom and flood the boat.

! CAUTION

Cockpit can fill with water if boat is moving forward, when it is put into reverse.

Before shifting into reverse, shift to neutral, wait for boat to stop moving forward, then shift into reverse.

Do not shift into reverse too quickly. Wait for the following wake to dissipate.

B. POWER TRIM UNIT AND GAUGE

The power Trim allows the operator to raise and lower the stern drive unit while underway to provide the ideal boat angle (in relation to water surface) for a given load and water condition (Figure 2.9.1).


Trimming UP rotates the stern drive and propeller away from the transom. Trimming DOWN rotates the stern drive and propeller closer to the transom.

When the stern drive is trimmed DOWN, the bow of the boat is being forced down. If the trim is in the full DOWN position when accelerating from idle to plane, the boat will plane faster with less bow rise. Once on plane, the stern drive unit can be trimmed UP slightly. This will raise the bow of the boat slightly and increase speed. You will need to try small differences in the stern drive position to determine the trim position you prefer under various conditions.



SECTION 2 • GENERAL BOAT ARRANGEMENT

EFFECTS OF POWER TRIM
(FIG. 2.9.1)

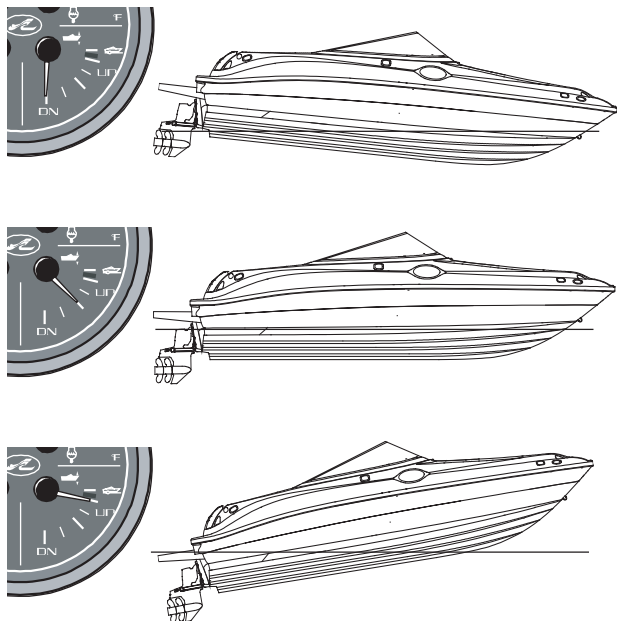

If you raise the stern drive up to far while you are on plane, you could cause a loss of speed and power due to condition called propeller “ventilation.” If this happens, there will be a sudden increase in engine RPM and loss of speed. Do not let this condition exist. Immediately reduce your engine RPM and trim the outdrive DOWN slightly until engine slows down and you regain forward speed.

The trim gauge indicates the position of the stern drive relative to the transom.

REFER TO YOUR ENGINE OPERATOR’S MANUAL FOR PROPER TRIM GAUGE SETTING.

C. TRAILER SWITCH

The trailer switch (power trim switch) (Figure 2.8.1) is not to be confused with the power trim function. The trailer switch is to be used only when the engine is OFF.

The trailer switch allows the drive unit to be raised for trailering, beaching and launching. To operate, press and hold the trailer switch (Figure 2.8.1) until the drive unit reaches the end of upward travel. The mechanism that raises the lower unit will stop operating at the end of the upward travel. To bring the drive unit down into boating position, push the power trim switch down.


D. TRANSOM TRAILER TRIM SWITCH (OPTIONAL)

A transom-mounted power trim switch (Figure 2.9.2) is available for the convenience of raising the drive unit to the TRAILERING position while at the rear of the boat.

! CAUTION

Use transom-mounted power trim switch to tilt for trailering only. Tilting drive unit into trailering zone while underway can damage the drive unit or engine.

TRANSOM TRAILER TRIM SWITCH (OPTIONAL)
(FIG. 2.9.2)

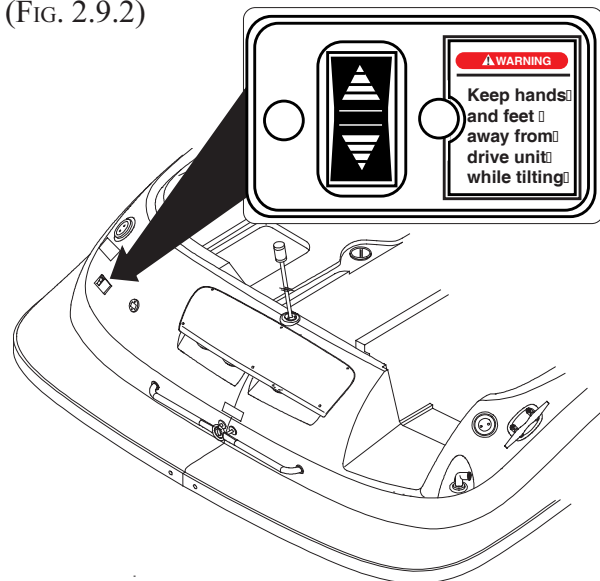

SECTION 2 • GENERAL BOAT ARRANGEMENT

E. TRIM TABS

The trim tabs (Figure 2.10.1) are DIFFERENT from the stern drive unit trim control. The trim tabs are two flat plates, hinged below the water line on the transom at the rear and are raised and lowered hydraulically by using the rocker switches located at the helm. (Figure 2.10.1).

The trim tabs are used to adjust the sideways listing of the boat due to uneven loading, a strong cross wind or propeller torque. The twisting effect of propeller torque is especially pronounced when running the engine at high horsepower output. To correct the listing, adjust the trim tabs to level the boat. When the boat is level, right to left, the steering effort will be the same for right and left turns.


Lower the trim tabs on the listing (lower) side by pushing the top half of the rocker switch in one-half second bursts until the boat is righted.

Using both switches to lower both tabs on a side-to-side balanced boat will lower the bow, when on plane, if the rear of the boat is highly loaded. Again, use only short bursts of the rocker switches to adjust the trim.

When running at cruising speed, the trim tabs should be fully up, unless the rear is heavily loaded.

In heavy following seas or when running in an inlet, best maneuverability is obtained with a bow high attitude. To be sure the tabs are full up, push the bottom halves of the rockers for several seconds.

RUNNING ATTITUDE	LIST	PUSH
BOW UP	TOP OF BOTH ROCKERS
BOW UP	PORT	TOP OF STARBOARD ROCKER
BOW UP	STARBOARD	TOP OF PORT ROCKER
BOW DOWN	PORT	BOTTOM OF STARBOARD ROCKER
BOW DOWN	STARBOARD	BOTTOM OF PORT ROCKER

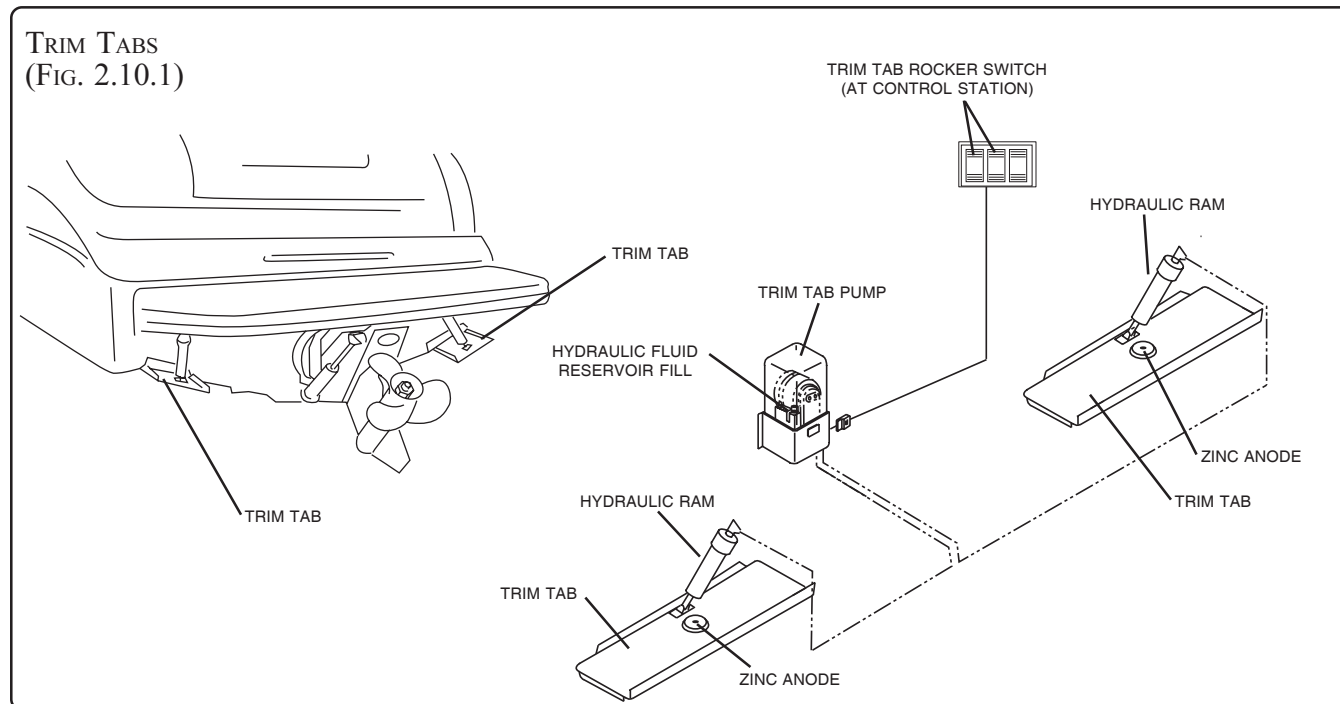

SECTION 2 • GENERAL BOAT ARRANGEMENT

F. IGNITION SHUTDOWN SWITCH

(STANDARD ON SIDE MOUNT CONTROLS)


The purpose of the ignition shutdown switch (Figure 2.11.1) is to shut down the engine, if the operator unintentionally leaves the helm. Situations in which this could occur are rough water, bad weather and other adverse boating conditions. In these situations, the safety of the boat and its passengers is enhanced by using the ignition shutdown switch, since the boat will stop when the operator can no longer control the boat.

However, unintentional engine shutdown may result in unintentional harm. For example, a passenger may lose balance and fall, or control could be lost during docking. No specific guidelines can be given for switch use. The ultimate decision of when to use an ignition shutdown switch, rests with the operator or owner.

When the switch is used, the operator must securely clip the lanyard to their belt or clothing so that if the operator falls overboard or into the boat, the switch is activated and the engine shuts down.

To reset the ignition shutdown switch after it has been activated, simply reinstall the switch clip above the shutoff switch and flip the switch to the UP position.

IGNITION SHUTDOWN SWITCH
(FIG. 2.11.1)

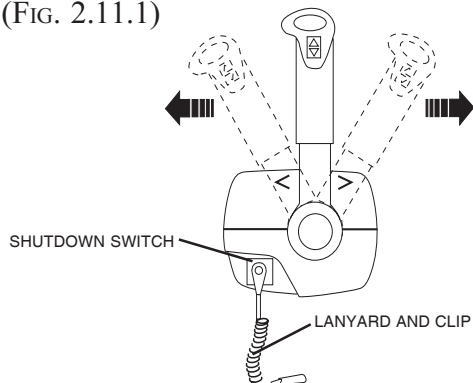

G. ENGINE ALARM SYSTEM

(ONLY ON CERTAIN ENGINES)

! CAUTION

Always check oil pressure and water gauges while moving, even if your engine has an alarm.

Shut down engine immediately if gauges are not in normal ranges, or alarm sounds.

Do not restart engine until problems are corrected.


The engine Operator's Manual will tell you if your engine is equipped with an audible alarm and how to use it.

The alarm indicates a problem with engine water temperature, oil pressure and/or stern drive oil level.

9. IMPORTANT GAUGES

A. SMARTCRAFT™ GAUGE SYSTEM

SMART CRAFT SYSTEM TACH
(FIG. 2.11.2)

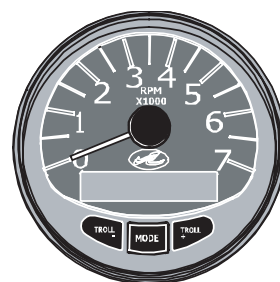

Your boat is equipped with the SmartCraft™ instrumentation system. The SmartCraft™ system consists of a smart tachometer with a display screen.

The SmartCraft™ system provides a wide range of engine, boat systems and environmental information to the boat operator to help make your time on the water more enjoyable by providing accurate systems information in one convenient location, right at the helm. Below is a list of features the SmartCraft™ system offers.




SECTION 2 • GENERAL BOAT ARRANGEMENT

Refer to the SmartCraft™ owner's manual in the owner's packet for all SmartCraft™ operating instructions.

SOME FEATURES INCLUDE:
(Depending on engine type and software version)

SYSTEM TACH DISPLAY SCREEN:

- Engine Break-in
- Engine Temperature
- Oil Psi
- Trim and RPM
- Trim and Water Pressure
- Water Pressure
- Battery Voltage
- Engine Hours
- Fuel Flow and Fuel Used
- RPM
- Depth

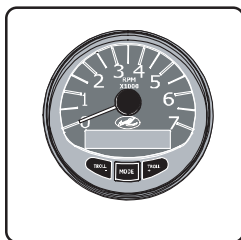

B. TACHOMETER

The tachometer indicates the revolutions per minute (RPM) of the engine. (It does not indicate the speed of the boat.) Your Engine Operator's Manual indicates the maximum full throttle RPM at which your engine should operate. This must not be exceeded or serious engine damage will occur. The tachometer should also be used to determine the most comfortable and economical cruising RPM.

C. OIL PRESSURE, WATER TEMPERATURE, AND FUEL GAUGES

These gauges function on your boat the same way they do on your car or truck. You must continually check these gauges visually to make certain there are no engine system problems even if your boat engine has an alarm system.

D. MAGNETIC COMPASS

Your compass (See Figure 2.5.1), properly corrected, will indicate magnetic North (not true North). A compass must be adjusted by a qualified person. The reason for this is that nearby instruments or objects containing magnets or current-carrying electrical wires will influence the compass reading. This is especially true if you add electronic devices to the helm station.

After your compass has been professionally adjusted. You will be given a deviation card or chart indicating the correction to be applied when laying out a compass course or making navigational calculations. **Keep this correction card or chart at the helm.**

NOTE: The compass adjustment is only good for the equipment arrangement that existed at the time of the adjustment. If you place different equipment or remove equipment from the vicinity of the compass, you cannot rely on the compass reading. The compass must be readjusted by a qualified person after equipment is added or removed from the vicinity of the compass.

NOTE: The compass roses shown on navigational charts have both true North and magnetic North directions superimposed. Make certain you plot course compass directions from the magnetic North compass rose.

When not in use, the compass should be protected from excessive and prolonged sunlight. If your compass becomes sluggish or erratic, it should be serviced by an authorized repair station.

To keep the plexiglass dome free from scratches, remove salt deposits and dust with a damp cloth. An occasional treatment with paste wax will help preserve the dome surface.

REFER TO OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.



SECTION 2 • GENERAL BOAT ARRANGEMENT


10. NAVIGATION AND ANCHOR LIGHTS

Navigation lights **MUST** be on while underway from sunset to sunrise or in conditions of reduced visibility. “Underway” means the boat is not docked or at anchor. Trolling or drifting with engine off is considered “underway” and navigation lights must be used.

If you are anchored in open water, i.e. where other boats can approach yours, you must display your anchor light a white light that can be seen from all possible directions, i.e. 360 degrees.

Read the “Federal Requirements and Safety Tips for Recreational Boats” provided in your kit.

INSERTING THE REMOVABLE STERN ANCHOR LIGHT
(FIG. 2.13.1)

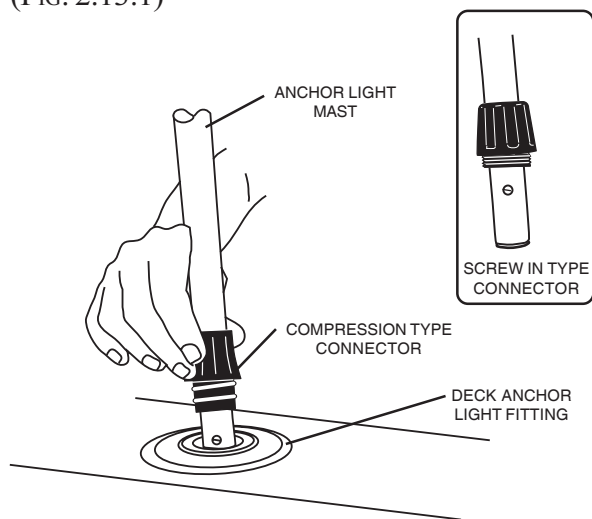

SECTION 2 • GENERAL BOAT ARRANGEMENT

THIS PAGE LEFT INTENTIONALLY BLANK



SECTION 3 • USING YOUR BOAT

1. PRE-LAUNCH, LAUNCH AND POST-LAUNCH CHECKLIST

Listed below are the critical items you must check and do each time you use your boat. It does not list all of the necessary maintenance and service items required to keep your boat running properly. These other items are found in Section 6.

BEFORE LAUNCH

- ☐ Drain plug installed
- ☐ Enough fuel for trip
- ☐ Float plan given to friend or relative
- ☐ Navigation charts for trip
- ☐ Weather forecast - safe

IN THE WATER, BEFORE BOARDING PASSENGERS OR STARTING ENGINE

- ☐ Stern drive down
- ☐ Equipment stored and balanced
- ☐ No gas smell in engine compartment
- ☐ Engine oil and steering fluid levels - OK
- ☐ Battery switch on
- ☐ Bilge pump working
- ☐ Bilge blower on
- ☐ Radio and navigation equipment functioning

PASSENGERS

- ☐ Wearing PFDs
- ☐ Seated properly
- ☐ Given safety instructions

STARTING ENGINE

- ☐ Make sure you have read and understand the dangers of Carbon Monoxide (CO) information in this manual.

- ☐ Bilge blower on for at least four (4) minutes. Feel to confirm airflow at hull vent on hull side. Inspect bilge area for visual and odor confirmation that there are no fuel leaks.
- ☐ Throttle-only position, handle pumped before starting, if necessary.
- ☐ Oil pressure, engine temperature, voltage - OK after starting and warm up.

UNDERWAY

- ☐ Gradual acceleration and deceleration and turning.
- ☐ Aware of surroundings at all times.
- ☐ Operate so as to prevent buildup of Carbon Monoxide (CO)
- ☐ Monitor weather
- ☐ Use navigational aids in water and on shore
- ☐ Keep passengers safe
- ☐ Check fuel consumption regularly
- ☐ Check all gauges frequently

END OF TRIP

- ☐ Equipment dry and stored.
- ☐ Electronic equipment and switches off.
- ☐ Battery switch off.
- ☐ Stern drive in trailering position.
- ☐ Notify person who had float plan.
- ☐ Boat covered properly for trailering, docking or mooring.
- ☐ Drain plug removed.
- ☐ Hull and propeller inspected for damage.

WARNING

An improper trailer can cause structural damage to the hull.

A damaged hull can be unsafe; it could cause the boat to sink.

Use a trailer that can properly support the boat's weight and shape. Get professional help in picking the right trailer for your boat.



SECTION 3 • USING YOUR BOAT

2. TRAILER LAUNCHING AND LOADING

Your trailer must be capable of carrying the boat's weight as well as supporting the boat near the keel, front (bow) and rear (stern) areas. Using a trailer not designed to support the boat properly, can cause structural damage to the hull. A damaged hull can be unsafe.


PROPER TOWING OF A BOAT AND TRAILER REQUIRES SPECIAL SKILLS. MAKE CERTAIN YOU PRACTICE HOW TO MANEUVER A BOAT AND TRAILER AND GET TRAINING BEFORE TOWING, LAUNCHING AND LOADING YOUR BOAT.

3. FUELING THE BOAT

The fuel fill cap is located on the port side of the transom (Figure 3.2.1). Do not mistake the water tank fill and waste pump out caps for the gasoline fill cap.

Refer to your engine manual for the proper grade of gasoline.

FUEL FILL LOCATION
(FIG. 3.2.1)

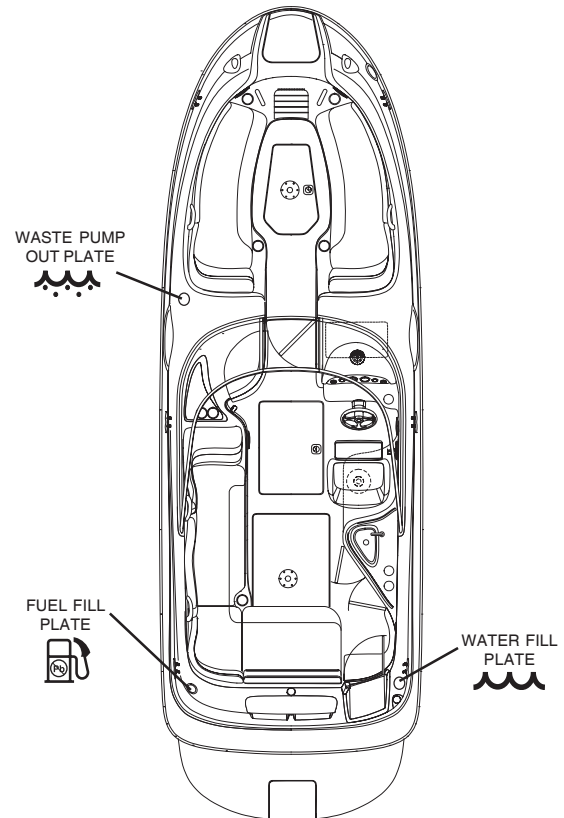

DANGER

**NO SMOKING
GASOLINE VAPORS ARE EXPLOSIVE**

NOTICE

GASOLINE RECOMMENDATIONS

Minimum octane rating of 87 AKI.

Refer to the engine owner's manual
for additional information

DANGER

Gasoline vapors can explode from static
electricity if fueling is not done properly.

Read and understand this section

BEFORE FUELING

- Fuel during daylight hours.
- If the left (port) side of the boat is against the dock, remember that the waste pump out cap is also on left (port) side of the boat. Do not confuse the waste pump out cap with the fuel fill cap.
- Tie boat to the dock.
- Shut off engine, bilge blower and all other electrical equipment.
- Shut off gas burning appliances (gas stove, etc.).

SECTION 3 • USING YOUR BOAT

- Close all hatches, doors and keep engine compartment closed to prevent gasoline fumes from entering the cabin or cockpit area.
- All passengers must leave the boat, as a precaution.
- There must be no smoking or any flames within 20 feet of the boat, before, during and for at least 5 minutes after fueling is completed.
- Open fuel fill cap and insert hose nozzle into the fuel fill opening. Fuel fill hose nozzle must contact the fuel fill opening **BEFORE** adding fuel to prevent discharge of static electricity.

FILLING THE TANK

- Check the fill plate label to ensure that fuel is placed **ONLY** in the fuel tank. The fuel fill plate is located on the aft port and side of your boat (Figure 3.2.1).
- Keep nozzle in contact with fuel fill opening at all times during fueling.
- Listen as tank fills and stop adding fuel before it spills from the vent. Fuel must have room for expansion.

AFTER FILLING

- **DO NOT** wash spilled fuel overboard. Wipe up any spill with rags or paper towels and dispose of them properly on shore.
- Open engine compartment and check for gasoline fumes. Leave compartment open until no odor is apparent. Close compartment.
- If fumes in the engine compartment do not disappear, do not turn on blower or start engine. Get help from trained and experienced persons before using the boat.
- Turn on blower for four minutes, then restart engine.
- Assist passengers back into the boat.

4. BOARDING

WARNING

Wet decks are slippery.

You can be seriously injured if you slip and fall.

Wear slip-resistant footwear secured to your feet and hold onto rails or boat structure.

- **DO NOT** overload the boat.
- Board one person at a time and give assistance as needed.
- Transfer gear and equipment by handing it from a person on the dock to a person on board. You can lose your balance and be injured if you attempt to board while carrying equipment or gear.
- Distribute the weight of equipment and passengers as evenly as possible to keep the boat balanced.
- Stow gear and equipment so that it is accessible, but everything is to be stored in places so as to prevent it from flying about if the boat encounters rough water or weather.



SECTION 3 • USING YOUR BOAT

5. PERSONAL FLOTATION DEVICES (PFD's)

- Operator must instruct all passengers on location and use of PFD's (See *Section 1-Safety, page 4* for type and usage).
- Children less than sixteen (16) years of age and all non-swimmers, adults as well as children, must wear properly-sized PFDs at all times when aboard.
- ALL passengers should wear PFDs. By the time someone falls overboard, it can be to late for them to put on a PFD and fasten it properly. This is especially true in colder waters, below 70°F, where survival time, before hypothermia sets in, is measured in minutes.
- If there are passengers not wearing PFDs, the PFDs must be readily accessible. "Readily accessible" means out of the storage bag and unbuckled.
- All throwable flotation devices (cushions, rings, etc.) must be right at hand.

6. PASSENGER INSTRUCTION AND LOCATION

- Everyone on board must be told about the boat's behavior from starting to getting up on plane.
- Before the operator does any high-speed maneuvers or rapidly accelerates or decelerates the boat, passengers must be warned to sit and hold on and must heed the warning.
- The operator may have to make rapid changes in speed and/or direction to avoid a problem, with little or no time for alerting passengers. It is critical that all passengers be seated in the designated seating areas and holding on to prevent falling overboard or getting knocked about in the boat at all times when the boat is underway.

7. STARTING THE ENGINES

DANGER

Gasoline vapors can explode

Before starting the engines, open engine compartment and check for gasoline smell.

- **If you smell gasoline, do not start engine; get everyone off the boat and get trained help to find and fix the problem.**

If there is no gasoline smell, perform checks specified by manual, then and only then, close engine compartment and run blower for at least 4 minutes before starting.

The engine operation and maintenance manual furnished with your boat describes pre-start and starting procedures. We urge you to thoroughly read and understand your engine manual.


Listed below are basic pre-start and starting reminders. These are not a substitute for the engine manufacturer's specific recommendations.

Open the engine compartment and check for the smell of gasoline.


- **IF YOU SMELL GASOLINE**, get everyone off the boat, do not operate any electrical switches or light any matches, lighters, etc. Get trained help to find and fix the problem, before starting the engine or operating any switches on the boat.
- If you **DO NOT** smell gasoline.
 1. Check all fluid levels and any other necessary checks as specified in Section 8 and in the engine manual.
 2. Check that water level in bilge is minimal. Verify that the bilge pump is operating by turning the bilge pump switch to MANUAL and listening for the pump running and check to see that bilge water is being pumped overboard.

SECTION 3 • USING YOUR BOAT


3. Close engine compartment and turn on battery switch.

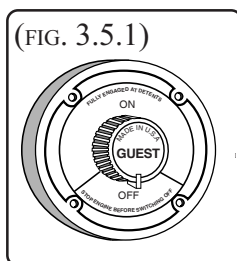

4. Check fuel level. Be sure you have enough fuel for your trip. Remember the "1/3 Rule": Use no more than 1/3 of your fuel for outbound trip; use 1/3 of the fuel for return trip; keep 1/3 for reserve in case of emergency.

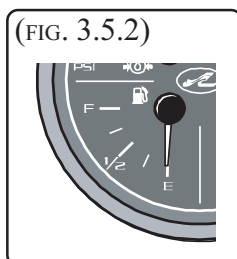


5. Run bilge blowers for at least 4 minutes before attempting to start engine

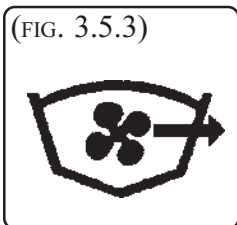

Unlike your automobile engine which is naturally ventilated even when it is not moving, your boat engine compartment (the bilge) does not have sufficient natural ventilation when the boat is not moving or moving slowly. That is why the engine compartment must have forced ventilation, using the bilge blower, to remove potentially explosive gasoline vapors, before the engine is started and when the boat is moving slowly.

Because it may be difficult to remember to turn on the bilge blower every time you slow down the boat, it is recommended that the bilge blower run all the time the engine is running.

6. Place drive unit in full DOWN/IN position.
7. Put throttle and shift control lever into neutral; then for a:

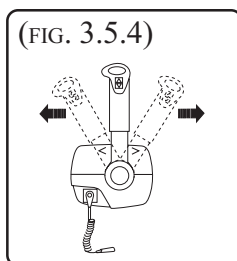

COLD ENGINE - press **THROTTLE ONLY** button and move shift/throttle lever forward to full open


throttle, then return to about 1/4 throttle. In cold weather, it may be necessary to pump lever several times before engine will start.

WARM ENGINE - Press **THROTTLE ONLY** button and move shift/throttle lever about 1/4 open throttle position. Do not pump lever.

FLOODED ENGINE - press **THROTTLE ONLY** button and move shift/throttle lever to full open position. **DO NOT** pump lever. When the engine starts, move shift/throttle lever back rapidly to decrease engine speed to between 1000 and 1500 RPM.


8. TO START ENGINE:

Turn ignition key clockwise, as in a car, and release when engine starts. Do not crank engine for more than a few seconds if it doesn't start. Engine may be very cold or flooded; see step 7.

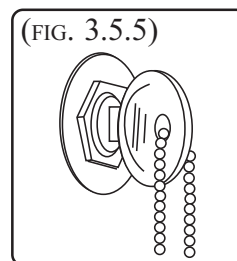


9. After engine starts, reduce speed to between 1000 and 1500 RPM and check oil pressure.

10. If oil pressure is correct, let engine warm up to normal temperature range as specified in the engine manual, before shifting into forward or reverse gear.

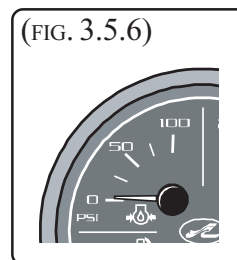

IF ENGINE TEMPERATURE GOES ABOVE NORMAL RANGE. SHUT DOWN THE ENGINE IMMEDIATELY. GET TRAINED HELP TO FIND AND FIX THE PROBLEM.

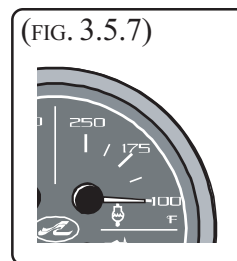


SECTION 3 • USING YOUR BOAT

IF OIL PRESSURE GOES ABOVE OR BELOW OPERATING RANGE, SHUT ENGINE DOWN IMMEDIATELY. GET TRAINED HELP TO FIND AND FIX THE PROBLEM.

8. SHIFTING TO DRIVE THE BOAT

Bring shift/throttle lever back to neutral position. The THROTTLE ONLY button will pop out.

Then move shift/throttle lever rapidly, either forward or reverse, but not very far from the neutral position. The drive unit will engage and boat will start to move slowly in either forward or reverse. You can damage the transmission if you do not shift quickly from neutral into gear. Once clear of the dock, mooring, people and/or the no-wake zone and the boat has been shifted into forward gear, move shift/throttle lever forward to desired engine speed.

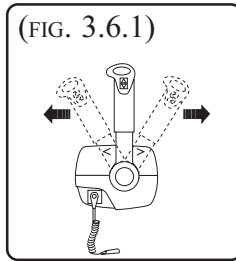


! CAUTION

Cockpit can fill with water if boat is moving forward, when it is put into reverse.

Before shifting into reverse, shift to neutral, wait for the boat to stop moving forward, then shift into reverse.


9. STOPPING THE ENGINES

1. Move shift/throttle lever to NEUTRAL and let engine idle for about 5 minutes to allow engine to cool down.

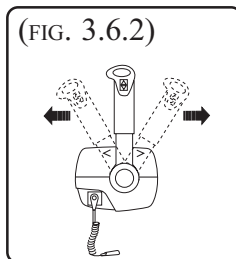


2. Turn ignition key off.

(FIG. 3.6.3)

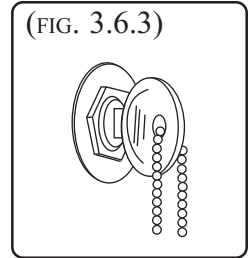

3. If you are leaving the boat for more than two hours, turn battery switch OFF.

(FIG. 3.6.4)

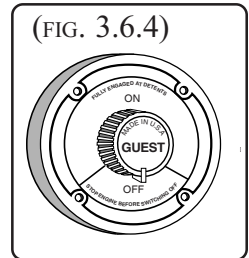

10. STEERING SYSTEM

! WARNING


Failure of the steering system will cause loss of control of your boat. Any change in steering such as looseness, tightness, binding, etc., must be checked immediately by your Sea Ray dealer.

The steering system is an enclosed push-pull cable that is hydraulically assisted (power steering) at the stern drive end (Figure 3.7.1 & 3.7.2). THE CABLE AND ITS CONNECTIONS TO THE STEERING WHEEL AND TO THE OUT DRIVE MUST BE INSPECTED AT LEAST TWICE A YEAR BY YOUR SEA RAY DEALER. See section 8 of this manual for inspection, service and maintenance recommendations.


The power steering pump (Figure 3.7.1) fluid level MUST be checked every time prior to using the boat. Refer to the steering system information in your Owner's Packet.

SECTION 3 • USING YOUR BOAT

POWER STEERING SYSTEM
(FIG. 3.7.1)

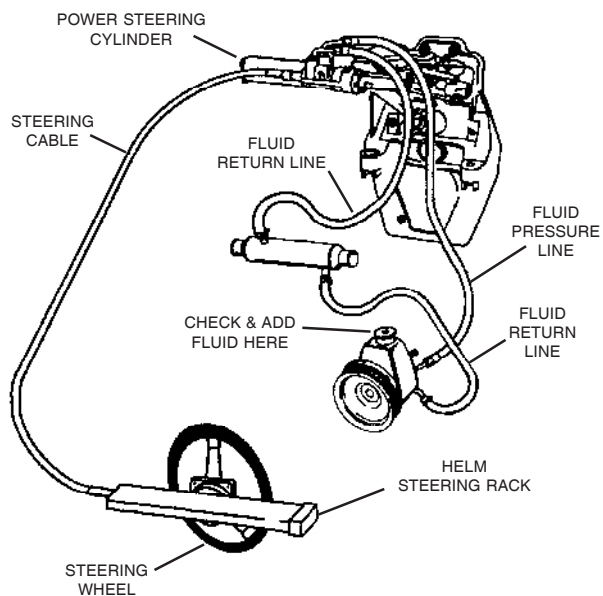

POWER STEERING / SHIFT & THROTTLE CABLE ROUTING
(FIG. 3.7.2)

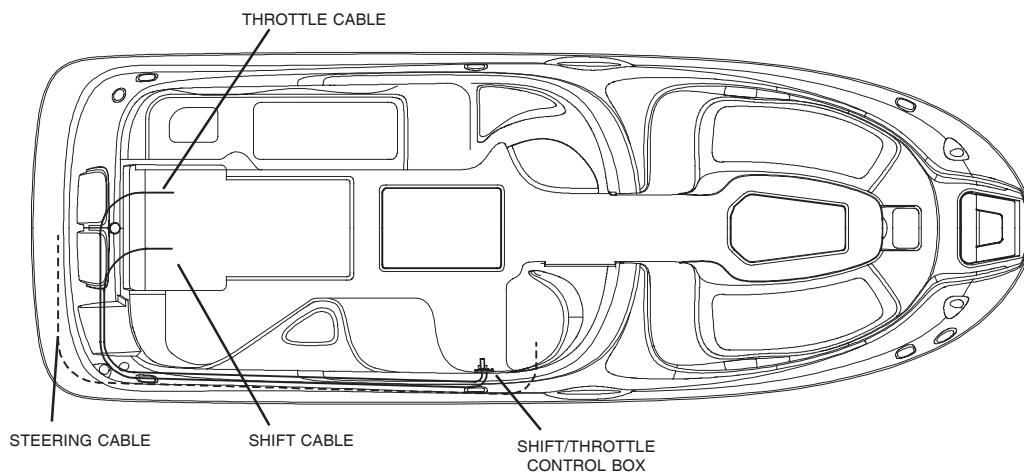


SECTION 3 • USING YOUR BOAT

11. ANCHORING

To anchor, bring the bow into the wind or current and put the engine in neutral. When the vessel comes to a stop, lower, do not throw, the anchor over the bow. The anchor line should be 5 to 7 time the depth of water.

A. ANCHORING ARRANGEMENT

The 240 Sundeck is equipped with an anchor storage hatch with an anchor storage cradle inside. Stow the anchor in the cradle when not in use. Note: Before using the anchor be sure the anchor line is secured to the boat - to the anchor eye inside the anchor storage compartment or bow cleat.

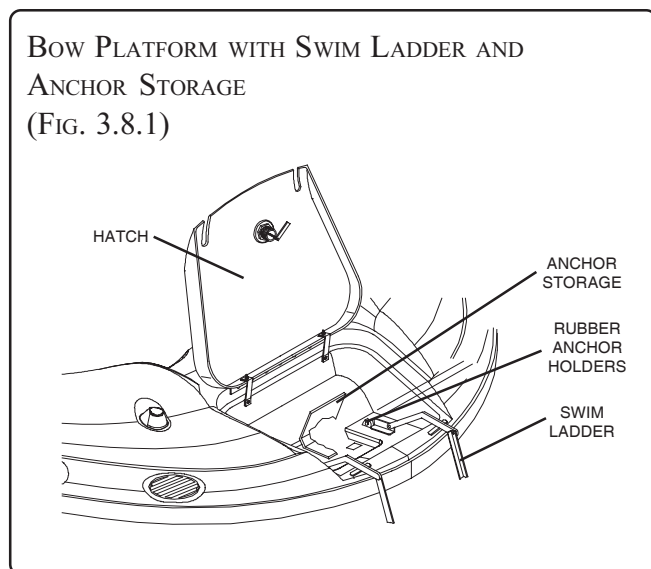

SECTION 4 • BILGE & UNDERWATER GEAR

1. BILGE

A. FUEL & OIL SPILLAGE

Regulations prohibit discharging fuel or oily waste in navigable waters. Discharge is defined as any action which causes a film, sheen or discoloration on the water surface, or causes a sludge or emulsion beneath the water surface. A common violation is bilge discharge. Use rags or sponges to soak up fuel or oily waste, then dispose of it properly ashore. If there is much fuel or oil in the bilge, contact a knowledgeable marine service to remove it. Never pump contaminated bilge overboard.

Fill fuel tank(s) less than rated capacity. Allow for fuel expansion.

B. DRAIN PLUG

! DANGER


Install and tighten drain plug before launching boat.

Boat will sink if drain plug is not in place and tight.

The bottom of the engine compartment is called the “bilge”. It is the lowest and inner part of the hull. Water and other liquids will collect here.

After removing your boat from the water, unthread the drain plug to drain the bilge (Figure 4.1.1).

DRAIN PLUG
(FIG. 4.1.1)

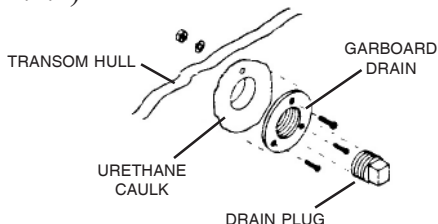

C. BILGE PUMPS

! WARNING


SINKING HAZARD – Ensure the bilge pumps are operating properly.

! CAUTION

Run bilge pumps in the manual position only as long as necessary to remove water. Running bilge pumps dry can damage the pump motor.


A bilge pump and float switch are located in the bottom of the bilge (Figure 4.1.2). The bilge pump is manually activated from the switch panel located on the helm.

BILGE PUMP AND FLOAT SWITCH
(FIG. 4.1.2)

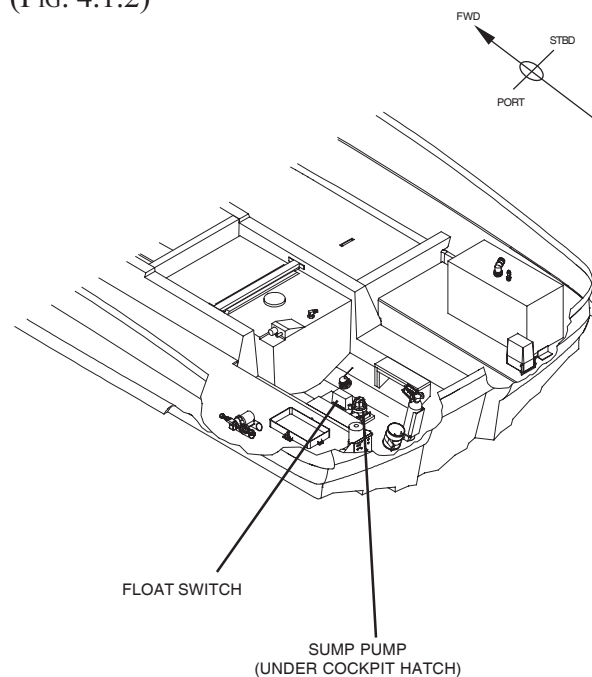

SECTION 4 • BILGE & UNDERWATER GEAR

BILGE PUMP ASSEMBLY
(FIG. 4.2.1)

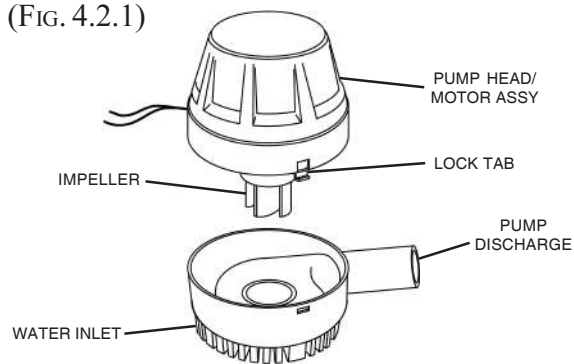

Before starting the engine, press the bilge pump switch so that the switch light comes ON. Make sure the pump is working by opening the engine compartment, listening to hear the pump running and check to see that liquid is being pumped out from the hull discharge (See Fig. 2.8.1). If the bilge has more liquid than normal, see Maintenance Section for locating and correcting the problem.

Except for checking the operation of the bilge pump using the ON position, leave the switch in the OFF (AUTO) position. In the OFF (AUTO) position, when the bilge liquid is deep enough to activate the float switch, the bilge pump turns on and pumps out the bilge liquid until the float switch drops and shuts off the pump.

If the liquid level in the bilge is higher than normal and the bilge pump empties the bilge when you use the ON switch, the float switch is not operating properly. Have it checked immediately. If the ON switch does not operate the pump, DO NOT use the boat until the problem is corrected.

The emergency high water bilge pump and float switch are wired to the high water bilge alarm. Should the pump be activated by water in the sump, the alarm will sound. If alarm sounds, immediate attention to the engine room is required.

The bilge pump is protected by a fuse in the electronic interface module located in the engine compartment (See Fig. 6.9.2).

1. MAINTENANCE

Frequently inspect the area under the float switches to ensure they are free from debris and gummy bilge oil. To clean, soak in heavy duty bilge cleaner for 10 minutes, agitating several times. Check for unrestricted operation of the float. Repeat the cleaning procedure if necessary.


Inspect the bilge pump intakes and keep them free of dirt or material which may impede the flow of water through the pump. To clean the pump strainer, depress the lock tabs on both sides of the pump and lift the pump motor.

D. BILGE BLOWERS

To prevent buildup of gasoline fumes to the explosive level in the engine compartment, the bilge blowers must be run for at least four (4) minutes before starting the engine and kept running at all times when the engine is running to insure that there will be adequate ventilation when you are moving slowly.

The bilge blower is protected by a fuse in the electronic interface module located below the control station in the sleeping berth (See Fig. 6.9.2).

BILGE BLOWER
(FIG. 4.2.2)

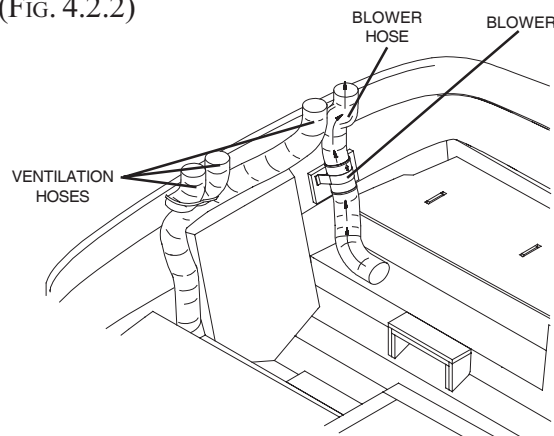

SECTION 4 • BILGE & UNDERWATER GEAR

WARNING

EXPLOSION/FIRE HAZARD – Run blower at least four (4) minutes before starting engine or generator. Check bilge and engine compartment for fumes.

WARNING

Do not allow obstructions to interfere with bilge blower or ventilation intake operation. Engine performance may be adversely affected.

- A badly damaged or distorted propeller or shaft is an obvious cause of vibration. Run at slow speed to shore. REPLACE IMMEDIATELY.
- If the engine mounts fail and the engine can contact the hull while it is running, vibration will be felt. Run at slow speed to shore. REPLACE IMMEDIATELY.

E. ENGINES AND STERN DRIVE

1. MAINTENANCE AND SERVICE

Engine failure away from shore can be dangerous. You must follow the recommended maintenance schedule to best ensure trouble-free operation of your engine and stern drive.

2. VIBRATION & CAUSES

Some vibration is to be expected in your boat because of the action of the engines and the propeller. But excessive vibration indicates conditions which must be promptly corrected to avoid damage. The following are some conditions which may cause vibrations.

- Weeds, ropes, fishing lines, nets or your own trailing lines can become wrapped around the propeller and/or shaft, causing vibration and loss of speed. Always stop the boat, make sure it is clear to the rear, and then reverse the propeller after going through a weedy area to unwrap and clear away any weeds which may have accumulated. If this doesn't clear the entanglement, and you can't anchor or moor the boat in shallow water to get to the stern drive in the water, the boat will have to be taken out of the water.

3. IMPACT TO STERN DRIVE

The stern drive can be damaged by impact, either while trailering or boating. To minimize the possibility of impact damage while trailering, keep the stern drive raised to the trailering position.

The hydraulic system used to raise and lower the stern drive can cushion impact and lessen damage from head-on impacts to the stern drive from underwater objects BUT ONLY when the boat is moving forward. There is no protection if the stern drive is struck during revers operation or from an angle when moving forward.

If you strike a submerged object, STOP THE ENGINE as soon as possible and examine the stern drive unit for damage. Even if no damage is visible, there could be internal problems or difficulty maneuvering. If you must use the boat after impact, run at the lowest speed possible.



SECTION 4 • BILGE & UNDERWATER GEAR

4. PROPELLER REMOVAL AND INSTALLATION


! WARNING

If engine is started during propeller maintenance, serious personal injury can occur.

Shut off engine, remove key, shift into neutral, and put tape over ignition switch key slot.


- Shut off engine, remove key, shift into neutral and put tape over ignition switch key slot.
- Straighten the bent tabs on the propeller nut retainer (Figure 4.4.1).

PROPELLER
(FIG. 4.4.1)

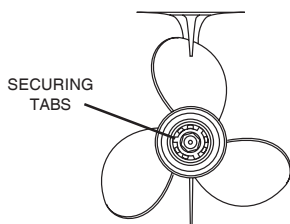


- Place a block of wood between the gear case and propeller to stop propeller from rotating and remove propeller nut (Figure 4.4.2).

PROPELLER
(FIG. 4.4.2)

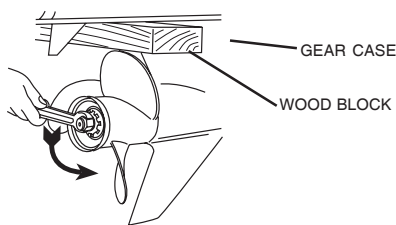


- Remove the propeller nut retainer, the thrust hub and the continuity washer (Figure 4.4.3) and put them in a secure place. Pull the propeller straight off the shaft. Remove the thrust washer that is behind the propeller. If the propeller is seized to the shaft and cannot be removed by hand, special tools are needed. Have the propeller removed by an authorized dealer or trained mechanic.
- Coat the propeller shaft with an anti-seize lubricant (Figure 4.4.4).

PROPELLER
(FIG. 4.4.3)

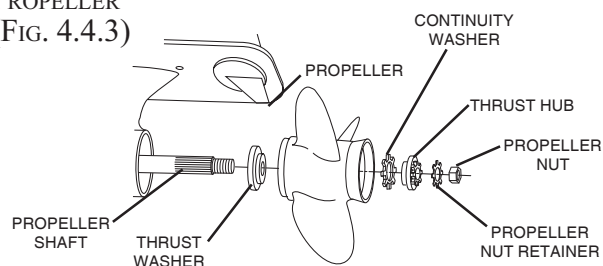


PROPELLER
(FIG. 4.4.4)

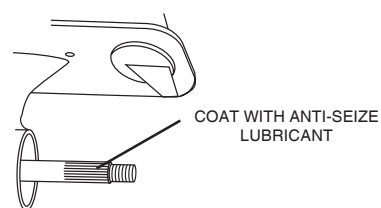


- Install the thrust washer, propeller, continuity washer, thrust hub, propeller nut retainer and the propeller nut onto the shaft (Figure 4.4.3).
- Place a block of wood between the gear case and the propeller (Figure 4.4.5) and torque the propeller nut to recommended manufacturer's specifications. The correct propeller nut torque is given in your Engine Operator's Manual in the Owner's Manual Packet.

PROPELLER
(FIG. 4.4.5)

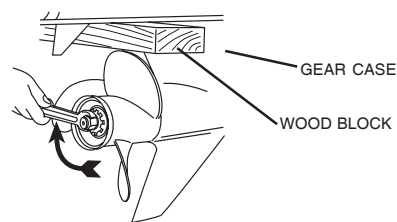

- Secure the propeller nut by bending three (3) of the tabs of the propeller nut retainer into the thrust hub grooves (Figure 4.4.6).


PROPELLER
(FIG. 4.4.6)

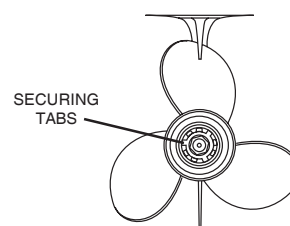

SECTION 4 • BILGE & UNDERWATER GEAR

F. BILGE LAYOUT

BILGE LAYOUT
(FIG. 4.5.1)

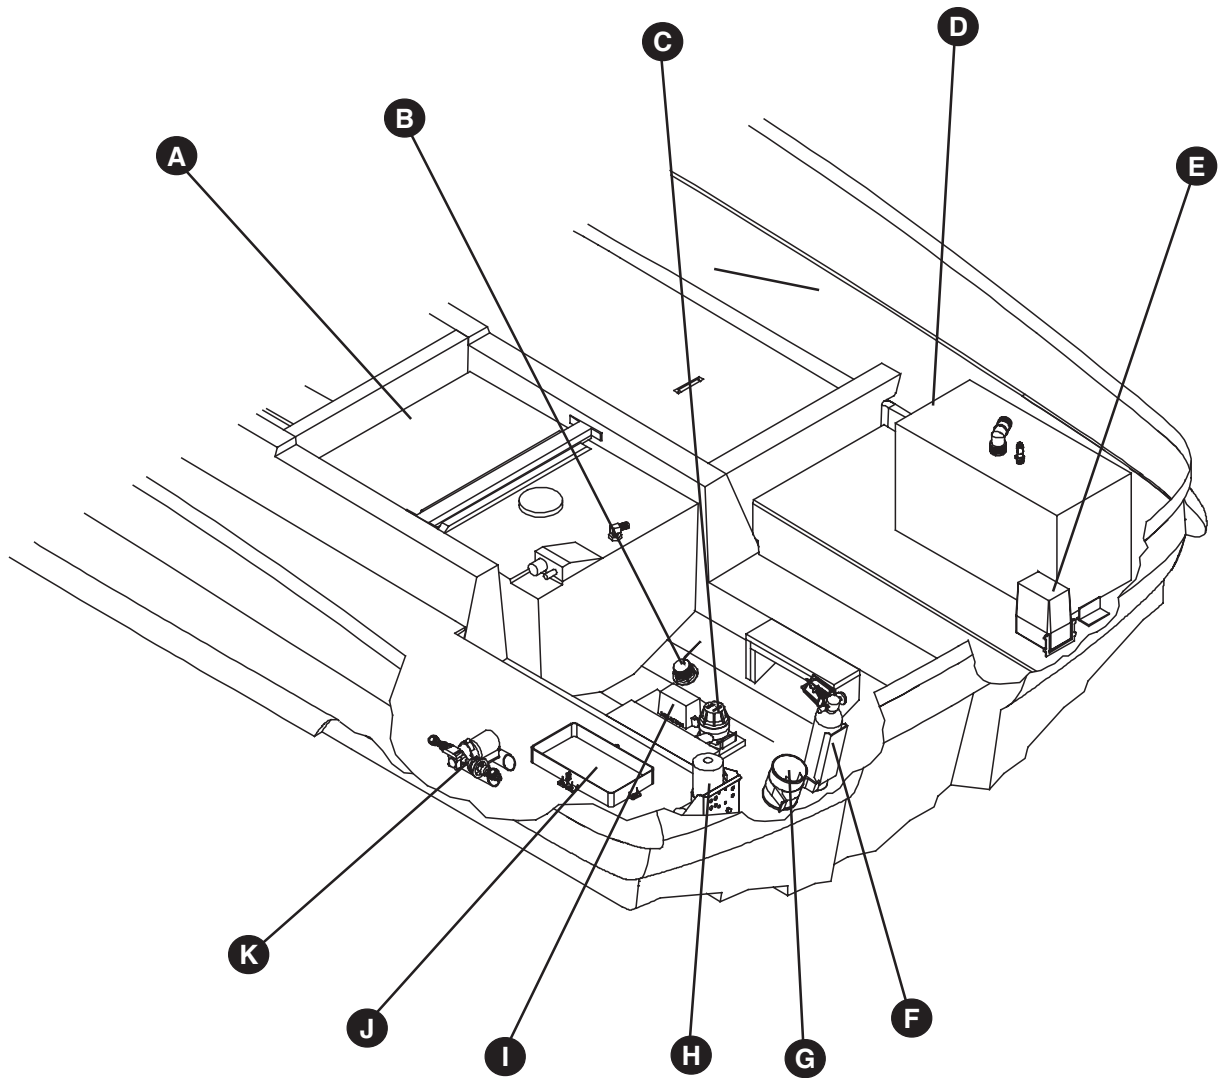

- A Fuel Tank
- B Transducer
- C Bilge Pump
- D Water Tank
- E Trim Tab Pump (option)
- F Extinguisher (option)
- G Bilge Blower
- H Power Trim Pump
- I Float Switch
- J Battery Tray
- K Water Pump



SECTION 4 • BILGE & UNDERWATER GEAR

THIS PAGE LEFT INTENTIONALLY BLANK



SECTION 5 • FUEL SYSTEM

1. FUEL SYSTEM

Section 3 - Using Your Boat contains important fueling information. Take time to read all the fuel related information in the owner's manual.

The 240 Sundeck® standard gasoline fuel system consists of one fuel tank with a total capacity of 65 gallons (246 liters), fuel tank vent, electric fuel valve, engine fuel supply line and fuel fill (Figure 5.1.1).


The fuel tank vent serves as a pressure/vacuum release and safety overflow. The fuel vent is located inside the fuel cap on the port side of the transo. Periodically check the vent to assure that it is not clogged.

The fuel pick-up at the fuel tank has an electric fuel valve to prevent fuel from siphoning out in the event of fuel line failure.

CAUTION

Never start an engine until you are certain that fuel fumes are not present in the engine compartment or elsewhere in the boat.

FUEL SYSTEM
(FIG. 5.1.1)

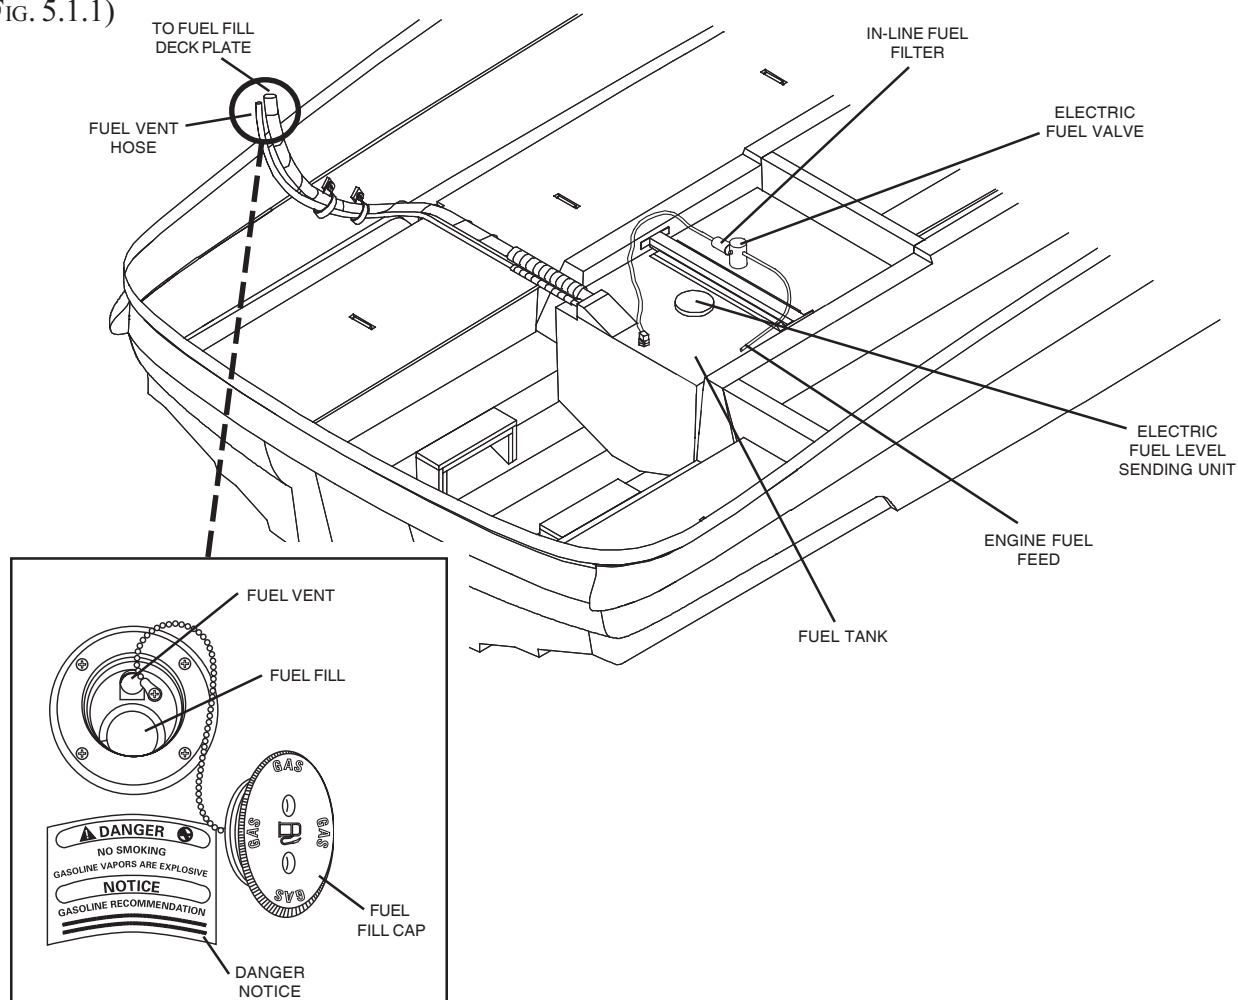


SECTION 5 • FUEL SYSTEM

A. ELECTRIC FUEL VALVES

The electric fuel valves are wired to the ignition switch. When the ignition is turned ON the valve opens, when the ignition is turned OFF the valve closes. The manual override knob on the side of the valve should be left in the OFF position at all times.

In the event of an electrical malfunction, the valve can be opened and closed manually by turning the manual override knob.

The electric fuel valve is installed in-line on the fuel hose between the fuel tank the engines and generator.

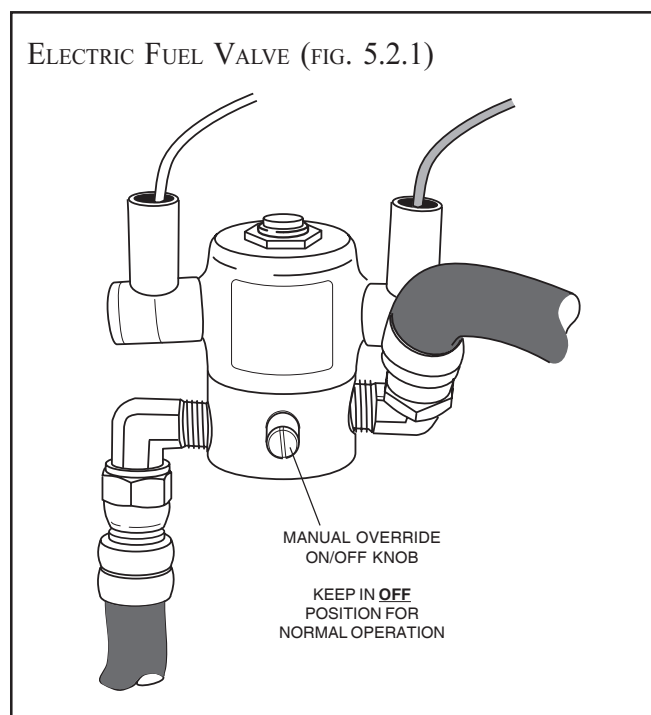

2. FUELING PRECAUTIONS

Certain precautions must be carefully and completely observed every time a boat is fueled, even with diesel fuel. Diesel fuel is nonexplosive but it will burn.

A. GENERAL:

- Fuel during daylight.
- Check fill plate label to ensure fuel is placed only in fuel tank. Fuel fill plate is located on the port and side of the transom (see Fig. 5.3.1).
- Avoid spills.
- Know your fuel capacity and consumption. Record the amount of fuel used since your last fill up, and compute the engine's hourly fuel usage. As a fuel gauge backup check, deduct the average hourly fuel usage from fuel tank capacity.
- Observe the "Rule of Thirds": one-third fuel for trip out, one-third for return and one-third for reserve.
- Allow an additional 15 percent fuel reserve when operating in rough seas.

B. BEFORE & DURING FUELING – CHECKLIST:

- Fire extinguisher – close at hand.
- Mooring – boat tied securely to fueling pier.
- Crew – at least one knowledgeable person present.
- Passengers – unnecessary people off the boat.
- Engines – stopped.
- Electrical equipment, including blowers – power off.
- Windows, doors, hatches – closed.
- Smoking material – extinguished.
- Inboard tanks – grounded.
- Filler pipe – marked GAS or DIESEL.
- Fuel nozzle – in contact with filler pipe to prevent static sparks.


SECTION 5 • FUEL SYSTEM

- Fill level – fill less than rated capacity of tank; allow for fuel expansion.
- Trim – fuel weight distributed equally.

C. AFTER FUELING – CHECKLIST:

- Windows, doors, hatches – open.
- Sniff test – if fuel fumes remain, operate blowers until fumes are gone.
- Fuel tank – secure filler cap.
- Spills – wipe; dispose of rags ashore.

FUEL FILL LOCATION
(FIG. 5.3.1)

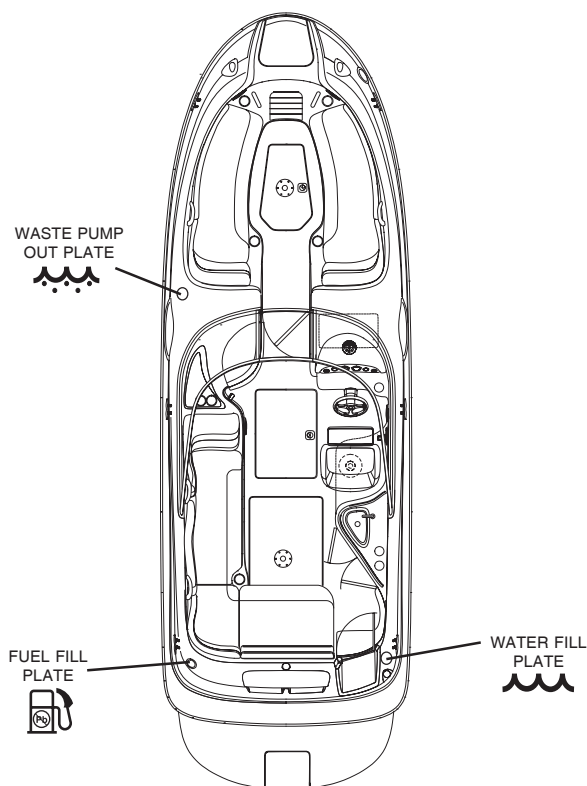

SECTION 5 • FUEL SYSTEM

THIS PAGE LEFT INTENTIONALLY BLANK



SECTION 6 • ELECTRICAL SYSTEM

1. ELECTRICAL SYSTEM

A. DIRECT CURRENT (DC)

The 12 volt direct current (DC) electrical system (similar to that in your car or truck) derives its power from the battery. An engine-driven alternator keeps the battery in a charged condition. The battery voltage is indicated by the voltmeter on the helm panel. The negative terminal of the battery is attached to the grounding studs of the engine.

Ask your dealer for a careful analysis of DC power needs on your boat. It may be necessary to add batteries or auxiliary charging methods to supply adequate power for any additional accessories you wish to add.

BATTERIES



DANGER

DO NOT USE JUMPER CABLES IN THE ENGINE COMPARTMENT.

They can cause an explosion from sparks.



DANGER

A battery will explode if a flame or spark ignites the free hydrogen given off during charging.

Never use an open flame or strike sparks in the battery area.

The battery installed in your boat has been selected for its ability to furnish starting power based on engine starting requirements, as well as its ability to power the DC accessories attached to the electrical system. Your Engine Owner's Manual indicates the recommended battery for the engine installed in your boat.



CAUTION

To prevent arcing or damage to the alternator, always disconnect battery cables before doing any work on the engine's electrical system.

To remove the battery cables:

1. Turn off all items drawing power from the battery.
2. Turn the battery switch to the OFF position (Battery switch is optional equipment on some models).
3. Remove the negative cable first, then the positive cable. To replace the cables, first replace the positive cable, then the negative.

BATTERY MAINTENANCE

- Check the fluid levels in the cells approximately every 4 weeks, and weekly in summer and hot zones.
- The fluid level must be between the lower and upper markings.
- Replenish only with distilled water. Do not use metal funnel.
- Coat battery terminal clamps with silicone grease. Keep batteries clean and dry.

Battery life is shortened if it is drained to zero charge before recharging. It is recommended that a battery not be discharged more than 50 percent. If the battery does become run down, recharge it as soon as possible.

Running the engine to recharge the battery may not be effective. The alternator only creates charging power at higher engine speeds, so simply idling or trolling will not generate enough power to recharge the battery.

If you need to charge a battery, use only a battery charger designed to charge automotive/marine batteries. Use charger only when batteries are disconnected from the boat's electrical circuit. Follow the charger instructions.


If the boat is equipped with dockside power and an AC/DC converter/battery charger, keep it on when shore power is available. This will keep the batteries properly charged and allow use of all DC powered equipment on board without draining the battery.

If your boat will not be used for several weeks or more, and there is no shore power hookup, remove the batteries from the boat and connect them to a charger.




SECTION 6 • ELECTRICAL SYSTEM

BATTERY CABLE ROUTING
(FIG. 6.2.1)

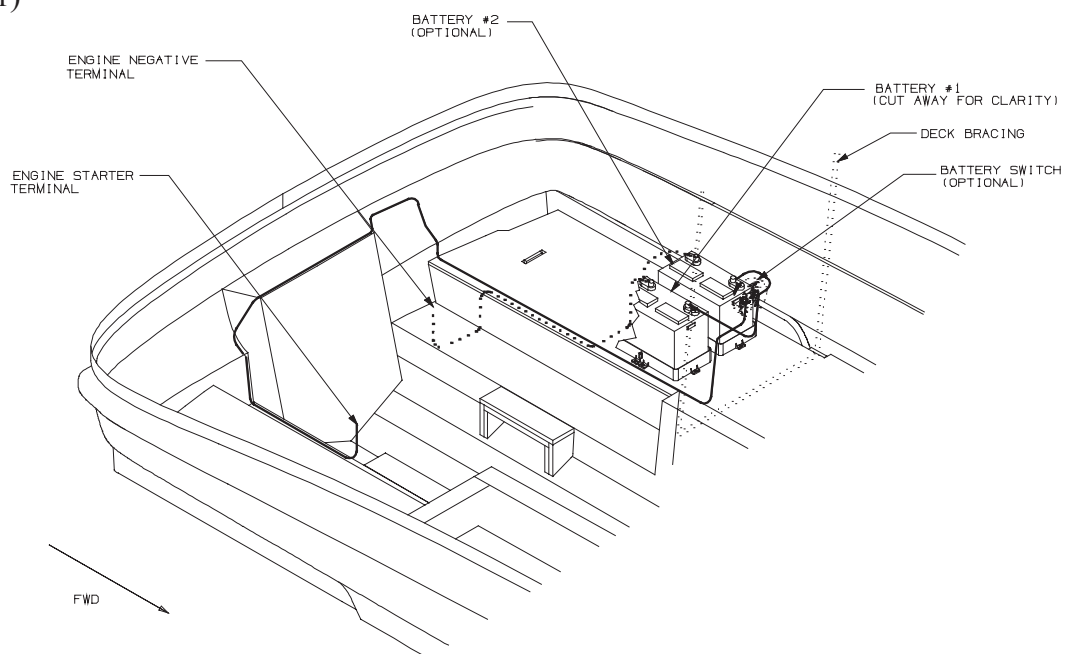

BATTERY SWITCH LOCATION
(UNDER AFT PORT BENCH SEAT)
(FIG. 6.2.2)

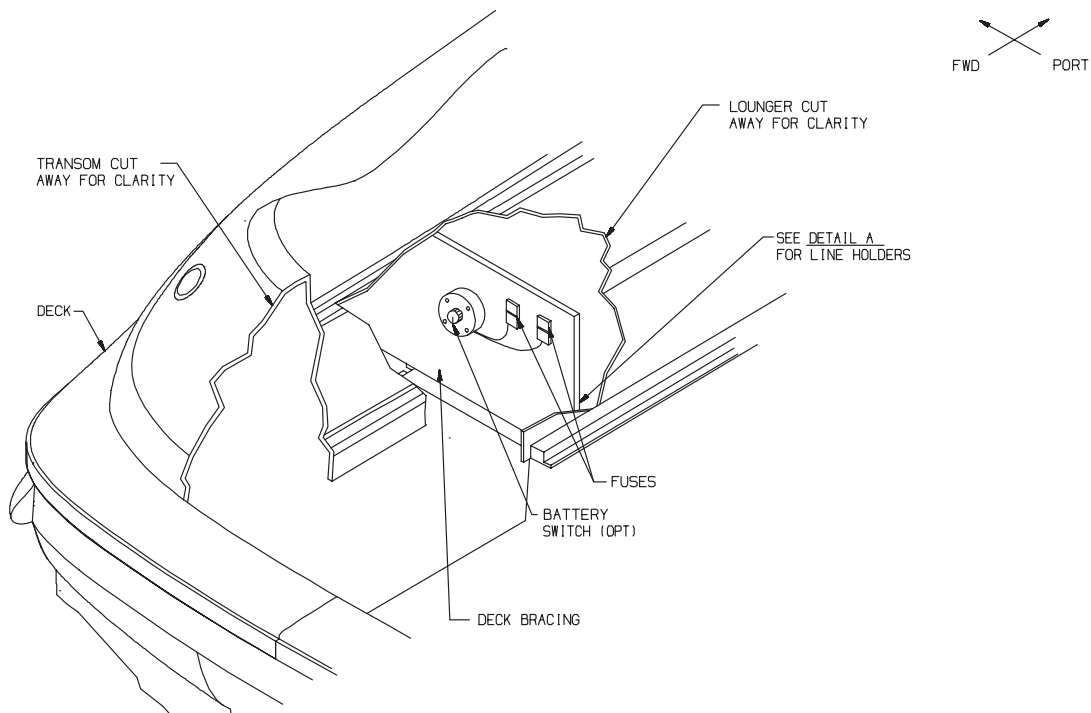

SECTION 6 • ELECTRICAL SYSTEM

B. RECOMMENDED BATTERIES

The following table describes the recommended marine cranking batteries to install in your boat. All batteries should be of the same type, age & rating.

Application	Group	Volts	CCA*	Reserve	Qty.
Engines	31	12	800	200	2

*COLD CRANKING AMPS

RECOMMENDED BATTERY:

DOUGLAS BATTERY TYPE: 31DCM, ITEM NUMBER: 989 OR EQUIVALENT
DIMENSIONS: 13" x 6¹³/₁₆" x 10¹/₁₆"

C. BATTERY SWITCH

The battery switch controls the delivery of DC power from the batteries to the engines and all equipment, lights and accessories using DC power. The battery switches are located on the port side of the cockpit (Figure 6.3.1).

NOTE: The bilge pump and stereo memory are not shut off by the battery switch. This is to permit the bilge pump to operate at any time excess fluid accumulates in the bilge, which can occur when the boat is docked and unattended. The entire remaining DC system is turned off with the battery switch.

2. IGNITION PROTECTION

All electrical components in the engine compartment must be ignition-protected to avoid the possibility of creating sparks in a gasoline environment.



DANGER

GASOLINE VAPORS CAN EXPLODE

Use **ONLY** Marine-rated parts to replace such items as starters, distributors, alternators, generators, etc.

Do not use automotive parts for these components or any jumper cables because they are not ignition-protected and could cause a fire or explosion.

Protective terminal covers, such as rubber boots on electrical connections, must be in place when engine is operating or when working in the engine compartment.


Jumper cables are not ignition-protected. **DO NOT USE** jumper cables in the engine compartment. The engine compartment may accumulate dangerous explosive gasoline fumes/vapors and hydrogen gas from batteries being charged. A spark produced when connecting a jumper cable can cause an explosion.

BATTERY SWITCH (FIG. 6.3.1)

WITH STANDARD BATTERY



WITH OPTIONAL SECOND BATTERY OR OPTIONAL BOW THRUSTER

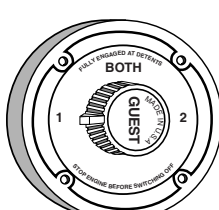

SECTION 6 • ELECTRICAL SYSTEM

3. BREAKERS AND/OR FUSES

If you need to replace a fuse or breaker, **use only the same amperage as the original**. It is recommended that you carry spare fuses. See page 6.5 for the proper breaker and/or fuse sizes.

If a fuse or breaker is replaced with one of lower amperage, it will not be sufficient to carry the electrical load of the equipment it is connected to and will cause nuisance fuse failure or breaker tripping.


WARNING

Use of higher amperage fuses or breakers is a fire hazard.


Use fuses and breakers having the same amperage rating as the original or as specified.

If a fuse or breaker is replaced with one of higher amperage, it will not provide adequate protection against an electrical malfunction and will create a fire hazard.

FUSE CONDITION (ATO TYPE FUSE) (FIG. 6.4.1)

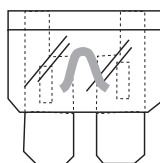

GOOD FUSE

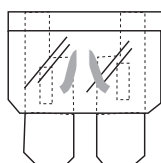


BLOWN FUSE

4. ACCESSORY FUSE BLOCK

An accessory fuse block holds fuses for equipment that is not operated by the electronic switch panel. The fuse block is located inside the control station. To access the fuse block remove the upper panel behind the control station in the berth.


ACCESSORY FUSE BLOCK (FIG. 6.4.2)

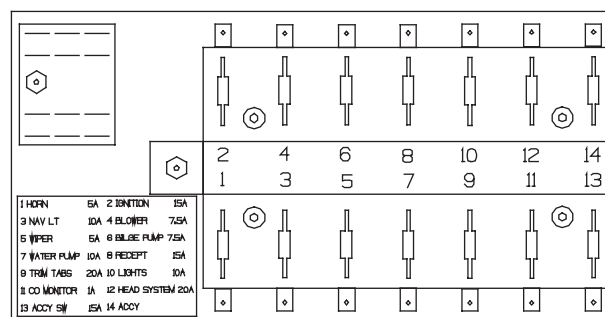

SECTION 6 • ELECTRICAL SYSTEM

5. FUSE SIZES

ACCESSORY FUSE BLOCK (LOCATED INSIDE THE CONTROL STATION)
(FIG. 6.5.1)

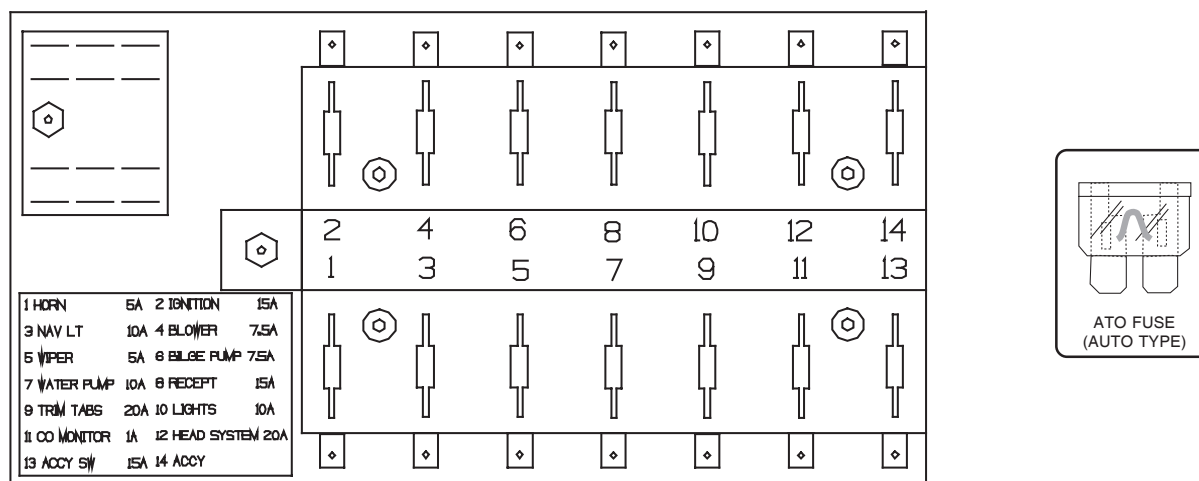

FUSE NAME FUSE AMPERAGE 12VDC


1. HORN	5
3. NAVIGATION LIGHTS	10
5. WINDSHIELD WIPER	5
7. WATER PUMP	10
9. TRIM TABS	20
11. CO MONITOR	1
13. ACCESSORY	15

FUSE NAME

FUSE AMPERAGE 12VDC

2. IGNITION	15
4. BLOWER	7.5
6. BILGE PUMP	7.5
8. 12V RECEPTACLE	15
10. LIGHTS	10
12. HEAD SYSTEM	20
14. ACCESSORY	BLANK

ACCESSORY FUSE HOLDERS (LOCATED ADJACENT TO BATTERY SWITCH)
(FIG. 6.5.2)

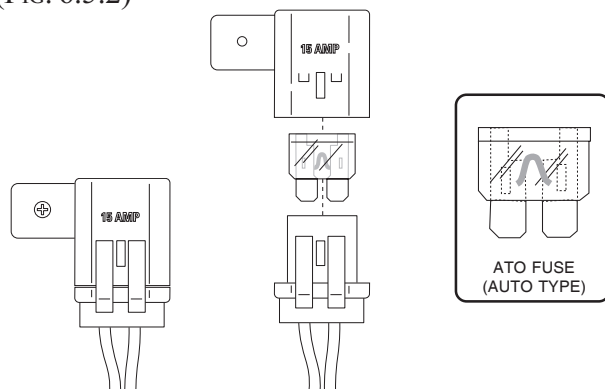


FUSE NAME

FUSE AMPERAGE 12VDC

FWD BILGE PUMP	7.5
AFT BILGE PUMP	7.5
STEREO MEMORY	15

MERCATHODE IN-LINE FUSE HOLDER (LOCATED ADJACENT TO BATTERY SWITCH)
(FIG. 6.5.3)

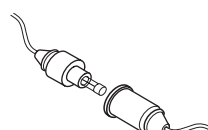

FUSE NAME

FUSE AMPERAGE 12VDC

MERCATHODE	20
------------	----




SECTION 6 • ELECTRICAL SYSTEM

6. 12 VOLT ACCESSORY RECEPTACLE

Your boat has a 12 volt accessory receptacle located in the helm side panel storage. The receptacle is a cigarette lighter style plug that may be used with any 12 volt accessories using this type of plug.

12 VOLT ACCESSORY
RECEPTACLE
(FIG. 6.6.1)

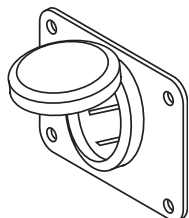


7. LIGHTING

Your boat is equipped with a variety of different lighting fixtures (Figure 6.7.1). **Always replace a bulb using the type and wattage of the original bulb.**

SECTION 6 • ELECTRICAL SYSTEM

EXTERIOR LIGHTS (FIG. 6.7.1)

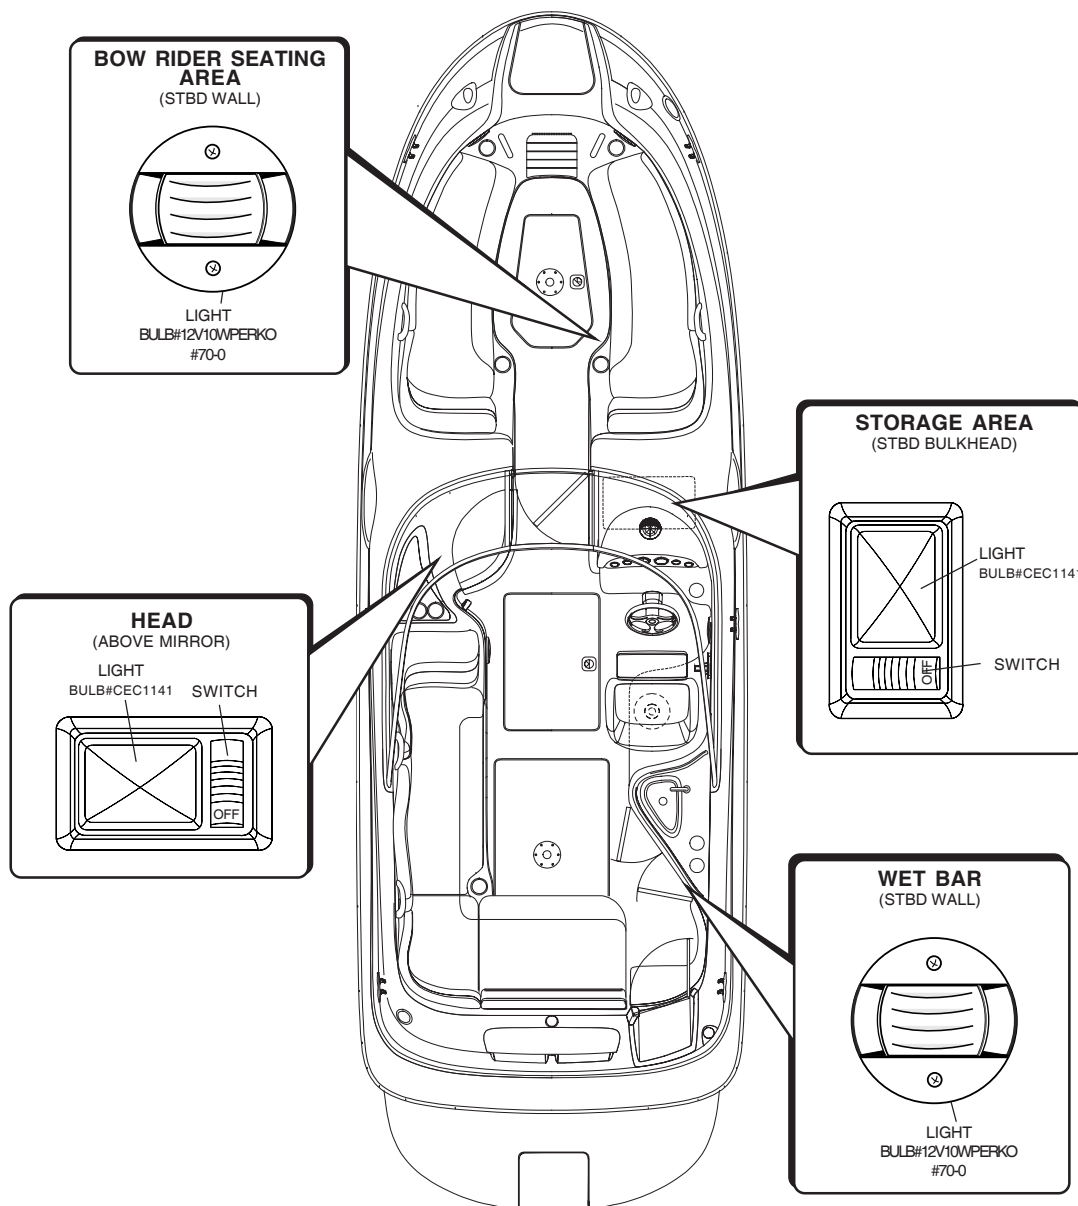

SECTION 6 • ELECTRICAL SYSTEM

8. ELECTROLYTIC CORROSION AND ZINC ANODES

Electrolytic corrosion of metals on power boats can result in rapid and serious deterioration of metal parts. You must set a regular schedule and look for the possibility of electrolytic corrosion (the deterioration of metals due to dissimilar characteristics when placed in salt water). It is your responsibility to check for and replace parts damaged due to electrolytic corrosion.

To minimize electrolytic corrosion of the metals on your boat, zinc anode plates are provided on your boat to protect underwater hardware. Zinc, being much less "noble" than the copper-based alloys and aluminum used in underwater fittings, will deteriorate first and protect the other metals.

Stern drives are fitted with zinc anodes on their lower units (refer to your Engine Owner's Manual for their locations). If your boat is equipped with trim tabs, zinc plates are installed on each of the trim tabs. (See Figure 6.9.1) If boat is equipped with Mercathode® stern drive may not have zincs.

Zinc anodes require replacement about every six months, if the boat is operated in salt water. In fresh water, the zinc anodes can be replaced about once a year.

If the anodes deteriorate more rapidly than this, there is probably a stray current problem within the boat or at the slip or mooring.

If the anodes do not deteriorate, they are not protecting the other metallic parts of your boat. This can be caused by loose anodes or by low grade zinc or by not having a solid electrical contact between the anode and the metal it contacts, or by paint on the anodes.

If the anodes are deteriorating rapidly, or not at all, contact your dealer.

When an AC shore power system is connected to the boat, the underwater metal fittings will, in effect, be connected through the water to grounded metals ashore. This results in the zincs being consumed at a faster rate unless the marina maintains a protective system to prevent this. When the marina provides a zinc anode in the water bonded to the metal outlet box on the dock, zinc loss on the boat will be reduced. Do not connect this zinc to the boat's ground system.

It is extremely important that all electrically-operated DC equipment and accessories be wired so that the ground polarity of each device is the same as that of the battery. Your boat has a negative ground system. The zinc anode is connected to every metal item in the boat (fuel tanks, underwater gear, etc.) via the green bonding wire.

Electrolytic corrosion can also be caused by "stray currents" due to a fault in an electrical item, even though correctly grounded. A galvanic current isolator (zinc saver) is standard on all Sea Ray® boats. It is installed between the shore power ground and the boats' AC grounding connection to the DC bonding system. This connection maintains the safety ground from dockside power while stopping the flow of DC corrosive currents.

NOTICE

DO NOT PAINT BETWEEN THE ZINC AND THE METAL IT CONTACTS, AND DO NOT PAINT OVER THE ZINC.


! CAUTION

Never disconnect the green wire (safety ground) from the engine terminal.



SECTION 6 • ELECTRICAL SYSTEM

ZINC PLATES ON TRIM TABS
(FIG. 6.9.1)

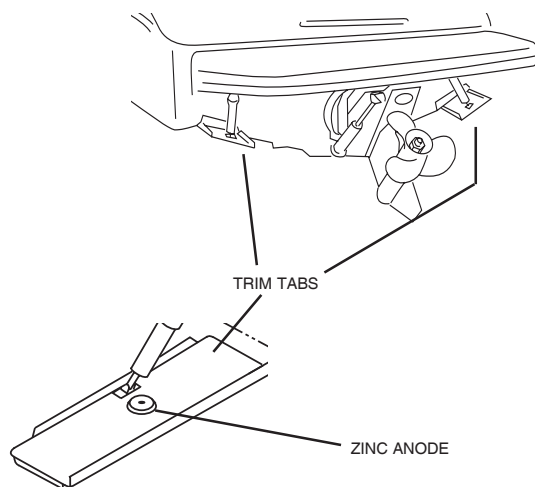

9. MARINE ELECTRONIC CATHODIC ANTICORROSION SYSTEM (MERCATHODE®)


The automatically controlled Cathodic Anti-Corrosion System for marine installation protects underwater metals from the effects of corrosion and electrolysis on stern drives. The system components are designed for marine service. **DO NOT PAINT THE MERCATHODE® SYSTEM.**

The anode and reference electrode are attached to the electrode assembly under each stern drive unit. The solid state controller is mounted within a plastic housing on the transom in the bilge.

Maintenance

The Mercathode® system must be tested to ensure adequate output. The test should be performed every 100 hours or annually. Contact your authorized Sea Ray® dealer to arrange for this test. Refer to the engine operator's manual for more detailed information.

MERCATHODE® SYSTEM
(FIG. 6.9.2)

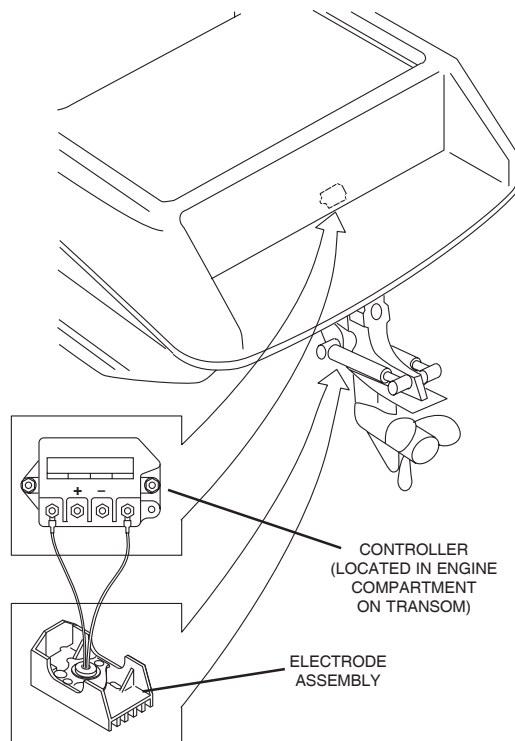


10. ELECTRICAL SCHEMATICS & WIRING HARNESES

This owner's manual contains electrical schematics and wiring harness illustrations for your boat (See pages 6.10 thru 6.15). These electrical schematics were generated by electrical CAD designers at the engineering division for technical reference and service technicians. Sea Ray® does not recommend that you attempt to work on the boat's electrical system yourself. Instead, we recommend that you take your boat to your authorized Sea Ray® dealer for service. Sea Ray® reserves the right to change or update the electrical system on any model at any time without notice to the consumer and is **NOT** obligated to make any updates to units built prior to changes.

SECTION 6 • ELECTRICAL SYSTEM


WIRE HARNESSES

WIRE HARNESS INSTALLATION
(FIG. 6.10.1)

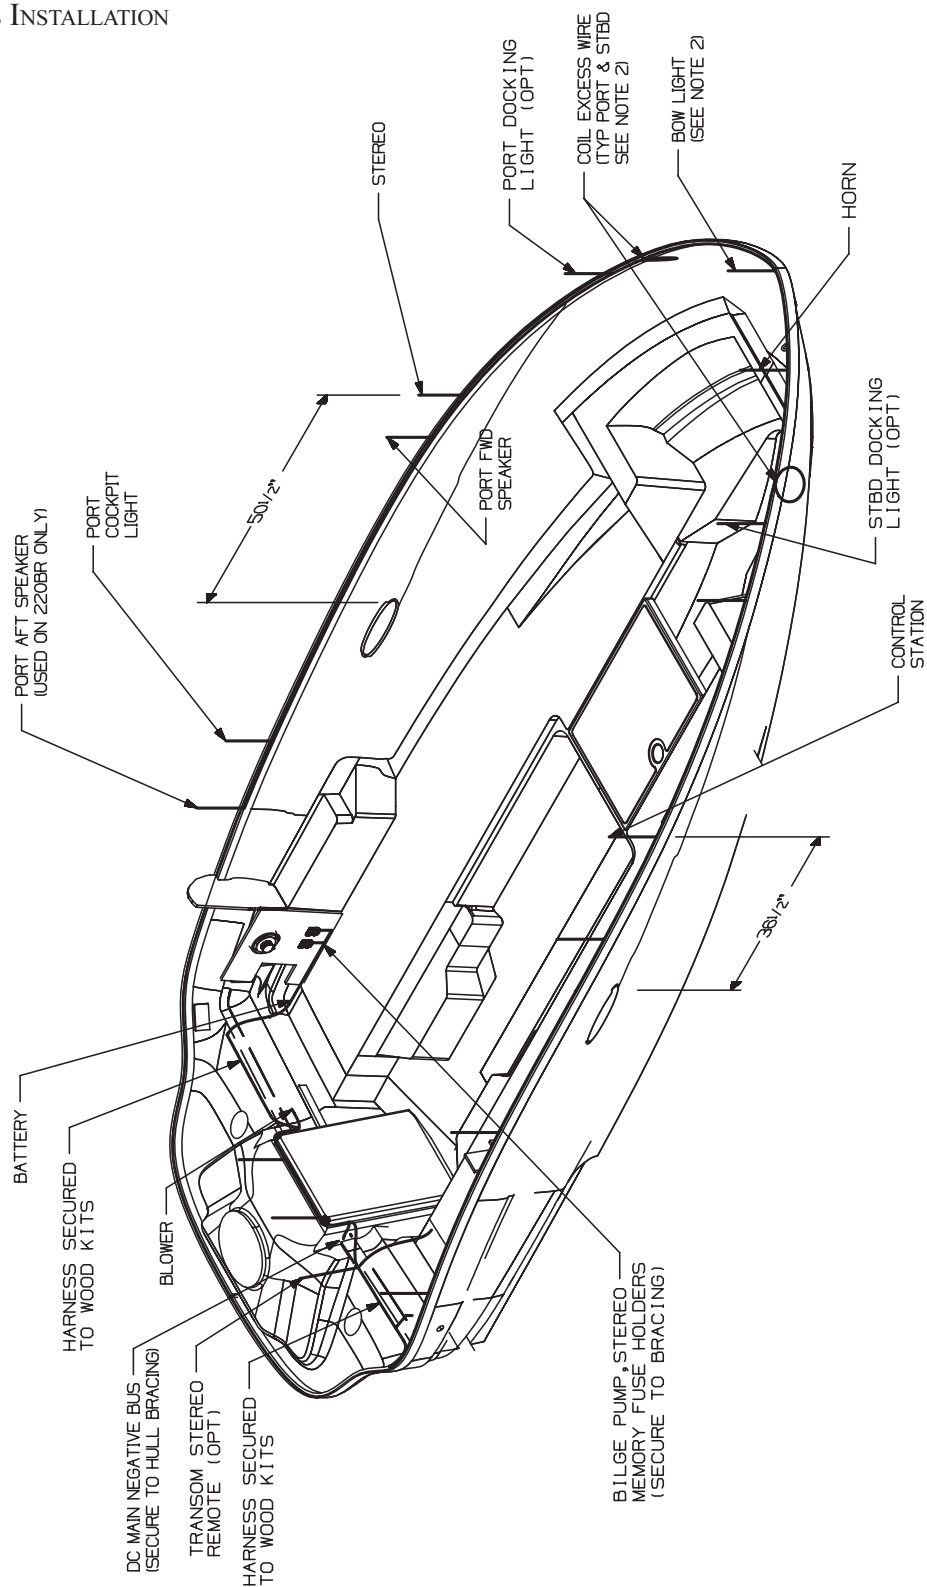

240 SD Electrical Schematics

DC WIRING DIAGRAM (FIG. 6.11.1)

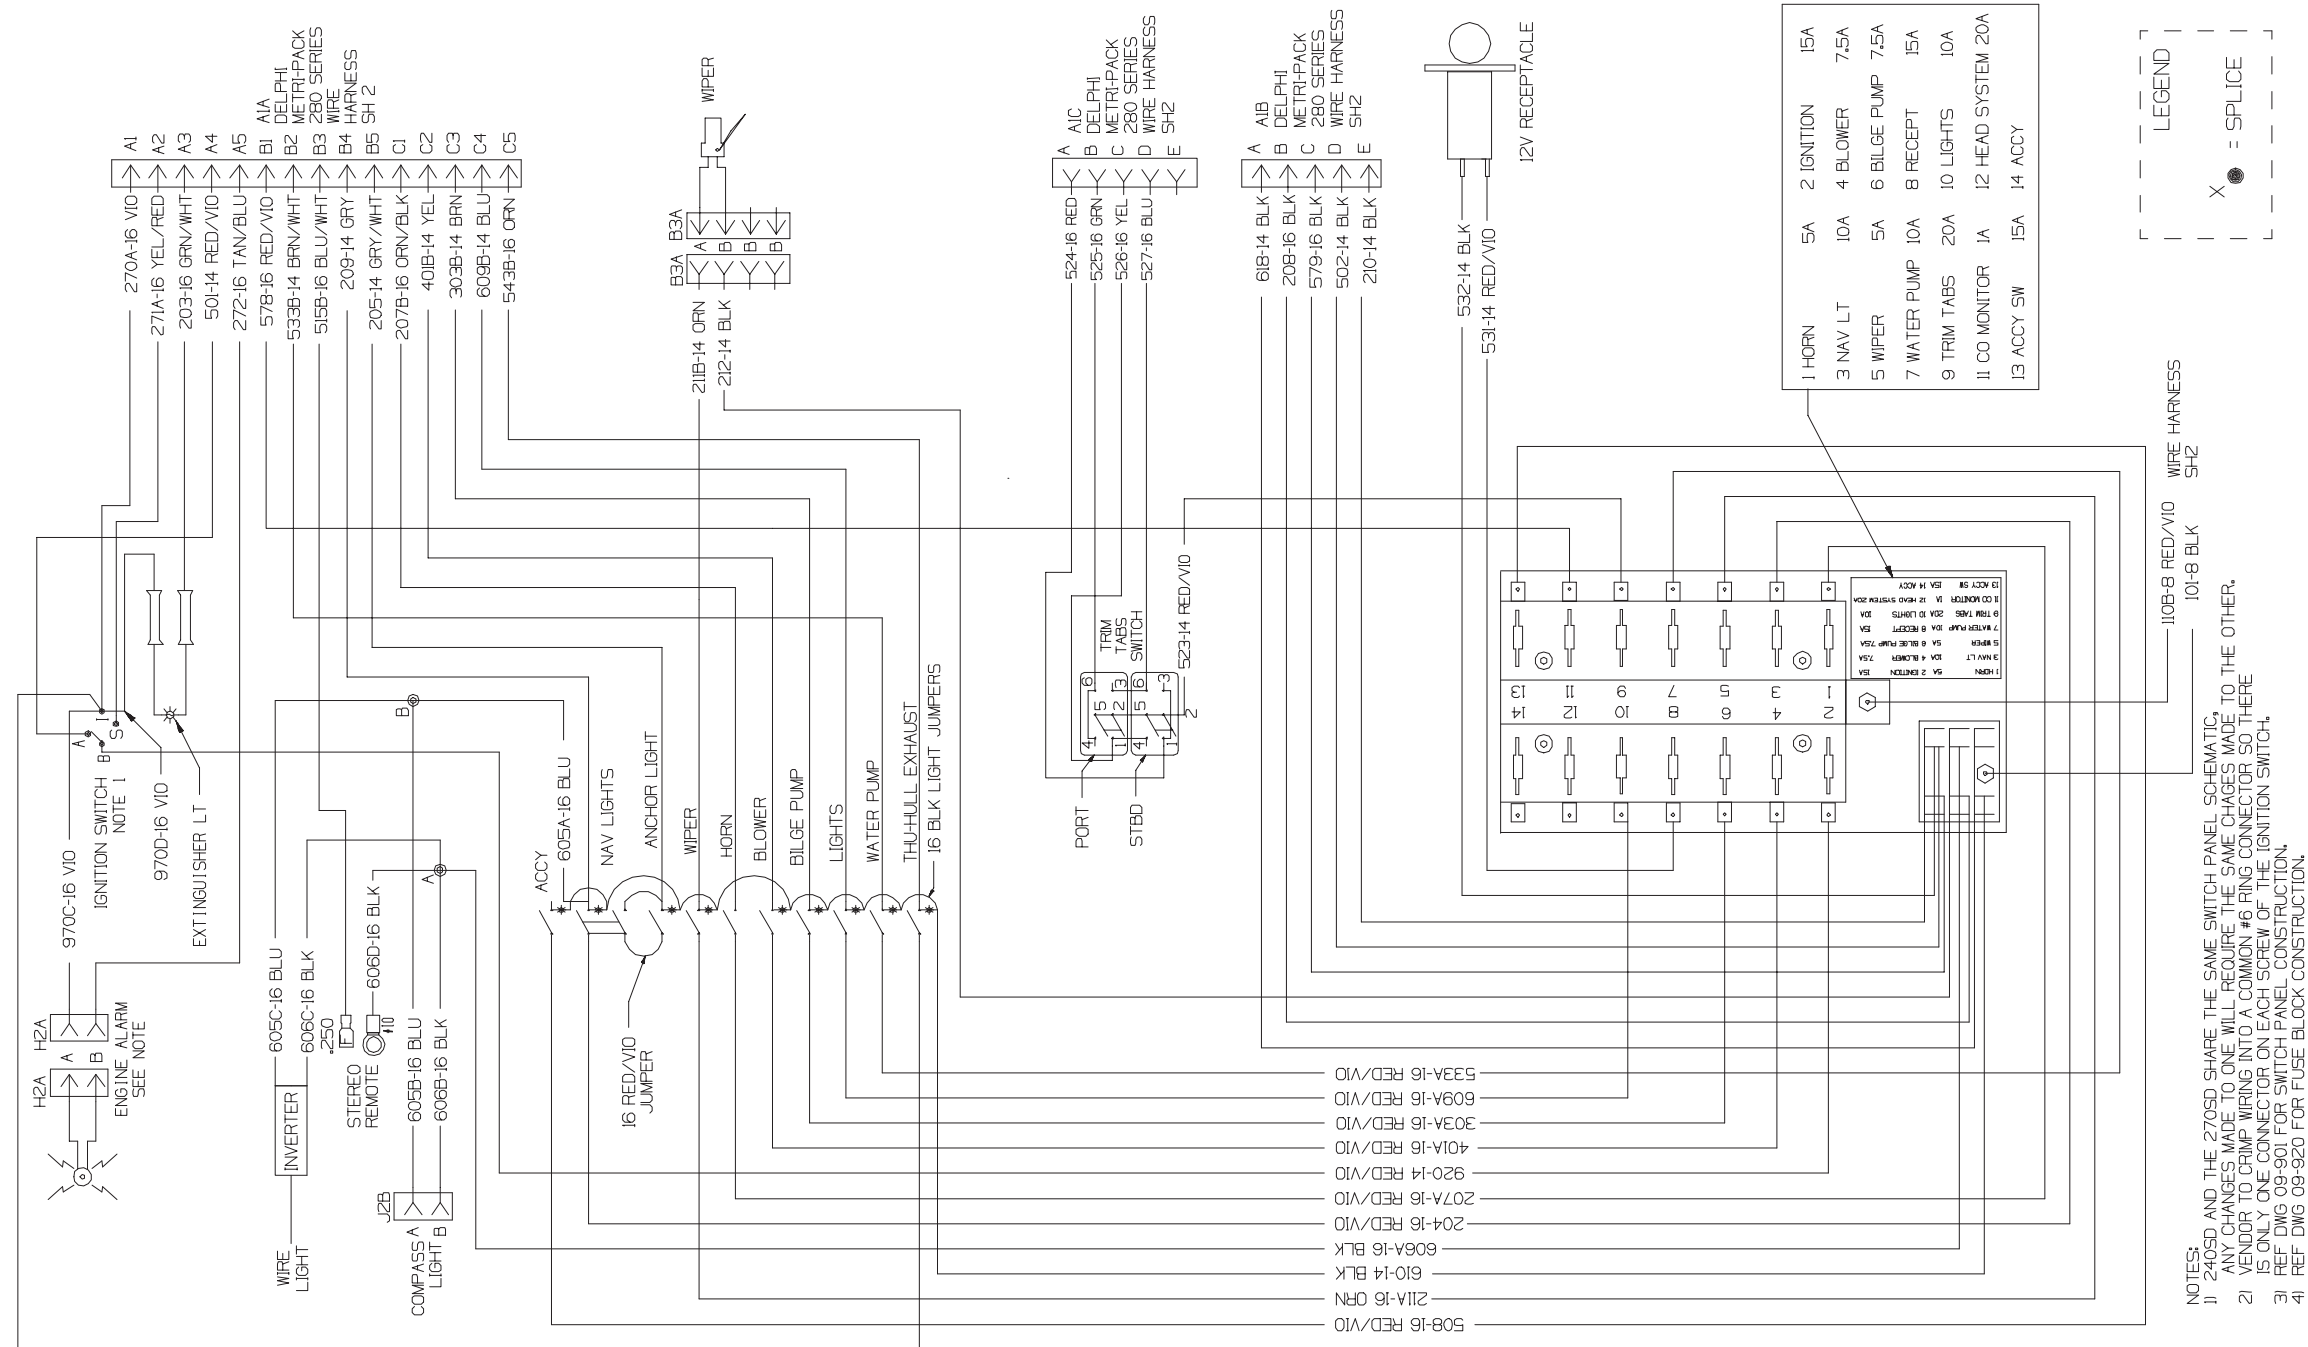

DRAWING NO. 09-601 (1 OF 3) REVISION 4

DC WIRING DIAGRAM
(FIG. 6.12.1)

This diagram illustrates the DC electrical system for a boat, showing the connection of various components to the main DC negative bus (M-VDC) and the control station DC negative bus (CS-VDC).

Legend:

- M-VDC = MAIN DC NEGATIVE BUS
- CS-VDC = CONTROL STATION DC NEGATIVE BUS
- ⊙ = SPLICE
- = WIRING NOT PART OF STANDARD HARNESS

Key Components and Connections:

- Battery:** Connected to M-VDC and CS-VDC. Includes a battery switch and a battery disconnect switch.
- Engine:** Connected to M-VDC and CS-VDC. Includes a fuel pump, water pump, and engine starter.
- Fuel System:** Includes a fuel pump, fuel valve, and fuel filter.
- Trim Indicator:** Connected to the engine.
- High Water Temp Switch:** Connected to the engine.
- Low Oil Pressure Switch:** Connected to the engine.
- Mercathode:** Connected to the engine.
- Plastic Fuel Tank:** Connected to the engine.
- Extinguisher:** Connected to M-VDC.
- Throttle/Shift Control:** Connected to M-VDC.
- Speed/Pitot Transducer:** Connected to M-VDC.
- Power Trim Pump:** Connected to M-VDC.
- Fuel Valve:** Connected to M-VDC.
- Float Switch:** Connected to M-VDC.
- Antenna Lead:** Connected to M-VDC.
- Stereo System:** Includes a stereo amplifier, speakers, and a subwoofer.
- LEDGER:** A table listing the wiring for various components.

Notes:


- NOTE 1: 971B-16 BLU, 972-16 GRN, 970-16 VIO.
- NOTE 2: 5012-16 LT BLU, 5013-16 LT BLU/BLK.
- NOTE 3: 5010-16 PUR, 5011-16 PUR/BLK.
- NOTE 4: 5008-16 GRN, 5009-16 GRN/BLK.
- NOTE 5: 5002-16 GRY, 5003-16 GRY/BLK.
- NOTE 6: 5000-16 WHT, 5001-16 WHT/BLK.
- NOTE 7: 502-10 BLK, 505B-14 YEL.
- NOTE 8: 502-10 BLK, 505B-14 YEL.
- NOTE 9: 600B-14 BLU.

Wiring Details:

- 903A-16 VIO:** Connected to M-VDC.
- 904A-16 YEL/RED:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:** Connected to M-VDC.
- 903B-16 VIO:** Connected to M-VDC.
- 904B-16 YEL/RED:** Connected to M-VDC.
- 905-16 TAN/BLU:** Connected to M-VDC.
- 901-10 RED/VIO:** Connected to M-VDC.
- 902-10 BLK:**


240 SD Electrical Schematics

DC WIRING DIAGRAM
(FIG. 6.13.1)

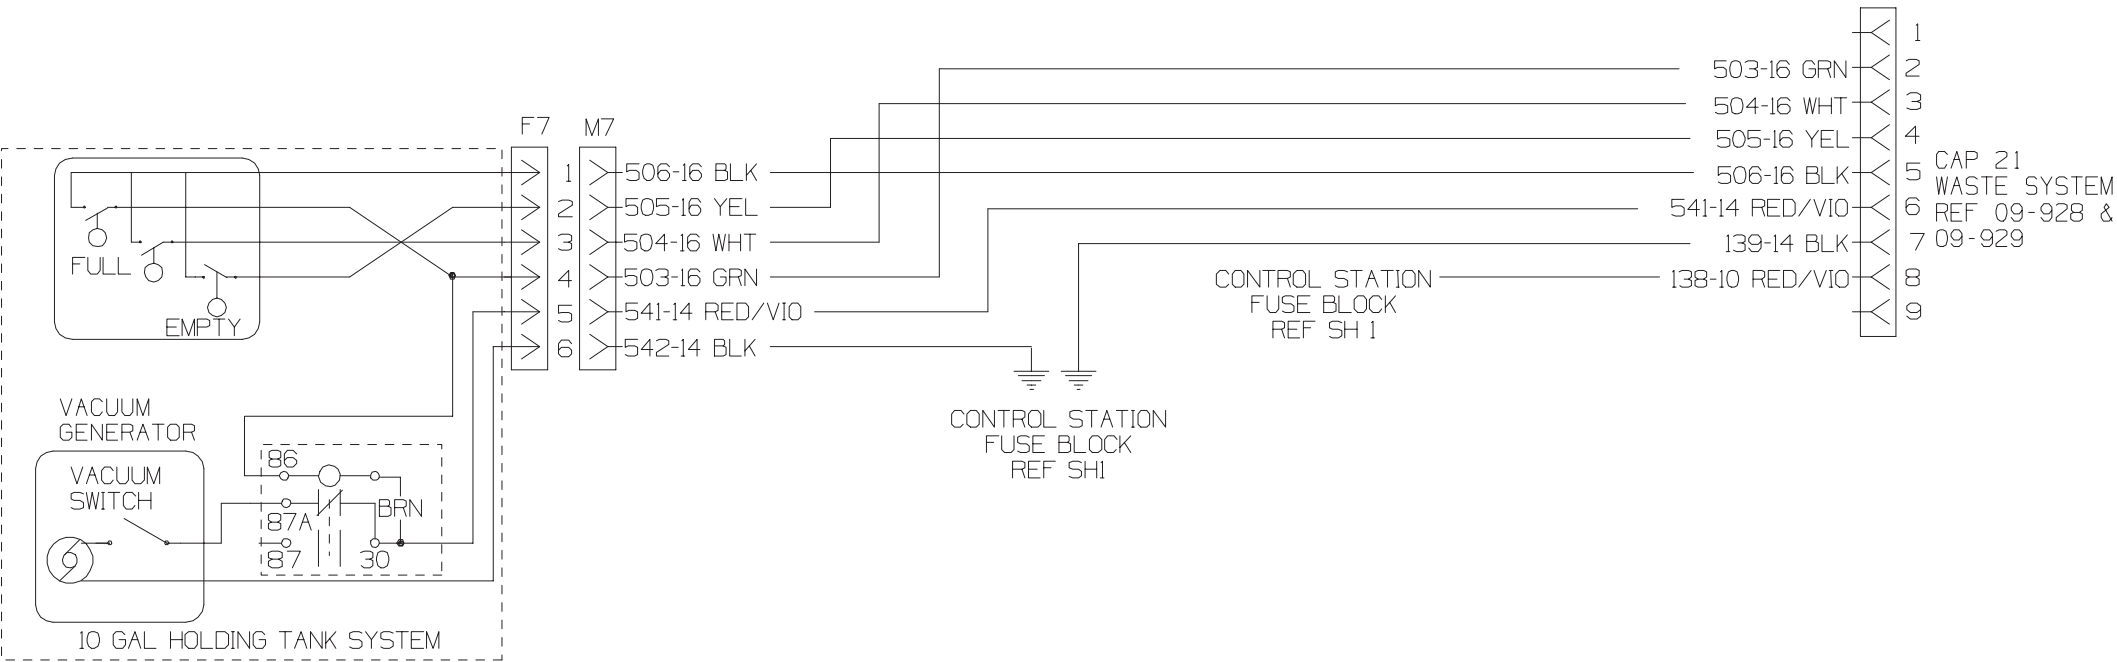

240 SD Electrical Schematics

SATILLITE STEREO SYSTEM DIAGRAM
(FIG. 6.14.1)

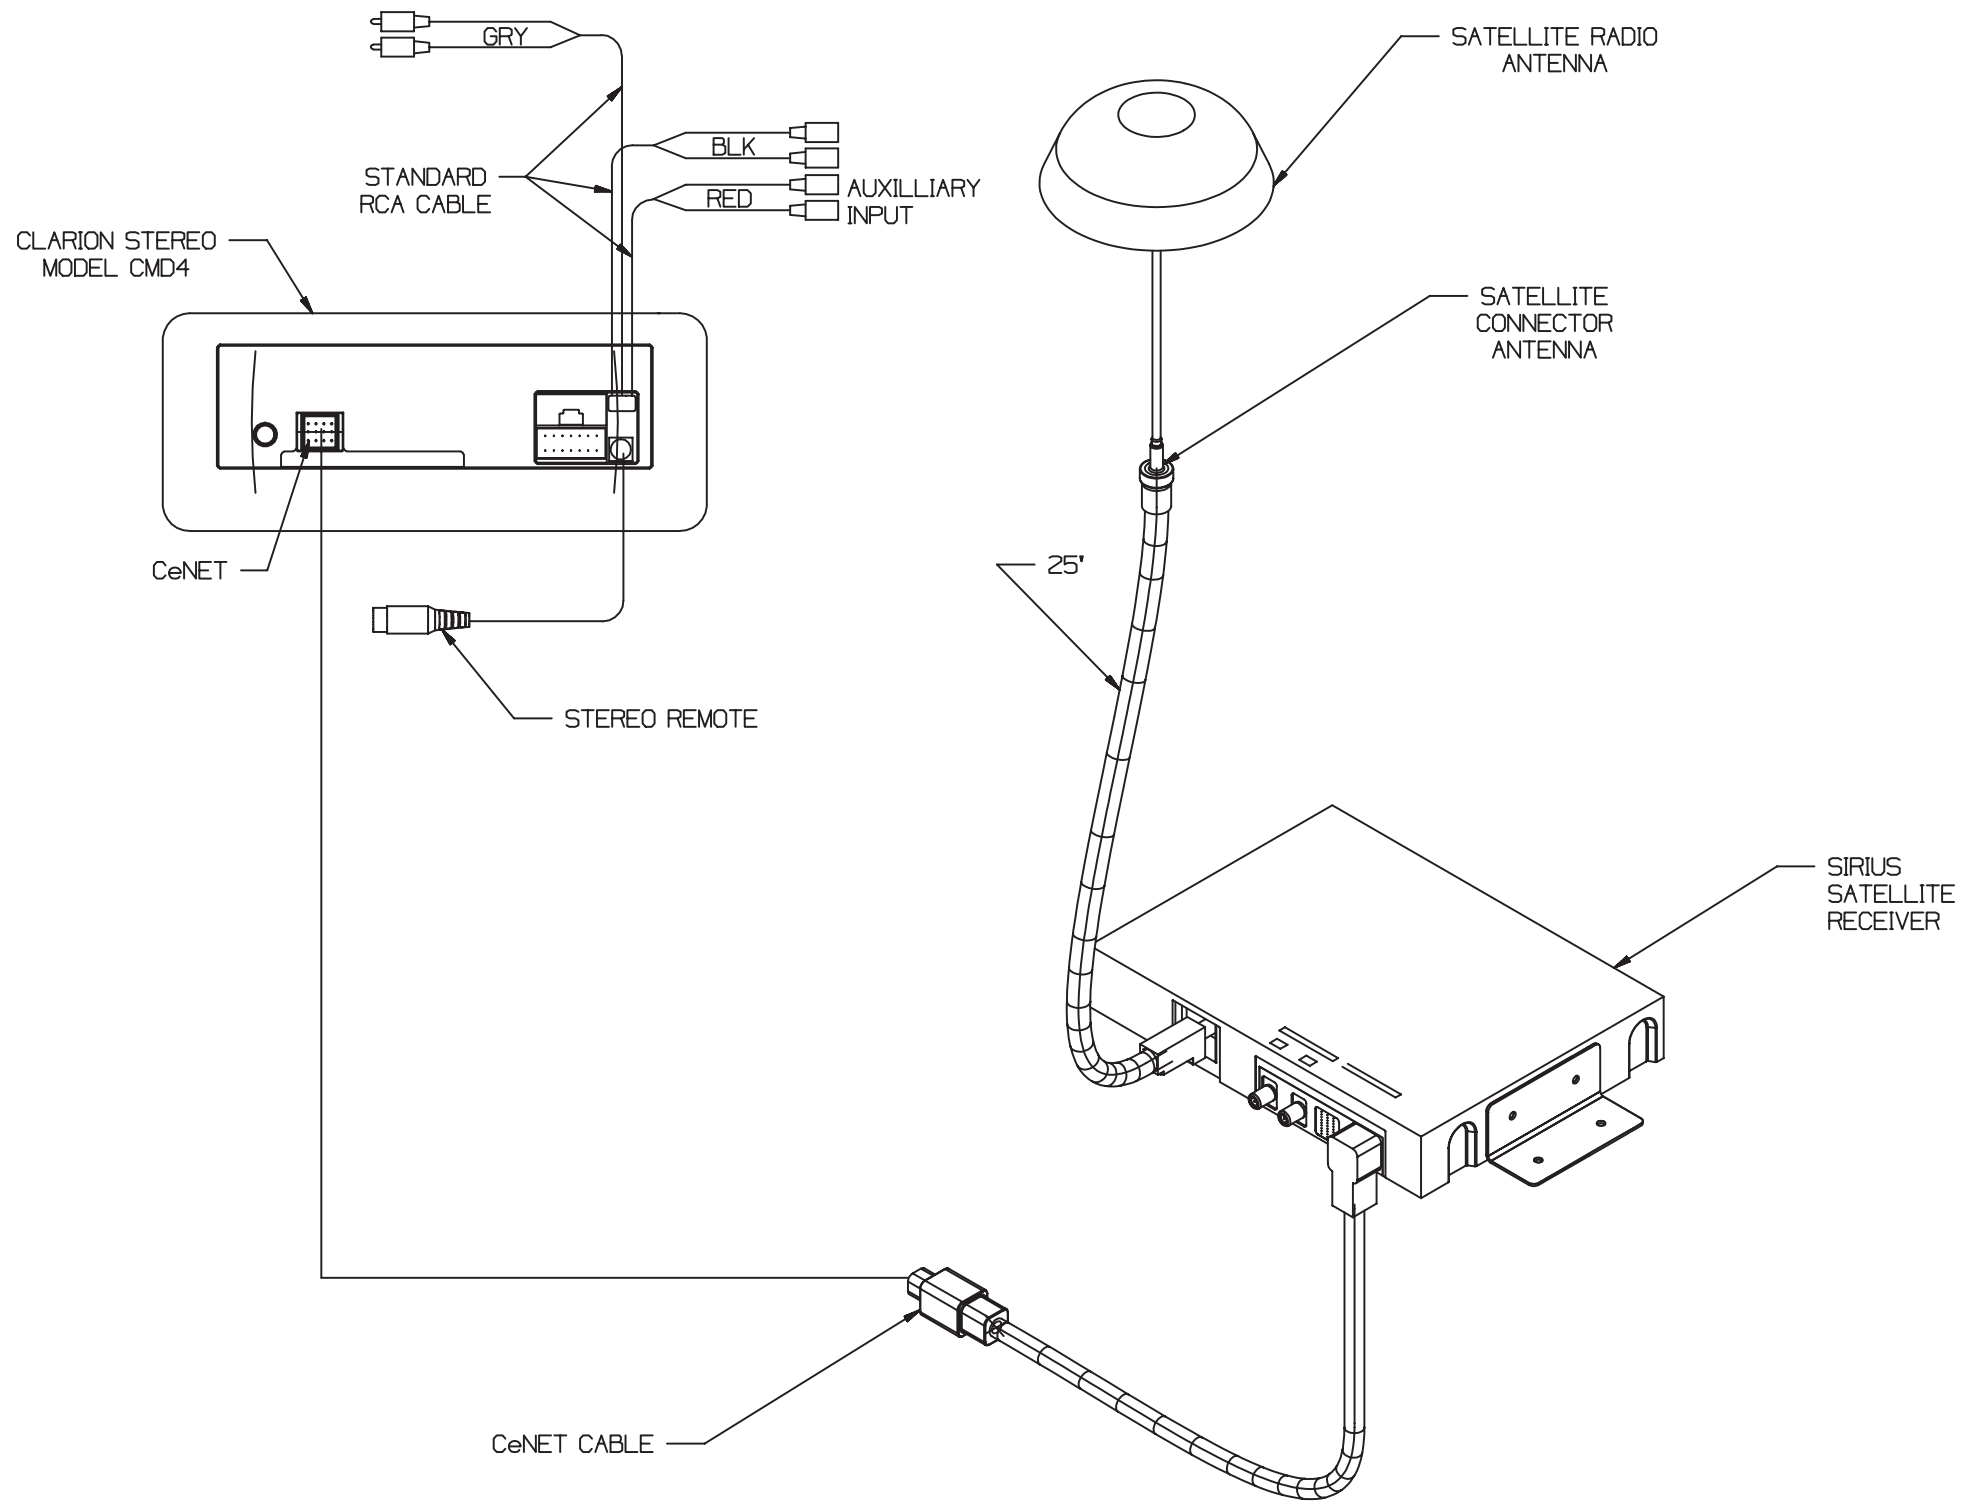


DRAWING NO. 09-615 REVISION 1



240 SD Electrical Schematics

SMARTCRAFT™ SYSTEMS DIAGRAM
(FIG. 6.15.1)

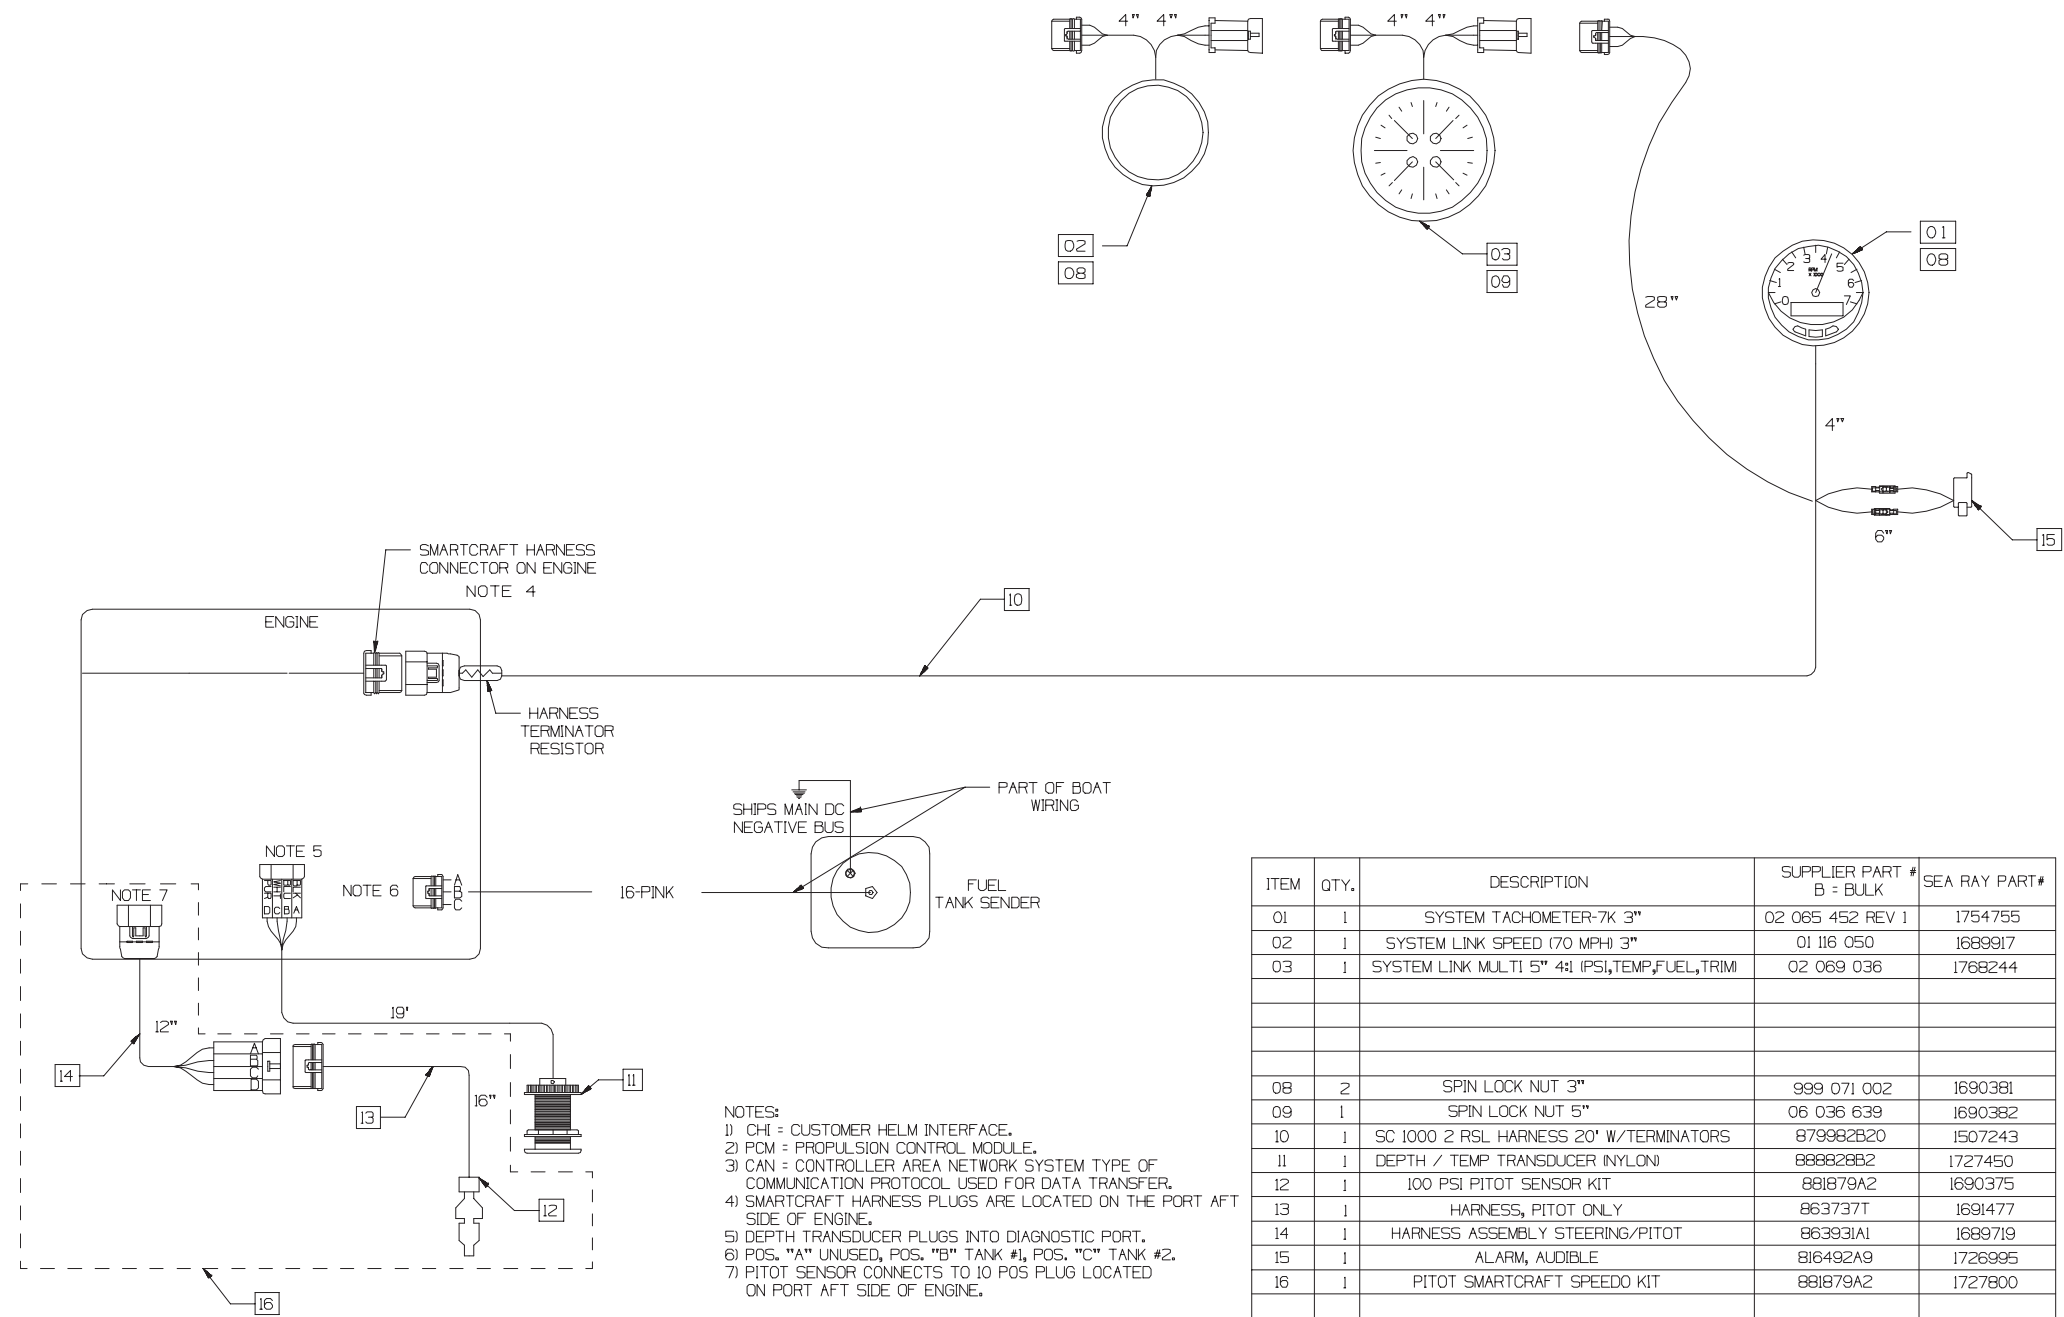

DRAWING NO. 09-710 REVISION 3

THIS PAGE LEFT INTENTIONALLY BLANK



SECTION 7 • OPTIONS & ACCESSORIES

1. LAYOUT AND ACCESSORY


LOCATIONS

Figure 2.5.1, 2.6.1 and 2.7.2 show the location and arrangement of the most important equipment and components on your boat. Using these drawings, walk through your boat, locate the features shown, and become familiar with their operation and maintenance.

2. CORSA™ THRU-HULL EXHAUST SYSTEM (OPTION)

This boat may be equipped with Corsa™ Captains Call™ Exhaust Diverters that provide flexibility with the thru-hull exhaust system. You can enjoy the bold sound and added performance of an open exhaust on the water while being a “quiet neighbor” in the marina or when noise restrictions are enforced. Exhaust flow can be directed through the transom or the prop with the simple flick of a switch.

CORSA™ EXHAUST SYSTEM SWITCH
(FIG.7.1.1)

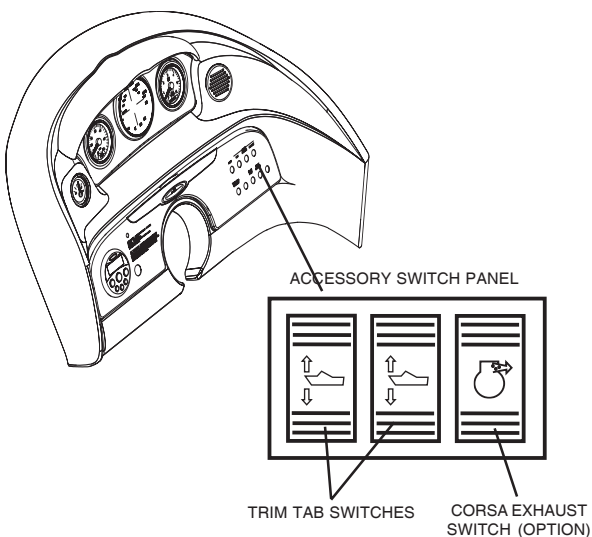


OPERATION

An auxiliary switch is located at the helm to open and close the diverters. When turned on, heavy duty solenoids are activated that pull the valves open (exhaust vents through the transom). When turned off or closed, exhaust is vented through the prop under the water.

REFER TO OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

CORSA™ EXHAUST SYSTEM HOSE ROUTING
(VIEW OF STARBOARD ASSEMBLY)
(FIG.7.1.2)

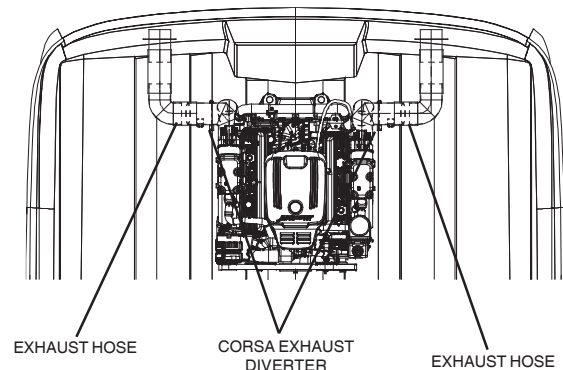

SECTION 7 • OPTIONS & ACCESSORIES

3. WATER SYSTEM

The fresh water system consists of a 24 gallon (90.84 liter) water tank, 12 volt water pump and water system filter.

The fresh water system is activated by the WATER PUMP switch on the control station switch panel.

To begin initial operation:

1. Fill the water tank from a source known to provide safe, pure drinking water by removing the cap marked WATER located on the port midship deck and inserting the water hose nozzle in the opening. Do not mistake the fuel fill or the waste plate for the water tank fill cap.
2. Turn ON the WATER PUMP switch.
3. Open the sink faucet to allow any air trapped in the water line to dissipate.
4. Shut off faucet as flow becomes free of air. Shutting off the faucet will cause the pump to shut off. As long as the water pump and battery switches are on, the pump will automatically provide water on demand.

A. SANITIZING THE WATER SYSTEM

If the fresh water system has not been used for some time, or if you suspect that it has been contaminated, then it should be sanitized. Your marine dealer may have a water treatment additive that can be used to sanitize the system. Follow the instructions provided with the additive.

If a water treatment additive is not available, the following steps may be followed to sanitize the water system:

1. Pump the water tank empty. Shut OFF water system switch.
2. Determine the capacity of your water tank (your standard water tank holds 24 gallons (90.84

liters)). You will need approximately one (1) gallon of weak bleach solution for each fifteen (15) gallons of tank capacity.

3. Prepare the proper amount of a weak bleach solution by mixing 1/4 cup of unscented household chlorine bleach per gallon of water.
4. Pour weak bleach solution into the water tank. Remember, use about one (1) gallon of weak bleach solution for each fifteen (15) gallons of tank capacity.
5. Fill the remainder of the tank with fresh, clean water. This will further dilute the weak bleach solution.
6. Switch ON the water system switch, then turn on the faucets and allow the air to be exhausted from the plumbing system. By doing this, the entire fresh water system will be filled with a sanitizing solution.
7. Allow the sanitizing solution to stand in the water system for three (3) hours.
8. Pump the water tank empty.
9. Fill the water system completely with fresh, clean water. Turn on the faucet and permit the entire contents of fresh, clean water to run through the system. This will flush the sanitizing solution out of the plumbing.
10. Fill the water system again, with fresh, clean water, and turn on the faucet to permit the air to dissipate.

Your water system is now sanitized.

B. WINTERIZING THE WATER SYSTEM

For winterizing the water system refer to *Section 8, Winterization Checklist For Boats Stored on Land, E. Water System.*





SECTION 7 • OPTIONS & ACCESSORIES

C. WATER PUMP AND FILTER


The water pump and filter are located in the bilge. The filter prevents particles from entering the pump head. The filter should be checked and cleaned once a season or when flow is restricted.

Before servicing the system, turn the WATER SYSTEM switch OFF and open a faucet to release pressure on the system. To clean the filter, remove the screen and rinse with clean water. Replace, making sure the O-ring is in place when replacing the cover.

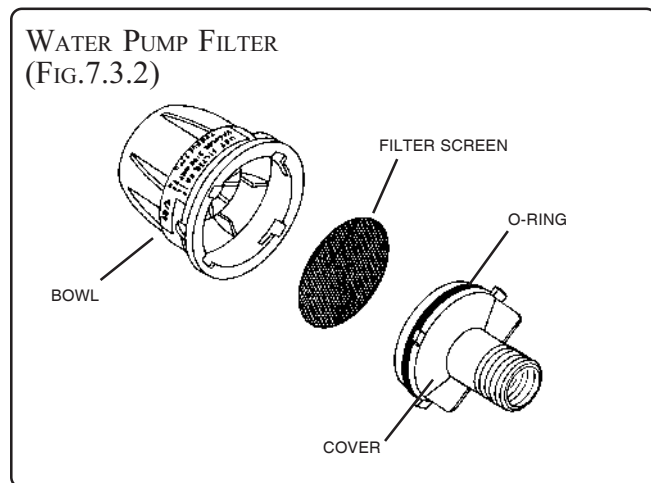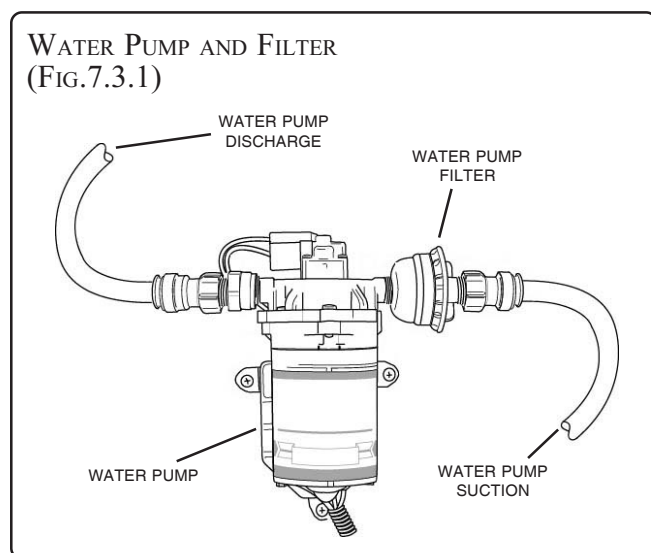


SECTION 7 • OPTIONS & ACCESSORIES

WATER SYSTEM INSTALLATION
(FIG.7.4.1)

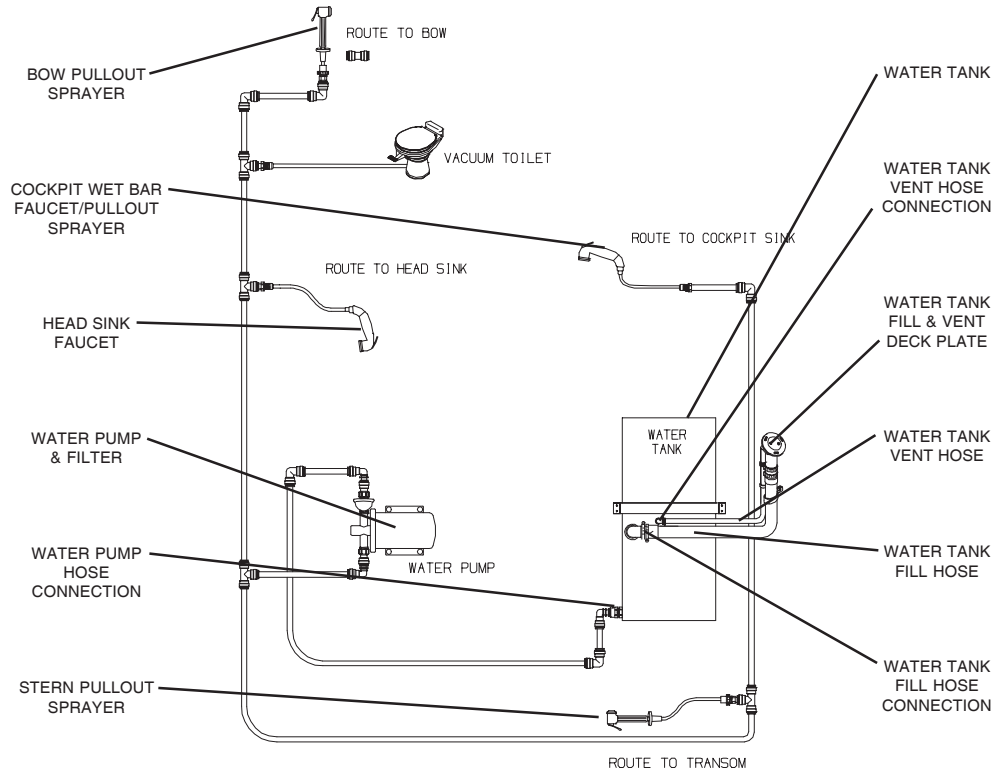

WATER SYSTEM LINE ROUTING
(FIG.7.4.2)

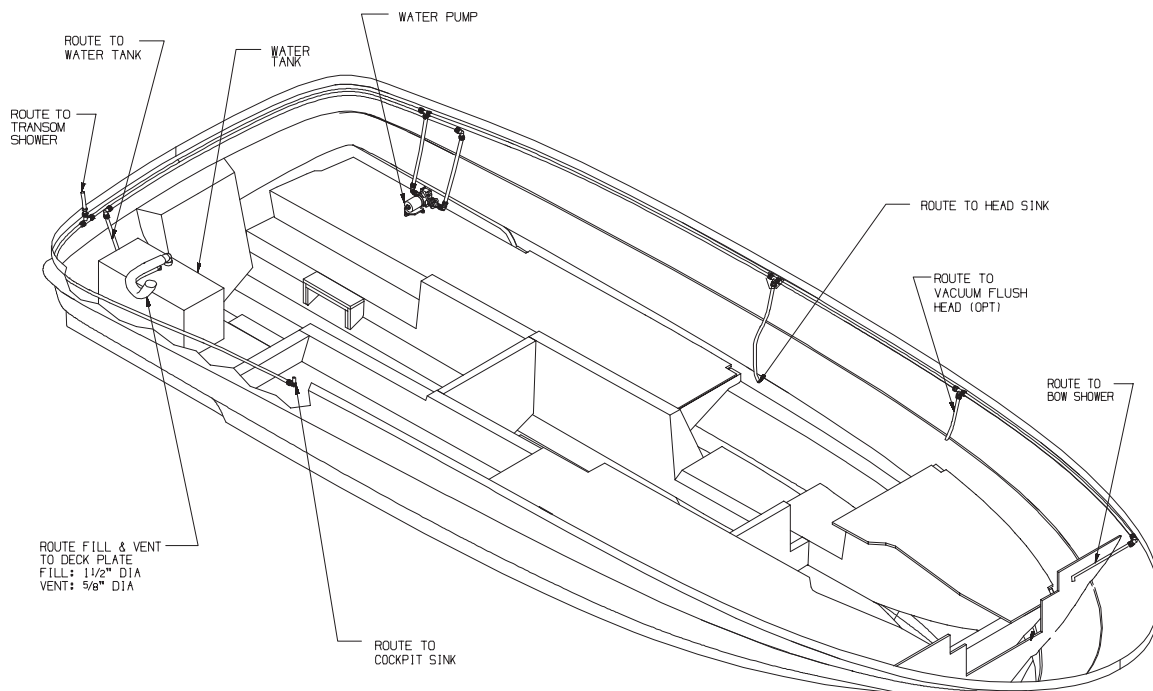

SECTION 7 • OPTIONS & ACCESSORIES

4. TOILET (HEAD) SYSTEM

Several different toilet (head) systems are available for your boat. The Owner's Manual Packet has specific information on the system installed in your boat. Read that material.


IMPORTANT ENVIRONMENTAL PROTECTION AGENCY (EPA) INFORMATION

As a general rule, overboard discharge of sewage from the head into navigable waters is **PROHIBITED**.

If you have a pump-out head, it can be emptied at an approved pump-out facility. If not, you must empty the holding tank in an appropriate onshore facility.

You must check in your boating area for any other rules and requirements about sewage.

POTABLE SELF CONTAINED HEAD
WITH DOCKSIDE PUMP-OUT
(FIG.7.5.1)

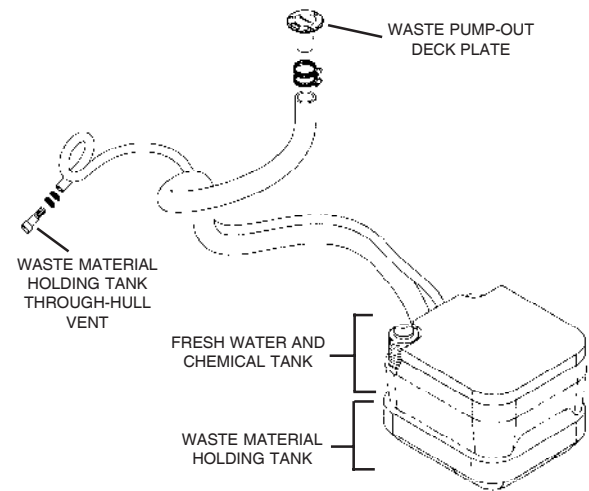

A. PUMP-OUT HEAD

The portable head with dockside pump-out is equipped with the addition of a dockside pump-out hose attached to the waste material (bottom) tank. The pump-out hose leads to the waste pump-out opening on the forward left (port) side of the deck. To empty the holding tank, the services of a dockside pump-out station are needed. Follow instructions at the station and make sure pump-out station hose is inserted into the deck plate marked "WASTE". (See Figure 7.5.1) The waste pump-out cap is located on the deck on the forward left (port) side of the deck. Do not mistake the water tank fill, also located on the left (port) side of the boat for the waste pump-out cap.

NOTE: Before leaving the dock make sure cap on top tank and hose clamp on bottom tank are tight. Make sure top tank is filled with water chemicals and the bottom tank is empty.

DETAILED OPERATING INSTRUCTIONS AND WARRANTY INFORMATION ARE PROVIDED BY THE EQUIPMENT MANUFACTURER AND CAN BE FOUND IN THE OWNER'S PACKET.

5. STEREO SYSTEM

The 240 SD is equipped with a 12 volt stereo system utilizing six speakers in the cockpit. The stereo is located in the head compartment on the face of the vanity.

The battery switch must be ON to operate the stereo system. The stereo system is protected by the stereo fuse in the Accessory Fuse Block (see page 6.4 "5. Accessory Fuse Block" and figure 6.5.1). The power source and fuse protection for the stereo memory is located under the aft port cockpit seat. Power to stereo memory is maintained even if the battery switch is off.

Refer to the Owner's Manual Packet to find individual instructions for the equipment installed on your boat.

REFER TO OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.




SECTION 7 • OPTIONS & ACCESSORIES

6. FIRE EXTINGUISHER DISCHARGE PORT

Boats not equipped with the automatic fire extinguisher option are equipped with a fire extinguisher discharge port. In the event of a fire, the access plate on the starboard side of the engine compartment can be removed to allow the operator to discharge a fire extinguisher into the engine compartment without having to open the engine box. Do not open the engine compartment immediately! This feeds oxygen to the fire and flashback could occur.

IF A FIRE OCCURS, IMMEDIATELY SHUT DOWN ALL ENGINES, POWERED VENTILATION, ELECTRICAL SYSTEMS AND EXTINGUISH ALL SMOKING MATERIALS. DO NOT IMMEDIATELY OPEN THE ENGINE COMPARTMENT!! THIS FEEDS OXYGEN TO THE FIRE AND FLASHBACK COULD OCCUR.

FIRE EXTINGUISHER DISCHARGE PORT
(FIG. 7.6.1)

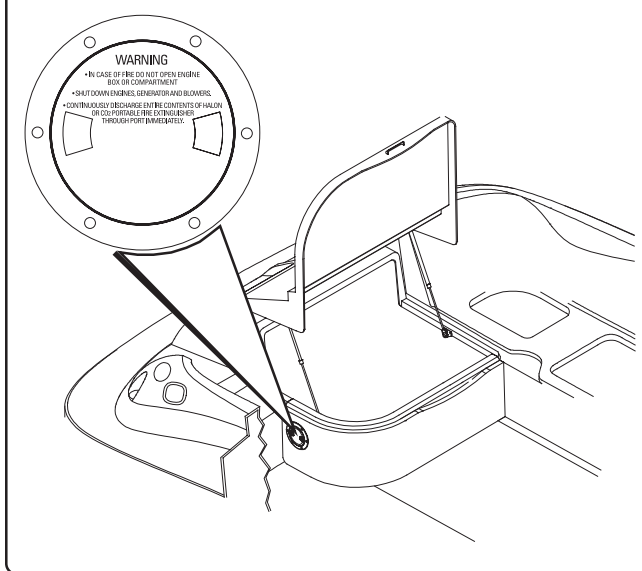


! WARNING

- In case of fire **DO NOT** open engine box or compartment.
- Shut down engine and blowers.
- Continuously discharge entire contents of portable fire extinguisher through port immediately.

7. AUTOMATIC FIRE EXTINGUISHER SYSTEM (OPTION)

AUTOMATIC FIRE EXTINGUISHER
(FIG. 7.6.2)

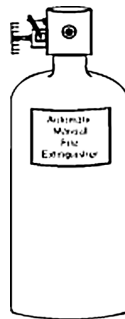

If equipped the 240 SD automatic fire extinguisher system is located aft of the engine on the transom. In the event of a fire, the heat sensitive automatic head will release the extinguishant as a vapor, totally flooding the area in fire-killing concentrations. The system indicator light is wired to the ignition and is turned ON when the ignition is turned ON.

AUTOMATIC FIRE EXTINGUISHER INDICATOR LIGHT (FIG. 7.6.3)

IGNITION



INDICATOR LIGHT

! WARNING GASOLINE VAPORS CAN EXPLODE RESULTING IN INJURY OR DEATH. BEFORE STARTING ENGINE: CHECK ENGINE COMPARTMENT BILGE FOR GASOLINE OR VAPORS, OPERATE BLOWER FOR FOUR MINUTES, AND VERIFY BLOWER OPERATION. RUN BLOWER WHEN VESSEL IS OPERATING BELOW CRUISING SPEED.

AUTOMATIC EXTINGUISHING SYSTEM
LIGHT ON - UNIT CHARGED
LIGHT OFF - UNIT DISCHARGED
IF SYSTEM DISCHARGES, SHUTDOWN ENGINE, BLOWER, AND ELECTRICAL SYSTEM

The indicator light, located on the dash panel, indicates to the helmsman when the unit has discharged. Under normal circumstances, when the ignition is ON the charge indicator light is lit. If the unit discharges, the light will go out.



SECTION 7 • OPTIONS & ACCESSORIES

WHEN ACTUATION OCCURS, IMMEDIATELY SHUT DOWN ALL ENGINES, POWERED VENTILATION, ELECTRICAL SYSTEMS AND EXTINGUISH ALL SMOKING MATERIALS. DO NOT IMMEDIATELY OPEN THE ENGINE COMPARTMENT!! THIS FEEDS OXYGEN TO THE FIRE AND FLASHBACK COULD OCCUR.

Allow the extinguishant to “soak” the compartment for at least fifteen (15) minutes and for hot metals or fuels to cool before cautiously inspecting for cause of damage. Have portable extinguishers at hand and ready. Do not breathe fumes or vapors caused by the fire.

REFER TO OWNER’S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

8. CANVAS

DANGER

If the cockpit is totally enclosed with canvas covers and curtains while the engine is running or boat is moving, carbon monoxide will build up and cause death or permanent injury.

Do not use the rear (aft) curtain or camper top while engine is running or boat is moving.

The Bimini Top should not be used when the vessel speed exceeds 45 MPH. Damage to the boat or Bimini may occur.

DO NOT have Bimini Top installed when trailering. Damage to boat or Bimini may occur. Use cockpit cover ONLY when trailering.

Attached to the inside of the Bimini Top is a DANGER tag for Carbon Monoxide Gas (CO) buildup and a WARNING tag for limiting speeds when Bimini Top canvas is installed. The rear (aft) curtain also has a WARNING tag stating “The Aft Curtain must not be used while engine is running or boat is underway”. If your canvas does not have these tags, they become lost or are unable to be read, contact your dealer for replacement labels.

For your safety, decide which canvas pieces you want to remove or install before you leave the boat slip or off-load your boat from the trailer into the water. Removing or installing canvas on the water can be difficult since rough water or wakes can cause you or your passengers to lose their balance while attempting canvas removal or installation.

For safety and ease of installation and removal of canvas, use at least two people. Know which canvas piece(s) that you are to install or remove.

The standard canvas set consists of the following pieces:

- Sunbrella® Bimini Top with Boot

The following canvas optional package is available:

Canvas package for Bimini Top:

Front Curtains
Aft Curtain
Cockpit Cover

Side Curtains
Tonneau Cover
Canvas Storage Bag

DANGER

Exhaust fumes from engines contain deadly carbon monoxide gas (CO). Boats enclosed with canvas or with poor ventilation are most likely to collect fumes.

CO sickness symptoms include headache, nausea and dizziness. Do not mistake these symptoms for sea sickness.

Ventilate boat. See Section 1.4, Carbon Monoxide, for more details.

DANGER


In rainy weather and/or cold weather, fresh air must circulate through boat to avoid carbon monoxide poisoning.

See Section 1.4, Carbon Monoxide, for more details.



SECTION 7 • OPTIONS & ACCESSORIES

CANVAS
(FIG. 7.8.1)

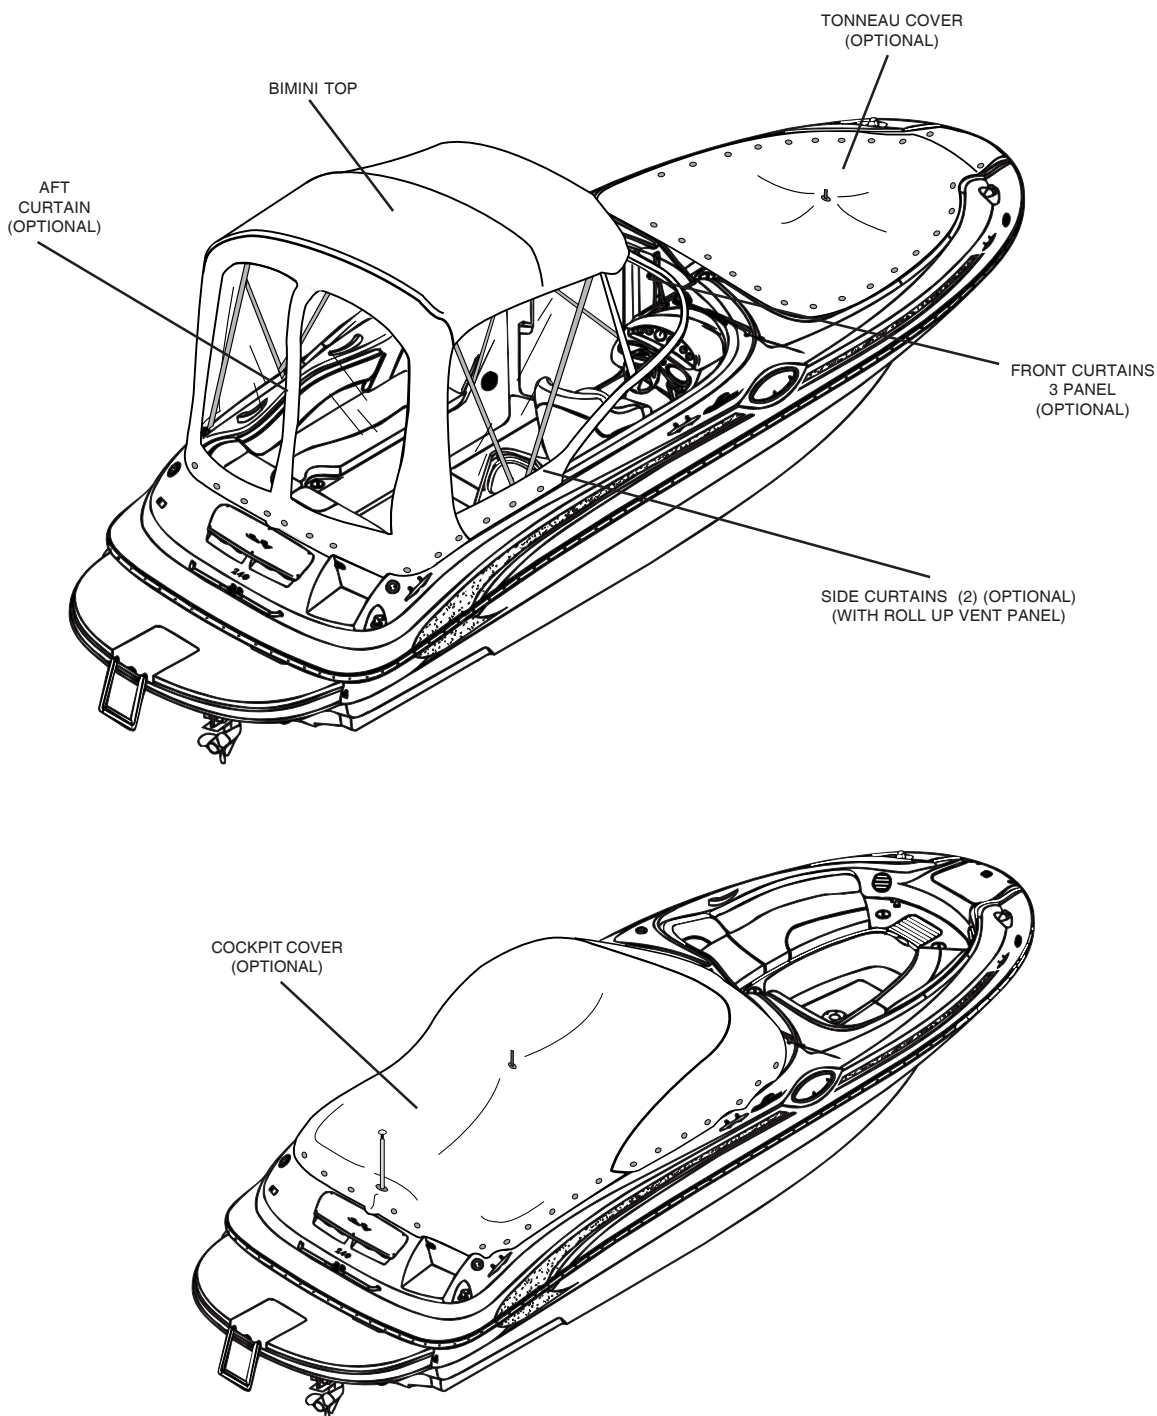


SECTION 7 • OPTIONS & ACCESSORIES


A. INSTALLATION TIPS

- **Zippers:** Zippers are located on each canvas piece. Make sure canvas is centered over the metal canvas support rods (bows). When attaching any canvas piece, zip the zippers only partially. This helps to hold the piece in place and relieves tension, helping the other sides zip or snap easier. After all the sides of the piece are snapped in place, finish zipping all the zippers. This will ensure a tight fit.
- **Adjustable Support Rods:** Adjustable support rods are located on the Bimini Top. There is an outside tube and an inside tube. Push in the button to adjust for longer or shorter rod lengths.

ZIPPERS (FIG. 7.9.1)

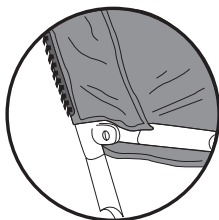

ZIPPER ON CANVAS

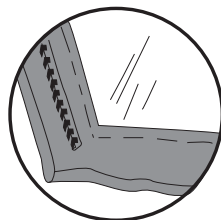

ZIPPER ON WINDOW

B. TRAILERING WITH CANVAS

To trailer your boat with the cockpit cover installed, you must install a mooring cover over the cockpit cover with tie down straps tightened. The Bimini Top, side curtains and rear (aft) cover, however, must be removed when trailering. Damage will occur to canvas and to the metal rods (bows) or boat if attached to boat while trailering.

C. CANVAS CARE AND MAINTENANCE

See Section 9, page 9.2, for instructions on the care and maintenance of your canvas.

9. HORN

ELECTRIC HORN

The horn is operated by a momentary switch on the dash and is protected by a fuse on the accessory fuse block below the dash (see page 6.4). There is no maintenance required on the horn itself, although it is advisable to avoid spraying water directly into the horn.

REFER TO OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

10. DOCKING LIGHTS (OPTIONAL)

The optional docking lights are protected by the 15A ACCESSORY fuse on the accessory fuse block (see Fig. 6.5.1). They are operated by pressing the ACCY switch on the STBD switch panel at the helm.

SECTION 7 • OPTIONS & ACCESSORIES

THIS PAGE LEFT INTENTIONALLY BLANK



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

Routine inspection, service and maintenance of your boat's systems are vital to assure your safety, as well as for prolonging the life of your boat. You should develop regular routines for inspecting your boat. The chart below summarizes inspection, service and maintenance activities. This section also contains descriptions of some convenient methods for evaluating the condition of some of your boat's systems.

The interval between necessary service or maintenance is highly variable, depending on the environment your boat is in, and on the severity of operating conditions. For example, corrosion of parts on boats operated in salt water proceeds much faster than the corrosion of parts on a boat operated in fresh water. The intervals listed below are recommended maximums, and you must reduce the time between inspections if your observations indicate the need.

1. SUMMARY GUIDE FOR INSPECTION, SERVICE AND MAINTENANCE

			INTERVAL				
ITEM	REQUIRED MAINTENANCE/SERVICE	REFERENCE SOURCE	BEFORE EVERY USE	AFTER FIRST 20 HOURS	EVERY 25* OR 50 HOURS	EVERY 50* OR 100 HOURS	EVERY 6 MOS. OR ANNUALLY
Battery	Check water level	Owner's Manual p. 6.1	•	•	•		
Bilge Area	Clean and check	Owner's Manual p. 4.1					•
Bilge Blowers	Hose connections tight	Owner's Manual p. 4.2			•		•
Bilge Pump	Float switch operates freely	Owner's Manual p. 4.1					•
Canvas	Clean	Owner's Manual p. 9.3	As Needed				
Controls							
Steering	Check for proper operation		To be done by Sea Ray dealer every six months				
	Power steering oil level	Engine Manual	•				
Throttle	Lubricate. Include all shift linkage and pivot points	Engine Manual		•		•	•
Electrical							
Connections	Check for looseness		To be done by Sea Ray dealer annually				
**GFCI (120V) Outlet	Check for operation	Owner's Manual p. 6.19					•
Engine							
Alarm	Check	Engine Manual	•				
Cooling System	Check for leaks	Engine Manual	•				
Connections	with engine running						
Crankcase ventilating system	Clean	Engine Manual		•		•	
Drive belts	Check	Engine Manual	•				
Exhaust System	Check for leaks	Engine Manual	•	•		•	
Flame Arrestor	Clean	Engine Manual		•		•	
Fuel Filter	Replace	Engine Manual				•	
Mounts (Fasteners)	Tighten	Engine Manual		•			•
Oil and Filter	Replace	Engine Manual				•	•
Oil Level	Check	Engine Manual	•				
Fuel System							
Connections & Lines	Check for leaks	Engine Manual	•	•	•		
Tanks	Check for leaks	Owner's Manual, Section 5	•	•	•		
Water Separating Fuel Filter	Replace	Engine Manual		•			•

*Use in salt water or other severe operating conditions requires shorter maintenance/service intervals

**May not be on your boat



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

SUMMARY GUIDE FOR INSPECTION, SERVICE AND MAINTENANCE

			INTERVAL				
ITEM	REQUIRED MAINTENANCE/SERVICE	REFERENCE SOURCE	BEFORE EVERY USE	AFTER FIRST 20 HOURS	EVERY 25* OR 50 HOURS	EVERY 50* OR 100 HOURS	EVERY 6 MOS. OR ANNUALLY
Propeller	Inspect for damage		Always after striking object				
Seaworthiness							
Bilge drain plug	Installed and tight	Owner's Manual p. 4.1	•				
Hull damage	Check for loose, damaged or missing parts		Always after striking object				
Stern drive							
Stern Drive							
Fluid level	Check level	Engine Manual	•				
Fluid	Replace	Engine Manual					•
Topside & Supplies	Check for loose, damaged or missing parts	Owner's Manual p. 8.5					•
Transmission							
Oil Strainer Screen	Clean		To be done by Sea Ray dealer annually				
Trim Tabs							
Fluid	Check and add as needed	Trim Tab Manual		•			
Zincs (Also see **Mercathode System)							
Stern drive	Check and replace needed	Owner's Manual p. 6.21, 6.22	Every 25 hours of operation				
Trim Tabs	Check fluid level	Trim Tab Manual	Every 25 hours of operation				

*Use in salt water or other severe operating conditions requires shorter maintenance/service intervals

**May not be on your boat



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

2. USEFUL SERVICE INFORMATION

OWNER _____

HOME PORT _____

BOAT NAME _____

REGISTRATION NUMBER _____ STATE _____

HULL SERIAL NUMBER _____

WARRANTY REGISTRATION DATE _____

ENGINE MAKE & MODEL _____

SERIAL NUMBER PORT _____ STARBOARD _____

GEAR MAKE & REDUCTION RATIO _____

SERIAL NUMBER PORT _____ STARBOARD _____

PROPELLER SIZE PORT _____ STARBOARD _____

PART NUMBER PORT _____ STARBOARD _____

SHAFT SIZE (DIAMETER X LENGTH) _____ MATERIAL _____

FUEL CAPACITY PORT TANK _____ STARBOARD _____

WATER CAPACITY _____

KEY NUMBER, IGNITION _____ DOOR _____

SELLING DEALER _____

CITY & STATE _____

LENGTH _____ BEAM _____ DRAFT _____

VERTICAL CLEARANCE _____

ESTIMATED WEIGHT _____

GENERATOR SERIAL # _____ MODEL # _____ KILOWATTS _____



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

3. INSPECTION, SERVICE AND MAINTENANCE PROTOCOL

A. BILGE AREA

Many of your boat's systems have critical features located in the bilge area. A thorough and organized inspection of the bilge area will address many of these critical features. For example, engine oil leaks and fuel system leaks will show themselves as contamination on the surface of the liquid that remains in the bilge. When you see such contamination, you should look for its source.

Once or twice a year, pump the bilge areas dry and remove all loose dirt. Be sure that all the limber holes are open. Limber holes are the openings in the stringers that allow water to flow from the outboard areas of the bilge to the bilge sump.

Check the bilge pump float switch by moving it manually. The bilge pump should start when the float switch is raised and should stop when lowered. If it does not, have it replaced before using your boat. The float switch should also move freely without sticking, if it does not, have it serviced or replaced before boating.



WARNING

DO NOT USE FLAMMABLE SOLVENTS to clean any part of the bilge.

Fumes can accumulate and can be the source of an explosion.

1. OIL

If there is oil contamination, look for leaks in engine oil lines and engine gaskets. If parts of the bilge have been stained by oil, the stain can be removed using a bilge cleaner available from your dealer or a marine store.

2. ENGINE

Engine failure or malfunction, when away from shore, can be dangerous. Make certain you do the following each time you use the boat:

- Wipe off the engine to remove accumulated dust, grease and oil.
- Check all exposed nuts, bolts and screws for tightness.
- Inspect the belts for wear. If they do not require replacement, check and adjust the belt tension according to the engine manufacturer's recommendation.
- Inspect engine wiring, and clean and tighten the terminals on the engine electrical system.
- Clean and lubricate the battery cables.
- Add distilled water to the battery cells as needed.
- Refer to your Engine Operator's Manual for additional engine maintenance requirements.

3. FUEL SYSTEM

- Inspect the entire fuel system for evidence of leakage, including the fuel tank fill lines and vents. Any stain around a joint could be an indication of a leak.
- Test all fittings with a wrench to be sure they are not loose, but do not forcefully overtighten the fittings.
- Clean fuel filters and vent screens.



WARNING

Work on electrical wiring can create shock hazards or sparks.

Always shut off battery switch, breakers and/or pull fuses before checking electrical wiring or connectors.



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

4. WIRING SYSTEM

- Check all wiring for proper support.
- Check all wiring insulation for signs of fraying or chafing.
- Check all terminals for corrosion - corroded terminals and connectors should be replaced or thoroughly cleaned.
- Tighten all terminals securely and spray them with light marine preservative oil.
- Check your first aid kit, making certain it is complete and that the items in it have not passed an expiration date.
- Check the signaling equipment and emergency flares. Make sure all items are within their expiration dates.
- Inspect the anchor, mooring and towing lines. Repair or replace as required.
- Check fire extinguishers for full charge.

5. FITTINGS, HOSES AND CLAMPS

- Inspect the entire bilge area for evidence of damage or deterioration. Evidence of deterioration will first appear around hull fittings, hoses and clamps.
- Straighten kinked hoses.
- Replace any hose that does not feel pliable.
- Check all hose clamps for tightness and corrosion. Corroded clamps must be replaced.
- Check the nuts, bolts and screws that retain equipment, hoses, etc. in the bilge for tightness and corrosion. Corroded fasteners must be replaced.

B. TOPSIDE AND SUPPLIES

Once a year, you should undertake a thorough review of the topside equipment, as well as of the critical safety supplies on your boat.

- Check cleats, rings, rails, etc. for loose or corroded fasteners, breaks, sharp edges or other conditions that could lead to malfunction or unsafe use. Repair or replace as necessary.
- Inspect PFDs (life jackets) for tears and deterioration.
- Make certain you have enough PFDs on board for the maximum number of persons you can carry.

4. WINTERIZATION CHECKLIST FOR BOATS STORED ON LAND

A. BOAT STORAGE

- Store boat in a bow high attitude.
- Remove hull drain plug.
- Pour one (1) pint (half-liter) of 50% water/antifreeze mixture in each bilge pump sump..

B. ENGINES

- Flush engines with fresh water.
- Remove engine drain plugs.

REFER TO YOUR ENGINE OPERATOR'S MANUAL FOR DETAILED INFORMATION ON PREPARING THE ENGINES FOR STORAGE AND WINTERIZATION.

C. BATTERY(IES)

- Remove from boat. Remove the negative (-) cable first, then the positive (+) cable.
- Remove grease and dirt from top surface.
- Grease terminal bolts.
- Store on wooden pallet or thick plastic in a cool



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

dry place. Do not store on concrete.

- Keep under a trickle charge.
- When placing battery back into service, remove excess grease from terminals, recharge as necessary and reinstall in boat.

D. HEAD SYSTEM

PORTABLE SELF-CONTAINED HEAD

1. Empty top tank and holding tank.
2. Make sure all water is out.

HEAD SYSTEMS WITH DOCKSIDE PUMP-OUT

1. Flush head several times to flush system thoroughly with fresh water.
2. Pump out holding tank.

HEAD SYSTEMS WITH VACU-FLUSH & DOCKSIDE PUMP-OUT

1. Flush head several times to flush system thoroughly with fresh water.
2. Pump out holding tank.
3. Shut WATER SYSTEM switch OFF on the helm switch panel and remove hose from each side of water pump.
4. Remove water line from inlet fitting located on back bottom half of water valve on head.
5. Flush one gallon (four liters) antifreeze mixed with one gallon (four liters) of water through toilet and let vacuum pump run for one or two minutes.
6. Pump out holding tank.

E. WATER SYSTEM

- Turn ON the WATER SYSTEM switch.
- Open water faucet, let system drain completely.
- Turn OFF the WATER SYSTEM switch.
- Water must be removed from the water lines with air pressure or flushed with a nontoxic antifreeze.

Using pressurized air to remove water from water lines:

- You must have an air compressor with air hose and air nozzle.
- Remove water hoses from water pump.
- Alternate opening one faucet at a time to make sure water is removed from each line.
- Blow air through the water lines removed from the water pump.

NOTE: When blowing air be careful not to blow air with all faucets closed. System could be damaged by over pressurization and create water leaks.

- Cover hose ends with screen or broad weave cloth and tape in place to keep out dirt and bugs.

USING NONTOXIC WINTERIZING ANTIFREEZE:

- Purchase a nontoxic winterizing antifreeze for fresh water systems from a marine or RV supply retailer.
- With all water pumped out of the system add nontoxic antifreeze to the water tank. Pour in enough to be pumped to all faucets and showers.
- Close all faucets and turn on water system.
- Open one faucet at a time. Close faucet when nontoxic antifreeze comes out of faucet.
- After all faucets and showers have been treated, open all faucets and pump out remaining nontoxic antifreeze.

WATER HEATER WINTERIZATION

- Refer to your water heater Owner's Manual for detailed information on preparing water heater for storage and winterization.



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

F. FUEL SYSTEMS

GASOLINE:

- Fill fuel tank with gasoline and the recommended amount of stabilizer and conditioner such as “Stabil®”.
- Run engine(s) for ten minutes to ensure that all gasoline in the carburetor and fuel lines are treated.

DIESEL

- Fill fuel tank with diesel and recommended amount of biocide, “Biobor®”, which prevents bacteria and fungi from contaminating diesel fuel that contains some water.
- Diesel fuel should also get a petroleum distillate additive, such as “Stabil®” or Racor® RX100”. This will absorb water in the fuel and prevent freezing problems.
- Run engine(s) for ten minutes to ensure that all diesel fuel in injectors and fuel lines is treated.

DETAILED WINTERIZING, OPERATING INSTRUCTIONS AND WARRANTY INFORMATION ARE PROVIDED BY THE EQUIPMENT MANUFACTURER AND CAN BE FOUND IN THE OWNER’S PACKET.

CAUTION

Do not overfill. Filling a tank until the fuel flows from vents is dangerous. Allow room for expansion.

5. FITTING OUT AFTER STORAGE

A. FUEL SYSTEM

Check the entire fuel system for loose connections, worn hoses, leaks, etc. and repair. This is a primary safety precaution.

Check fuel lines for damage and make sure that they do not come in contact with any moving parts.

B. BATTERY (IES)

Before installing the batteries, clean the terminal posts with a wire brush or steel wool and then attach the cables. After the cable clamps are tightened, smear the post and clamps with vaseline or grease to exclude air and acid. Do not apply grease before attaching and tightening the terminal clamps. Examine all wiring.

C. MISCELLANEOUS

- Check all thru-hull fittings for unobstructed water passage. Be alert for any deteriorated hoses and/or fittings below the water line which might fail in service and admit water.
- Test the navigation lights.
- Check all wiring for loose connections.
- Check all switches and equipment for proper operation.
- Check bilge blowers for proper operation. Turn ON blowers and place hand over hull blower vent to make sure air is coming from vent.
- Anchor lines and gear should be inspected and replaced if necessary.
- Make sure the hull drain plug is in place and tight.
- Clean bilge thoroughly if it was not done at lay-up.
- Check all engine fluid levels.
- Check fuel lines for damage and/or leaks. Make sure that they do not come into contact with moving parts.




SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

6. SECURITY CONSIDERATIONS

Be conscious of the security of your boat. Always remove the keys from the ignition, lock hatches, lock the cabin door, remove and stow any removable electronic gear (fishfinders, LORAN, etc.) and personal gear (fishing poles, etc.) normally left aboard your boat.

7. SEACOCK LUBRICATION

- With boat out of water, remove the hose from top of the seacock.
- Put seacock handle in closed position.
- Add a few drops of lubricating oil inside.
- Work handle back and forth a few times. Add oil as needed.
- Replace hose and tighten clamp.
- Add a few drops of oil to the handle pivot point.

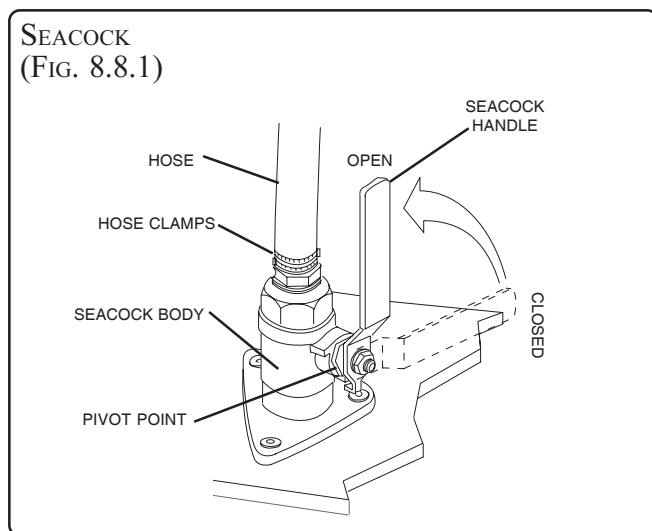

8. POWER STEERING SYSTEM MAINTENANCE

- Lubricate the control valve on the power steering cylinder through the grease fitting with multipurpose lubricant until grease appears around the rubber boot.
- Coat power assist steering output shaft and exposed steering cable end with appropriate lubricant.
- Lubricate cable end guide pivot point with SAE 30W engine oil.
- Check power steering fluid level in the power steering pump reservoir.
- Inspect all hydraulic hoses for leaks. Keep hoses from rubbing on moving parts and from contact with hot engine parts.
- Check all fittings, clamps and bolts for tightness every month.
- Check power steering pump drive belt for wear and proper tension every month. Do not overtighten belt. This can cause bearing failure.


REFER TO THE ENGINE OPERATOR'S MANUAL FOR PROPER FLUID LEVELS AND LUBRICANTS.

Sea Ray® recommends that all repairs and/or replacements to steering systems be made by qualified dealers authorized by manufacturer of the steering system of your boat.

DETAILED OPERATING INSTRUCTIONS AND WARRANTY INFORMATION ARE PROVIDED BY THE EQUIPMENT MANUFACTURER AND CAN BE FOUND IN THE OWNER'S PACKET.

SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE


POWER STEERING SYSTEM
(FIG. 8.9.1)

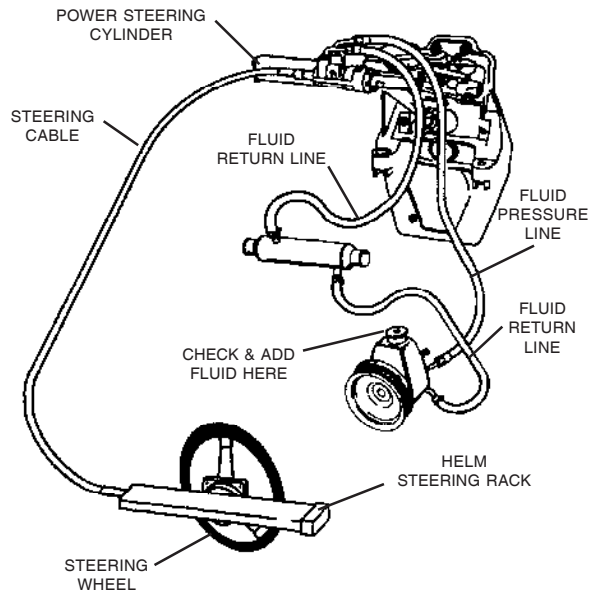

4. When all of the used oil has drained out of the engine(s) reinstall the plug into the hose(s). Push oil drain hose back into hull and reinstall hull drain plug(s).
5. Follow oil change instructions provided by the engine manufacturer.

REFER TO THE ENGINE OWNER'S MANUAL FOR INSTRUCTIONS AND WARRANTY INFORMATION.

GARBOARD DRAIN PLUGS
(FIG. 8.9.2)

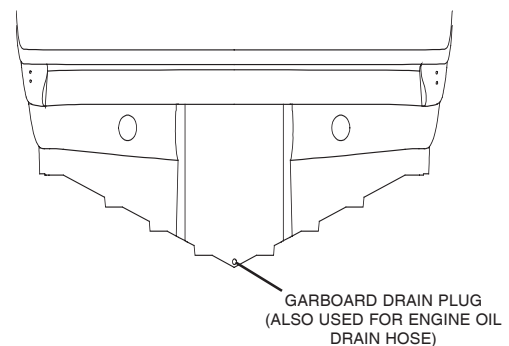

9. ENGINE OIL CHANGE SYSTEM

Your Sport Cruiser is equipped with the oil change system that allows used oil to be drained out the transom through hoses that pull out of the drain plug(s) holes.

To Operate:

1. Remove oil fill cap. (To allow ventilation)
2. Remove hull drain plug(s) on transom and pull oil drain hose(s) out of hole.
3. Have enough empty containers at hand to hold all of the used oil. Remove plug in the end of the hose(s). Let oil drain into container(s).



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

10. QUICK REFERENCE CHECKLIST

As the owner/operator of a Sea Ray® Sport Boat, you are responsible for the safe operation your boat and the safety of your passengers. Always be sure that required documents, navigational equipment and Coast Guard required safety equipment is aboard and in proper working order.

A. BOARDING THE BOAT*

GENERAL

1. Weather Conditions Is it going to be safe to go out
2. Transom Drain Plug Installed
3. PFDs and all other Coast Guard
required safety equipment Available for all children and adults
4. Ignition keys Available
5. Tool Box Stocked with a variety of appropriate tools

BOAT SYSTEMS

1. Bilge Pumps Working. Discharge any appreciable amounts of
water overboard
2. Blowers Working. "Sniff" the bilge/engine compartment for
fuel odor
3. Navigation Lights Working. Have spare bulbs (and if applicable fuses)
aboard
4. Radio/Electronics Working
5. Horn Working
6. Trim Tabs Full range of motion. No excessive play or binding
7. Fresh Water Tank Filled and sanitized
8. Head System Holding Tank Empty
9. Seacocks Generator Open (handle parallel to hose),
Head System Holding Tank Closed (handle
perpendicular to hose)

ENGINE

1. Batteries Fully charged (Check water cell levels)
2. Fuel Tank Filled with recommended fuel
3. Fuel System Check for leaks
4. Fuel Filters Check that filters are clean and tight
5. Diesel Racor Fuel Filters Check that filters are clean, tight and free of water
6. Engine Coolant Drain Plugs Secured
7. Steering Fluid Full
8. Throttle & Gearshift Controls Test Full range of motion

***Note:** If trailering boat, many of these items should be checked before leaving the house.



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

QUICK REFERENCE CHECKLIST (CONT'D)

B. PREPARING TO DEPART AND AFTER LAUNCHING

GENERAL

1. Bilge/Engine Compartment “Sniff” the bilge/engine compartment for fuel odor.
Run the bilge blowers for at least four (4) minutes.
2. Shore Power Cable Disconnected from dockside power inlet
3. Lines, Fenders and Anchor Ready for use
4. Passengers/Crew Instructed in duties for getting underway and fitted for a correct size PFD

ENGINE

1. Battery Switches In the ON position
2. Fuel Valves (Diesel Only) Opens
3. Engine Alarm Test. Should sound after a few seconds
4. Gear Shift & Throttle Controls In NEUTRAL and IDLE positions

STARTING THE ENGINE*

1. Gearshift & Throttle Controls Shift in NEUTRAL (Refer to your Engine Owner's Manual for start-up procedures for your specific engine)
2. Ignition Turn master ignition keys on DC distribution panel to the ON position. Depress ignition switch on the helm switch panel to START position until engine starts, then release to RUN position (light on).

IMPORTANT: Do not continue to operate starter for more than 10 seconds without pausing to allow starter motor to cool off for 2 minutes. This also will allow the battery to recover between starting attempts.*



WARNING

Do not run the engine or generator in an enclosed area, such as a closed boat house, as there is the possibility of buildup and inhaling of carbon monoxide.

*If engine fails to start, refer to the Engine Owner's Manual for further troubleshooting procedures



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

QUICK REFERENCE CHECKLIST (CONT'D)

C. WHILE UNDERWAY

GENERAL

1. Passengers/Crew Safely seated with PFD's on or immediately accessible
2. Lines, Fenders and Anchor Stowed

BOAT SYSTEMS

1. Trim Tabs Bring boat to "On Plane". Adjust as necessary
2. Navigation Lights On at night or in reduced visibility

ENGINE

1. Tachometers Engines operating in safe RPM range
2. Engine Gauges Continually monitor
3. Engine Operation Check idle and shift. Listen for abnormal noises and visually check the engine compartment while underway

D. RETURNING TO PORT

GENERAL

1. Passengers/Crew Instructed in duties for line handling
2. Lines and Fenders Ready for use

BOAT SYSTEMS

1. Navigation Lights Turned OFF when secured
2. Anchor Light ON if necessary
3. Bilge/Engine Compartment "Sniff" the bilge/engine compartment for fuel odor. Run the bilge blowers if necessary. Check for water in bilge. Run bilge pumps if necessary

ENGINE

1. Gearshift & Throttle Controls Bring to NEUTRAL and IDLE positions
2. Tachometers Idle the engines for five (5) minutes to cool down



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

QUICK REFERENCE CHECKLIST (CONT'D)

3. Ignition Depress ENGINE STOP switches on the helm switch panel when engines are cooled down.
4. Engine Operation Check idle and shift. Listen for abnormal noises

E. SECURING THE BOAT

GENERAL

1. Shore Power Cable Connected to dockside power inlet
2. Lines and Fenders Fenders in place, lines tied securely to dock

BOAT SYSTEMS

1. Seacocks Closed (handle perpendicular to hose)
2. Helm Switch Panel All switches in the OFF position
3. Gearshift & Throttle Controls In the NEUTRAL and IDLE positions

ENGINE

1. Ignition Switched in the OFF position (lights off) and master ignition keys removed from DC distribution panel
2. Battery Switches In the OFF position
1. Fuel Valves (Diesel Only) Closed (handle perpendicular to hose)

F. IF THE ENGINE DOES NOT START

NO STARTER MOTOR RESPONSE

1. Check battery condition for sufficient charge
2. Check battery cable connections tight and free from corrosion
3. Check battery switches in the ON position
4. Check gearshift/throttle control levers in the NEUTRAL positions
5. Check starter motor and solenoid connections
6. Check ignition switch connections

STARTER MOTOR RESPONDS, BUT NO IGNITION

1. Check electrical connections on engine wiring harness and ignition wiring
2. Check that fuel tanks are not empty
3. Check fuel filters and filter/water separators clean



SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

QUICK REFERENCE CHECKLIST (CONT'D)

G. OPERATING THE GENERATOR

STARTING THE GENERATOR

1. Generator Seacock Open
2. Bilge Blowers Run for at least 4 minutes and any time the generator is running
3. Depress PREHEAT (Diesel Only) Preheat time should not exceed 30 seconds
4. Depress START Switch Depress until generator starts
5. When the Generator Starts Release the START switch only (If diesel, continue holding PREHEAT for a few seconds)
6. Load The Generator Turn ON the generator main breaker on the Main Distribution Panel. Turn AC breakers ON

STOPPING THE GENERATOR

1. Breakers Turn AC breakers OFF. Turn OFF the generator main breaker on the Main Distribution Panel
2. Generator Let it run a few minutes to cool down
3. STOP Switch Depress to stop the generator set

WARNING

Do not run the generator or engines in an enclosed area, such as a closed boat house, as there is the possibility of buildup and inhaling of carbon monoxide.



MAINTENANCE LOG (CONT'D)

[illegible]

SECTION 8 • REQUIRED INSPECTION, SERVICE AND MAINTENANCE

THIS PAGE LEFT INTENTIONALLY BLANK



SECTION 9 • CARE & REFINISHING

Your new boat has been designed to provide you with years of enjoyment and satisfaction. In order to maintain the factory new appearance of your boat, we recommend the use of 3M™ Marine's one step Maintenance and Reconditioning Products designed specifically for pleasure boats. Following proper fiberglass maintenance guidelines will help maintain your boat's performance, value, and enjoyment.

1. PAINT CLEANING AGENTS & OTHER SUBSTANCES



WARNING

EXPLOSION/FIRE HAZARD

Care and refinishing materials may contain ingredients that are flammable or explosive. Do not use such materials in the bilge

Shut off electrical power and ventilate when using such materials anywhere on the boat or in the cabin.

Do not create sparks or use lighted materials.

Do not use products containing chlorine, phosphates, perfumes and nondegradable ingredients. Consult your marine dealer regarding environmental regulations before painting the hull. Fumes can last for hours, and chemical ingredients can harm people, property and the environment. Common household cleaning agents may cause hazardous reactions. Read and understand directions on all paint, cleaning and polishing materials before using.

2. FIBERGLASS & GELCOAT

The fiberglass hull, deck and some interior parts consist of a molded shell and exterior gelcoat. The gelcoat is the outer surface, often colored, that presents the shiny smooth appearance associated with fiberglass products. This gelcoat surface is painted or taped in some areas for styling purposes.

Wash the gelcoat and fiberglass regularly with clean, fresh water. Wax gelcoated surfaces to maintain the luster. In northern climates, a waxing at the start and end of the boating season may suffice. In southern climates, an application of wax every three months will be required for adequate protection.



WARNING

Gelcoat surfaces are slippery when wet.

Always wear nonslip footwear securely fastened to your feet and hold on to rails or the boat structure.



WARNING

Waxed surfaces are slippery.

Do not wax areas that are usually walked on.

REFER TO THE "3M® ONE STEP MAINTENANCE AND RECONDITIONING PRODUCTS" PAMPHLET IN YOUR OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

3. STAINS & SCRATCHES

Although gelcoat and painted surfaces are resistant to deep stains, a need for cleaning will occasionally arise. But, the use of some common cleaning agents will permanently discolor or otherwise damage the finish on your boat.



SECTION 9 • CARE & REFINISHING

- Do not use abrasive porcelain-cleaning powders. These are too abrasive and contain chlorine and ammonia, either of which will permanently discolor gelcoat and paint.
- Never use nail polish remover (acetone) or any ketone solvents.
- Use diluted household detergents to remove surface soil and stains. Before using a given brand, check to make sure it contains no chlorine or ammonia.
- Alcohol can be used to remove difficult stains. But it must be promptly washed off with mild detergent and water.
- Minor scratches and deeper stains that do not penetrate the gelcoat may be removed by light sanding and buffing.

4. PERMANENTLY MOORED OR DOCKED BOATS

If permanently moored in salt water or fresh water, your boat will collect marine growth on its bottom. This will detract from the boat's beauty and greatly affect its performance. There are two methods of preventing this:

- Periodically haul the boat out of the water and scrub the bottom with a bristle brush and a solution of soap and water.
- Paint the hull below the waterline with a good grade of antifouling paint. **DO NOT paint the engine drive surfaces.**

NOTE: There are EPA regulations regarding bottom paint application. Consult your Sea Ray® dealer for proper application methods.

5. CARE FOR BOTTOM PAINT

From time to time a slight algae or slime forms on all vessels. The bottom painted portion of the hull can be wiped off with a coarse turkish towel or a piece of old rug while the boat is in the water. Do not use a stiff or abrasive material to clean the bottom paint.

The bottom paint should be inspected annually. If it needs repainting consult your Sea Ray® dealer.

6. TOPSIDE AREAS

A. STAINLESS STEEL AND ALLOY FITTINGS

Stainless steel and alloy fittings should be cleaned with soap and water or household glass cleaner. Remove rust spots as soon as possible with a brass, silver or chrome cleaner. Irreversible pitting will develop under rust that remains for any period of time. Never use an abrasive like sandpaper or steel wool on stainless. These may actually cause rust. To help protect the stainless, we recommend the use of a good car wax.

B. SALT CRYSTALS

When instruments are exposed to a saltwater environment, salt crystals may form on the bezel and the plastic covers. These salt crystals should be removed with a soft, damp cloth; never use abrasives or rough, dirty cloths to wipe plastic parts. Mild household detergents or plastic cleaners can be used to keep the instruments bright and clean.

REFER TO THE OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.



SECTION 9 • CARE & REFINISHING

7. ACRYLIC PLASTIC SHEETING

(PLASTIC GLASS)

Never use a dry cloth or duster or glass cleaning solutions on acrylic.

To clean acrylic, first flood it with water to wash off as much dirt as possible. Next, use your bare hand, with plenty of water, to feel and dislodge any caked dirt or mud. A soft, grit-free cloth may then be used with a nonabrasive soap or detergent. A soft sponge, kept clean for this purpose, is excellent. Blot dry with a clean damp chamois.

Grease and oil may be removed from acrylic with kerosene, hexane, white (not aviation or ethyl) gasoline or aliphatic naphtha (no aromatic content).

Do not use solvents such as acetone, silicone spray, benzene, carbon tetrachloride, fire extinguisher fluid, dry cleaning fluid or lacquer thinner on acrylic, since they attack the surface.

Remove fine scratches with fine automotive acrylic rubbing and polishing compounds.

8. CANVAS AND CLEAR VINYL

Do not fold or store any of the canvas pieces while wet. All canvas should be rolled or folded when dry and stored in a clean, dry place. For clear vinyl pieces, the recommended methods for storage are rolling or laying down flat. The clear vinyl should never be folded or creased as cracking will result. To protect the clear vinyl from rubbing against itself while rolled or stored flat, place a piece of very soft, nonabrasive cloth between the pieces. If the surface of the clear vinyl becomes scratched, the canvas manufacturer has provided a canvas care sheet located in your Owner's Manual Packet. When storing the rear (aft) curtain, fold the canvas over the clear vinyl window (do not fold clear vinyl), then roll or store flat.

The fabric should be cleaned regularly before substances such as dirt, pollen, etc. are allowed to accumulate on and become embedded in the fabric. The fabric can be cleaned without being removed from the installation. Simply brush off any loose dirt, particles, etc.; hose down

and clean with a mild solution of a natural soap in lukewarm water (no more than 100°F, 38°C); rinse thoroughly to remove soap. **DO NOT USE DETERGENTS.** Allow to completely dry.

Wash and clean vinyl windows with a warm soap solution. Use a soft cloth or sponge and do not scratch the surface.

If you have stubborn cleaning cases, call your dealer for proper procedures. Do not try your own cleaning procedures as they may permanently damage the canvas.

After each use, especially in salt water areas, rinse the canvas completely with fresh cold water. Then let the canvas dry completely before stowing.

All metal components of the canvas should be rinsed with fresh cold water and exposed components wiped dry to maintain appearance and working order.

9. EXTERIOR UPHOLSTERY FABRIC

Exterior fabrics should be cleaned with a sponge or very soft scrub brush and a mild soap and warm water solution. After scrubbing, rinse with plenty of cold, clean water and allow the fabric to air dry in a well ventilated place, preferably away from direct sunlight.

Mildew can occur if your boat does not have adequate ventilation. Heat alone will not prevent mildew; you must also provide for fresh air circulation.

REFER TO THE OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND WARRANTY INFORMATION.

10. INTERIOR UPHOLSTERY FABRIC

Cleaning and maintenance information provided by the material manufacturer, is in your Owner's Manual Packet.

NOTICE

Always clean spots, stains, etc., immediately. Test an unseen area of fabric before cleaning stain, to insure that cleaning material will not cause damage.

REFER TO THE OWNER'S MANUAL PACKET FOR INSTRUCTIONS AND OTHER CLEANING INFORMATION.



SECTION 9 • CARE & REFINISHING

THIS PAGE LEFT INTENTIONALLY BLANK

