

TIGÉ BOATS, INC.

1801 Hwy. 36 / Abilene, TX 79602

P. 325.676.7777

www.tige.com

tigé

TIGÉ
HOLIDAY

14

2014
OWNERS MANUAL





TABLE OF CONTENTS

INTRODUCTION 1-1
Play It Safe and Enjoy! 1-2
Tigé Tips for a Safe, Fun Day on the Water! 1-3
Owner’s Kit 1-3
Intended Use 1-4
Owner Responsibility for Warranty Procedure 1-4
Certifications 1-5
Features and Technology 1-6
Serial Number Locations 1-8
Owner/Operator Responsibilities 1-10
Qualified Boat Operators 1-11
Education Opportunities 1-12
Federal, State and Local Regulations 1-12
Reporting Accidents 1-13
Rendering Assistance 1-13
Our Environment 1-14
Warning Labels 1-16
Restricted Areas 1-17
Boating Terminology 1-17
Standard Seating Chart 1-18
European Seating Chart 1-19
360 Service Plus / Warranties 1-20

SAFETY 2-1
Safety While Boating 2-1
Develop Water Sense 2-1
Watersport Responsibility Code 2-2
General Precautions 2-2
Boat Safety Labels 2-3
Safety Statements 2-4
Warning and Instructions 2-6
Boating Regulations 2-7
Boater Responsibilities 2-8
Registration 2-11
Education Opportunities 2-12
Insurance 2-12
Operation By Minors 2-14
Passenger Safety 2-14
Overloading 2-15

Visibility 2-17
Boating Under the Influence 2-18
Reporting Accidents 2-19
Rendering Assistance 2-19
Factory Provided Safety Equipment 2-20
Owner Provided Safety Equipment 2-21
Life Saving Equipment 2-21
Navigation Lights 2-23
Horn or Whistle 2-23
Fire Extinguisher 2-23
Emergency Safety Lanyard 2-24
Visual Distress Signals 2-25
Recommended Safety Equipment 2-26
Emergencies 2-27
Warning Markers 2-32
Carbon Monoxide 2-33
Watersport Safety 2-38
General Watersport Precautions 2-40
Watersports Safety Code 2-44
Basic Rules on the Road 2-48
Aids to Navigation 2-48
USWMS System 2-49
FWMS 2-50
Types of Buoys 2-51
FWMS Marking System 2-51
Uniform State Regulatory Markers 2-52

FEATURES 3-1
Dash Panels 3-1
General Layouts/Storage 3-3
Switches, Controls, Ports, Gauges and Indicators 3-4
Controls 3-9
Ports 3-12
Gauges 3-12
Circuit Breaker Panel 3-16
Fuses 3-16
Cockpit and Exterior 3-17

OPERATION 4-1
Getting Underway 4-1



TABLE OF CONTENTS

Preflight Checklist.....	4-1
Fueling	4-4
Shifting/Running	4-5
Steering.....	4-6
Stopping	4-6
Docking.....	4-7
Starting	4-9
TAPS ² Operation	4-10
Water Sports Settings.....	4-12
Tigé Speedset® Cruise Control Operations.....	4-14
Troubleshooting	4-17
Safety Equipment.....	4-17
Boarding.....	4-18
Boat Loading	4-18
Running	4-19
Maneuvering Techniques	4-19
Salt Water	4-21
Freezing Temperatures.....	4-21
Towing Procedure	4-21
Anchoring	4-22
Performance Boating.....	4-24
Propellers	4-25
BOAT SYSTEMS	5-1
Steering.....	5-2
Engines	5-2
Transmissions.....	5-3
Strut and Bearing.....	5-4
Electrical System	5-4
Fuel System	5-5
Ballast Tank System (optional).....	5-5
Bilge Systems.....	5-6
Shower System	5-7
Schematic and System Illustrations.....	5-9
CARE AND MAINTENANCE.....	6-1
General Maintenance Interior	6-2

Interior	6-3
Bilge Pump and Bilge Area.....	6-6
Exterior.....	6-7
Gelcoat Maintenance	6-8
Stainless Steel and Chrome.....	6-10
Propeller.....	6-12
Saltwater Boating	6-13
Battery Maintenance	6-14
Transmission Oil Level Inspection.....	6-16
Steering.....	6-17
Unscheduled Maintenance	6-18
Slings/Lifting the Boat	6-20
Storage/Winterization	6-22
TIGÉ TOUCH USER MANUAL.....	7-1
Home Page	7-2
Gauge/Depth Page	7-3
Switch Page.....	7-4
Lights Page	7-5
Cruise	7-6
Tigé You	7-7
Ballast Setup and Adjustments.....	7-8
Setup Screen.....	7-9
Speed Calibration and TABS Calibration	7-10
English/Metric.....	7-11
Favorites Setup	7-11
DIM Setting	7-11
Output Setup and Gauge Diagnostics.....	7-12
About Viper and Viper Diagnostics.....	7-13
Viper Video Connections	7-14
TROUBLESHOOTING AND SERVICE REQUIREMENTS	8-1
Troubleshooting	8-1
Service Requirements	8-4
Fuel Log	8-12
Float Plan	8-13
WARNING LABEL APPENDIX	9-1



SECTION 1

MONITORING

SECTION 2



INTRODUCTION

Congratulations on your purchase of a Tigé, the world's most unique multi-sport inboard! We're confident you will enjoy Tigé's extraordinary blend of world-class water sports performance, incredible versatility and outstanding user convenience.

Before using your new Tigé, we encourage you to thoroughly review this owner's manual and familiarize yourself with your boat's operational and safety features.

We have made every effort to ensure the accuracy of this manual, providing the most current information available. Since we are continuously refining features and design, Tigé periodically makes changes to models, systems and specifications. These changes are included in an updated online version of this owner's manual available at www.tigé.com.

If you have any questions concerning your new Tigé or this manual, please contact your Tigé dealer. Once again, thanks for choosing Tigé. Have a great time!

PLAY IT SAFE AND ENJOY!

Safety is a top priority in the design and construction of every Tigé boat. Before use, we strongly encourage owners and operators to become familiar with Tigé safety features, safe operation, maintenance procedures and overall safe boating practices. In addition to ensuring your safety and that of your passengers, proper maintenance and operation of your Tigé greatly enhance your enjoyment on the water.

TIGÉ TIPS FOR A SAFE, FUN DAY ON THE WATER

A day on the water may be relaxing for you, but cruising through chop, towing skiers and other normal boating activity puts significant stress on a boat. Although your Tigé is built tough to withstand the rigors of on-water activities, you should check and tighten pylons, towers, accessories and other attachments every time you go out to avoid injury and ensure safe reliable performance. It is also very important to regularly check and maintain the various systems and equipment on your boat before you get underway.

To help you keep everything in good working order, refer to the Preflight Checklist in Section 4 each time you go boating. Make it a habit and you'll make the most out of your time on the water.

OWNER'S KIT

The Owner's Kit contains the owner's manual and may include other information about accessories or components offered with your Tigé boat. This information is provided by the manufacturers of those products and should be read, kept and referred to whenever you are using the accessory or component, or before you put it into use. Refer to these manufacturers' manuals for additional operation and maintenance instructions not covered in this manual.

Owner's Manual

The owner's manual contains information concerning the operation and care of your boat. The descriptions contained within the manual will introduce you to features of Tigé and provide you the general knowledge of how the boat works. Become familiar with the information in each section before you use your boat.

Even if everything has been planned and designed for the safety of the boat and its users, boating is still highly dependent on the weather conditions, water conditions, and the experience of you and your passengers. One can never ensure full safety. It is your responsibility as the owner or user to know the boat's equipment, capabilities and intended use. The specific information on the operation of the equipment and systems on your boat should be supplied by that manufacturer. Read, understand and keep all the information supplied, and familiarize yourself and all users with the boat before you put it into use.

INTENDED USE

Your Tigé boat is intended for use as a pleasure and sport craft and a Craft Design Category of:

Inshore – Category C

Craft designed to operate in winds up to Beaufort force 6 and the associated wave heights and significant wave heights up to 6'6.7" (2 m). Such conditions may be encountered in exposed inland waters, in estuaries, and in coastal waters in moderate weather conditions.

OWNER RESPONSIBILITY FOR WARRANTY PROCEDURE

Before Operating

Before operating your new Tigé boat, it is necessary that you read and understand this manual and the warranty, and that you take the time to read about other accessories or components offered with your Tigé boat.

Warranty Service Requirements

All Tigé warranty service must be completed by an Tigé Dealer. If you are not able to return your boat to your dealership, contact them so they can assist you in coordinating the warranty service. Any claims against Tigé Boats without prior approval from Tigé Boats on repairs completed by an unauthorized dealership may be denied.

If You Sell Your Tigé Boat

Your warranties are transferable. If you choose to sell your Tigé boat to anyone other than a Tigé Dealer, contact Tigé Boats for the appropriate warranty transfer information: www.tigé.com or 325.676.7777. If the transfer procedures are not followed, future warranty service may be denied.

CERTIFICATIONS

National Marine Manufacturers Association (NMMA)

Tigé Boats is a member of the NMMA. This independent organization's members include boat, engine and marine equipment manufacturers that are focused on the improvement and safety of boating.

Your new Tigé boat is NMMA certified. An NMMA certification not only satisfies the U.S. Coast Guard (USCG) regulations but also the more rigorous equipment and system standards based on those established by the American Boat and Yacht Council, Inc. (ABYC). Your Tigé boat meets or exceeds NMMA safety-based certifications.

Engines

Our engine manufacturer works closely with Tigé to ensure that its engines deliver maximum performance, reliability and customer satisfaction. Part of this commitment is a certification program that provides Tigé dealers and service technicians with ongoing training and information about our engines. Certified engine service personnel must attend periodic service schools held at the Tigé headquarters. The training includes review of all manufacturing and installation processes, proper servicing procedures as well as existing and developing engine technologies.

FEATURES AND TECHNOLOGY

Convex V Hull/Apex Hull/TAPS²

The unique, patented shape of the Tigé Convex V hull, and Apex Hull combined with TAPS² technology are key Tigé's superior multi-sport versatility, incredible performance and unmatched ride. All other inboard hulls curve down with a "hook" toward the transom and must rely on heavy ballast or drag hardware to produce even entry-level wakeboarding wakes. The Convex V and Apex hulls curves up in a rocker shape like a wakeboard or slalom ski. Tigé uses its breakthrough TAPS² technology to control hull running attitude and wake characteristics. At wakeboarding speed with TAPS² in the up position, the bow rises and the Convex V & Apex hulls settles naturally, creating tremendous water displacement and huge world-class wakes without ballast or drag hardware. A push of a button adjusts TAPS² down, lowers the bow and creates instant planning and slalom type wakes.

INTRODUCTION



Ride, handling and fuel efficiency are also dramatically enhanced, allowing Tigé to deliver outstanding overall performance unmatched by any other inboard.

Tigé SpeedSet

Available as an option on all Tigé models, Tigé SpeedSet is the most advanced precision digital speed control in the marine industry. It is also the easiest to use. The SpeedSet control panel incorporates Touchpad and Touch Screen Recognition for easy fingertip use without taking your eyes off the waterway. SpeedSet readouts are displayed on the heads-up digital monitor located on the dash, as well as our Touch Screen. For added safety, the SpeedSet control panel is conveniently located adjacent to the throttle for quick, easy access with your throttle hand. SpeedSet operation is precise, multi-functional and simple. You can even preset a preferred speed and precisely hit that speed set after set. Perfect double-ups and consistent towing speeds are now at your fingertips.

Advanced CAN bus Technology

TEC (Tigé Electronic Control) components are in constant communication with the engine's computerized ECM using advanced MEFI-5 electronics. State-of-the-art CAN bus technology allows components to communicate hundreds of times a second over a simple, reliable, two-wire system. Keeping the juice flowing and the electronics humming is our Central Electronic

Distribution Center (CEDC), which increases electrical system reliability and efficiency through circuit simplification and load management. CEDC also stabilizes electrical output throughout the boat, significantly reducing power spikes.

Product Improvement

Because of Tigé's commitment to continuous product improvement, the illustrations used in this manual may not exactly match your boat and are intended only as representation for reference views. Some illustrations may also show optional accessories, which may or may not be available for your boat. Some optional accessories can only be installed at the time the boat is manufactured and cannot be installed by your dealer. Your dealer can help with any questions you may have on options, which can be added to your boat.

SERIAL NUMBER LOCATIONS

Your Tigé boat, its engine, propulsion unit and other equipment onboard are identified with a serial number. These identification numbers associated with your boat are extremely important. Prepare a list of all serial number items and store it in a safe place other than onboard the boat. Refer to the equipment operator's manuals supplied in your owner's kit for location of serial numbers.

INTRODUCTION



Record these numbers below.

Hull Identification Number (HIN):

Located at the top, right (starboard) corner of the transom.

HIN: _____

Ignition Key, a key tag, is also provided with the keys; store tag or destroy.

Key Number: _____

Registration Number/State: _____

Date of Purchase: _____

Dealership Name and Address: _____

Phone: _____

Salesperson: _____

Engine:

Engine Serial Number: _____

Engine Manufacturer: _____

Model: _____

Horsepower: _____

Transmission:

Transmission Serial Number: _____

Model: _____

Trailer:

Serial Number: _____

Manufacturer: _____

OWNER/OPERATOR RESPONSIBILITIES

At the time of delivery, the owner/operator is responsible for:

- Understanding warranty terms and conditions of both the engine and boat.
- Obtaining insurance.
- Examining boat to ensure proper operation of all systems.

Before operating the boat, the owner/operator is responsible for:

- Obtaining state registration of the boat.
- Providing the proper USCG-required safety equipment.
- Following proper break-in procedure for the engine.
- Understanding safety information and proper operating procedures within this manual.

While operating the boat, the owner/operator is responsible for:

- Knowing that all safety equipment and personal flotation devices (PFDs) are in good condition and suitable for your boat and passenger load.
- Having at least one other passenger who is capable of handling the boat.
- In an emergency.
- Following safe operating practices and the "Rules of the Road."
- Understanding proper maintenance and knowledge of the boat's operating systems.
- Providing safety training for the passengers.
- Avoiding use of alcohol and other drugs.
- Providing assistance to other boaters.

INTRODUCTION



Insurance

You must get insurance before operating your new boat. Insurance for loss by fire, theft or other causes, or liability protection against accidents is a must for responsible boaters. The boat owner is legally responsible for any damage or injury caused when he, or someone else operating the boat, is involved in an accident. Many states have laws detailing minimum insurance needs. Your insurance agent or dealer may be able to supply you with more information.

Registration/Documentation

The USCG requires that all power boats operated on the navigable waters of the U.S. be registered in the state of main use; also, many states require registration in that state whenever boating on waters within their state boundary. Contact your state boating authorities (and neighboring states) for registration information on boats and trailers.

Your dealer can supply you with the appropriate forms.

QUALIFIED BOAT OPERATORS

This manual is not intended to provide complete training on all aspects of boat operation. We strongly recommend that all operators of this boat seek additional training on boat handling and safety. Have all operators become familiar with the handling characteristics and proper steering and control system usage before attempting high-speed operation.

Some states require youths 16 years of age and younger to complete a boating safety course before operating any watercraft. Many others require operators under the age of 18 to be licensed in small boat operation.

EDUCATION OPPORTUNITIES

Be boat smart from the start, take a boating safety course and get a free vessel safety check annually for your boat. For more information, contact:

United States Coast Guard Auxiliary, www.cgaux.org;

United States Power Squadrons, 888-FOR-USPS, www.usps.org.

Most boaters can enhance their enjoyment of boating experiences through increased knowledge of safe operation, navigation and regulation of pleasure boats. The following is a list of some other agencies and organizations that offer Water Safety, First Aid and CPR courses or information. To find boating safety courses in your area, call your state's local boating agency or the USCG boating safety course line at 800-336-2628 (800-245-2628 in Virginia).

- American Red Cross
- State Boating Offices
- Canadian Power and Sail Squadrons
- Boat Owners Association of the United States
- National Safe Boating Council
- American Water Ski Association (AWSA)

FEDERAL, STATE AND LOCAL REGULATIONS

The U.S. Coast Guard (USCG) is the authority of the waterways; they are there to help the boating public. State local authorities enforce boating regulations. You are subject to marine traffic laws and "Rules of the Road" for

INTRODUCTION

both federal and state waterways. You must stop if signaled to do so by enforcement officers, and permit to be boarded as asked.

REPORTING ACCIDENTS

The USCG requires the owner or operator of a boat involved in an accident to report the incident to the proper marine law enforcement agency for the state in which the accident occurred.

Immediate notification to the nearest State boating authority is required if a person dies or disappears as a result of a recreational boating accident. If a person dies or sustains injuries requiring more than first aid, a formal report must be filed within 48 hours of the accident. A formal report must be filed within 10 days for accidents exceeding \$500 in property damage or complete loss of boat.

RENDERING ASSISTANCE

If you see a distress signal or suspect a boat is in trouble, you must assume it is a real emergency and render assistance immediately. By law, the operator in charge of the craft is obligated to provide assistance to any individual in danger if such assistance can be provided safely. Failure to render assistance can result in a fine and/or imprisonment.

The 1971 Boating Safety Act grants protection to a “Good Samaritan” boater providing good faith assistance, and absolves a boater from any civil liability arising from such assistance.

OUR ENVIRONMENT

As a boater, you already have an appreciation for nature’s beauty and the peace of the great outdoors. It is a boater’s responsibility to protect the natural environment by keeping waterways clean.

Foreign Species

If you trailer your boat from lake to lake, you may unknowingly introduce a foreign aquatic species from one lake to the next. Thoroughly clean the boat and trailer below the water line, remove all weeds and algae, and drain the bilge and ballast tanks, if equipped, before launching the boat in a new body of water.

Fuel/Oil Spillage



The spilling of fuel or oil into our waterways contaminates the environment and is dangerous to wildlife. DO NOT discharge or dispose of fuel, oil or other chemicals into the water; it is prohibited and you can be fined. DO NOT overfill the fuel tank, pump contaminated bilge water or discard soiled rags into the water.

Discharge/Disposal of Waste

Waste means all forms of garbage, plastics, recyclables, food, wood, detergents, sewage and even fish parts in certain waters, essentially anything. Bring back everything you take out and dispose of in an environmentally friendly manner ashore.

Excessive Noise

Noise means engine noise, radio noise or even voices. Many bodies of water have adopted noise limits. Music and loud conversation can carry a considerable distance on water, especially at night. Make sure to follow regulations and be courteous.

Wake/Wash

Be alert for NO WAKE zones. Prior to entering a NO WAKE zone, come off plane to the slowest steerable speed. Use caution when operating around smaller crafts, in channels and marinas, and in congested areas.

Exhaust Emissions

Increased exhaust (hydrocarbon) emissions pollute our water and air. Keep your engine tuned and boat hull clean for peak performance.

Paints

If your boat is kept in water where marine growth is a problem, the use of anti-fouling paint may reduce the growth rate. Be aware of environmental regulations that may govern your paint choice.

Contact your local boating authorities for information.

Cleaning Agents

Household cleaners should be used sparingly and not discharged into waterways. DO NOT mix cleaners and be sure to use plenty of ventilation in enclosed areas. DO NOT use products which contain phosphates, chlorine, solvents, or non-biodegradable or petroleum-based products.

MARPOL Treaty

The USCG enforces the International Convention for the Prevention of Pollution from ships, commonly referred to as the MARPOL Treaty (MARine POLLution). This treaty prohibits the overboard dumping of all ship-generated plastics, chemicals, garbage and oil.

WARNING LABELS

The warning labels on your Tigé boat must remain legible. If a label is damaged or you suspect a label is missing, contact your Tigé Dealer for immediate replacement.

There are several labels placed throughout the boat to warn you about potential hazards.


All persons should wear a suitable life preserver/personal flotation device when on deck, especially children, disabled people and non-swimmers. Inform all passengers on the proper use of personal flotation devices and of the location of safety equipment, man overboard recovery equipment and the location and deployment of the ladder.

In some countries it is a legal requirement to wear a suitable life preserver/personal flotation device that complies with those countries' regulations at all times.

RESTRICTED AREAS


Before boating, check with local, state and federal authorities to identify restricted areas. Because of the threat of terrorism, the U.S. Coast Guard has implemented and will continue to enforce strict limits on watercraft near U.S. Navy and Coast Guard ships and other potential targets.

BOATING TERMINOLOGY

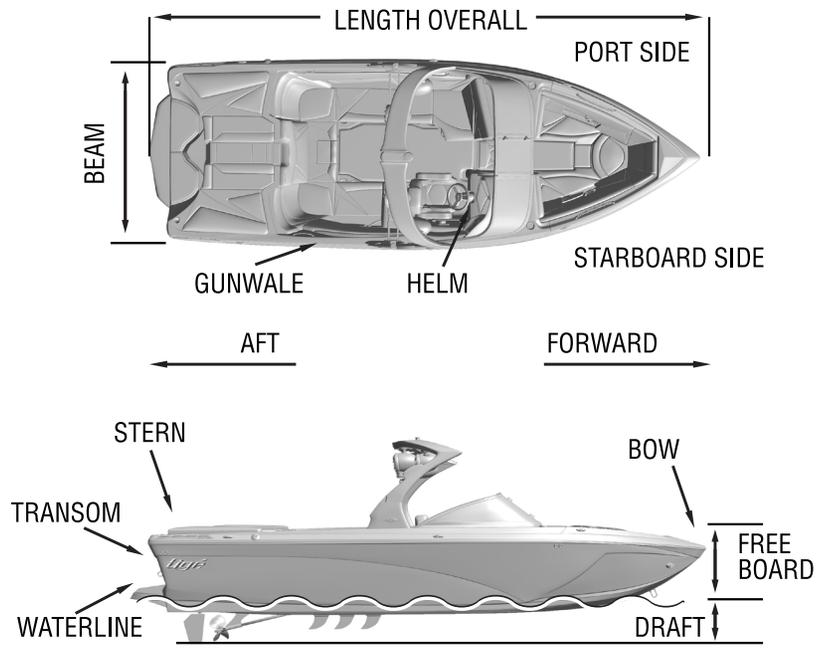



An easy way to remember PORT side from STARBOARD side is "PORT" and "LEFT" both have four letters.

STANDARD SEATING CHART

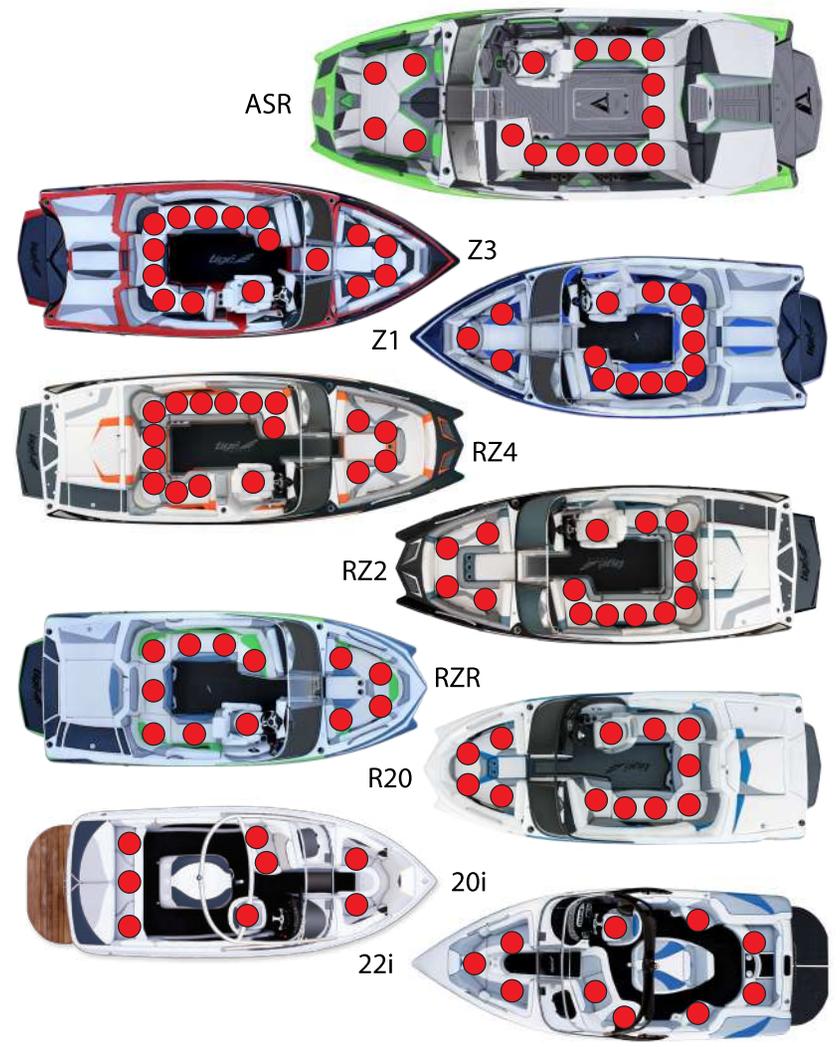

INTRODUCTION

EUROPEAN SEATING CHART

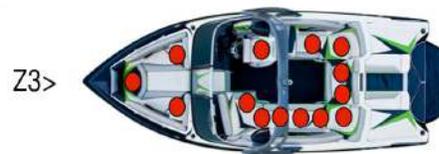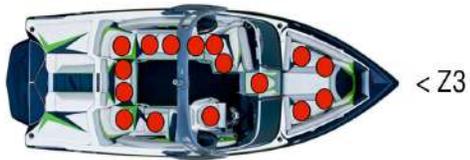

tigé
BOATS

360 SERVICE PLUS

Tigé Boats, Inc. offers the Tigé 360 Service Plus with the purchase of your new 2014 Tigé. It's as easy as taking your boat to the Tigé dealer where purchased and your regular-hour oil changes, as outlined in the Tigé Owners manual, will be covered at no charge to you.

The 360 Service Plus includes oil filter, oil, transmission fluid and 2 (two) impellers.

Tigé Pride in Quality and Service

EFFECTIVE DATE

Tigé 360 Service Plus begins on the date the new 2014 Tigé boat is purchased from and authorized Tigé dealership.

WHO IS COVERED

The Tigé 360 Service Plus is provided to the original owner of the new boat. The Tigé 360 Service Plus is non-transferable.

For the Tigé 360 Service Plus to apply, the dealer must submit the Tigé Owner Registration information to Tigé Boats, Inc.

WHAT IS COVERED

Your Mandatory service requirements, as outlined in the owner's manual, for the first 3 years of ownership, includes oil filter, oil, transmission fluid and 2 (two) impellers.

EXCLUSIONS

The following are excluded from the 360 Service Plus:

- Tigé R20 model is not covered under the 360 Service Plus coverage.
- Transportation of your Tigé to the authorized dealership.
- Service "dock" calls to your home or marina.
- Winterization is not included in the 360 Service Plus.
- Boats used for 40 hours or more for dealer demonstration.
- Service required due to damage due to misuse, negligence, accident, collision or impact, or act of nature.
- Service required due to damage due to any modification, alteration or repair to original product.
- Service required due to damage due to installation of after-market or non-dealer installed products.
- Batteries and belts are not covered.
- Maximum of two (2) impellers will be changed during the three-year period.
- Lost time, inconvenience, the loss of use of your boat, cost of rental, gasoline or lodging due to your boat being in service.
- Boats purchased from an unauthorized Tigé dealer.
- Boats used for commercial or military purposes, racing, competition, instruction, rental, or performance demonstration.

HOW TO OBTAIN SERVICE THROUGH THE TIGÉ 360 SERVICE PLUS

Service only valid through the authorized Tigé dealer where you purchased your Tigé. If you relocate to an area that requires you to change service departments, you must obtain written authorization from Tigé Boats, Inc. Customer Service Department for service at another authorized Tigé dealership.

GENERAL PROVISIONS

Revision Date: 7/3/13

Tigé Boats, Inc. does not authorize its dealers or other persons to change the terms of this service programs described above.



TIGÉ LIMITED WARRANTY

FOR TIGÉ BOATS MANUFACTURED JULY 2, 2012 AND AFTER.

The Tigé Limited Warranty includes the exclusive Tigé LifePlus Lifetime Replacement Warranty and the Tigé Three-Year Bow-to-Stern Warranty. The terms and conditions of the Tigé Limited Warranty are described below.

EFFECTIVE DATE

The warranty begins on the date the new Tigé boat is delivered to the original retail purchaser or put into use, whichever is earlier.

WHO IS COVERED

The warranty is provided to the original retail purchaser of the new boat. The Tigé LifePlus Lifetime Replacement Warranty is transferable to a second owner under limited circumstances.

For this warranty to apply, the dealer must submit the owner registered boat immediately upon delivery.

Owner must operate and maintain the boat in accordance with the owner and service manuals.

TIGÉ LIFEPLUS LIFETIME REPLACEMENT WARRANTY

The exclusive Tigé LifePlus Lifetime Replacement Warranty covers the integrated LifePlus Core construction of the boat, which includes hull, stringers and flooring. The LifePlus Core laminated construction is warranted for as long as the boat is owned by the original retail purchaser. This means that if a structural failure occurs, meaning delamination shown to Tigé's satisfaction, the purchaser will receive a new Tigé boat, provided the conditions contained in this warranty document are met. The LifePlus Lifetime Replacement Warranty does not include hardware or other components fastened or adhered to the hull, stringer, flooring or their respective attachment areas.

The original retail purchaser can transfer the LifePlus Lifetime Replacement Warranty to a documented second owner by submitting an official transfer form and \$500 transfer fee to Tigé. The transfer form must be requested from Tigé and submitted with the fee within twenty days of the title transfer. A transferred warranty provides coverage for ten years after the boat was originally purchased by the first owner. In the event of a structural failure during this ten-year period, the second owner will be entitled to repair at no cost, but will not be entitled to a new boat.

THREE-YEAR BOW-TO-STERN WARRANTY

For a period of three years, Tigé will repair or replace, at its sole option, any defective parts covered by this limited warranty. Repairs and replacements will be warranted for the remainder of the warranty period. For one year of the warranty period, Tigé will pay for both parts and labor. For years two and three, Tigé will pay for parts only. The purchaser is responsible for transporting the Tigé boat or parts to and from an authorized Tigé repair facility.

ADDITIONAL WARRANTY COVERAGE

The power train limited warranty is maintained through PCM independent of Tigé.

Warranty for the trailer is maintained from the trailer manufacturer.

HOW TO OBTAIN SERVICE

Contact your local Tigé dealer for warranty claims or you may contact:

Tigé Boats, Inc., 1801 Hwy 36, Abilene, TX 79602

Phone: 325.676.7777

customerservice@tige.com

Revision Date: 7/3/13



TIGÉ LIMITED WARRANTY

EXCLUSIONS

The following are excluded from coverage under this warranty:

- The R20 model is covered under a different warranty program.
- Boats purchased from an unauthorized dealer or vendor.
- Damage due to misuse, negligence, accident, collision or impact with any object, or owner's failure to perform reasonable and necessary maintenance.
- Damage due to any modification, alteration or repair to original product.
- Damage to lamination cause by attachments due to normal wear and usage may be warranted for repair but does not qualify for boat replacement under the Tigé LifePlus Replacement Warranty.
- Damage due to weather, natural disaster, war or terrorism.
- Paints, varnishes, gel coat colors and surfaces (which may crack or fade with normal use), air voids, finish distortions, chrome plated, powder coating or anodized finishes, blisters, floor covers and other surface coatings, and any other cosmetic items.
- Swim platforms, fiberglass, non-skid pads or teak wood.
Items warranted by another manufacturer (engine, trailers, etc.).
- Boats used for commercial or military purposes, racing, competition, instruction, rental, or performance demonstration.
- Boats used for 40 hours or more for dealer demonstration.
- All components, parts and accessories not supplied or installed by Tigé.
- Damage due to the installation of after-market or non-dealer installed products for which the tower or boat were not specifically designed. Any attachment on non-Tigé accessories may void Tigé warranty.
- Batteries are considered a maintenance item.
- Performance characteristics such as fuel consumption, speed, etc.
- Lost time, inconvenience, the loss of use of your boat, cost of rental, gasoline or lodging, etc.

GENERAL PROVISIONS

Tigé Boats, Inc. reserves the right to modify its products through changes in design or material without being obligated to incorporate such changes in products for prior manufacture. Tigé does not authorize its dealers or other persons to change the terms of this limited warranty, or to assume any liabilities or repair costs other than those described herein.

Any implied warranties, including merchantability and fitness for a particular purpose, shall not extend beyond the applicable warranty periods described above. Tigé's sole liability with respect to defective parts is as set forth in this warranty, and any claims for incidental or consequential damages are expressly excluded. Some states do not allow limitations on how long an implied warranty lasts or for the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and outside the United States.



R20 LIMITED WARRANTY

FOR TIGÉ BOATS MANUFACTURED AUGUST 1, 2010 AND AFTER.

The Tigé Limited Warranty includes the exclusive Tigé LifePlus Lifetime Replacement Warranty and the Tigé Three-Year Bow-to-Stern Warranty. The terms and conditions of the Tigé Limited Warranty are described below.

EFFECTIVE DATE

The warranty begins on the date the new Tigé boat is delivered to the original retail purchaser or put into use, whichever is earlier.

WHO IS COVERED

The warranty is provided to the original retail purchaser of the new boat. The Tigé LifePlus Lifetime Replacement Warranty is transferable to a second owner under limited circumstances.

For this warranty to apply, the dealer must submit the owner registered boat immediately upon delivery.

Owner must operate and maintain the boat in accordance with the owner and service manuals.

TIGÉ LIFEPLUS LIFETIME REPLACEMENT WARRANTY

The exclusive Tigé LifePlus Lifetime Replacement Warranty covers the integrated LifePlus Core construction of the boat, which includes hull, stringers and flooring. The LifePlus Core laminated construction is warranted for as long as the boat is owned by the original retail purchaser. This means that if a structural failure occurs, meaning delamination shown to Tigé's satisfaction, the purchaser will receive a new Tigé boat, provided the conditions contained in this warranty document are met. The LifePlus Lifetime Replacement Warranty does not include hardware or other components fastened or adhered to the hull, stringer, flooring or their respective attachment areas.

The original retail purchaser can transfer the LifePlus Lifetime Replacement Warranty to a documented second owner by submitting an official transfer form and \$500 transfer fee to Tigé. The transfer form must be requested from Tigé and submitted with the fee within twenty days of the title transfer. A transferred warranty provides coverage for ten years after the boat was originally purchased by the first owner. In the event of a structural failure during this ten-year period, the second owner will be entitled to repair at no cost, but will not be entitled to a new boat.

THREE-YEAR BOW-TO-STERN WARRANTY

For a period of three years, Tigé will repair or replace, at its sole option, any defective parts covered by this limited warranty. Repairs and replacements will be warranted for the remainder of the warranty period. For one year of the warranty period, Tigé will pay for both parts and labor. For years two and three, Tigé will pay for parts only. The purchaser is responsible for transporting the Tigé boat or parts to and from an authorized Tigé repair facility.

ADDITIONAL WARRANTY COVERAGE

The power train limited warranty is maintained through PCM independent of Tigé.

Warranty for the trailer is maintained from the trailer manufacturer.

HOW TO OBTAIN SERVICE

Contact your local Tigé dealer for warranty claims or you may contact:

Tigé Boats, Inc., 1801 Hwy 36, Abilene, TX 79602

Phone: 325.676.7777

customerservice@tige.com

Revision Date: 7/3/13



R20 LIMITED WARRANTY

EXCLUSIONS

The following are NOT covered under this warranty:

- Damage due to misuse, negligence, accident, collision or impact with any object, or owner's failure to perform reasonable and necessary maintenance.
- Damage due to any unauthorized modification, alteration or repair.
- Damage due to weather or natural disaster, chemicals, tree sap, salt damage/corrosion, mold and/or road or boating hazards.
- Paints, varnishes, gel coat colors and surfaces (which may crack or blister with normal use), air voids, finish distortions, chrome plated or anodized finishes, floor covers and other surface coatings, and any other cosmetic items considered normal in a hand-crafted product.
- Swim platforms, fiberglass or teak wood.
- Items warranted by another manufacturer (engine, trailers, etc.)
- Boats used for commercial or military purposes, racing, competition, instruction, rental, or performance demonstration.
- Boats used for 40 hours or more for dealer demonstration.
- All components, parts and accessories not supplied or installed by Tigé Boats, Inc.
- Damage due to the addition of any after-market on non-dealer installed products.
- Batteries are considered a maintenance item.
- Lost time, inconvenience, the loss of use of your boat, cost of rental, gasoline or lodging, etc.
- Damage to lamination caused by attachments due to normal wear and usage may be warranted for repair but does not qualify for boat replacement under the Tigé LifePlus Lifetime Replacement Warranty.
- Performance characteristics such as fuel consumption, speed, etc.

GENERAL PROVISIONS

Tigé Boats, Inc. reserves the right to modify its products through changes in design or material without being obligated to incorporate such changes in products for prior manufacture. Tigé does not authorize its dealers or other persons to change the terms of this limited warranty, or to assume any liabilities or repair costs other than those described herein.

Any implied warranties, including merchantability and fitness for a particular purpose, shall not extend beyond the applicable warranty periods described above. Tigé's sole liability with respect to defective parts is as set forth in this warranty, and any claims for incidental or consequential damages are expressly excluded. Some states do not allow limitations on how long an implied warranty lasts or for the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and outside the United States.



SECTION 2

Safety While Boating

Boating-related accidents are generally caused by the operator's failure to follow basic safety rules or written precautions. Most accidents can be avoided if the operator is completely familiar with the boat, its operation and can recognize potentially hazardous situations.

In addition to everyday safety, failure to observe the safety recommendations may result in severe personal injury or death to you or to others. Use caution and common sense when operating your boat. Don't take unnecessary chances!


Drivers must be cognizant of their surroundings, other boats, their wake and other environmental factors including safe turning speeds, people and obstacles in the water, etc. Driver and boat owner assume all risks for themselves, their guests and anyone in proximity to their boat as well as ensuring that all passengers understand risks and responsibilities.

Develop Water sense



What is water sense? Water Sense is developed by familiarizing yourself with the boat, driving, water, equipment, and maintaining vigilance.

Familiarize yourself and follow The Watersport Responsibility Code.

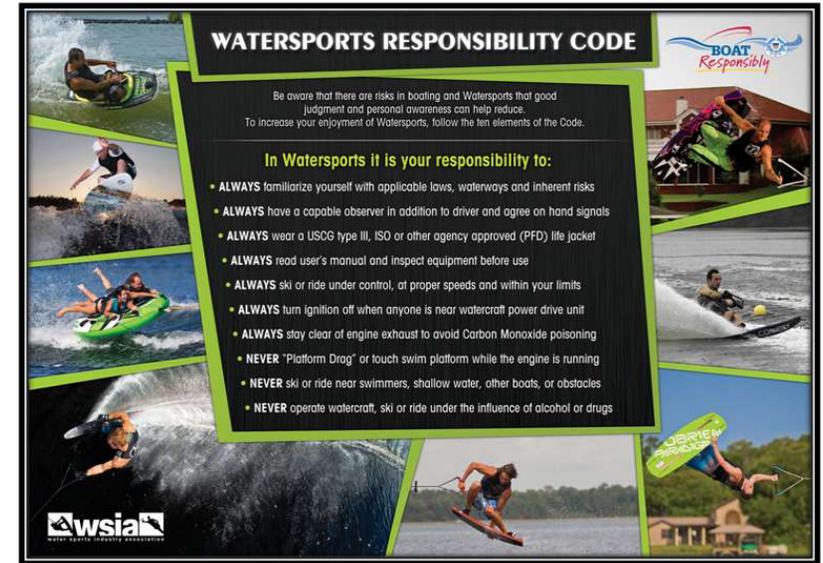

GENERAL PRECAUTIONS

Your Tigé boat has been constructed to meet all U.S. Coast Guard (USCG) and National Marine Manufacturers Association (NMMA) requirements applicable at the time of manufacture. However, it is still your responsibility as the boat owner to ensure the boat is always operated in a safe fashion.

USCG regulations require certain safety equipment be present on your boat during operation. Besides the USCG regulations, other local and/or international law enforcement agencies may have similar requirements. You should check with your local marine enforcement agency regarding any such requirements before using the waterways.

It is not intended for this manual to be a replacement for a course on boating safety. It is highly recommended that if you are unfamiliar with the use and operation of a boat, you seek advice and training from a qualified individual or organization. Check with your local boating agency or dealer for more information about boating safety classes in your area.

Your safety, the safety of your passengers, and other boaters are among your responsibilities as operator or owner of this boat. Your boat must be in compliance with (USCG), state, and country safety equipment regulations. You should know how to react correctly to adverse weather conditions, have good navigation skills, and follow the "Rules of the Road" as defined by the USCG and state/county/local regulations.

Before each outing you should check all safety equipment, such as fire extinguishers, life jackets (PFDs), flares, distress flags, flashlights, and emergency cutoff switch. They should be operable, in good condition, readily visible, and easily accessed.

Know the weight capacity of your boat. DO NOT overload your boat. Passengers and equipment should be spread out evenly.

This section covers general boating safety information. Throughout this manual specific precautions and symbols identify safety related information.

BOAT SAFETY LABELS

Your Tigé boat is affixed with various safety labels at the time of manufacture. These labels appear at specific locations on the boat where safety is of particular concern. Safety

labels must be legible. If you suspect a label is missing or one becomes damaged, contact your dealer for immediate replacement. READ AND ADHERE TO ALL WARNING PLATES AND LABELS from bow to stern, including those that are installed inside the engine compartment, lockers, and under seating.

SAFETY STATEMENTS

Throughout this manual, specific precautions and symbols identify safety related information. Follow these precautions as indicated.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

 DANGER
<p><i>DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.</i></p>
 WARNING
<p><i>WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.</i></p>
 CAUTION
<p><i>CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.</i></p>
NOTICE
<p><i>NOTICE indicates a potentially hazardous situation which, if not avoided, may result in property damage.</i></p>

The precautions listed in this manual and on the boat are not all-inclusive. If a procedure or method is not specifically recommended, you must satisfy yourself that it is safe for you and your passengers, and that the boat will not be damaged or made unsafe as a result of your decision. Remember - always use common sense when operating your boat!

In an emergency situation, you may have to resort to measures, which are not commonly practiced. Always assess the dangers of being in harm's way versus the protection of equipment. Keep a sound mind during an emergency and always think safety.

Failure to adhere to and comply with the safety statements labeled as dangers, warnings, and cautions that appear in this manual can lead to serious injury, or death as well as property damage. Be sure to review the Boating Safety and Rules of the Road sections of this manual

See appendix for warning labels.

It is the responsibility of the boat owner and occupants of the boat to understand and comply with all warning labels and safety recommendations/requirements.

Remember the driver of the boat and owner are responsible for the occupants of the boat and its safe operation.

WARNINGS AND INSTRUCTIONS

FAILURE TO ADHERE TO THESE WARNINGS MAY RESULT IN SEVERE INJURY OR DEATH TO YOU AND / OR OTHERS.

- DO NOT swim near the boat when the engine is running. Being in NEUTRAL is not enough, the propeller may still be turning and carbon monoxide may be present.
- NEVER allow any type of spark or open flame on board. It may result in fire or explosion.
- Engine exhaust contains carbon monoxide.
- DO NOT operate the engine in a confined space.
- DO NOT go under the boat cover with the engine running or shortly after the engine has been running.
- DO NOT come into contact with boarding platform while the engine running.
- DO NOT "platform/teak" surf.
- NEVER operate the boat while under the influence of alcohol or other drugs.
- NEVER stand or allow passengers to stand in the boat, or sit on the transom, seat backs, engine cover or sides of the boat while the engine is running. DO NOT allow any passenger to have legs or other body parts over the side of the bow or the boarding platform while the engine is running. You or others may be thrown from the boat. All passengers must be in designated seats.
- NEVER leave children in the boat without adult supervision.

BOATING SAFETY



- NEVER dive from the boat without being absolutely sure of the depth of the water, otherwise severe injury or death may occur from striking the bottom or submerged objects.
- NEVER climb on, sit on, stand on, jump off of or dive off the wakeboard tower.
- NEVER sit in a position that obstructs the operator's view.
- DO NOT remove or modify any components of the fuel system except for maintenance by qualified personnel. Tampering with fuel components may cause a hazardous condition.
- Battery electrolyte fluid is dangerous. It contains sulfuric acid, which is poisonous, corrosive and caustic. If electrolyte fluid is spilled or placed on any part of the human body, immediately flush the area with large amounts of clean water and immediately seek medical attention
- DO NOT replace your boat's marine parts with automotive parts or parts that were not designed for your boat.

Boating Regulations

The U.S. Coast Guard (USCG) is the governing authority of the United States waterways and is there to help the boating public. State boating regulations are enforced by local authorities. Owners and users outside of the United States must be cognizant of that countries' laws and regulations. You are subject to marine traffic laws and "Rules of the Road" for both federal and state waterways; you must stop if signaled to do so by enforcement officers, and permit them to board if asked.

There are many USCG pamphlets available to you. These pamphlets go beyond the contents of this manual and explain "Rules of the Road," signal lights, buoys, safety, international and inland regulations. An excellent example is the Ultimate Watersports Handbook you should have received with your new boat, or which can be ordered by contacting WSIA, go to: www.WSIA.net. For more information, contact your local USCG Unit or visit <http://www.uscgboating.org>.

Boater Responsibilities

It is the owner's responsibility to ensure that the operator of the boat has been properly instructed in the lawful and safe operation of this vessel. Therefore, before operating the boat, read this owner/operator manual thoroughly. Be sure you understand each item before operating it. Improper operation or trailering of the boat could lead to severe damage, injury, or death.

At the time of delivery, the owner/operator is responsible for:

- Understanding warranty terms and conditions of your boat, your engine, and your trailer.
- Obtaining insurance.
- Examining boat to ensure proper operation of all systems.

Before operating the boat, the owner/operator is responsible for:

- Registering the boat as required in the jurisdiction where the boat is being operated.
- Providing the proper (USCG) safety equipment, check local, state, country agency(ies) as to laws and regulations (USCG carriage requirements).

- Following proper break-in procedure for the engine.
- Carefully reading and understanding safety information and proper operating procedures within this manual.
- Familiarize yourself with the navigable waters where you intend to operate boat.

Additional instructions the owner and operator are responsible for:

- On-board equipment must always conform to the governing federal, state, and local regulations.
- Knowing that all safety equipment and life jackets (PFDs) are in good condition and suitable for your boat and passenger load.
- Prior to starting the engine, you must open the engine box and check the engine compartment and bilge for gasoline and oil vapors. You **MUST** also operate the blower for at least four minutes before starting the engine. Also, operate blower while idling at slow speed, and after stopping boat. Failure to do so may result in fire or explosion as well as serious injury or death to you and/or others. If you smell gasoline vapor or see liquid gasoline, **DO NOT** start the engine.
- Prior to operation ensure that all passengers are aware of where safety equipment is located and how to use it.
- Knowing that the load of persons, ballast, and equipment is within the limits stated on the USCG Maximum Capacities Plate.
- Verifying that the emergency cutoff switch lanyard is in proper operating condition and attached to driver's wrist or part of clothing when operating boat.
- Avoiding use of alcohol and other drugs.
- Slow down when crossing waves or wake in order to minimize the impact on passengers and the boat, but do not allow bow to submerge.
- When charging, batteries generate small amounts of dangerous hydrogen gas. This gas is highly explosive. Keep all sparks, flames and smoking well away from the area. Failure to follow instructions when charging a battery may cause an electrical charge or even an explosion of the battery, which could result in death or serious injury.
- Ensuring that all passengers are properly and securely seated in appropriate seating locations.
- Remember your boat will handle differently depending on loading and its distribution.
- Having at least one other passenger who is capable of operating the boat safely in an emergency.
- Following safe operating practices and the "Rules of the Road", and the Watersports Responsibility Code.
- Operate slowly in congested areas such as marinas and mooring areas.
- Maintain a safe speed at all times to avoid collisions.
- **DO NOT** wrap ski lines or mooring lines around any body part which may become entangled in the line if you fall overboard and the boat is moving.
- Be sure to keep a watch for other boats, swimmers and obstructions in the water. Stay away from other boats and personal watercraft.
- It is recommended you have an experienced operator at the helm and present for safe towing –one to drive, one to observe [which is required in some states] and one to ski or ride.

- Look before you turn the boat. As a boater you are obligated to maintain a proper course and speed. Look before you turn.
- Keep track of ski lines and dock lines so they do not become entangled in the propeller.
- Always watch for low obstacles such as tree limbs bridges or power lines in boats with tow towers.
- Seek shelter from open water if there is threat of lightning.
- The engine box/cover serves as a machinery guard. The engine must be OFF whenever the box is open. Clothing for body parts can get caught in moving parts, causing death or serious injury. Keep away from moving parts.
- When you leave the boat take the keys with you. This will keep untrained and unauthorized persons from operating the boat.
- Providing assistance to other boaters.

Registration

Federal Law requires that all motorboats be registered and that all motorcraft not documented by the U.S. Coast Guard display registration numbers. In nearly all states, this means registration with the designated state agency. In a few jurisdictions, the Coast Guard retains registration authority. Your dealer will either supply registration forms or tell you where they may be obtained. The agency will supply you with a certificate which must be carried with you when the boat is in operation. International laws may vary as to registration required.

Insurance

The boat owner may be legally responsible for damages or injuries he or she causes or the operator causes. Common sense dictates that you carry adequate personal liability and property damage insurance on your boat, just as you would on your automobile. You should also protect your investment from physical damage or theft. Many states have laws detailing minimum insurance needs. Your insurance agent or your dealer may be able to supply you with more information.

Education Opportunities

If you have never owned a boat before, you can get an excellent introduction to boat handling from organizations such as the U.S. Coast Guard, American Red Cross or your local authority. Even if you are a veteran boater, these courses will help sharpen your boating skills as well as bring you up to date on current rules and regulations. See your local boating agency or dealer for information on classes in your area.

This manual is not intended to provide complete training on all aspects of boat operation. We strongly recommend that all operators of this boat seek additional training on boat handling and safety. Have all operators become familiar with the handling characteristics, and proper steering and control system usage before attempting high speed operation.

Some states require youths 16 years of age and younger to complete a boating safety course before operating any watercraft. Many others require operators under the age of 18 to be licensed in small boat operation. Boat smart from the start, take a boating safety course and get a free vessel safety check annually for your boat. For more information, contact: United States Coast Guard Auxiliary, www.cgaux.org; United States Power Squadrons, 1-888-FOR-USPS, www.usps.org.

The following is a list of some other agencies and organizations that offer Water Safety, First Aid and CPR courses or information. To find boating safety courses in your area, call your state's local boating agency or the USCG boating safety course line at 1-800-336-2628 (1-800-245-2628 in Virginia).

- American Red Cross
- U.S. Coast Guard Auxiliary
- U.S. Power Squadrons
- State Boating Offices
- Canadian Power and Sail Squadrons
- Boat Owners Association of the United States
- National Safe Boating Council
- WSIA
- European or international organizations

Operation by Minors

If your boat will be operated by a minor, remember to have an adult present at all times. Many states have laws regarding minimum age and licensing requirements for minors. Contact state and local authorities for special requirements that may apply in your area. NOTE: Some states require boat training courses/certification.

Passenger Safety

Any time you take your boat out, make sure that there is at least one other passenger aboard who is familiar with the operation of your boat. Passengers should be well aware of emergency equipment and shown how to use it. Passengers should also keep hands and feet in the boat and be safely seated while the boat is in motion.

The operator of the boat is responsible for the safety of the passengers, all skiers/riders as well as his/her own safety. The operator should ensure that all passengers are properly and securely seated in appropriate seating locations before starting and remain there whenever the boat is in motion. Place persons and gear in a way that distributes weight evenly.

While the engine is running, and during the boat mooring, all occupants should be properly seated. DO NOT sit on the engine box, seat backs, aft seating, sunpad, boarding platform or gunnels. You could fall overboard and be hit by the propeller. DO NOT allow objects, arms or legs, or any other body parts to hang over the bow or gunnels. DO NOT stand while the boat is moving.

The operator **MUST** sit in the driver's seat while the boat is moving and all passengers should remain properly seated.

Overloading



An overloaded boat through passengers, non factory installed ballast, and equipment can cause death or serious injury. It can cause loss of control, capsizing, or swamping.

- DO NOT overload your boat. Your boat is equipped with a maximum capacity plate indicating the maximum acceptable load as determined by the manufacturer following certain Federal guidelines. Equally critical is how weight is distributed throughout the boat. The weight must be distributed evenly throughout the boat. If too much weight is placed in one area it can have serious impact on boat handling and control.
- The capacity plate is used by boat manufacturers participating in the National Marine Manufacturers Association certification program. Your manufacturer has submitted your model for inspection and compliance with their guidelines. The capacity plate has the following information permanently printed on it. It is attached to the boat by the throttle for the operator to read before they drive the boat.
- The total weight of persons, gear and other items which the boat is capable of carrying under normal conditions. This weight must include any added ballast above and beyond manufacturer's ballast system(s).

BE ADVISED

- Any non-factory installed ballast must be properly secured to prevent injury.
- Death or serious injury can occur from overloading the boat. DO NOT overload your boat.
- Do not fill the bilge area with water from any source.
- The maximum number of persons allowed on the boat. This information on the capacity plate applies under normal conditions and special care must be used in any abnormal conditions. Check the capacity plate on your boat and abide by these limits.
- Remember **DO NOT** exceed capacity!

NOTICE

Your boat manufacturer installs wake enhancement ballast systems in some models. The full weight of this system has already been considered in the boat capacity calculation and therefore does not influence maximum capacity, unlike non-factory ballast tanks or weights, which must be included as part of the gear weight.

As wakeboarding has developed, we have witnessed the advent of ballast systems which add weight and increase the size of the wake. The simplest ballast system on the market is the water ballast type, such as the "FAT SAC." It is not uncommon to see operators use such systems and then put additional people in their boat. Please be advised that this practice can lead to overloading your boat. Each

boat has a maximum capacity label displaying the maximum weight of people, gear and ballast that can be placed in the boat. Always be aware of the load in your boat and do not load the boat in excess of the listed capacity. The quest for the largest wake has caused some to excessively overload their boats.

Overloading a boat may cause it to become unstable and adversely affect the boat's handling.

Visibility



The operator of the boat is responsible by law to “maintain a proper lookout by sight and hearing.” The operator must ensure that he/she has appropriate visibility for safe operation. No passengers or equipment should block the operator’s view outward or of other boats, skier, rider, swimmer, or anyone in the water. Even momentary interference can result in the driver’s inability to respond to a situation that requires avoidance of another vessel or submerged or partially-submerged objects. Look carefully before turning, especially when you are turning around to pick up a fallen skier/rider. Someone else may not be following the “Rules of the Road.” Keep a visual check for boats behind your boat. This is an area where accidents can happen very quickly. The boat should not be driven at a rate of speed faster than will allow it to be brought to a full stop within the operator’s field of view.

Boating Under the Influence



Operating a boat under the influence of alcohol can cause serious injury or death.

Boating, alcohol, and the use of other drugs just do not mix. Boating under the influence of alcohol or drugs can be deadly. Boating, coupled with alcohol and other drugs results in many marine accidents and deaths accounting for approximately one third of all recreational boating fatalities. These substances decrease your reaction time and impair your judgment. Combined with the sun, wind, waves, and noise of other watercraft, the effects of drugs are increased and will significantly increase your reaction time. As the owner/operator, you are responsible for the alcohol/drug use and onboard behavior of your passengers.



Federal and state laws prohibit operating a boat under the influence of alcohol and other drugs. These regulations are actively enforced. Impaired operation may result in severe personal injury or death.



If the operator’s blood alcohol content is above the legal limit, violators are subject to fines and you can go to jail. You may also lose your automobile driving privileges.

Additionally, civil lawsuits in cases of property damage or injury/death to others can result in significantly higher verdicts when alcohol or drugs are allowed.

Reporting Accidents

Boat operators may be required by law to file a Boating Accident report with their state boating law enforcement agency or local authority, the USCG, or their countries' agency when their boat is involved in certain boating accidents. A boating accident must be reported if there is a loss or probable loss of life or personal injury requiring medical attention. In these situations a formal report must generally be filed within 48 hours of the accident, and for accidents when damage exceeding \$500 is incurred, or there is a complete loss of the boat as well. A formal report must generally be filed within 10 days. If any of these events occur, seek further assistance from local law enforcement personnel.

Rendering Assistance

If you see a distress signal or suspect a boat is in trouble, you must assume it is a real emergency and render assistance immediately. By law, the operator in charge of the craft is obligated to provide assistance to any individual in danger if such assistance can be provided safely. Failure to render assistance can result in a fine and/or imprisonment.

The 1971 Boating Safety Act grants protection to a "Good Samaritan" boater providing good faith assistance, and absolves a boater from any civil liability arising from such assistance.

Factory Provided Safety Equipment

The Federal Boat Safety Act of 1971 (FBSA/71) and the National Recreation Boating Safety Program have established minimum safety standards for boats and associated equipment, specified by the USCG. In addition, the ABYC and the NMMA work with boat builders to develop voluntary standards that exceed base requirements. The included safety equipment on your boat meets or exceeds the standards of the USCG, ABYC and the NMMA. Some required safety equipment such as life jackets (PFDs) are not included with your boat. Your dealer can help you choose the appropriate equipment.

NOTICE

Many states' equipment requirements go beyond USCG requirements. Contact your state boating office for further information.

Equipment requirements for coastal and inland waters differ. Check with local authorities and/or the USCG for further information about coastal water requirements. The following equipment may or may not be required by federal/local regulations.

Owner Provided Safety Equipment

U.S. Coast Guard regulations require certain accessory equipment on each boat. For a detailed description, obtain "Federal Requirements for Recreational Boats" published by the Coast Guard. 1) Personal Flotation Devices (PFDs):

PFDs must be Coast Guard approved, in good and serviceable condition and the appropriate size for the user. It is recommended that you wear PFDs while your boat is underway. Boats more than 16 feet 9 (4.8 meters) in length must be equipped with one type I, II, III or V and one type IV. PFDs are intended to save lives; you and your passengers should wear them while in the boat. Learn how to use them and adjust as necessary to make comfortable to wear. The type II PFD is recommended for near shore or inland water use. Some PFDs are specially made for use while water-skiing or wakeboarding and are not U.S.C.G. approved. Please check local law with respect to their use.

Life Saving Equipment

Federal law requires at least one Type I, II, III, or V Personal Flotation Device (PFD), of the proper size, for each person on board or being towed, and at least one Type IV throwable PFD in the boat. There are four types of PFDs to wear and one type used for throwing in emergency situations.



Type I Life Preserver: Most buoyant PFDs are effective on all waters, especially open, rough water.

Type II Buoyant Vest: Good for calm water

Type III Flotation Aid: Good for most inland water applications where quick rescue is likely. Comes in various styles and some are designed for water sport activities.

Type IV Throwable Device: Intended for heavy traffic inland waters where help is available. Designed to be thrown to a person in the water.



Type V Hybrid PFD: Inflatable design for special use activities and may be used instead of a Type I, II, or III PFD with non-towed participants if used in accordance with the approval conditions on the label and if worn when the boat is underway. Some Type V PFDs provide increased protection against hypothermia.

A Type V PFD must be worn to be counted toward the minimum carriage requirements.

Special life jackets are available for skiing and other water sports. These non-Coast Guard approved life jackets do not count as PFD's.

Life jackets (PFDs) are intended to help save lives. The operator should set an example by wearing one. Wear a life jacket (PFD) whenever boating. It is especially important that children and non-swimmers wear a life jacket (PFD) at all times. Make certain all passengers know how to put on and properly adjust their life jackets (PFDs) and that they are readily accessible. Check local, state, country agency (ies) as to laws and regulations. Also, selecting the proper type life jacket (PFD) for your kind of outing helps ensure your time on the water can be safer. REMEMBER- The best life jacket (PFD) is the one that is worn—that is, the one that can save your life.

At the beginning of each season, check life jackets (PFDs) for damage and test for proper flotation. Refer to the life jacket (PFD) manufacturer's information. To meet requirements, each lifesaving device must have a current, legible USCG approval stamp permanently affixed.

Your dealer can help you select appropriate life jackets (PFDs) and throwable lifesaving devices for your area.

Navigation Lights

Your boat is equipped with navigational lights. Recreational boats are required to display navigational lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.). Your navigation lights are provided to keep other boats informed of your presence and course. It is up to you to make sure they are operational and turned on when required.

Horn or Whistle


All boats over 16 feet (4.8 meters) in length must be equipped with an operable horn or whistle. The following are standard signals when using a whistle or a horn:

- One prolonged blast: warning.
- One short blast: Pass on my port side.
- Two short blasts: pass on my starboard side.
- Three short blasts: my engines are in reverse.
- Five or more blasts: danger!

Fire Extinguisher

A fire extinguisher is required if your boat has an inboard engine, or when fuel is stored in closed stowage compartments.

Approved fire extinguishers are classified by a letter symbol, either B-1 or B-II with the B designating that the material will extinguish flammable liquids such as gasoline, oil, etc. B-1 extinguishers are required for boats less than 26 feet in length. Check periodically to ensure that the extinguisher is in working condition and fully charged. Check local, state, country agency(ies) as to laws and regulations.

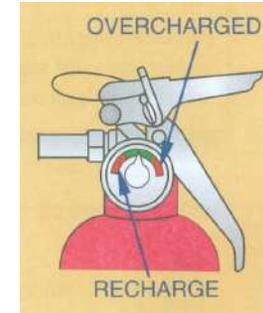

Emergency Safety Lanyard

Your boat is equipped with an emergency cutoff switch (safety lanyard.) We strongly recommend that the lanyard be secured to the operator and the lock plate attached to the emergency cutoff switch prior to starting the engine and anytime the engine is operating. The cutoff lanyard is designed to turn off the engine whenever the operator moves far enough away from the helm to activate the switch.



- It is strongly recommended you use the Emergency Safety Lanyard system as failure to do so can cause death or serious injury. DO NOT operate the boat if the Emergency Safety Lanyard system does not function properly.
- Attach the safety lanyard to a secure place on your clothing, your arm or leg while operating.
- DO NOT attach the lanyard to clothing that could tear loose.
- DO NOT route the lanyard where it could become entangled, preventing it from functioning.
- Avoid accidentally pulling the lanyard during normal operation.

Loss of engine power means loss of most steering control. Also, without engine power, the boat could slow rapidly. This could cause people and objects in the boat to be thrown forward.

There are practical limitations to what the Emergency Safety Lanyard can do. It can take several seconds for the engine and propeller to stop turning. The boat can continue to coast for several hundred feet depending on the velocity at the time the switch was activated, and the degree of any turn. While the boat is coasting, it can cause injury to anyone in its path as seriously as if the boat operated under power. Accidental loss of power can be hazardous particularly when docking or in heavy seas, strong current or high winds.

Visual Distress Signals

All vessels used on coastal waters, the Great Lakes, territorial seas, and those waters connected directly to them up to a point where a body of water is greater than two miles wide, must be equipped with USCG approved visual distress signals. Your dealer or local authorities can help you select appropriate visual distress signals for your area.

If you are required to carry distress signals, you must have three USCG approved pyrotechnic devices. Be sure they are in serviceable condition, not exceeding the expiration date and stored in a cool, dry location in a red or orange waterproof container.

 **WARNING**

FIRE/EXPLOSION HAZARD

Pyrotechnic signaling devices can cause fire and/or explosion, death, serious injury and property damage if improperly handled. Follow the manufacturer's directions in the use of handheld signaling devices.


Pyrotechnic signaling devices can cause fire and / or explosion, death, serious injury, and property damage if improperly handled. Follow the pyrotechnic manufacturer's directions.

Recommended Safety Equipment

As a precaution, a good boater will avoid potential problems on an outing by having additional equipment on board. Normally, this equipment is dependent on the body of water and the length of the trip; your dealer can assist you.

We recommend the following equipment:


- First aid kit and manual
- Anchor with at least 75 feet (23 meters) of line
- Mooring lines and fenders
- Bailing device (bucket, hand pump)
- Combination paddle/boat hook
- Local charts and compass
- Day/night distress signals
- Waterproof flashlight and spare batteries
- Cellular phone
- Binoculars
- Portable AM/FM radio with weather band
- A non-electric horn or whistle
- Extra engine oil
- Tool kit
- Spare propeller and mounting hardware
- Spare fuses
- Spare keys
- Sunglasses and sun block lotion

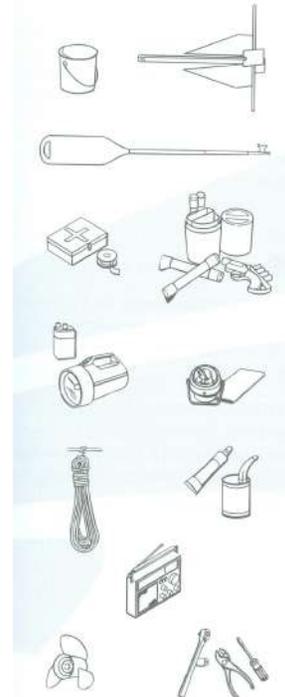

EMERGENCIES

Fire/Explosion

Many boat fires involve flammable liquids such as gas or oil. Many inboard fires start in the bilge area which at times can be filled with gas vapors. Since gas vapors cannot be seen, boat fires tend to travel very fast. If you encounter a fire on board, turn off the engine immediately. If you have a fire extinguisher on board and access to the fire, it may be controllable. Direct the contents of the extinguisher at the base of the flames. Throw burning materials overboard if possible. Put on PFDs, if not already on, signal for help and prepare to abandon the boat if necessary.

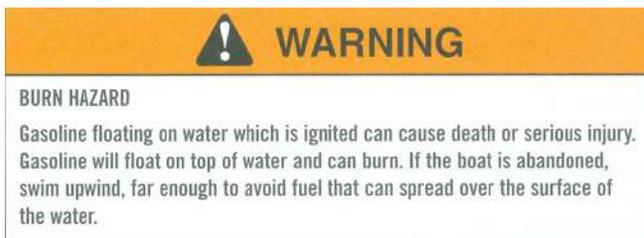

Capsizing and Swamping

A boat may capsize or swamp when least expected. Formulate a plan in advance on what to do if it should happen. Keep in mind the following guidelines:

- Try to turn the engine OFF to prevent damage.
- If others were on board, try to locate them, make sure they are conscious and that they can swim.
- Immersion in water speeds the loss of body heat and can lead to hypothermia. This is the abnormal lowering of internal body temperature.

If a leak is discovered, immediately determine the cause. A collision with an underwater object could cause the hull to develop a leak. A loose fitting hose clamp on a piece of equipment could cause a leak. Try to repair the leak if possible. If a leak is threatening the safety of you and your passengers, call or signal for assistance.

Staying Afloat

- Remain calm. Do not thrash about or try to remove clothing or footwear. This leads to exhaustion and increases the loss of air that may keep you afloat.
- Keep your life jacket (PFD) on.
- Keep your knees bent.
- Float on your back and paddle slowly to safety.

Collisions

If a collision occurs, immediately account for all passengers. Assess the hull for damage and activate the bilge pumps to reduce any water intake. Try to operate the boat to keep the damaged area above water. If necessary, call or signal for assistance.

Grounding

In the event you run aground, assess the situation before proceeding. Immediately stop any water from entering the boat. Inspect the rudder and rudder control system, the hull, propeller and strut for damage. Maneuver the boat to safe water only if the hull and all operating systems are in satisfactory operating condition. Otherwise, call or signal for assistance.

Water Rescue (Man Overboard)

Immediately react to a person who has fallen overboard. Keep the victim constantly in your sight. Safely return to the victim as soon as possible. Throw the person a life preserver. Turn off the engine and help the person into the boat if someone is thrown or washed overboard. It may be possible to revive a drowning victim who has been under water for some time and shows no sign of life. Start CPR immediately and get the victim to a hospital as quickly as possible.

Reporting Accidents

Boat operators are required by law to file a Boating Accident report with their state boating law enforcement agency or local authority when their boat is involved in certain boating accidents. A boating accident must be reported if there is a loss or probable loss of life, personal injury requiring medical attention, damage exceeding \$500, or there is a complete loss of the boat. If any of these conditions arise, seek further assistance from local law enforcement personnel.

Medical Emergency

Be prepared in the event of an emergency. Know how to use your first aid kit. Be aware of any special medical conditions of your passengers.

Operation Failure

If you experience a propulsion, steering or control failure, immediately turn OFF the engine. Try to determine the failure and repair, if qualified to do so. Otherwise, call or signal for assistance.

Hazardous Conditions

Every waterway poses hazards that should be avoided. The following information outlines some of the hazards which may be encountered.

Shallow Water Operation

Shallow water brings on obvious hazards such as sand bars, stumps, rocks, etc. Know the area you will be operating the boat in. Hitting objects at high speeds can cause severe damage to people and the boat. If you know you will be navigating the boat in shallow water, post a lookout and proceed slowly.

Know the minimal depth your boat can safely travel.

Warning Markers

Learn to recognize the different buoys and day markers; they are used as the signposts of the waterways identifying navigable routes and water hazards. It is a good idea to ask local authorities about hazard areas and if they are marked. Stay within boundaries and clear of hazards.

Weeds

Weeds can generally be a threat to a boat's engine and other components on the boat. If weeds wrap around the propeller, they can create vibration in the engine. They also restrict water intake, causing the engine to overheat.

NOTICE

Weeds can sometimes be removed by shifting to NEUTRAL, pausing for a moment, then shifting to REVERSE to unwind the weeds from the propeller.

Dam Spillways

The area around dam spillways is very hazardous and conditions can change rapidly. Stay clear of the spillways and areas below dams.

Restricted Areas

Before boating, check with Local, State, and Federal authorities to identify restricted areas. Because of the threat of terrorism, the U.S. Coast Guard has and will continue to implement strict limits on watercraft near U.S. Navy and Coast Guard ships and other potential targets.

Weather/Seas


Learn and understand weather patterns and signs of change. Bad weather can cause an uncomfortable and unsafe situation. If a storm approaches, seek a safe harbor.

Environment

As a boater, you already appreciate nature's beauty and the peace of the great outdoors. It is a boater's responsibility to protect the natural environment by keeping waterways clean. DO NOT put anything in the water you would not want to eat or drink!

WARNING MARKERS

It is a good idea to ask local authorities if there are hazardous areas and how they are marked. Boaters must also recognize the flag designs, which indicate that skin divers are present and keep well clear of the area.

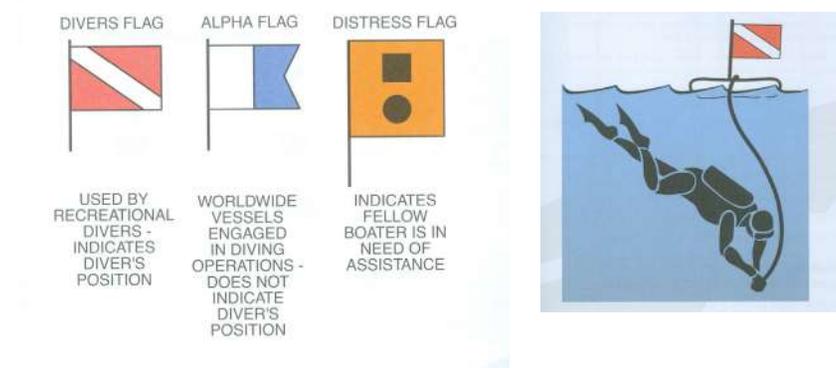

Skin Diver Warning Flag

Watch for swimmers. Swimming areas may not be marked. Steer clear from the area and remain alert.



Swim Area Warning Buoy

Navigation markers serve as a means of identifying navigable routes, and indicate water hazards. Boaters should become familiar with navigation markers and stay within marked boundaries and clear of hazards.

Carbon Monoxide

Carbon Monoxide (CO) is a colorless and odorless gas produced by all engines and fuel burning appliances. Even with the best boat design and construction, plus the utmost care in inspection, operation and maintenance, hazardous levels of CO may still be present in accommodation spaces under certain conditions. To reduce CO accumulation, always ventilate the boat interior and avoid boating situations which cause increased exposure. The boat owner, as well as all boat occupants, must ensure that they understand the dangers of carbon monoxide and comply with all safety recommendations/requirements.

No one should be allowed to stand or sit in any area of the boat that is not a designated seat while the boat is running. It is the responsibility of the boat owner and occupants of the boat to understand and comply with all warning labels and safety recommendations/requirements.

	<p>⚠ DANGER</p> <p>Carbon monoxide (CO) can cause brain damage or death.</p> <ul style="list-style-type: none"> • Engine and generator exhaust contains odorless and colorless carbon monoxide gas. • Carbon monoxide will be around the back of the boat when engine is running and after the engine is turned off. • Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.
--	--

Sources of CO include:

1) Blockage of boat exhausts by obstruction.



2) Exhausts traveling along obstruction.



3) Operating at slow speed or while dead in the water.




4) Operating with high bow angle.



5) Exhausts from other vessels in confined areas.



6) Operating with canvas tops and side curtains in place without ventilation.

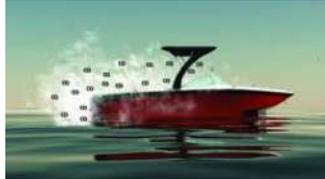

ENSURE ADEQUATE VENTILATION FOR CORRECT AIR MOVEMENT THROUGH BOAT!

Have a suspected CO victim deeply breathe fresh air and immediately seek medical attention.

Foreign Species

If you trailer your boat from lake to lake, you may unknowingly introduce a foreign aquatic species from one lake to the next. Thoroughly clean the bottom of the boat, below the water line, remove all weeds and algae, and drain the bilge, ballast, and livewells before launching the boat in a new body of water. Check local, state, country agency (ies) as to laws and regulations.

Fuel/Oil Spillage



Fire or explosion hazard exists from fumes accumulating from rags being stored in bilge area. DO NOT store rags used to wipe up fuel or solvent spills in the boat. Dispose of rags properly ashore.

The spilling of fuel or oil into our waterways contaminates the environment and is dangerous to wildlife. DO NOT EVER discharge or dispose of fuel, oil or other chemicals into the water; it is prohibited and you can be fined. These are three common, accidental types of discharge:

- During initial fueling of a nearly empty tank
- Overfilling the fuel tanks
- Pumping contaminated bilge water

Discharge/Disposal of Waste

Waste means all forms of garbage, plastics, recyclables, food, wood, detergents, sewerage and even fish parts in certain waters – in short, nearly everything. We recommend you bring back everything you take out with you for proper disposal ashore.

Excessive Noise

Noise means engine noise, radio noise, or even yelling. Many bodies of water have adopted noise limits. Music and loud conversation can carry a considerable distance on water, especially at night. Be sure to follow regulations and be courteous.

Speed/ Wake/Wash

Be alert for NO WAKE zones. You are responsible for any damage or injury caused by your wake/wash. Prior to entering a NO WAKE zone, come off plane to the slowest steerable speed.

BOATING SAFETY



Some states and boating areas have imposed speed limits for operation of boats, including but not limited to no-wake zones. Check local, state, country agency (ies) as to laws and regulations. The U.S. Coast Guard and local boating authorities are excellent sources for this information, which include penalties for failure to observe the requirements. Use caution when operating around smaller crafts, in channels and marinas, and in congested areas.

Exhaust Emissions

Increased exhaust (hydrocarbon) emissions pollute our water and air. Keep your engine tuned and boat hull clean for peak performance. Consult your Tigé dealer for information.

Paints

If your boat is kept in water where marine growth is a problem, the use of anti-fouling paint may reduce the growth rate. Be aware of environmental regulations that may govern your paint choice. Contact your local boating authorities for information.

Cleaning Agents

Household cleaners should be used sparingly and not discharged into waterways. Never mix cleaners and be sure to use plenty of ventilation in enclosed areas. DO NOT use products which contain phosphates, chlorine, solvents, non-biodegradable or petroleum based products.

Refer to **CARE AND MAINTENANCE** in this manual for more information.

MARPOL Treaty

The USCG enforces the International Convention for the Prevention of Pollution from ships, commonly referred to as the MARPOL Treaty (Marine Pollution). This treaty prohibits the overboard dumping of all ship-generated plastics, chemicals, garbage and oil.

WATERSPORT SAFETY

Skiers or riders are obligated to be aware of the same fundamental safety rules as operators. If you are new to water skiing, wakeboarding, wakesurfing, and other towed watersports, seek certified training before starting. You will find it especially helpful to join a local ski club, World Wakeboard Association, and/or the USA Water Ski, when possible.

Always remember that the majority of water skiing/wakeboarding and other towed watersports injuries are the result of impacts with other objects. Always look where you are going and be aware of what is going on around you.

Ski Platform/Drag Surfing

READ, UNDERSTAND and be FAMILIAR with the information contained on any warning labels or any label on equipment and adhere to the boat operation practices described on them. The United States Coast Guard issued a SAFETY ALERT on August 28, 2001 that covers some of the issues of improper use of teak boarding platform. The SAFETY ALERT and portions of the accompanying information follow:

SAFETY ALERT from August 28, 2001:

The United States Coast Guard advised boaters not to “Teak/ Drag Surf.” Recent boating fatalities revealed that carbon monoxide (CO) emitted from a vessel’s exhaust resulted in CO poisoning and the death of at least six teak surfers. “Teak/Drag Surfing” places the individual in position directly exposed to the CO in the engine’s exhaust. This may result in a loss of coherent responses and even death. In addition, “Teak/Drag Surfing” dangerously exposes the individual to a possible propeller injury, and since it is often done without a life jacket (PFD), it significantly increases the probability of drowning. Therefore, the Coast Guard stresses, “Teak/Drag Surfing” is a very dangerous activity and advises boaters not to participate in it.

The Coast Guard pointed out that carbon monoxide is one of the most dangerous gases. It strikes before you know you are exposed and it impairs in a way that can and too often does lead to death. That is why it is so important to the Coast Guard that in every circumstance where it can be avoided, it is.

Every year tragic deaths occur from the negligence of unsafe boating and dangerous activities. Experts say, “many of these deaths may have been caused by an invisible hazard, carbon monoxide poisoning.” Taking the risk of swimming under a boarding platform when the engine is running, skiing within 20 ft (6.1 meters), “teak surfing” or “dragging” behind a moving boat can be fatal.


As a concerned Manufacturer we do not consider any dangerous activities which can result in a serious injury or death a watersport. Your manufacturer is concerned for all boaters’ safety and DOES NOT promote unsafe boating risks, and STRONGLY recommends that boaters refrain from ANY unsafe or dangerous activities. Boaters/users assume all risks for such actions.

DO NOT use the boarding platform for any other purpose than boarding the boat or preparation of entering the water, and DO NOT be on or near the boarding platform when the engine is running.

The boat owner, as well as all boat occupants, must ensure that they understand the dangers of carbon monoxide and comply with all safety recommendations/requirements. No one should be allowed to stand or sit in any area of the boat that is not a designated seat while the boat is running.

General Watersport Precautions for Operators

Make sure that everyone knows and uses approved skiing hand signals and common skiing courtesies.

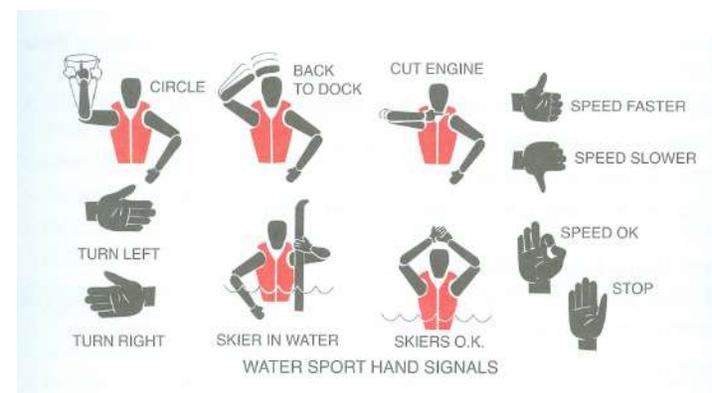

BOATING SAFETY



- Propeller strikes may cause serious injury or death.
- The operator should know the ability level of the skier/rider.
- The operator should look ahead before starting.
- The engine **MUST** be shut down (OFF) before a skier/rider enters or exits the boat, boarding platform, or ladder.
- Observer in the boat should keep operator appraised of skier/rider status.
- Communicate skiing speed with the skier/rider before starting.
- Aft located seating of various names are not to be occupied while the engine is running.
- Be sure to have an experienced operator in the boat while skiing/riding.
- When people are putting on or taking off watersports equipment, always turn the engine off.
- NEVER allow tow rope loose ends to endanger passengers.
- NEVER allow passengers to sit in the path of the rope.
- The operator should always watch the skier/rider as the line is tightened to start (in case rope wraps around ski or skier/rider).
- The operator should look ahead before starting.
- Start from a safe place with good forward and peripheral visibility.
- The operator should check direction of the rudder before starting (in gear, slowly making sure the boat goes straight).
- The operator should be primarily aware of what is occurring in front of the boat, but be aware of skier/rider's progress.
- DO NOT "back up" to anyone in the water.
- DO NOT follow directly behind another boat or skier/rider without leaving an adequate safe distance.
- Look before you turn the boat to pick up a fallen skier/rider.
- Give immediate assistance to anyone who falls as they are vulnerable and may not be seen by other boaters.
- The operator should always keep the skier/rider in view when the skier/rider is entering or exiting the boat.
- The operator should never retrieve or pick up an article from the water while the engine is running. The engine **MUST** be shut OFF.
- Have ship to shore communication devices if operating at a significant distance off shore.
- When approaching a skier/rider, always turn the engine off before allowing the skier/rider to come onboard. This will help keep a propeller that is rotating under engine power from injuring the skier/rider.
- Be sure to approach a downed skier/rider on the operator's side, keeping the skier/rider in view.
- Display a skier/rider down flag where required whenever the skier/rider is in the water and not skiing.
- Be sure to follow the approved towing pattern on each lake or waterway.
- Never climb, sit or stand on a wakeboard tower. The wakeboard tower is intended for towing only as noted. Do not tow more than two (2) persons at one time off a wakeboard tower. The wakeboard tower approved for use on your boat should be used only for water skis, wakeboards or recreational towables, and not for parasailing, kite flying or towing other boats.
- Maintain a distance of at least 100 feet from all other objects, including other boats, piers, rafts, mooring and navigational buoys, pilings, abutments or any other obstacles.
- NEVER lift or trailer the boat with water in the bilge or in ballast tanks, lift or trailer per manufacturer's instructions.

General Watersport Precautions for Towed Skier/Rider

- Always inspect watersports equipment for wear, fraying, etc., before use. DO NOT use if they show signs of wear or fraying.
- Be sure to wear wet suits or protective shorts when engaging in high energy skiing/riding to prevent abrasions, hypothermia and injuries to orifices (rectal and vaginal) from impact with the water surface.
- Every skier/rider should always wear a USCG-approved Type III personal flotation device (life jacket).
- NEVER attach ski/wakeboard rope to anything but approved pylons and wakeboard towers.
- Be sure to inspect the tow point before use and make sure it is seated correctly, if removable. If there is any evidence of corrosion or other damage, do not use until it has been inspected by your boat dealer.
- The skier/rider should indicate he/she is clear of the boat prior to starting the boat or putting the boat into gear and tightening the rope.
- Never put your arm, head or any other part of your body through the handle/bridle of the ski or wakeboarding line, nor wrap the line around any part of the body at any time.
- DO NOT ski near swimming areas, beaches or personal watercraft.
- DO NOT jump from a boat that is moving at any speed, nor enter or exit the water when the engine is running.
- DO NOT ski at night or directly in front of other boats.
- DO NOT ski with multiple skier/riders with different length ropes.
- DO NOT ski in limited visibility conditions.
- DO NOT approach the boat or the rear of the boat while the engine is running.
- When in the water around docks where electrical current is present exercise caution to avoid electrocution.

WATERSPORTS SAFETY CODE

- Before you get in the water: Skiing or riding instruction is recommended before use. Instruction will teach general safety guidelines and proper skiing or riding techniques, which may reduce your risk of injury. For more information on skiing or riding schools, contact your dealer, Association, or local ski club.
- Know the federal, state and local laws that apply to your area.
- If you are not familiar with a waterway, ask someone who is, to tell you about any hidden dangers or things to avoid.
- Whether you plan to be in a watercraft, or skiing/riding behind one it is important you are wearing a properly fitted life jacket (PFD) approved by your country's agency, USCG Type III, ISO, etc.
- Inspect all equipment prior to each use, check bindings, fins, tube, attachment, tow rope and flotation device. Do not use if damaged.

Watercraft Safety: A knowledgeable and responsible driver is the most important safety device on any watercraft.

- Never operate a watercraft, ski or ride under the influence of alcohol or drugs.
- Only use water ballast and people for additional weight.
- Never exceed the passenger or weight limitations of the watercraft.
- Never allow passengers to hang outside the watercraft or towed device or sit on the gunwales or anywhere outside of the normal seating area.
- Never allow water to overflow the bow or gunwales of the watercraft.
- Uneven weight distribution or additional weight may affect the handling of the watercraft.

Carbon Monoxide: The exhaust from the engine on a watercraft contains Carbon Monoxide (CO) which is a colorless, odorless and poisonous gas. Excessive exposure to CO can cause severe injury or death. Follow this advice to avoid injury.

- Never “Platform Drag” by holding onto the boarding platform or be dragged directly behind the watercraft. This is where CO will be.
- Do not sit on the watercraft transom or boarding platform while the engine is running.
- Make sure the engine is properly tuned and running well. An improperly tuned engine produces excessive exhaust and CO.
- If you smell engine exhaust do not stay in that position.
- Go to the United States Coast Guard’s website: www.uscgboating.org for more information on how to help protect yourself and others from the dangers of CO.

Tow Ropes: Tow ropes come in different lengths and strengths for different activities. Make sure any rope you are using is suited for skiing or riding and that it is in good condition.

- Never use a rope that is frayed, knotted, unraveling or discolored from use or being left in the sun. If a rope breaks while in use it can recoil at the skier/rider being towed or into the watercraft where it might strike passengers. Replace tow ropes with any sign of damage.
- Never use a tow rope with elastic or bungee material to pull skiers or riders.
- Rope should be attached to the watercraft in an approved fashion with hardware designed for towing. Refer to your watercraft manual for instructions on proper tow rope attachment.

- Always keep people and tow ropes away from the propeller, even when idling.
- If a tow rope should become entangled in a propeller, shut off engine, remove the key and put it in your pocket before retrieving the rope.
- Tow ropes should be neatly stowed in the boat when not in use.

Preparing to ski or ride: It is recommended and in some states required that you have a person other than the driver as an observer to look out for the skier/rider. Be sure the driver is aware of the experience and ability level of the skier/rider.

- The driver, observer and skier/rider need to agree on hand signals before skiing or riding. Signals should include READY, STOP, SPEED UP, and SLOW DOWN.
- Start the engine only after making sure that no one in the water is near the propeller.
- Turn the engine off when people are getting into or out of the watercraft, or in the water near the watercraft.
- Always make sure the tow rope is not wrapped around anyone’s hands, arms, legs, or other parts of the body.
- Start the watercraft and move slowly to remove slack until the tow rope is tight.
- When the skier/rider signals READY and there is no traffic ahead, take off in a straight line. Adjust the speed according to the signals given by the skier/rider.

Skiing or Riding: The watercraft and skier/rider should always maintain a sufficient distance from obstacles so a skier/rider falling or coasting and/or watercraft will not encounter any obstacle.

- Do not use in shallow water or near shore, docks, pilings, swimmers, other watercraft, or any other obstacles.
- Use only on water.
- Never attempt land or dock starts. This will increase your risk of injury or death.
- Always wear a properly fitted life jacket (PFD) approved by your country's agency, USCG Type III, ISO, etc.
- The faster you ski or ride, the greater your risk of injury.
- Never make sharp turns that may cause a slingshot effect on the skier/rider's speed.
- Skier/Rider should be towed at an appropriate speed for their ability level.

Fallen skier or rider: Falling and injuries are common in skiing or riding.


- Circle a fallen skier/rider slowly to return the tow rope handle or pick up the fallen skier/rider.
- Put the watercraft in neutral when near a fallen skier/rider.
- Always keep the fallen skier/rider in view and on the driver's side of the watercraft.
- Display a red or orange skier/rider down flag to alert other vessels that a skier/rider is down.

The Warnings and practices in the Watersports Safety Code represent common risks encountered by users. The code does not cover all instances of risk or danger. Please use common sense and good judgment.

When participating in watersports, be safe and courteous and follow these guidelines:

- Be considerate to fishermen and others you share the water with.
- DO NOT perform watersports in congested areas.
- Stay away from navigation markers.
- Stay away from other boats and watersports participants.

BASIC RULES ON THE ROAD

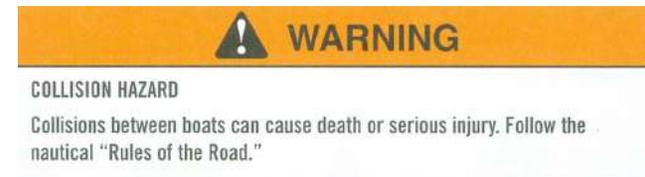

The nautical rules of the road must be followed to prevent collisions between vessels. Like traffic laws for automobiles, the operator is legally required to follow the rules.

The following information outlines only the most basic of the nautical rules of the road. For more information, contact your local U.S. Coast Guard Auxiliary or local maritime authority.

The operator is legally required to follow the rules. The following information outlines only the most basic of the nautical "Rules of the Road." For more information, contact your local USCG Auxiliary.

Aids to Navigation

Learn to recognize the different buoys and day markers; they are the signposts of the waterways. The United States Aids to Navigation System (USATONS) is the primary marking system used on inland water, coastal waters and rivers in the United States. This system is maintained by the U.S. Coast Guard (USCG).

There are two primary marking systems in use in the U.S.: the Uniform State Waterway Marking System (USWMS), used on inland waters and maintained by each state, and the Federal Waterway Marking System (FWMS), used on coastal waters and rivers and maintained by the USCG. In addition, the FWMS has two modified systems: the Western River Buoyage, and the Intercoastal Waterway Buoyage. Be sure to check with local authorities on the buoyage system in use.

The type of hazard/warning buoys and markers depends on the area of jurisdiction. Check with local boating authorities.

USWMS System

In the USWMS Lateral System, well-defined channels are marked with red and black buoys. Lateral means the sides of the channel are marked and the boat should pass between them. The USWMS Cardinal System is used when there is no well-defined channel or where an obstruction may be approached from more than one direction. With the cardinal system:

- Pass north or east of BLACK-TOPPED WHITE buoy.
- Pass south or west of RED-TOPPED WHITE buoy.
- RED and WHITE VERTICALLY STRIPED buoy indicates boat should pass outside of the buoy (away from shore).

FWMS System

The FWMS Lateral System is for use on navigable waters except Western Rivers and Intercoastal Waterways. The markings on these buoys are oriented from the perspective of being entered from seaward (the boater is going toward the port). This means that red buoys are passed on the starboard (right) side of the vessel when proceeding from open water into port, and green buoys to the port (left) side.

The right side (starboard) of the channel is marked with RED, even numbered buoys.

The left (port) side of the channel is marked with GREEN, odd numbered buoys.

The middle of the channel is marked with RED and WHITE vertically striped buoys; pass close to these buoys.

Obstructions, channel junctions, etc. are marked with RED and GREEN horizontally striped buoys. A RED band at the top means the preferred channel is to the left of the buoy; a GREEN top band means the preferred channel is to the right of the buoy.

Day markers are colored and numbered the same as buoys. RED, triangular day markers with even numbers mark the starboard side of the channel. GREEN, square day markers with odd numbers mark the port side of the channel.

Lights, bells and horns are used on buoys for night or poor visibility conditions. Buoys with unique light flashing characteristics are identified on nautical charts with the specific flashing pattern.

Types of Buoys



There are several types and shapes of buoys. Buoys may be unlighted, lighted, with sound or may have both an audible and a visual signal. Lights, bells and horns are used on buoys for night or poor visibility conditions. Different shapes of buoys are shown below.

FWMS Marking System

Buoys with unique light flashing characteristics are identified on nautical charts with the specific flashing pattern.



Mooring Buoys

The only buoys you are permitted to moor are mooring buoys.

Mooring buoys are white with a blue horizontal stripe. Mooring to a navigation buoy, regulatory markers or lateral markers is illegal. Ko.1901

Uniform State Regulatory Markers

Regulatory markers indicate dangerous or restricted controlled areas. These markers are used to indicate speed zones, areas set aside for particular use, general information and directions.

Regulatory markers are white with orange geometric shapes and also have orange bands near the top and at the water line of the buoy. You must obey regulatory markers.



Uniform State Waterway Marking System (USWMS)

Right of Way



In general, boats with less maneuverability have right of way over more agile crafts. You must stay clear of the vessel with right of way and pass to his stern.

Privileged Boats

Privileged boats have right of way and can hold course and speed. Sailboats and boats paddled or rowed have the right of way over motor boats. Sailboats under power are considered motorboats. Small pleasure craft must yield to large commercial boats in narrow channels.

Burdened Boats

The burdened boat is the boat that must make whatever adjustment to course and speed necessary to keep out of the way of the privileged boat.


Crossing

In crossing situations, the boat to the right from the 12 o'clock to the 4 o'clock position has the right-of-way.

It must hold course and speed. The burdened boat keeps passes behind the privileged boat. Boats going up and down a river have the privilege over boats crossing the river.


Meeting Head-On

Neither boat has the right of way in this situation. Both boats should decrease speed, turn to the right and pass port-to-port. However, if both boats are on the left side of the channel, each vessel should sound two short blasts and pass starboard-to-starboard.

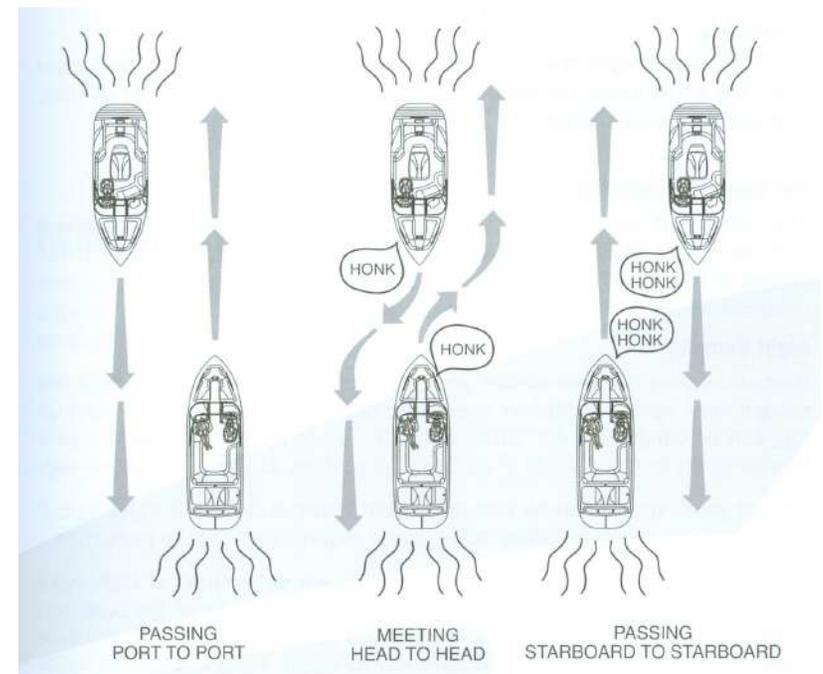

Overtaking

The boat that is overtaking one ahead of it is the burdened boat and must make any adjustments necessary to keep out of the way of the privileged boat.

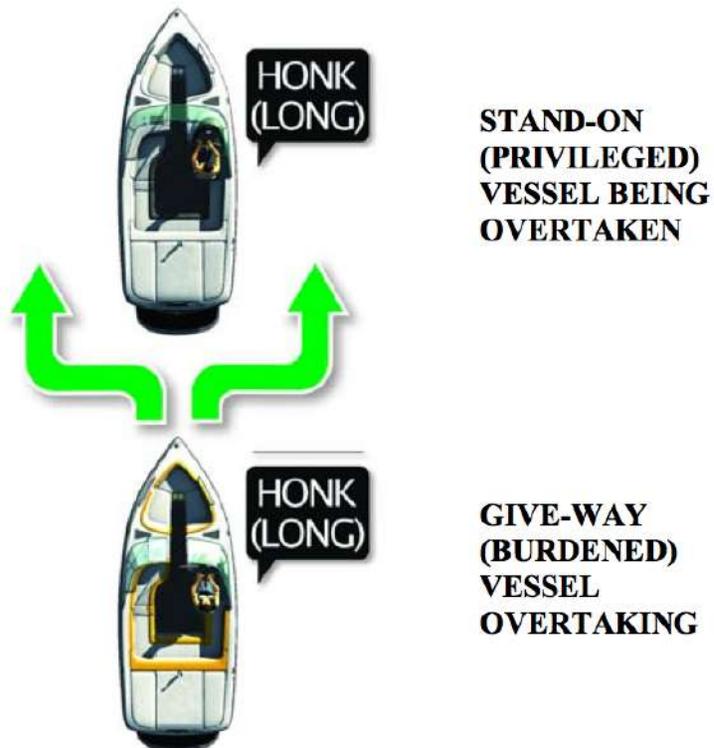

The General Prudential Rule

The General Prudential Rule regarding right of way, is that if a collision appears unavoidable, neither boat has right of way. As prescribed in the "Rules of the Road", both boats must act to avoid collision.

Night Running

Boats operating between sunset and sunrise (hours vary by state) must use navigational lights. Nighttime operation, especially during bad weather or fog can be dangerous. All "Rules of the Road" apply at night, but it is best to slow down and stay clear of all boats, regardless of who has right of way. Protect your night vision by avoiding bright lights and have a passenger, if possible, help keep watch for other boats, water hazards and aids to navigation.



SECTION 3

DASH PANELS

The Dash Panel illustrations are used to help you identify the location of switches, controls, ports, gauges and V-drive indicator. Your boat may not be equipped with all of the features or options.

ASR/RZ/Z DASH



ASR/RZ/Z DASH

1. Steering Tilt Lever
2. 12-Volt Ports
3. Ignition Key Switch, iPod™/MP3 Port – Optional, Horn
4. Tigé Touch
5. Fuel Gauge
6. Tachometer
7. Speedometer/Multifunction LED Display
8. TAPS2 Gauge
9. Shifter/Throttle Control Handle
10. Safety Lockout Ring (Shift Lockout)
11. Neutral Throttle Button
12. TAPS2 Rocker Switch
13. Emergency Stop Switch

R20-1 DASH




R20-1 DASH

1. Steering Tilt Lever
2. 12-Volt Ports
3. Ignition Key Switch, iPod™/MP3 Port – Optional, Horn
4. On Board Control Switches
5. Fuel Gauge
6. Tachometer
7. Speedometer/Multifunction LED Display
8. TAPS² Gauge
9. Shifter/Throttle Control Handle
10. Safety Lockout Ring (Shift Lockout)
11. Neutral Throttle Button
12. TAPS² Rocker Switch
13. Emergency Stop Switch

GENERAL LAYOUTS

The General Layout illustrations show two models to represent a V-drive and a direct drive. All of these components or accessories may not be included on your Tigé boat.

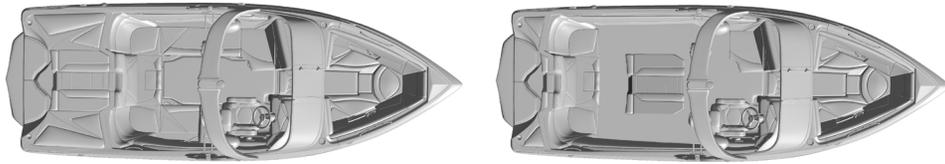

STORAGE

AREA <small>cubic feet</small>	ASR	Z3	Z1	RZ4	RZ2	RZR	R20
Bow Port	4.75	27.00	21.00	21.00	18.00	7.04	7.04
Observer	20.44	4.50	5.70	2.00	3.75	3.21	3.21
Cockpit Port	15.7	14.00	9.80	11.25	9.00	10.78	10.78
Stern Port/Starboard Port*	15.7*	9.23	9.23	10.00	10.00	10.83	10.83
Center Storage	1.16	0.00	0.00	0.00	0.00	1.26	1.26
Activity Center Port/Rear Hatch*	20.39*	0.66	0.66	0.38	0.38	0.00	0.00
Activity Center Starboard/Rear Hatch*	20.39*	.066	0.66	0.38	0.38	0.00	0.00
Bow Starboard	4.75	3.00	4.75	12.00	4.50	3.73	3.73
Cockpit Starboard/Bow Front*	2.98*	14.00	11.51	8.00	9.00	10.93	10.93
Stern Starboard/Surf Storage*	7.75*	9.23	9.23	10.00	10.00	10.83	10.83
Glove Box	0.96	0.94	0.94	0.94	0.94	0.94	0.94
Cooler	4.00	2.00	0.94	0.94	3.00	2.14	0.00
Total	118.97	85.22	74.42	78.94	68.94	61.69	59.55

SWITCHES, CONTROLS, PORTS, GAUGES and INDICATORS

Switches

The switches are fitted with LEDs, which will illuminate when power is being supplied to the corresponding switch and its function. The switches and components are protected by circuit breakers. If the component does not function or switch does not illuminate, check the circuit breaker panel located under the dash. Refer to Circuit Breaker Panel.

ACC (Accessory)

This switch is reserved to operate a switched accessory item. When the switch is pressed, the accessory will receive power; when the opposite end is pressed, the power will turn off.

Ballast Tank Control Switches – Optional

These switches are three-position switches to fill or drain the ballast tanks. When the top of the switch is pressed, pump will begin to fill the designated tank. When the opposite end of the switch is pressed, the pump will begin to empty the designated tank.

If you continue to fill the tank beyond its capacity, the excess water will expel from the tank vent. The pump will continue to operate until the switch is returned to the OFF (center) position. The LED will illuminate anytime the pump is on. Make sure to return the switch to the OFF position when the tank is filled or emptied.

BILGE (Bilge Pump)

This switch operates the bilge pump to remove excess water from the bilge area of the boat manually. When the top of the switch is pressed, the bilge will turn on. When the bottom is pressed, the bilge will turn off.

Your Tigé boat is equipped with an automatic bilge pump which detects excess water accumulation and will turn the bilge pump on automatically. The switch does not have to be on for the automatic system to work. This switch can also be used to test the bilge pump, by listening to hear that the pump is operating. It may not pump water unless water is present. Do not operate the bilge pump continuously when it is dry.

Inspect the bilge area frequently for evidence of excessive water. Continuous operation of the bilge pump can mean there is excess water in the bilge. Test the bilge pump at regular intervals. Debris can also prevent the pump from operating or make it operate continuously. Make sure no debris is blocking the bilge pump float. See your Tigé Dealer if you have any questions.

BLOWER (Engine Compartment/Bilge Area Blower)

This switch operates the engine compartment ventilation blower to remove explosive fumes from the area. When the switch is pressed, the blower will turn on. When the opposite end is pressed, the blower will turn off. The blower must be operated for a minimum of four minutes before starting the engine. Also, the blower should be operated continuously when at idle or running at slow speeds.

DANGER

Gasoline vapors can explode resulting in serious injury or death

- Before starting engine, check the engine compartment for gasoline or gasoline vapors, then run blower for 4 minutes.
- Run blower below cruising speed.

CRUISE CONTROL ON/OFF (Tigé SpeedSet)

This switch supplies power to operate the Tigé SpeedSet. When the switch is pressed (on), power is supplied for the cruise control, when the opposite end is pressed, the power will turn off.

WARNING

LOSS OF CONTROL AND UNSAFE BOAT HAZARD

An emergency stop switch system that is not used or does not function properly can cause death or serious injury. DO NOT operate the boat if the emergency stop switch system does not function properly.

CTSY LTS (Courtesy Lights)

This switch operates the courtesy lights. When the switch is pressed, the lights will turn on. When the opposite end is pressed, the lights will turn off.

DOCK LTS (Docking Lights, optional)

This switch operates the docking lights. The docking lights are to be used for docking only; DO NOT use them while cruising. When the switch is pressed, the lights will turn on. When the opposite end is pressed, the lights will turn off.

LOSS OF CONTROL AND UNSAFE BOAT HAZARD

An emergency stop switch system that is not used or does not function properly can cause death or serious injury. DO NOT operate the boat if the emergency stop switch system does not function properly.

The emergency stop switch will stop the engine when the lanyard is pulled far enough to disconnect the clip from the switch. Attach the lanyard to the boat operator whenever the engine is running, but be aware of loss of engine power if the switch is activated.

If the operator is thrown from the seat, or moves too far from the dash, the lanyard will disconnect the clip from the switch, shutting off the engine.

To attach a lanyard, connect the clip to the emergency stop switch and the hook to a strong piece of clothing on the operator, such as a belt loop.

IMPORTANT

The engine will not start unless the clip is attached to the emergency stop switch.

The emergency stop switch can only be effective when it is in good working condition.

Observe the following:

- DO NOT remove or modify an emergency stop switch and/or its lanyard.
- Keep the lanyard free from obstructions that could interfere with its operation.

Check the emergency stop switch once a month for proper operation. With the engine running, pull lanyard to pull the clip from the switch. If the engine does not stop, see your Tigé Dealer for service immediately.

FWD TOWER AFT (Tower Lights)

This switch is a three-position switch to operate the tower lights. Push FWD to operate the forward lights or AFT to operate the aft lights. DO NOT use them while cruising. The center position of the switch is off for all lights.

Horn

The "HORN" button is a momentary switch. The horn will operate when the button is pressed and stop when the button is released.

Ignition Key Switch

This key switch starts and stops the engine. A built-in protection system prevents the engine from starting in any gear and only in NEUTRAL. Refer to Shifter/Throttle Control in this section and refer to the engine owner's manual for more information.

There is an accessory position on the ignition key switch. A terminal on the back of the switch is provided to control power to add-on accessories. Even though power to this terminal is protected by a 20-amp fuse, do not connect any accessory that draws more than 10 amps. Attaching an accessory to this terminal should only be done by a qualified technician.

NOTICE

DO NOT connect an accessory drawing more than 10 amps to the key switch accessory terminal. A hazardous situation or damage to the electrical system can occur.


DO NOT connect an accessory drawing more than 10 amps to the key switch accessory terminal. A hazardous situation or damage to the electrical system can occur.

CONTROLS

Shifter/Throttle Control

WARNING

COLLISION HAZARD
An overspeeding engine, from loss of throttle control, can cause collision resulting in death or serious injury. Make sure all control systems are regularly inspected and properly maintained.

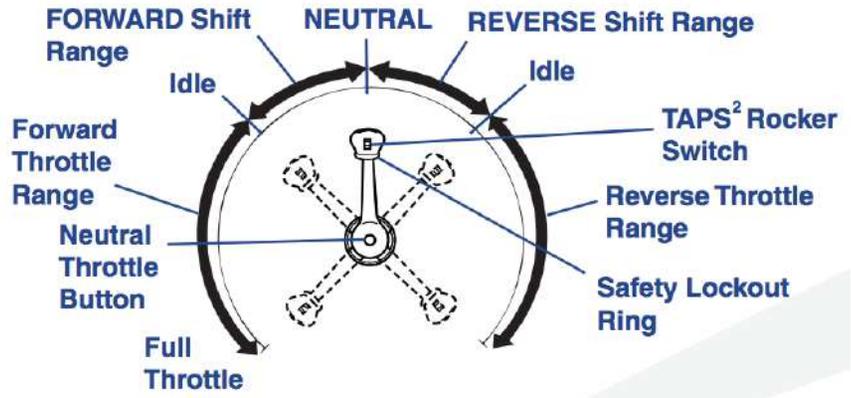

This single-lever control operates both the gearshift and throttle. The control can only be moved from the neutral position by lifting the safety ring under the throttle handle. Moving the control forward from the NEUTRAL position will advance the throttle FORWARD. Moving the control aft from the neutral position will advance the throttle REVERSE.

To “rev” the engine without engaging the transmission from NEUTRAL, push in the neutral throttle button and advance the throttle handle. To return to normal operation, return the throttle to the NEUTRAL position.

IMPORTANT

The engine will only start in NEUTRAL. If engine does turn over and battery is charged, make sure the throttle handle is in NEUTRAL and try again.

CAUTION

DO NOT shift too quickly from FORWARD to REVERSE. Stay in NEUTRAL or idle position until the boat has lost most of its headway before completing the shift to REVERSE, or engine/transmission damage can occur.

Shifter/Throttle Control Handle

Shifts from NEUTRAL to FORWARD or REVERSE and controls throttle position.

Safety Lockout Ring (Shift Lockout)

Detent to prevent shifter from going into gear without driver action.

Neutral Throttle Button

Allows the throttle to be advance without being engaged in gear.

TAPS² Rocker Switch

FEATURES

This controls the TAPS² system. View the TAPS² gauge to monitor position. TAPS² can also be controlled through the Tigé Touch Screen.

Tigé SpeedSet Control Panel – Optional

This panel controls the Tigé SpeedSet cruise control system. Refer to Tigé SpeedSet for operation.

Steering Tilt Lever

The steering tilt lever allows you to adjust the angle of the steering wheel.

DO NOT adjust when the boat is underway.

Stereo Remote – Optional

This remote control allows the stereo to be controlled at the cockpit. For details on operation, refer to the stereo owner's manual.

Heater (Heater Fan Control Switch for the Optional Cockpit Heater)

This switch (found on the Tigé Touch Screen) operates the fan to deliver heat to the cockpit and windshield. The switch is a four-position switch: Off, Low, Medium and High. The vents have a diffuser which can be opened to allow more air flow toward the cockpit or closed to direct all the air to the windshield as a defogger. The diffuser also rotates to direct air to a desired direction.

PORTS

12-Volt Ports

These receptacles can be used to power or charge cellular phones, MP3 players, video cameras or other electronics which can be powered or charged from a 12 V DC system.

iPod™/MP3 Port – Optional

This port provides a convenient means to connect your iPod™ or MP3 player to your boat's stereo system.

GAUGES





FUEL GAUGE indicates the approximate amount of fuel in the tank. The ignition switch must be in the RUN position to activate the gauge.

SPEEDOMETER indicates forward speed of the boat in miles per hour (MPH).

SPEEDOMETER/MULTIFUNCTION LED DISPLAY indicates forward speed of the boat, in addition to oil pressure, voltage and engine hours. Refer to the Tigé multifunction gauge for the ranges.

SPEEDOMETER with SpeedSet Multifunction LED Display indicates forward speed of the boat, in addition to the SpeedSet set speed, actual speed and engine hours.

ENGINE HOUR METER keeps a running total of engine hours while operating. Depending on Tigé model, the hour meter readout may be a separate gauge or incorporated within the tachometer unit.

Make sure the key is in the OFF position when the engine is not running. Accessory equipment (stereos, showers, etc.) should not be installed to operate when the key is in the ON position.

IMPORTANT

The hour meter will log time whenever the engine is running.

TACHOMETER indicates engine speed in crankshaft revolutions per minute, or RPM.

TACHOMETER/DIGITAL DEPTH FINDER / AIR/WATER TEMPERATURE DISPLAY indicates engine speed in crankshaft revolutions per minute, or RPM. In addition to RPM, the tachometer also displays depth, air and lake (water) temperature.

Digital Depth Finder / Air/Lake (Lake Water) Temperature Display

1. Turn the ignition key to the ON position.
2. Make sure the cruise control switch is off.
3. Scroll through the dash screens using the /FASTER and /SLOWER arrows on the SpeedSet until you reach the "Setup" screen.
4. Hold down the and arrows simultaneously until the screen changes.

FEATURES



5. Scroll down to “units.” Hold both **←** and **→** arrows until the word ENG flashes.

6. Let go of buttons and press **↵** one time. This will change the text to MET (metric).

7. Press **←** and **→** buttons simultaneously until the flashing stops to lock this setting. The screens will return to the setup screen. Use the arrows to go back to the original menu.

TAPS² GAUGE indicates the position of the TAPS² plate; refer to TAPS² Operation.)

Tigé Multifunction Gauge

- Fuel (FUEL LEVEL) indicates the approximate amount of fuel in the tank. These readings are only approximate and allow an adequate margin of comfort.
- Volt (Voltmeter) indicates electrical system operating voltage DC. Normal operating voltage at 5000 RPM is 14.75 ± 0.25 volts.
- Temp (Engine Temperature) indicates the internal engine coolant temperature in °F. Normal operating temperature is between 165-195°.

If gauge indicates temperature above 195°, shut engine off immediately!

- Oil (Engine Oil Pressure) indicates the pressure in PSI (lbs per square inch) of the lubricating oil inside the engine. Normal pressure is between 10-30 PSI at idle and 30-60 PSI at running speed.

CIRCUIT BREAKER PANEL

Standard and optional electrical equipment devices are protected by circuit breakers located under the dash. The pop breakers are labeled to identify the devices protected. The MAIN PWR and AUX PWR breakers provide power to their respective circuits. These PWR (power) breakers must be on to power the circuits.

The pop breakers will trip (pop out) if overloaded and cut power to the device. To reset, turn the device off (if applicable) and push the breaker in. If the pop breaker continues to pop out, see your Tigé Dealer. Your boat may not be equipped with all of the devices, features or options. Any accessory device added must not exceed the amperage of the breaker or total circuit capacity.

A quick way to check if a pop breaker is tripped is to run your fingers over breaker face to verify breaker is not “popped” out.

NOTICE

DO NOT connect an accessory or a device drawing more than the breaker's amperage capacity. A hazardous situation or damage to the electrical system can occur.

FUSES

Fuses protect the circuit by limiting the amount of current which can flow. If a fuse should “blow,” it usually indicates a problem. See your Tigé Dealer.

Use only an identical replacement when replacing the fuse.

COCKPIT AND EXTERIOR

Battery Disconnect Switch

The battery disconnect switch allows you to isolate all power to the boat. This switch provides positive disconnection of the battery to protect against tampering, electrical fire hazards and battery rundown. Rotate the switch to the OFF position when the boat is not in use.

Swim Platform


DANGER

Exposure to carbon monoxide or a spinning propeller will cause death or serious injury. DO NOT use the swim/boarding platform for any other purpose than boarding the craft or preparation of entering the water, and DO NOT use the swim/boarding platform when the engine is running.

The swim platform is a convenient feature to enjoy water sports and provide a means of safety to boating. The swim platform is required for exiting and entering your boat and protects you from underwater components of your boat. The swim platform must be attached to the boat anytime it is used. There are very serious safety concerns regarding the use of the platform and safety labels are used to convey safety around the platform. For more information, refer to Section 2, BOATING SAFETY.

To remove the swim platform for storage or lifting V-drive models, remove the clips and allen screws located in the mounting brackets, under the platform, tilt down and lift the platform. Reinstall the swim platform before you put

your boat back into service. The swim platform must be attached to the boat anytime it is used.

Bow Features of Your Tigé

The open bow section of your boat has cushions which can be raised to access storage. The storage areas are for storage only and should not be occupied by passengers. These areas do not provide adequate ventilation and can accumulate CO.

Store the cushion in the trunk or under the observer's seat when it is not in use or before getting underway.

The Lexan® Walk-thru Windscreen can be installed by sliding it into position and closing the windshield. Keep the windscreen in its protective boot and stow when it is not in use. The windscreen will not float.

Walk-Thru Windshield Opening/Latching

The two latches on the inside starboard side of the walk-thru windshield must be latched when the boat is underway or trailered. Rotate both of the window locks to secure or unlock the window.


CAUTION

Glass door must be closed and secured with both locks when the boat is underway.

Cockpit Seating



WARNING

DROWNING OR LOSS OF CONTROL HAZARD

Ejection or sudden loss of control can cause death or serious injury from improper use of seating. **DO NOT stand while driving above engine idle speeds and make sure cockpit seat is in the locked/secured position and all passengers are seated when the boat is underway.**

Dash Storage

The dash storage/glove box is for dry storage only. It is equipped with a drain for water that enters the glove box. If your Tigé is equipped with a factory stereo, the glove box will house the stereo.

Cockpit Table – Optional, V-Drive only

To install the table, remove the cockpit entrance tread (1) and stow. Insert the pedestal (2) into the mount and securely install the table (3). When using the dinette table, Do not sit or lean on the table top, or use it as a step. Do not exceed 50 lbs (22.7 kg). Protect the table top and pedestal when it is stowed and not in use.

EIDB Dual-Battery System – Optional

The EIDB dual-battery system protects your starting battery from discharging when high amperage accessories, like a high-output stereo system, are being used. The system allows the amperage to be drawn from the accessory battery only, without drawing from the starter battery. When the engine is restarted, both batteries will be charged, but will direct the charge to the weaker battery first.

Batteries

The standard battery is a heavy duty, marine grade 12 V battery. This battery primarily serves as the cranking battery and can operate standard equipment. A cranking battery is not designed to fully discharge like a deep cycle battery which can be fully discharged more often. It is not recommended to fully discharge the cranking battery.

The optional EIDB Dual-Battery System includes a cranking battery and a deep cycle battery. A Deep Cycle Battery is designed specifically for providing constant power to high-output stereo systems for extended periods of time.

Engine Compartment Cover

The engine compartment cover is a machinery guard and must be in place and closed whenever the engine is running. **DO NOT** operate your boat without the cover in place or closed unless you are performing a check or maintenance.



WARNING

MOVING PARTS HAZARD

Contact with moving parts can entangle, cut and cause death or serious injury. Never get close enough to make contact with any running machinery moving parts, i.e., engine or propeller. Contact can result in loss of body parts, strangulation, burns and/or severe loss of blood resulting in serious injury or death.

Screen Power Button

When the Screen Power Button is pressed, your TigéTouch screen will remain on and you will not lose your Bluetooth connection. **Must be turned off when exiting boat.**

FEATURES

Direct Drive Models

The engine cover is a “wedge fit.” Make sure the cover is seated properly before getting underway.

V-Drive Models

To open the engine cover, lift the latch and turn counterclockwise. A gas shock will help raise the cover. To close and cover, pull down on and allow the cover to close firmly. Keep hands, fingers or any other obstructions clear of the cover when closing. To close the latch, turn latch clockwise and fold down.

Observer's Seat

Lift up on the bottom of the observer's seat to access storage under the glove box. Leave the seat up periodically to help keep the storage area dry.

Storage Hatch

To open the storage hatch, lift the latch and turn counterclockwise. A gas shock will help raise the hatch. To close and hatch, pull down on and allow the hatch to close firmly. Keep hands, fingers or any other obstructions clear of the hatch when closing. To close the latch, turn latch clockwise and fold down.

The storage hatch can be locked. The latch can be locked down to prevent the latch from being raised and rotated. Use the key to lock and unlock the latch. The key only requires about a 45° turn to lock and unlock.

Walk-Thru Windshield Opening/Latching

The two latches on the inside of the walk-thru windshield are to be closed when the boat is underway. Rotate both of the window latches to secure or unlock the window. Make sure both window locks are secure when your boat is underway. Always keep the window closed and secured when trailering your boat.

Water Sports Tow Pylon

WARNING		
	Improper use of Tower may overstress the tower, imbalance the boat or allow the tow rope to contact passengers potentially causing personal injury or death	
	<p>DO NOT</p> <p>Tow more than one (1) person at a time. Tow parasails, kites, inflatable toys/boats or other watercraft. Jump from, dive off of, climb on, hang onto or sit on tower at any time. Allow passengers to sit behind rope attachment point when tower is in use. Fold or remove tower without assistance. Use the tower if bolts are loose or missing. Use tower if tower shows any signs of stress.</p>	<p>DO</p> <p>Before each use check to be certain all bolts are tight and in place. Before each use check to be certain tower has no signs of stress. Watch for low bridges and hanging obstacles. Watch for electrical lines that may come in contact with the tower. Make certain your vision and line of sight are unobstructed. Ensure proper use of tower to avoid over stressing tower or unbalancing boat. Make tow rope does not contact any passengers.</p>

WARNING

CHECK TIGHTNESS OF FIXTURES

DO NOT EXCEED ONE (1) PERSON OR 300 LBS

USE CORRECT TOW ROPE

FAILURE CAN CAUSE SERIOUS INJURY OR DEATH

READ OWNERS MANUAL

Improper use of the tow pylon can over stress the pylon, imbalance the boat or allow the tow rope to come into contact with passengers.

FEATURES



- DO NOT use the tow pylon for towing parasails, kites or other watercraft.
- DO NOT tow more than one person at a time or exceed a load of 300 lbs (136 kg).
- DO NOT allow passengers to sit behind the tow pylon when it is in use.
- Check that the tow pylon is secure before every use.

The tow pylon is designed for towing a wakeboard or a ski device only.

Misuse of the tow-point can cause death or serious injury. The pylon was designed for water sports only. DO NOT use the parasailing, kite flying, towing other watercraft and/or using pylon extensions. DO NOT sit behind (aft) the pylon when tow pylon is in use.

The water sports tow pylon is manufactured from high-strength aluminum alloy, engineered for durability. The tow pylon is rated to tow one person and not to exceed the weight of 300 lbs (136 kg). If the load limit is exceeded or becomes loose when towing, the tow pylon could separate from the boat. If the pylon separates from the boat and because of its mass, it could become a missile hazard and strike someone, causing death or serious injury.

Make sure the tow pylon is secured to the boat before each use. Tow pylons can loosen over time, and must be inspected and tightened before every use. If the tow pylon is loose when towing, it could separate from the boat.

Although pylon extensions and barefoot booms have become popular additions to many tournament inboards, most boat manufacturers object and oppose the use of any pylon extension, whether up or to the side of any of their products. The use of pylon extensions can alter the handling characteristics of the boat, possibly resulting in dangerous instability, which can lead to loss of control or a situation which can cause death or serious injury to the boat driver, passengers, skiers and anyone else who might be in the vicinity.

Pull-out Cleats

The pull-out cleats allow the cleats to be stowed into the boat's exterior when they are not in use. Pull the cleats out when they are to be used and return them when they are not in use. DO NOT use the cleats for towing or tying as an anchoring point.


Lockdown Boat Cover – Optional

The lockdown boat cover is designed to protect your boat during trailering and short-term storage.

Start by installing the cover from the stern of the boat and unfold the cover as you move it fore. The cover has a label "REAR" to identify the stern end of the cover. Insert the pole support to help with rain run-off.

FEATURES

After the cover is installed, use the clamp strap to draw the cover snug around the boat, below the rub rail. Pull the excess strap aft, and winch the clamp to draw the cover. Lock the clamp. Position any excess strap into the protective boot and zip closed to protect the clamp from possibly making contact with your boat.

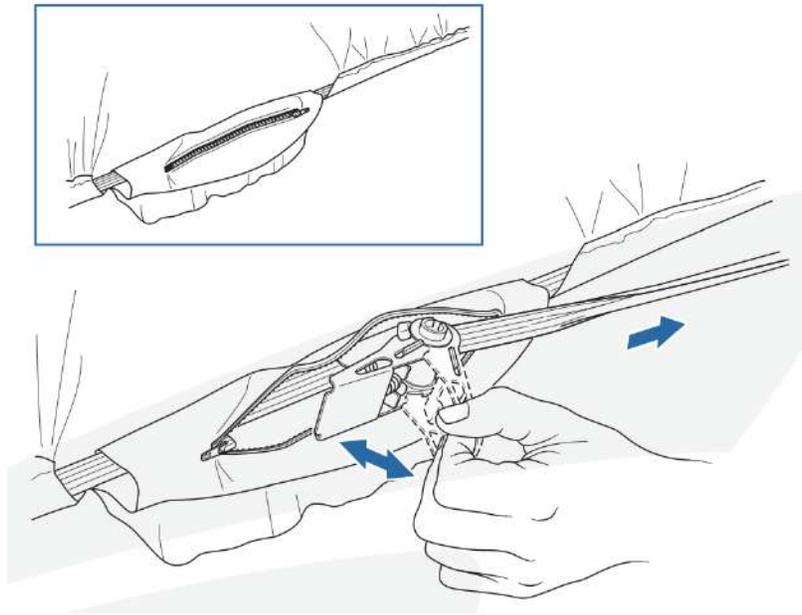



SECTION 4

There are many things to consider when planning a safe and enjoyable boating trip. This section describes the basics on fueling, starting, shifting/running, steering, docking and stopping your boat. This section also includes a safety preflight checklist, boarding guidelines, boat loading information and other important topics on handling your boat. Knowing and understanding all of these fundamentals will give you confidence in using your boat.

GETTING UNDERWAY

Read and understand the contents of this section before casting off. Remember, if you have a problem during your outing, you cannot get out and fix it, or walk to safety or for help. You are responsible for the safety of all passengers, the boat and any damage your boat or its wake may cause. Always keep passengers from blocking your view so that you do not run into other boats, swimmers, water skiers, personal water vehicles or aids to navigation.

PREFLIGHT CHECKLIST

The following checks are essential to safe boating and must be performed before starting the engine. Get in the habit of performing these checks in the same order each time so that it becomes routine.

DO NOT launch the boat if any problem is found during the safety check. A problem could lead to an accident during the outing causing severe injury or death. Have any problem attended to immediately; see your dealer.

Before launch:

- Check and tighten all hardware including pylons, towers, speakers and other accessories.
- Energize Electrical System.
 - **Energize system by:** Turning on the Battery Disconnect Switch located near the battery (see page 6-10 or 6-12 for location).
- Switch MAIN PWR and AUX PWR to “ON” on the Circuit Breaker Panel (page 4-23) located under the dash (see page 4-6 or 4-8 for location).
- Check fuel level. If possible, fill tank at a land-based fueling station. Marina gas sometimes contains water and is usually more expensive.
- Make sure the Saltwater Flush Kit shut-off valve (if equipped), and/or seacock on water pickup (seacock applies to all models sold in Canada), is open (handle in-line [OPEN] with hose, not perpendicular [CLOSED]).
- Check engine oil level.
- Check transmission fluid level.
- Check battery charge.
- Check and operate the blower.
- Check that bilge drain plug is installed properly.
- Check the propeller, strut and rudder for damage.
- Check the weather report, wind and water conditions.
- Lift engine compartment cover for to check for evidence of gasoline fumes.
- Check that the required safety equipment is on board.
- Check that the fire extinguisher is fully charged.

OPERATION

- Check that all required maintenance has been performed.
- Check bilge pump operation and make sure bilge is free of debris.
- Check steering and rudder movement.
- Make sure adequate number of PFDs and all other Coast Guard-required items are onboard and accessible.

Launch:

- Operate the blower for at least four minutes before starting engine.
- Check bilge for leaks.
- Stow gear and clothing.

Pre-Operation:

- Check that no fuel, oil or water is leaking or has leaked into the bilge compartment.
- Check all hoses and connections for leakage and damage.
- Check the engine cooling water intake pick-up for blockage.
- Check that battery terminals are clean and tight.
- Check electrical circuits (lights, pumps, horn, etc.) for proper operation.
- Check that shifter/throttle control handle is in NEUTRAL.
- Check that the steering system operates properly.

During Operation:

- Monitor gauges frequently for signs of abnormal behavior.
- Check that controls operate smoothly.
- Check for excessive vibration.

After Operation:

- Fill fuel tank to prevent moisture from condensation.
- Check for fuel, oil and water leakage.
- Check the propeller for damage.

FUELING



WARNING

FIRE/EXPLOSION HAZARD!

Gasoline vapors are highly explosive when exposed to open flame or spark resulting in death or serious injury. Run blower for at least four minutes before turning on any electrical devices or starting the engine.

- **Stop all engines, motors and fans before refueling.**
- **Do not smoke or allow open flames or sparks nearby, within 50 ft (15 m) of the fueling area.**
- **Maintain contact between the fuel nozzle and the fuel tank to prevent electrostatic spark. DO NOT use a plastic funnel.**

Try not to spill gasoline. If gasoline is spilled, wipe up all traces of it with dry rags and immediately dispose of the rags properly onshore.

When fueling:

1. Close all doors, hatches, windows and other compartments.
2. Extinguish cigarettes, pipes and all other flame-producing items.
3. Make sure all power is off, and DO NOT operate any electrical switches.
4. Remove fuel fill cap. Insert hose nozzle and make sure nozzle is in contact with or grounded against fill opening. This will reduce the risk of a static spark.

5. Add fuel in accordance with the engine owner's manual. DO NOT fill to capacity to allow for fuel expansion.
6. Tighten the fuel filler cap completely after refueling.
7. Check oil level.

NOTICE

Each time you fill up, inspect fuel lines for leaks and hose deterioration.

After fueling, make sure fuel and oil fill caps are tightened securely and wipe up any spillage.



CAUTION

To prevent engine damage, refer to the engine owner's manual for manufacturer's recommended fuel.

SHIFTING/RUNNING

When shifting your boat, follow these guidelines:

Pause in neutral before shifting from FORWARD to REVERSE, or REVERSE to NEUTRAL.

- Avoid shifting into reverse while the boat is traveling forward at speed.
- Keep the shifter control clean and clear of obstructions.

To shift into forward:

Push shifter/throttle control handle forward to go forward.

To shift into reverse:

Push shifter/throttle control handle back for reverse.

STEERING

- Practice steering your boat. Make sure the steering system is working correctly and is properly maintained. Have the steering system checked regularly.



WARNING

LOSS OF CONTROL AND UNSAFE BOAT HAZARD

Hazard from improper maintenance of steering system is hazardous and can cause death or serious injury from sudden loss of control. Make sure all steering hardware, cables and fluid levels are regularly inspected and maintained.

Boats have a tendency to wander at slow speeds and steering the boat back and forth will result in over-steer. Keep the steering wheel in the center position and make slight adjustments.

STOPPING

1. Slowly bring the shifter/throttle control handle to the idle position. If the boat has been driven for a long period of time at high speed, allow the engine a two- to three-minute cool down period at idle.
2. Turn the ignition key to the OFF position.
3. If any problems were encountered during the outing, have the boat inspected by your dealer and request any necessary repairs before the next outing.

DO NOT use the emergency stop switch to shut off the engine.

DOCKING

Practice docking before attempting it for the first time. Use a float, like a plastic milk jug with a line and small weight, as your docking target. Remember, your boat is steered with a rudder and maneuvering at slower speeds takes practice.



WARNING

CRUSH HAZARD

Using your hand, arm or other part of your body to attempt to keep the boat from hitting the dock can result in serious injury. DO NOT use any body part to keep the boat from hitting the dock.

Dock and Mooring Lines

Use enough fenders to protect the craft from damage and good quality double-braided nylon line. Only use the cleats, bow eye and stern eyes to secure the craft. DO NOT use the handrails or windshield. The foredeck handrails should only be used for tying a "jackline" in an emergency situation.

Follow these guidelines when docking:

- Approach docks slowly with the port side of the boat if possible.
- Come to a stop a short distance from the dock, then proceed slowly.
- Have fenders, mooring lines and crew ready.
- Observe how the wind and current are moving your boat. Approach the dock with the boat pointed into the wind, if possible. If the wind or current is pushing you away from the dock, use a sharper angle of approach. If you must approach the dock downwind or down current, use a slow speed and shallow angle. Be ready to reverse to stop and maintain position.
- If there is no wind or current, approach the dock at a 10- to 20-degree angle.
- If possible, throw a line to a person on the dock and have that person secure a bow line.
- With the bow secure, swing the stern in with the engine, or pull it in with a boat hook.

If the boat is to be moored for a long period of time, use chafing protectors on lines to protect the gelcoat finish. Leave slack in the lines to allow for some wave movement or tidal action if applicable.

Follow these guidelines when departing:

- Very slowly shift into forward at idle speed.
- When the stern moves away from the dock, turn the engine away from the dock.
- Cast off bow line and back away.

If the wind or current is pushing away from the dock, cast off all lines and allow to drift until you are clear.

STARTING

1. Run the blower for at least four minutes before starting the engine. If you smell gasoline fumes, do not start the engine. Continue to run the blower until fumes have dissipated.

	<p>! DANGER</p> <p>Gasoline vapors can explode resulting in serious injury or death</p> <ul style="list-style-type: none"> • Before starting engine, check the engine compartment for gasoline or gasoline vapors, then run blower for 4 minutes. • Run blower at idle or below cruising speed and after stopping to clear vapors from engine compartment.
--	---

2. Make sure the Saltwater Flush Kit shut-off valve (if equipped) and seacock on water pickup are open (handle in-line [OPEN] with hose, not perpendicular [CLOSED]).
3. Make sure the emergency stop switch is attached to the switch and the lanyard is attached to the operator.
4. Make sure the shifter/throttle control handle is in NEUTRAL.
5. Turn the key clockwise to the START position. After the motor starts, release the key.
6. Push shifter/throttle control handle forward to go forward, pull back for reverse.

Always pause in NEUTRAL before going into REVERSE to avoid taking water in over the transom.

TAPS² OPERATION

CONVEXV / APEX HULLS & TAPS² TECHNOLOGY

TAPS² SETTINGS



For instant planing and clean, faint slalom wakes.



Adjust wake size or trim for optimum cruising, fuel efficiency, top speed or performance.



ConvexV Hull, the industry's only non-planing hull, settles naturally at boarding and surfing speeds.



Working in conjunction with the patented Tigé ConvexV -Apex hulls, TAPS² allows variable-hull trim capability that dramatically enhances wake characteristics, ride and overall boat performance. With the push of a button, TAPS² instantly modifies the hull's running angle for optimum watersport wake enhancement, a smoother ride in rough water, better fuel economy and increased safety and comfort.

TAPS² adjustments are made using the rocker switch located on the throttle handle. Always keep your left hand on the steering wheel and your right hand on the throttle.

The location of the TAPS² switch allows operation with the right thumb, maintaining safe, hands-on control of the throttle.

TAPS² switch adjustments can be made while stopped or while underway at any speed. The position of TAPS² plate is indicated on the TAPS² gauge located on the dash.

Settings range from 1, a flat, bow-low running angle to 8, a bow-high running angle. To move the bow to a higher running attitude, push the top of the TAPS² rocker switch (the TAPS² will raise). The TAPS² gauge will begin moving toward a higher number. To lower the bow, push the bottom of the TAPS² rocker switch. The bow angle will lower and the TAPS² gauge will move to a lower number.

Although the effects of the various TAPS² settings depend on Tigé model, passenger load, water conditions, speed and other factors, the following guidelines are provided as a starting point as you learn to use TAPS² to optimize your performance needs. Practice and experience using TAPS² can also optimize your performance needs.

WATER SPORTS SETTINGS

TAPS² has been designed for "shift-on-the-fly" adjustment of wake size and shape. Generally, the larger the wake desired, the higher the TAPS² setting.

Slalom

Because the best TAPS² setting for slalom is the one which best suits the skier, experiment with the TAPS² settings and take full advantage of the system's full variability.

For kids skiing below 15 MPH, try a setting between 0 and 2. Skiers in the 15-32 MPH range usually require a setting between 1 and 3. At or above 32 MPH, skiers will prefer a setting from 1 to 4.

Remember, the optimum TAPS² setting will vary depending on passenger load, line length, water conditions, etc. A slight TAPS² adjustment can make a big difference in wake size and shape, so do not hesitate to use the switch.

Wakeboarding

Experienced riders will find that the largest, pro-size wakes will be achieved with a TAPS² setting at 8+. If you have a full passenger load or skybox seating, use TAPS² at a lower setting to dial in the optimum wake shape. For recreational or intermediate riders, we recommend a maximum TAPS² setting of 4.

Wakesurfing

The best wave for surfing is approximately 11 mph with TAPS² setting on 4.

Other Water Sports

TAPS² also dramatically enhances wake characteristics for air chairs, barefooting, kneeboarding and towables. Experiment with different settings, have a great time, but be safe!

Helpful Hint

For best ride and performance, use the extreme slalom setting (1) only when pulling up a skier or boarder or at towing speeds under 24 MPH. At speeds greater than 24 MPH, adjust TAPS² to a setting more conducive to the water conditions.

Ride, Safety and Boat Performance

The variable-hull TAPS² system also dramatically enhances boat performance, comfort and safety. To eliminate bow rise on take-off, set TAPS² at 1. As soon as the boat reaches planing speed, adjust TAPS² to 3 or higher, depending on water conditions. If the water is choppy, less than 6 in. (152.4 mm) waves, the optimum ride setting will be from 2 to 5, depending on Tigé model and passenger load. If the water is rougher, 6 to 12 in. (152.4 to 304.8 mm) waves, the optimum ride setting will be from 5 to 8, depending on Tigé model and passenger load.

Raising the bow in rougher water will provide a safer, drier ride while maximizing the hull's "entry vee" to reduce the effects of the chop. This higher running attitude will also provide bow passengers with a smoother, drier ride.

To maximize top speed in your Tigé, set TAPS² between 5 and 8. When the boat reaches top speed, bring the TAPS² setting down slightly to achieve the optimum running attitude. Top speed should be achieved at a TAPS² setting of 5 to 6.

TIGÉ SPEEDSET CRUISE CONTROL OPERATIONS

(For boats with TouchScreen: See Touch Screen Procedures)

Available as an option on all Tigé models, Tigé SpeedSet allows precise, easy-to-use digital speed control that is useful in towing wakeboarders and skiers or maintaining a constant cruising speed. The SpeedSet control panel incorporates Touchpad Recognition for easy fingertip use without taking your eyes off the waterway. Raised, domed buttons are scaled to the human hand and positioned to allow for two-finger touch operation while you safely pay attention to your rider or skier and other boat traffic.

Before using Tigé SpeedSet take time to familiarize yourself with the system and its operations.

The system will only operate when the dash CRUISE CONTROL switch is toggled ON. If this switch is toggled OFF during SpeedSet operation, the system will disengage as soon as the throttle is brought back below the set point.

Tigé SpeedSet resets each time the CRUISE CONTROL switch is manually toggled off and the throttle arm is brought below the set position.

Tigé SpeedSet is solely governed by the throttle. If you desire to stop your boat at any time, pull back on the throttle arm.

To Set Tigé Speedset

Toggle dash CRUISE CONTROL switch to ON position.

There are two ways to set Tigé SpeedSet:

- At idle, preset the desired speed using the UP/DOWN buttons on the SpeedSet control panel. The preset speed appears in the center dash digital readout. Push the throttle handle fully open to give Tigé SpeedSet full throttle authority. The boat will accelerate to the preset speed.
- While underway, accelerate to the desired speed and press the SPEEDSET button on the center of the SpeedSet control panel, then push the throttle handle fully open to give Tigé SpeedSet full throttle authority. The boat will maintain the set speed.

Pulling the throttle arm back will instantly disengage SpeedSet, allowing the boat to slow or come to a stop. Tigé SpeedSet will allow slowing and stopping, it will not allow the boat to go over the set speed.

For example, if you are towing a skier at a set speed and the skier falls, simply pull back on the throttle arm. The boat will slow and you can resume normal throttle operation to turn around to pick up the skier. As long as the CRUISE CONTROL switch remains ON, Tigé SpeedSet will remember the set speed. To begin towing the skier again, push the throttle arm completely open and Tigé SpeedSet will accelerate the boat to the previously set speed.

To Increase Speed While Using Tigé SpeedSet

There are two ways to go to a higher speed:

- Hold down the FASTER button and release it when you reach desired speed.

OR

- Press the FASTER button in increments (about a half a second each time).

Each time the FASTER button is pressed, your speed increases by about a 0.2 MPH. This is useful for small speed changes desired by the person being towed.

For example, if you desire to go 1 MPH faster, press the FASTER button five times (about a half second each time) and Tigé SpeedSet will take you to your desired speed.

To Reduce Speed While Using Tigé SpeedSet

There are three ways to reduce your speed:

- Hold down the slower button and release it when you reach the slower speed.

OR

- Press the SLOWER button in increments. Each time the SLOWER button is pressed, your speed decreases by about 0.2 MPH, the same increment as the FASTER button.

OR

- Pull the throttle arm back to your desired speed.

To erase the Tigé SpeedSet memory and regain throttle authority, turn OFF the CRUISE CONTROL switch on the dash.

For example, if you are cruising using Tigé SpeedSet and want to regain throttle authority for quick acceleration, simply toggle the Cruise Control switch OFF (this resets the memory), back off the throttle and then move it forward to achieve your desired speed. This can be done quickly or slowly.

Troubleshooting

No throttle power when you start your boat engine:

Move throttle to neutral and verify that the dash Cruise Control switch is toggled OFF.

Boat does not seem to maintain speed on turns or in rough waters:

Verify that you have given your boat plenty of throttle authority (move the throttle forward).

Engine power cuts out and then in:

This usually occurs when the throttle is positioned at, or near, the set speed. Move the throttle to the full forward position after the speed is set, giving Tigé SpeedSet adequate throttle authority.

SAFETY EQUIPMENT

Federal and local laws require certain safety equipment to be onboard at all times. In addition, responsible boaters carry other equipment in case of emergency. Check with local boating authorities for any additional requirements over and above federal requirements.

Refer to Section 2, SAFETY, Required Safety Equipment.

BOARDING

When boarding the boat, always step in. Do not jump. Avoid stepping on fiberglass or other potentially slippery surfaces. Board one person at a time.

DO NOT board the boat while carrying gear. Set gear on the dock, board the boat and then pick up the gear.

BOAT LOADING

The performance of your boat is dependent on load weight and distribution.

Passengers should board one at a time and should distribute themselves to maintain trim. Remember to distribute weight from right to left, and also from front to back.

All passengers should be carefully seated and not be riding on the deck, gunwale or rear sun deck while underway. Passengers riding in the bow should exercise extreme caution. Do not overload the open bow area. Never seat more than three people in the open bow area. Refer to the Capacity Label and Seating Chart for number of people allowed in the bow area. Children under 11 years of age should not use the open bow area unless accompanied by an adult. During rough water operation, passengers in the bow should move to the aft passenger seats.

DO NOT allow your passengers to ride with their feet dangling over the side; floating debris can cause serious injury.

Avoid excess weight in the bow or stern.

Securely stow all extra gear in stowage areas to prevent load shifting.

OPERATION



Do not stow gear on top of safety equipment; safety equipment must be quickly accessible.

In adverse weather, reduce the load in the boat. People/load capacity ratings are based upon normal boating conditions.

RUNNING

We urge you and all others operating the boat to seek certified instruction from local boating authorities.

This section is designed to present the most basic operational principles. It is not intended to cover all conditions encountered during operation.

The principles presented in this manual are limited to the facts related directly to the operation of the boat, while the responsibility for the proper application of these principles belongs to you.

MANEUVERING TECHNIQUES

Steering response depends on three factors: engine position, motion and throttle.

High-speed maneuvering is relatively easy and takes little practice to learn.

Slow-speed maneuvering is more difficult and requires time and practice to master.

When making tight maneuvers, it is important to understand the effects of turning. Since both thrust and steering are at the stern of the boat, the stern will push away from the direction of the turn. The bow follows a smaller turning circle than the stern.

The effects of unequal propeller thrust, wind and current must also be kept in mind. While wind and current may not always be present, an experienced boater will use them to their advantage. A counterclockwise rotation propeller tends to cause the boat, steering in the straight ahead position, to drift to port slightly when going forward, and to starboard when going backward. At high speed, this effect is usually unnoticed, but at slow speed, especially during backing, it can be powerful. More experienced boaters approach the dock with the starboard side of the boat toward the dock, if possible.

Stopping (checking headway) is a technique that must be developed. Since a boat has no brakes, reverse thrust is used to slow and stop the boat. The momentum of the boat will vary according to the load as well as the speed.

Make it a practice to slow to idle (no-wake) speed before shifting into reverse.

It is best to learn maneuvering skills in open water away from traffic. Practice is the only way to develop your boating skills.

SALT WATER

If boat is moored in salt water for long periods, allow the cooling system to drain thoroughly after removing the boat from the water. Hose down the entire hull with fresh water and wipe dry.

Today's engines are built for operation in either fresh or salt water. Fresh water internal flushing is not normally required; however, it may be desirable after use in salt, polluted, or brackish water. Your Tigé Dealer will assist you in securing the appropriate engine flushing device.

FREEZING TEMPERATURES

When the boat will be operated and left in the water and temperatures drop below freezing, drain the engine completely when the boat is removed from the water.

TOWING PROCEDURE

If water is rough, it may not be easy to extend the tow line from one boat to another. In these cases, use a light throwing line with a weight on one end and with the heavier towing line secured to it.

Never attempt to tow a much larger or grounded vessel. Because of the tremendous stress caused by towing, use a tow line that is rated at least four times the gross weight of the boat being towed. Tow ropes must always be in good condition, free of any cuts or abrasions.

Attach tow line to the bow lifting eye on the disabled boat. Attach the opposite end of the bridle only to the stern lifting eyes of the tow boat. Wrap the bridle with chafing gear where it rubs against the boat or any corners. Leave at least two boat lengths between the boats for adequate movement.

When towing, use only the bow and stern eyes; never use cleats, handrails, etc. Do not allow anyone to be in line with the tow rope. If the rope should break or pull free, a dangerous recoil could occur.

Adjust the tow line to match wave action. Keep the boats on the crest or in the trough of the waves at the same time. In protected, calm waters, shorten the line for better handling. Always tow at moderate speed, allowing for adverse wind and wave conditions. Have the operator of the towed boat steer with you if possible.

If you need a tow, or wish to tow another boat, use great care. The boat structure can be damaged by excessive pulling strain. You should always offer help to a boat in trouble; however, towing a capsized, grounded, or hull-damaged boat is dangerous. Give assistance to the occupants, and then call the proper authorities.

ANCHORING

Dropping Anchor

There are many types of anchors available on the market. The choice of one anchor over another depends on many factors. An anchor will usually hold best in a mixture of mud

and clay or in hard sand. A lightweight Danforth anchor is recommended for general boating. For more information on anchors, see your dealer.



WARNING

SINKING OR DROWNING HAZARD

Anchoring at the stern can pull a boat under water and keep it there. DO NOT anchor at the stern.

- Make sure the line is tied to the anchor and tie the other end of the line to the bow lifting eye.
- Head the boat into the wind or current over the spot where you want to lower the anchor.

Stop the boat before lowering the anchor.

- When the anchor hits bottom, slowly back up the boat, keeping tension on the line. Let out an anchor line that is four to six times the depth of the water. For example, if you are in 10 ft (3 m) of water, let out 40 to 60 ft (12 to 18 m) of line.
- Secure anchor line to the bow-lifting eye. Pull on line to make sure anchor is holding.
- Occasionally check your position against the shoreline. If the anchor is dragging and you are drifting, reset the anchor.

Weighing (Pulling In) Anchor

Start engine and move forward until anchor line is straight up and down.

Pull hard to lift anchor from the bottom material.

If the anchor is stuck, allow the up and down motion of the bow from wave action to loosen the anchor from the bottom. If the anchor remains stuck, slowly maneuver the boat around the anchor until the anchor pulls loose. Be sure to keep the line tight during this procedure.

PERFORMANCE BOATING

Some boat models, especially those with high horsepower engines, are capable of truly exhilarating performance. Do not be tempted to push your boat to its limits until you are completely familiar with the boat's operating characteristics. The operator should have at least 10 hours of experience with the boat before any extended full throttle operation.

Here are some guidelines for performance operation. Read and practice them, and soon you will be operating your boat to its full capability.

Before Running

- Keep the bottom clean and free of scum, barnacles and other growth. Growth on the hull can slow the boat down considerably.
- Prepare the boat. Be sure all gear is properly stowed and compartments are latched.
- Keep weight in the boat low and evenly distributed. Remove unnecessary weight and keep it onshore. Weight distribution affects performance.
- The propeller should be of the proper pitch to turn the recommended RPM rating for the engine and of the proper type for your average load and individual requirements. Your Tigé boat is already equipped with the proper propeller to achieve maximum performance with an average load for your boat. If you have questions, see your Tigé Dealer.

When Underway

If the boat begins to operate in an unsafe way, pull back on the throttle. Monitor the gauges when operating at full throttle.

As the boat begins to get on plane, acceleration will increase since less boat will be in the water.

High-speed operation on smooth water is very stable, but quick reactions and adjustments are needed to maintain control. Know your limits and stay within them. Always keep one hand on the steering wheel and the other on the throttle; constant adjustments are necessary for rapidly changing conditions. Small inputs of throttle and steering are exaggerated at high speeds. Depending on the speed, keep watch well ahead so that you may have enough time to react.

PROPELLERS



WARNING

LOSS OF CONTROL AND UNSAFE BOAT HAZARD

Failure to maintain control can cause death or serious injury. Keep one hand on the wheel and the other on the shifter/throttle control handle.

The propeller converts the engine's power into the thrust needed to propel the boat. Care and selection of your propeller is very important to proper boat operation. Propellers are identified by two numbers, such as 13 x 19. In the number sequence, the first number is the diameter of the propeller and the second is the pitch.

Pitch is the angle of the blades expressed in the theoretical distance a propeller travels in each revolution. In the above example, the pitch is 19, or each revolution of the propeller pushes the boat 19 in. (483 mm) through the water. A 19 pitch is considered "higher" pitched and a 15 pitch propeller is considered "lower" pitched.

Your Tigé boat is already equipped with the proper propeller to achieve maximum performance with an average load, for your boat. If you have questions, see your Tigé Dealer.

Keep these guidelines in mind when selecting a propeller:

- Engine RPM must be within the recommended operating range. Refer to the engine owner's manual.
- Higher propeller pitch reduces: RPM, acceleration and engine noise, and usually improves fuel economy and top speed.
- Lower propeller pitch increases: RPM, acceleration and engine noise, and reduces fuel economy and top speed.

Refer to Section 7, CARE AND MAINTENANCE, Propeller, for information on removal and installation.



SECTION 5

BOAT SYSTEMS



Knowing the systems on your Tigé boat is as important as knowing the switches, controls and indicators on your boat. System knowledge is essential for safe and proper operation and integrity.

When replacement parts are required, DO NOT substitute marine-grade parts with anything other than parts with equivalent characteristics, including type, strength and material.

Marine-grade parts are specifically designed for the conditions and environment which marine products are exposed to. Using substandard parts could result in injury and product failure.

**WARNING****FIRE OR EXPLOSION HAZARD**

Gasoline and other fuels are extremely flammable and highly explosive under certain conditions.

- **DO NOT** smoke or allow open flame or sparks nearby when refueling.
- **DO NOT** block fuel vents.
- **DO NOT** store fuel in any containers or compartments which are not designated for fuel storage and **DO NOT** use these storage areas for any other purpose.

**WARNING****LOSS OF CONTROL AND UNSAFE BOAT HAZARD**

Improper maintenance of boat systems is hazardous and can cause death or serious injury from sudden loss of control. Make sure all systems are regularly inspected and maintained.

**WARNING****FLOODING OR DROWNING HAZARD**

A water system component failure is a flooding or drowning hazard which can cause death or serious injury. Maintain all water system components and keep seacocks closed during periods of inactivity.

STEERING

Your Tigé boat has a mechanical steering system. When the steering wheel is turned, the dash unit transfers rotary motion of the wheel to linear motion in the cable which pushes or pulls the rudder arm.

Boat steering is not self-centering. Always keep a secure grip on the steering wheel to maintain control. Improperly maintained controls are dangerous.

Check steering operation and visually inspect for loose or missing hardware before operating the craft. If you suspect the steering system is damaged, see your dealer. DO NOT operate the craft if you suspect the steering system is malfunctioning.

ENGINES

Your Tigé boat is powered by a single inboard engine. The specific operation, specifications, maintenance and troubleshooting information is contained in the engine owner's manual included in your Owner's Kit. Familiarize yourself with the information contained in the engine owner's manual. Following the manufacturer's recommendations and guidelines will provide you with continued boating pleasure and engine integrity.

TRANSMISSIONS

The transmission has one forward and one reverse speed, and is shifted by the shifter/throttle control handle.

V-Drives

The power generated by the engine is transmitted as a combination of the straight inboard and the V-drive transmission (a series of gears), which drives the shaft coupling and the propeller shaft assembly. The propeller shaft is supported and aligned with the engine by a thru-hull shaft log and an outside strut.

Direct Drives

The power generated by the engine is transmitted to the propeller via the direct drive transmission, a shaft coupling and the propeller shaft assembly. The propeller shaft is supported and aligned with the engine by a thru-hull shaft log and an outside strut.

Propellers

The propeller installed on your Tigé boat was selected because of its diameter and pitch to provide the optimum speed and performance under average conditions of load. The propeller selection must be based on the ability of the engine to turn the propeller and achieve the manufacturer's recommended RPM at full throttle.

STRUT AND BEARING

The propeller shaft is supported on the outside of the hull by a strut. The strut is equipped with a water-lubricated plastic bearing to allow the propeller shaft to rotate in the strut.

NOTICE

The strut bearing is lubricated by water. DO NOT shift the transmission and run the propeller out of the water even if the water is supplied to the engine's cooling system. Damage to the shaft and bearing can occur.

ELECTRICAL SYSTEM

Your Tigé boat is equipped with a direct current (DC) system which is battery-powered and supplies electricity to lights, pumps, blowers, engine ignition and accessories. The alternator from the engine produces alternating current (AC) and converts it to DC, which provides power while the engine is running and also charges the battery or batteries, if your boat is equipped with more than one battery.

The electrical system is controlled by the battery disconnect switch, located in engine compartment and MAIN switch on breaker box. The electrical system is protected by circuit breakers on the breaker box. The breaker box is located under the dash. Make sure the battery disconnect switch and the MAIN switch on breaker box are both ON and make sure no breakers are tripped. Run fingers over breaker face and reset any tripped circuit breakers.

**WARNING****FIRE OR EXPLOSION HAZARD**

An AC/DC can create sparks. In the presence of explosive gases, fire or explosion can occur. Check for explosive gases or run the blower.

DO NOT work on an energized system. Disconnect the negative cable from the battery before performing any service.

FUEL SYSTEM

The fuel system consists of a built-in fuel tank, a fuel tank vent, a port fuel fill on direct drive models, a port and starboard fuel fill on V-drive models.

The fuel tank is located mid-ship, fore of the engine. To inspect the hose connections, raise the floor panels. Your Tigé Dealer or a qualified service technician should perform all fuel system service.

BALLAST TANK SYSTEM (optional)

The patented Tigé ConvexV hull and TAPS2 technology is designed to deliver phenomenal wakeboarding wakes without ballast or drag hardware. However, Tigé does offer an optional ballast system for expert riders performing extreme-level tricks. The system consists of tanks, pumps and valves (or seacocks). The pumps fill and drain the tanks and the valves allow the system to be opened or closed.

When ballast is used, the available load weight in the boat must be reduced. This means fewer passengers and/or less gear are allowed to keep the boat within legal and safe weight limits. An average boat passenger is defined as 141 lbs (64 kg) per person. Water weighs approximately 8.4 lbs per gallon (1 kg per liter).

BILGE SYSTEMS**NOTICE**

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into the water. Violators can be fined \$5,000.

IMPORTANT

Bilge pumps and bilge pumping systems are not designed for damage control. Check the function of all bilge pumps at regular intervals. Debris can also prevent pumps from functioning or also make it operate continuously. Make sure no debris is blocking the bilge pump float. Continuous operation of the bilge can mean a leak or a drain plug is installed incorrectly, make sure all drain plugs are installed. See your Tigé Dealer if you have any questions.


DO NOT allow water to accumulate in the bilge area of your boat. When the boat is in use, check the bilge area often. Your Tigé boat is equipped with an automatic bilge pump which detects excess water accumulation and will turn the bilge pump on automatically. Bilge water normally accumulates from weather, wet water sports gear, getting into your boat from the water and draining coolers.

The engine and other parts of the drive system could be damaged and there is a risk of personal injury as increasing water level will affect the handling and maneuverability of the boat.

CAUTION

The risk of personal injury from excess water in the bilge area will adversely affect the handling and maneuverability of the boat. Also, damage to the engine and other parts of the drive system can occur from the additional water. **DO NOT** allow the bilge pump to operate after all the water has been cleared from the bilge area. Damage to the pump will occur.

SHOWER SYSTEM

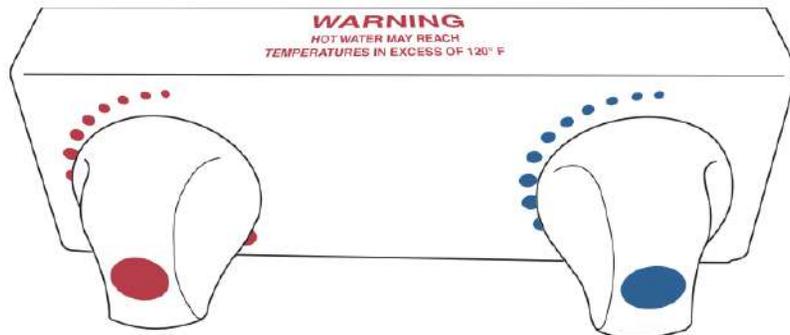

The shower system consists of a pump for water pressure, a “manifold” for cold and hot water, and a five-setting nozzle with an ON/OFF valve.

The hot water is supplied from the residual water from the engine’s cooling system. **DO NOT** run the engine when using the shower at the boarding platform. If additional hot water is necessary, turn off the shower and warm up the engine for a couple of minutes.

WARNING

CARBON MONOXIDE POISONING OR ROTATING PARTS HAZARD

Poisonous CO gases are present at the rear of the craft when the engine is running. Exposure to CO gases can cause death or serious injury. A rotating propeller can cut or entangle causing death or serious injury. **DO NOT** use the swim/boarding platform when the engine is running.

Use the swim/boarding platform only for boarding the craft or entering the water.

WARNING

BURN HAZARD

Hot water from the shower may reach temperatures in excess of 120°F (49°C). Use both the cold and hot water control knobs when testing water temperature.

The shower manifold has two water control knobs, one for cold (blue) and one for hot (red). Turn the knobs counterclockwise to increase pressure and control the temperature.



Use the nozzle to turn the water stream on and select the desired setting, SHOWER/FULL/STREAM/FLAT/MIST.



After using the shower, turn off the water control knobs. Relieve the pressure from the shower hose by opening the ON/OFF valve at the nozzle and then closing it.

During off-season storage or below freezing temperatures, the shower system must be winterized. Your Tigé Dealer can assist you with winterization of the shower system.

SCHEMATIC AND SYSTEM ILLUSTRATIONS

The Schematic and System illustrations show models with the maximum components and accessories, which may not be included on your Tigé boat.

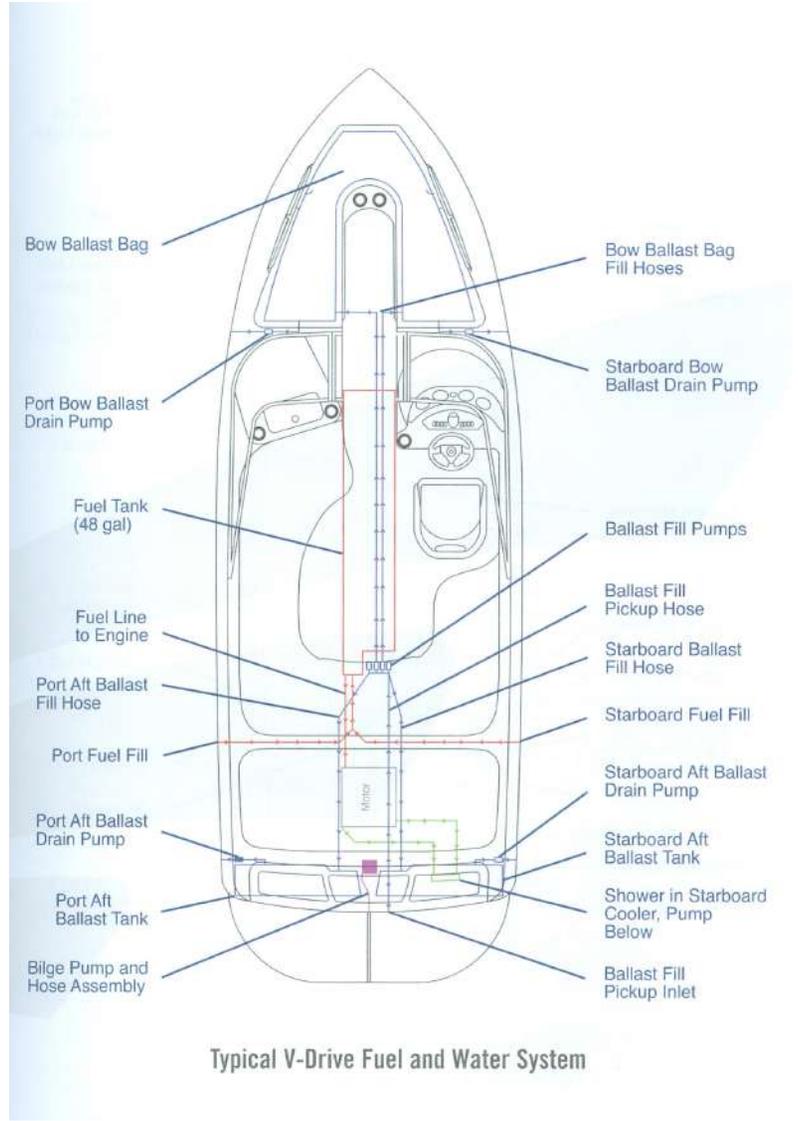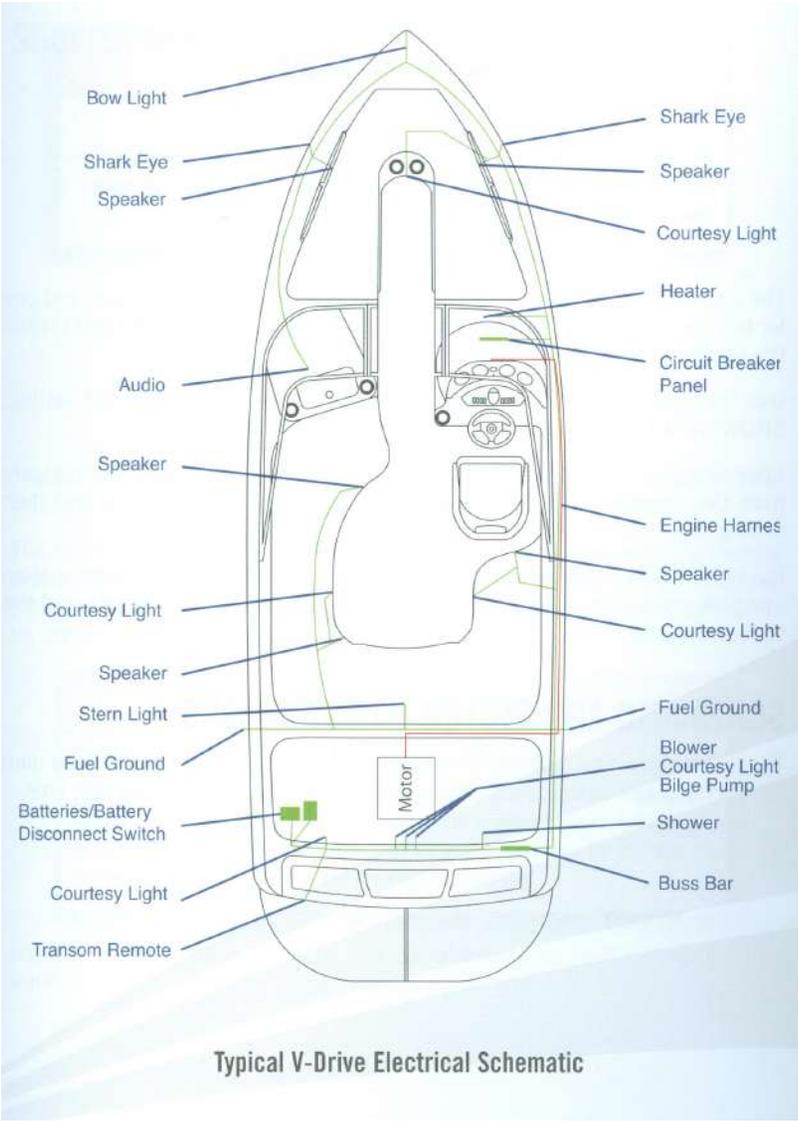

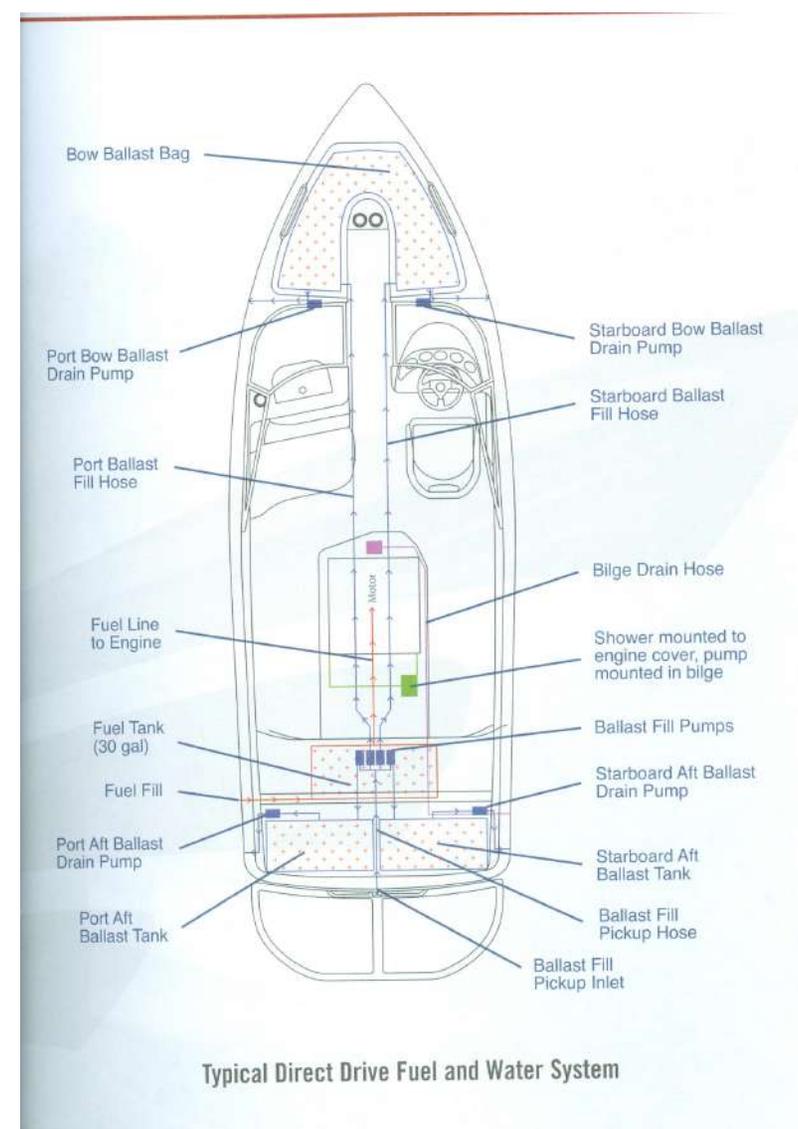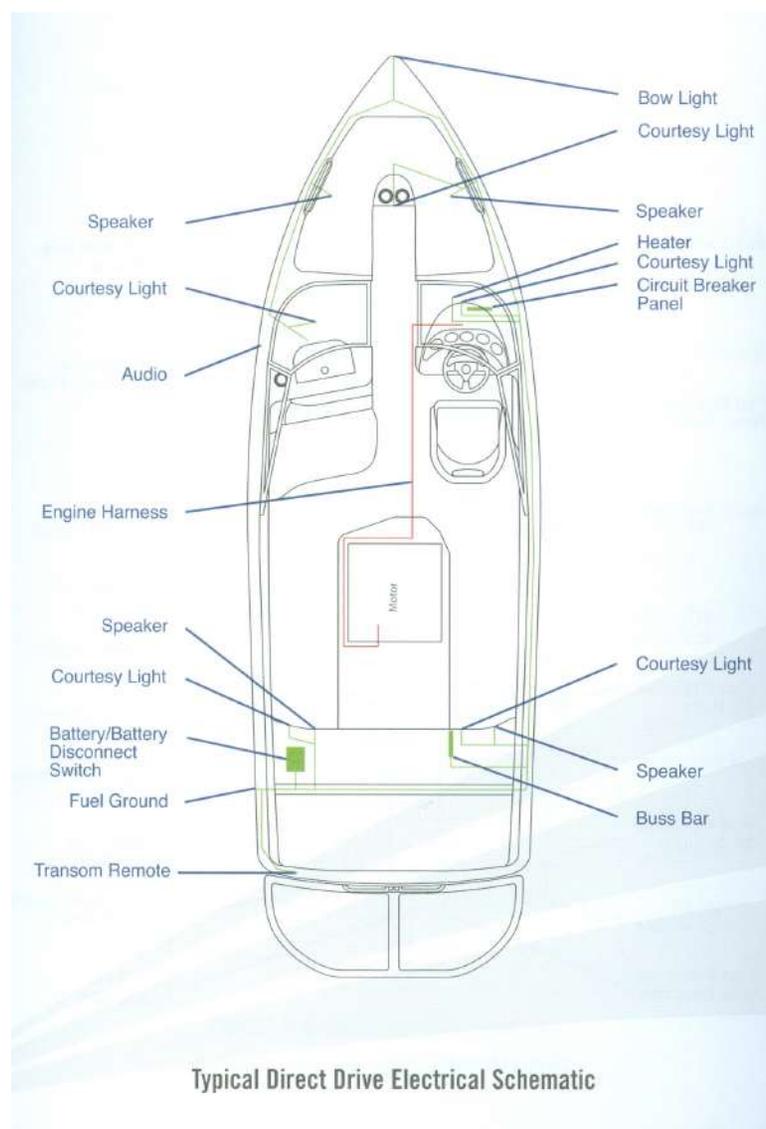

SECTION 6



CARE & MAINTENANCE



This section describes how to take care of and maintain your Tigé boat. Periodic inspection and maintenance of items listed in this section are absolutely necessary.

Winterization of major components and some engine maintenance procedures are best performed by your Tigé Dealer. Some maintenance procedures also require special tools which only a dealer may have. Refer to the engine owner's manual for maintenance information for the engine.

Some maintenance items that can be done by you or your dealer are listed in this section. We suggest that you become familiar with these even if you have your dealer service your boat.



GENERAL MAINTENANCE

1. Read engine owner's manual carefully and completely.
2. Check and make sure all drain plugs are installed correctly everytime you use your boat.
3. Check the fuel system for leaks every time you use your boat.
4. DO NOT start your engine if you smell gasoline or an odor is present. Gasoline fumes are highly explosive. Before starting your engine, always operate the blower for at least four minutes or open the engine cover and inspect the engine compartment for gasoline fumes. Run your blower when operating at slow speeds. If fuel vapors are present, DO NOT start the engine. Check all hoses and fittings to determine the source of the vapor. Make the necessary repairs or take the boat to a qualified service technician to eliminate the fuel vapor.
5. When servicing the ignition switch or any wiring, disconnect the battery cables from the battery.
6. Check for water circulation when the engine is running.

Exhaust should contain steady flow of water. In closed cooling systems, make sure the coolant in the cooling system is at the proper level.

INTERIOR

The interior fabric of your Tigé boat is designed to take the tough punishment of the elements and usage of an active boater. Keep sharp objects away from the interior to prevent cuts or damage to your interior.

The interior of your Tigé boat can be cleaned easily, over and over, without showing signs of wear. Certain ingredients in products can contribute to staining of your interior, such as sunscreens. Some of these ingredients are:

- Aminobenzoic acids - e.g. PABA
- Hydroxy benzophenones - e.g. Oxybenzone
- P-methoxycinnamic acid - e.g.
- Octylmethoxycinnamate

This list is not inclusive, but does represent a large selection of sunscreens which are known to stain vinyls. Almost any sunscreen with a high percentage (two percent or more) of active ingredients can stain.

The interior manufacturer or Tigé Boats warranties do not cover staining from sunscreens.

Special care should be taken to prevent dark-colored rubber products from coming in contact with your interior upholstery.

NOTICE

It is extremely important to clean the stained area as quickly as possible, making sure the recommended cleaning steps are followed in order.

Care and Cleaning of Interior

Remove ordinary dirt and light smudges with a mild soap and warm water solution. Dry it with a soft, lint-free cloth or towel. For more difficult stains, use a stronger detergent. Follow the detergent manufacturer's instructions closely.

Step-by-step cleaning instructions:

A – Medium-soft brush, warm soapy water. Rinse/dry.

B – Vinyl Finish Vinyl Cleaner®. Rinse/dry.

C – One teaspoon of ammonia, 1/4 cup of hydrogen peroxide and 3/4 cup of water. Rinse/dry.

D – Wipe or scrape off excess. (Chill gum with ice.)

E – Hemisphere Ink Remover. Rinse/dry.

All cleaning methods must be followed with a thorough rinse with clean warm water.

Type of Stain:	Steps:	1	2	3
General care		A	B	
Foods:				
Chewing gum		D		A
Chocolate, Coffee, Tea		B		
Grape juice		A		C
Ketchup		A		B
Olive oil		A		
Yellow mustard		A	B	C

Type of Stain:	Steps:	1	2	3
Miscellaneous:				
Ballpoint ink		E	B	A
Bird droppings:		A	B	
Blood:		A	C	
Dirt buildup:		A	B	
Grease:		D	B	
Hair oil tonic:		A		
Household soil:		A	B	
Latex paint:		A	B	
Lipstick:		A	B	
Mildew or wet leaves:		C	B	A
Motor oil:		B		
Oil base paint:		D	B	
Oily spot:		A	B	
Permanent marker:		E	B	C
Spray paint:		B		
Suntan lotion:		A	B	
Tar / asphalt:		D	B	
Urine:		A	C	

Do's

Vinyl Finish Vinyl Cleaner®
Dish soap, Dawn®, Ivory®
303 Aerospace Protectant

Don'ts

Fantastik™
Formula 409®
Murphy's® Oil Soap
Simple Green®
Armor All®
Sun-of-a-Gun®
Bleach / baking soda®
Turtle® Wax / Tar
Remover



WARNING

LEAKING FUEL IS A FIRE AND EXPLOSION HAZARD. INSPECT SYSTEM REGULARLY. EXAMINE FUEL SYSTEM FOR LEAKS OR CORROSION AT LEAST ANNUALLY.

Dark Stowage Areas

When a boat is stored completely covered or in a dark building, the vinyl will darken or become "dingy" looking. If this happens, simply place the boat in direct sunlight for a few hours and the vinyl will brighten up.

BILGE PUMP AND BILGE AREA

Check your bilge pump often to make sure it is functioning properly. The BILGE switch can be used to test the bilge pump, by listening to hear that the pump is operating. It may not pump water unless water is present. The bilge pump is located in the bilge area. Keep it from getting clogged by removing any debris you find in the bilge area. Debris can also block the pump float from functioning or make it operate continuously. Make sure no debris is blocking the bilge pump float.

Wash the bilge with a good biodegradable household detergent or a bilge cleaner available at your Tigé Dealer or a marine supply store. Rinse with water while your bilge pump is running. If your pump seems too slow, remove the top of the pump from the base and check the impeller to make sure there is no debris inside. See your dealer if there is still a problem or you suspect a problem with the pump.

IMPORTANT

DO NOT discharge oil or cleaners into the water. Refer to Section 1, OUR ENVIRONMENT,

Fuel/Oil Spillage. Bilge pumps and bilge pumping systems are not designed for damage control. Check the function of all bilge pumps at regular intervals. Continuous operation of the bilge can mean a leak or a drain plug installed incorrectly. Make sure all drain plugs are installed. See your Tigé Dealer if you have any questions.

EXTERIOR

Use quality boat care product when protecting the exterior of your Tigé boat. The exterior of your boat is as important as protecting the engine. A little effort today will keep your boat looking good in the future and show the pride every time you use your boat.



WARNING

FIRE/EXPLOSION/ASPHYXIATION HAZARD

Cleaning agents and paint ingredients can be flammable and/or explosive, or dangerous to inhale. Make sure ventilation is adequate, wear proper personal protection and dispose of rags properly ashore.

Vapors from flammable solvents can cause fire, explosion or asphyxiation resulting in death or serious injury. Keep open flame or spark away from work area. DO NOT paint unless in a well-ventilated area.



WARNING

SLIPPERY SURFACE HAZARD

Cleaning craft surfaces can generate slippery conditions which can result in death or serious injury. Use caution when cleaning with detergents and rinse thoroughly.

GELCOAT MAINTENANCE

Regular maintenance will keep your exterior surfaces in good condition. Exposure to the sun, sand, sap or staining properties from trees and minerals in the water affect your boat's finish.

To help maintain the shine of your boat, wash the hull with a mild biodegradable detergent after each use to help to remove any debris and waterborne materials. Use a soft sponge or towel and dry with a chamois cloth to prevent water spots.

Wax the hull sides and deck regularly with a high-quality wax. Waxes and polishes can be obtained from your Tigé Dealer or a marine supply store. Always follow the directions of the manufacturer of these products before you use them.

In certain areas, sudden changes in temperature can affect gelcoat. When planning on moving your boat from outdoors to a heated location, allow the change of temperature to be gradual. Heat the location after the boat is brought inside to allow the boat to change temperature slowly as the location is heated. Also, if you are planning on moving your boat from a warmer area to a colder one, wait for the outside temperature to be closer to the warmer area's temperature or allow the warmer area and the boat to cool down before moving your boat.

If your boat's gelcoat develops a chalky look over a period of time due to exposure to sun, there are gelcoat buffing and polishing compounds available from your Tigé Dealer or a marine supply store. DO NOT use common household scouring pads or powders.

The hull bottom is also an important area to keep clean since buildup of water scum and algae will reduce the boat's efficiency. If you leave your boat in the water, compounds to remove algae buildup on your hull are available. Use care when choosing these products since some can be caustic. Pay special attention to the cautions on the labels of these coatings. Ask your Tigé Dealer for advice on which products work best in your area.

Deck and Hull

The finish on your Tigé boat is known as gelcoat. Our gelcoat and lamination processes are among the finest available. Even though we take all the precautions during manufacturing, the finish on your boat is susceptible to the elements and many types of water conditions.

Cleaning Deck and Hull

A multipurpose boat soap* should be used to clean exterior fiberglass/gelcoat surfaces on your Tigé boat after each use. This product, depending upon the ratio mixed, is designed to clean anything from dirty hulls and decks to greasy engines. Always rinse and wipe off the finish with a damp towel or chamois.

A fiberglass restorer/wax* should be used to remove heavy oxidation, rust and exhaust stains. This product will not only restore the look but will also leave a wax protection on the cleaned surface.

Deck and Hull Care

Paste wax* will help protect against UV light damage. A coat should be applied at the beginning, middle and end of the boating season.

To extend the life of your gelcoat finish, use a Tigé marine mooring cover to cover the top deck of the boat for maximum protection. If your boat is to be stored where the sun is constantly on the side or transom of the boat, you should consider protecting those surfaces.

Tonneau covers will supply adequate short-term protection to the interior, but will not protect the gelcoat finish.

*3M and your Tigé Dealer carry a complete line of fiberglass care products.

STAINLESS STEEL AND CHROME

Stainless steel is highly resistant to marine environments, but is still capable of rusting. Signs of rust and corrosion when left untreated can result in permanent damage. You can keep your stainless steel looking new by cleaning monthly with a good quality stainless steel cleaner or polish. Clean and polish in the direction of the grain or finish.

CARE & MAINTENANCE



Clean and wax metal prior to extended storage. In saltwater or other harsh environments, clean and wax more often. High-quality stainless steel cleaners and conditioners are commercially available. Rinse with fresh water and wipe dry with towel or chamois after each use.

Cleaning Stainless Steel

If rust or corrosion does appear use a good metal cleaner/polish immediately to protect from permanent damage. DO NOT use steel wool or other coarse abrasives, or clean with citrus cleaners, acids or bleach. DO NOT use cleaners that are not for use on stainless steel, such as glass, tile or counter cleaners. These types of cleaners can damage the surface permanently. Apply metal or automotive wax after cleaning for additional protection. Always test any product in an inconspicuous area before applying to the complete surface.

If you have to replace hardware or fasteners, make sure the replacement components are made of the correct materials. See your Tigé Dealer if you have any questions.

DO NOT store soiled rags onboard. Store or dispose of rags properly ashore.

NOTICE

Use caution in cleaning around stitching, wood or other decorative trim, since solvents could seriously damage these materials.

PROPELLER



WARNING

CUT HAZARD

A propeller can be sharp and can cause death or serious injury. Wear a pair of protective gloves when handling any propeller. Prevent accidental starting of the engine by:

- Removing key from the ignition.
- Removing emergency stop switch clip from the switch.

DO NOT reuse the nylon locknut or the cotter pin, or use a damaged propeller. A damaged propeller can damage your engine and boat.

To remove:

1. Remove the cotter pin from the propeller shaft and discard.
2. Wedge a piece of 1" x 4" wood between the propeller blade and the port side of the strut and rudder.
3. Remove the nylon locknut and discard.

Use a propeller puller to remove the propeller and then remove the key from the keyway. Make sure the keyway in the propeller and on the shaft are free of any damage.

To install:

Look at the keyway on the shaft and in the propeller and make sure the key slides freely in the propeller keyway and shaft keyway. If the key has burrs, remove them by filing the flat sides or replace the key. DO NOT file the key beyond its normal shape or size.

1. Rotate the shaft until the keyway is up.
2. Place the key in the shaft keyway. Rotate the propeller so the keyway in the propeller is aligned with the keyway on the shaft. The propeller will only slip on in one direction. Once everything is aligned, push the propeller solidly onto the shaft and make sure the propeller is seated.
3. Wedge a piece of 1" x 4" wood between the propeller blade and the starboard side of the strut and rudder.
4. Install a new nylon locknut and torque the nut to maximum of 30 ft-lbs (40.7 N·m).
5. Install a new cotter pin and bend the retaining ends of the cotter pin in opposite directions.

SALTWATER BOATING**NOTICE**

If you use your boat in salt water or other unusual water conditions, freshwater flushing is recommended for your engine and the cooling system.

Tigé offers an optional freshwater flush kit. The Tigé freshwater flush kit has a relief valve to prevent excess water pressure to your engine. Excess water pressure can damage the engine. This is the only system Tigé recommends. Running the boat in fresh water is another good way to flush the engine, but it must be done immediately.

BATTERY MAINTENANCE**WARNING****FIRE/EXPLOSION HAZARD**

Explosion or fire from hydrogen gases produced by lead acid batteries will cause death or serious injury.

- Wear personal protective equipment when working on or around batteries.
- DO NOT charge or use a battery booster to start your engine.
- Charge the battery outside of the craft.
- DO NOT smoke or bring a flame near a battery.
- DO NOT have your head directly above a battery when making or breaking electrical connections.
- If ignited by a spark or flame gas may explode violently, causing spraying of battery acid or fragmentation of the battery.
- DO NOT use a metal object to spark between battery posts to check if the battery is charged.

Use care when connecting or disconnecting a battery charger. Make sure the charger is turned OFF and unplugged from power source when you clip ON/OFF the connecting clamps.

Make sure the connection is solid with the charging clamps.

Poor connections are common causes of electrical arcs, engine problems and errant signals to the engine's ECM.

DO NOT make or break electrical circuits at the battery terminals; a spark will occur when a circuit is live and opened or made. Turn off all components.

Use a voltmeter or hydrometer to check the battery charge condition.

Remove the battery cables from the battery when the boat is placed in storage, on display or in transit, to eliminate the possibility of the engine accidentally starting without a supply of cooling water.

The battery and cables are identified:

+ = red positive



– = black negative

To clean your battery, remove and wash down the battery case with a diluted ammonia or baking soda/water solution to neutralize the acid, then flush with fresh water. Keep the fill/vent caps tight so the neutralizing solution does not get into the battery cells.

The electrolyte level should be checked every 30 days. Use distilled water only if any water is required. Maintain the level between the top of the plates and the bottom of the fill/vent cap. DO NOT overfill. Batteries contain sulfuric acid which can cause severe burns.

TRANSMISSION OIL LEVEL INSPECTION

Check the oil with the boat level and the engine off.

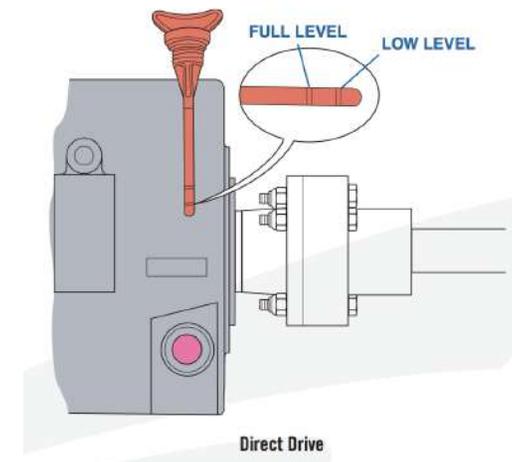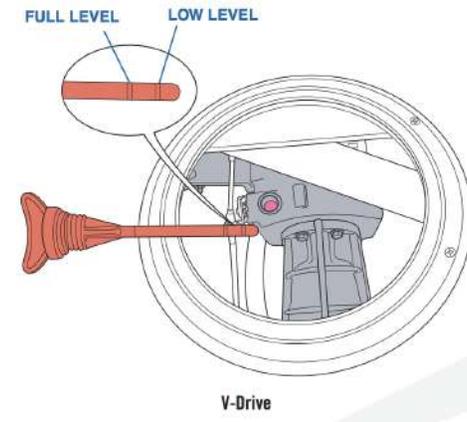

CARE & MAINTENANCE



Remove the oil level dipstick. The oil level should be between the "FULL LEVEL" and the "LOW LEVEL" indicator marks on the dipstick.

Verify the oil level with the gauge fully inserted into the transmission housing. DO NOT overfill. Use fresh recommended fluid only. To add or fill, use the dipstick opening. Refer to the transmission owner's manual for type of fluid, changing fluid intervals and more detailed information.

STEERING

All steering systems require periodic maintenance to be trouble-free and safe. Check steering operation and visually inspect for loose or missing hardware before operating the craft. If you suspect the steering system is damaged, see your dealer.



WARNING

LOSS OF CONTROL AND UNSAFE BOAT HAZARD

Improper maintenance of steering system is hazardous and can cause death or serious injury from sudden loss of control. Make sure all steering hardware, cables and fluid levels are regularly inspected and maintained.

UNSCHEDULED MAINTENANCE

A problem with any electrical or mechanical equipment can occur anytime. Be aware of a malfunction if one occurs, or if you suspect a problem. Have the problem serviced immediately by your Tigé Dealer.

If a problem occurs with your engine, propulsion unit or the cooling system between the scheduled maintenance cycle, immediately notify your Tigé Dealer to have the problem resolved. DO NOT allow a problem to go unattended.

Electrical System

Have your Tigé Dealer repair all electrical problems. Electrical problems must be treated seriously and repaired immediately. Whenever checking for electrical problems, use extreme caution. Fuel and fumes are extremely flammable and explosive.



WARNING

FIRE OR EXPLOSION HAZARD

An AC/DC can create sparks. In the presence of explosive gases, fire or explosion can occur. Check for explosive gases or run the blower.

DO NOT work on an energized system. Turn the battery disconnect switch OFF.

Fuel System

DO NOT operate your boat if you know you have a fuel system problem. When you discover or suspect a fuel system problem, immediately notify your Tigé Dealer for repair.

 WARNING
FIRE OR EXPLOSION HAZARD Fuels are extremely flammable and highly explosive under certain conditions. DO NOT smoke or allow open flame or sparks nearby when inspecting the fuel system.

Shower System

The shower system must be filled with the proper storage antifreeze or drained completely for winter storage. If antifreeze is added to the engine cooling system, the shower must be included. After the system is drained or filled with antifreeze, the two water control knobs and the nozzle must be left open.

Cockpit Heater

The cockpit heater must be filled with the proper storage antifreeze or drained completely for winter storage. If antifreeze is added to the engine cooling system, the heater must be included.

SLINGING/LIFTING THE BOAT

To prevent structural damage to your Tigé boat, the proper procedure must be used when lifting your boat. Only use appropriate style lifting slings or lift rings with a spreader bar. Protect the rub rail to prevent any part of the lift device from making contact with the boat.

If the boat is to be removed from the water without a trailer, follow these guidelines:

- Never attach lifting cables to cleats, ski tow eyes or handrails. Attach cables only to the bow and stern eyes.
- Cover lifting cables with rubber hose or other protectors to prevent damage to the finish.
- Attach guide lines to the bow and stern to control movement.
- Use spreader bars and keep lifting pressure vertical to prevent gunwale damage.
- Keep the bow slightly higher than the stern to prevent engine damage.

Using Lifting Slings

This method should only be used by a qualified person with knowledge on how to use lifting slings, or your Tigé Dealer. Slings must be the flat, widebelting type. DO NOT use cable-type slings.

The spreader bars used with the slings must be wide enough to avoid pressure to the gunwales.

Contact your Tigé Dealer to identify the proper location for slings. Slings may need to be adjusted fore or aft for your particular boat.

Storage Cradle

If you are planning on storing your Tigé boat on a cradle, only use a storage cradle. You may also use the trailer designed for your boat to store your boat when it is not in the water. A storage cradle or your boat's trailer will provide proper support and prevent stress on the hull.

Position the storage cradle as close to the sling locations as possible. Use caution not to damage any underwater components.

The storage cradle must completely touch the hull for proper support. Be sure there are no gaps between the cradle and the hull. Store your boat with the bow slightly elevated to the same attitude as if the boat were floating. If the boat is stored with the bow down, moisture cannot move to the engine bilge area and out of the boat. Remove the transom drain plug.

Make sure all compartments in the bilge area completely drain. Mold and mildew can form as a result of moisture.

After the boat has been properly positioned on a storage cradle, thoroughly wash the interior, hull, deck and interior compartments. Allow a couple of days of air drying before covering the boat, store all cushions in the open position and open all storage areas to help prevent mold/mildew.

Cover the boat with the storage cover. If a temporary poly cover such as shrink wrap is used, your Tigé Dealer will install vents to provide ventilation to help prevent mold or mildew.

STORAGE/WINTERIZATION

Preparing for winter lay-up is important. In frigid zones, be particularly attentive to items that can be damaged by freezing. Damage to your boat from improper storage is not covered by the warranty.

Without proper preparation, storage for long periods of time can cause internal parts of the engine and drive system to rust because of lack of lubrication. Or, if the boat is stored in below freezing temperatures, water inside the bilge or cooling system can freeze, causing damage. The following procedures should help prevent damage to your boat.

Perform all annual maintenance at this time.

The following items require special attention for winterization. Your Tigé boat may not include all the features described. Have your Tigé Dealer perform winterization procedures for the following:

- Engine cooling and exhaust systems
- Fuel system
- Batteries
- Cockpit heater
- Drain Ballast System

Storage Preparation

While the boat is still in the water:

1. Fill fuel tank and add the proper amount of fuel stabilizer and conditioner according to the engine manufacturer's recommendations.
2. Operate boat for at least 15 minutes to be sure the treated fuel has reached the engine.

NOTICE

If the boat is to be stored for more than five months, stored in a high-moisture (humidity) environment, in temperature extremes or outdoors, "fog" the engine with a rust-preventive fogging oil according to the manufacturer's recommendations. See your Tigé Dealer.

When the boat is removed from the water:

NOTICE

Remove the bilge drain plug immediately after taking the boat out of the water. After washing, raise the bow of the boat high to allow as much water as possible to drain while performing other storage preparations.

- Flush the engine cooling system with clean fresh water. DO NOT exceed 1500 RPM when flushing.
- Drain the ballast tank system

IMPORTANT

It is extremely important to drain ballast system during freezing temperatures and during long periods of non-use. Protect our natural resources by using environmentally friendly products and always discard in an environmentally friendly manner.

1. Drain the system completely after your boat is out of the water and keep the intake/drain valves open.
2. Use a 50/50 mixture of an environmentally friendly antifreeze and fresh water.
3. Pour an even amount, approximately 1 gallon (3,8 liters) of the antifreeze mixture into each tank's vent.
4. Make sure you catch any spilled mixture by placing a container under the intake/drain of the tank you are winterizing.
5. Operate the pump in the drain mode for two seconds; then shut off. Repeat procedure for other tank(s).
6. Close the water intake/drain valves in the ballast tank(s). When returning your boat back to service, make sure to drain the remainder of the mixture before getting onto the water.

- Thoroughly wash the interior, interior compartments, deck and hull as soon as your boat is removed from the water. Cleaning the hull at this time is easier because the marine growth is still wet. Allow a couple of days of air drying before covering the boat. Store all cushions in the open position and open all storage areas to help prevent mold/mildew.
- Apply a coat of wax to the entire surface of the boat and rust inhibitor on all metal parts.
- Clean all traces of dirt, oil, grime and grease from the engine and bilge. Touch up areas of engine where paint has been removed.
- Prepare the engine for storage according to the instructions contained in the engine owner's manual.
- Store the bilge drain plug and any other drain plugs removed in a plastic bag and tape it to the throttle control lever or near the dash so it is easy to find after being stored.
- Remove the battery from the boat. Clean, fully charge and store the battery in an area not subject to freezing temperatures or directly on cement. **DO NOT** store batteries close to heat, spark or flame-producing devices.
- Repack trailer wheel bearings with water-resistant wheel bearing grease. If the trailer is equipped with bearing protectors, apply grease into hubs with a grease gun.
- Park trailer and boat in a protected area on cement if possible. If your boat and trailer are left outside, install a boat cover. Cover the boat with the storage cover. If a temporary poly cover such as shrink wrap is used, your Tigé Dealer will install vents to provide ventilation to help prevent mold or mildew.
- Loosen tie-downs and winch line, but make sure the boat is resting properly on hull supports.
- Jack up trailer and place blocks under trailer frame to relieve weight on trailer tires and springs.

NOTICE

DO NOT use your tonneau cover or bimini top for long-term storage. These are not designed for long-term storage and do not provide good protection. Adequate ventilation is not possible and mold/mildew will form. For more information on appropriate covering for long-term storage, see your Tigé Dealer.

What to do after Boat Storage

Have your Tigé Dealer prepare your boat for the next boating season. It is very important for the fuel system and exhaust system to be thoroughly inspected and repaired, if necessary, before operating the boat.

There are many steps required to ensure your boat is in proper operating condition. Avoid the risk of fire or explosion. Inspect the fuel system. Failure to inspect the fuel system and allow fuel leaks to go undetected will contribute to a fire or explosion hazard.

If your swim platform was removed for storage, reinstall it. The removable feature is for boat storage only. The boat must not be operated without the swim platform.



WARNING

FIRE OR EXPLOSION HAZARD

Fuels are extremely flammable and highly explosive under certain conditions. DO NOT smoke or allow open flame or sparks nearby when inspecting the fuel system.

CARE & MAINTENANCE

Make sure these steps are followed before using your boat:

- Check and inspect the fuel and exhaust systems, the engine cooling and lubrication systems.
- If the swim platform was removed for storage, reinstall it.
- Charge and reinstall battery into boat.
- Check engine and bilge for signs of nesting animals; clean as necessary.
- Check entire engine for cracks and leaks caused by freeze damage.
- Check hose condition and all hose clamps for tightness.
- Install bilge drain plug or any other drain plugs removed. Make sure all plugs are installed correctly.
- Perform daily maintenance. If not performed during lay-up, perform annual maintenance.
- Check and lubricate steering system.
- Remove blocks from under trailer frame.
- Tighten tie-downs and trailer winch line.
- Check tire pressure and lug nuts on trailer.
- Take the boat to the water and start it. It may take a minute of cranking to allow the fuel system to prime. Allow a one-minute cool down period for every 15 seconds of cranking. When the engine starts, keep a close watch over the gauge readings, and check for leakage and abnormal noises. Keep speeds low for the first 15 minutes until the engine has reached normal operating temperature.



SECTION 7




TOUCH.GO.

TIGÉ TOUCH USER MANUAL



HOME PAGE

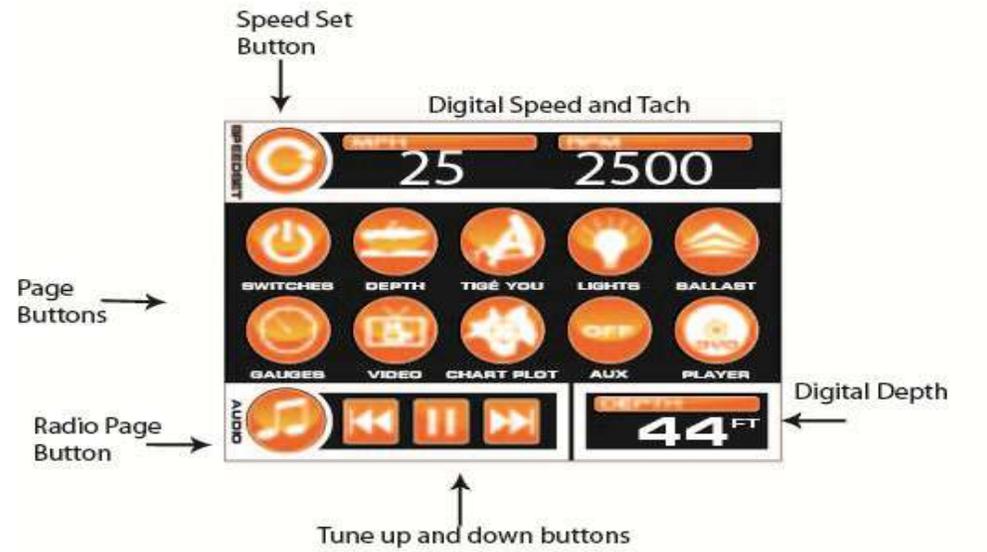

Gauge Page and Depth Page




The Gauge screen is designed to show all the boat information in one location. Press the HOME button to return to the MAIN page.



The Depth screen will show a scrolling depth bar as well as basic boat information. There is also access to the Speedset and Radio screen from this page.



SWITCH PAGE

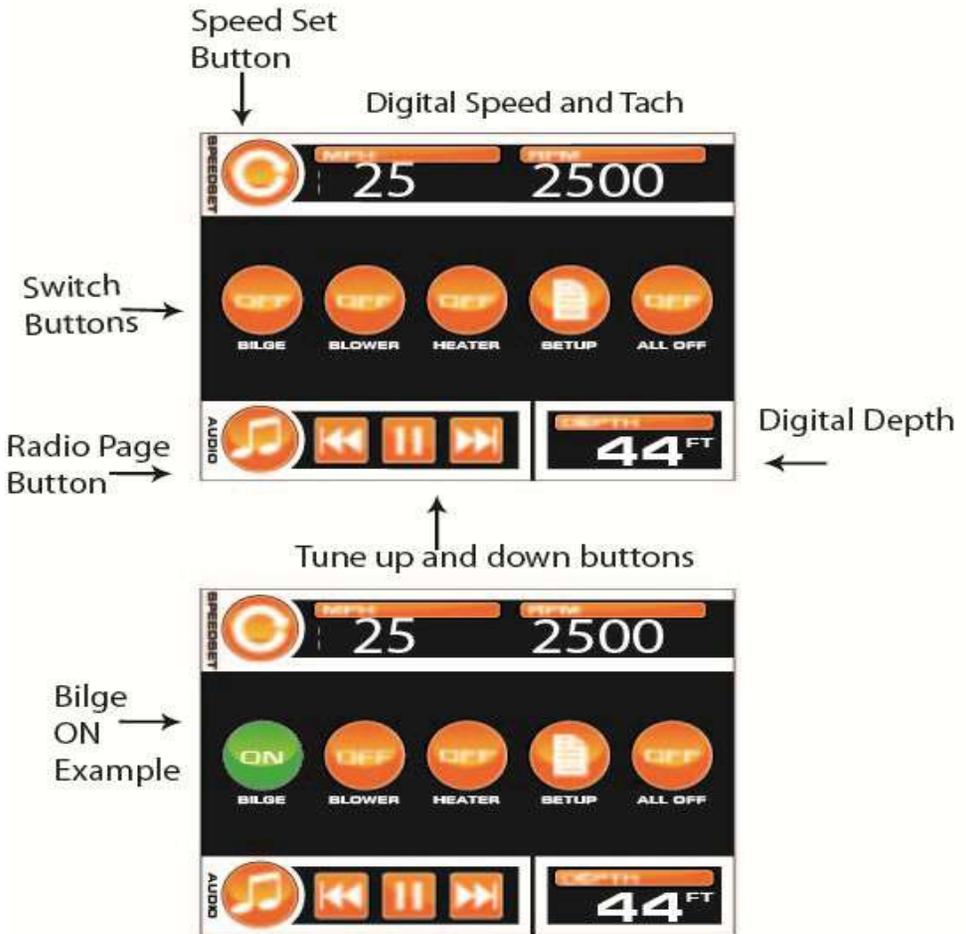

The ALL OFF button will turn off all switches that are on including ballast pumps.

LIGHTS PAGE

Speed Set Button

Digital Speed and Tach

Lights Buttons

Radio Page Button

Tune up and down buttons

Navigation ON Example

Optional tower and under water lights switches

Digital Depth

The ALL LIGHTS button will turn all the lights on and all of them off.

CRUISE

If a Tigé You profile is activated the name will appear in banner

Cruise Status Orange = off Green = on

Use the Quick Set buttons jump closer to the desired speed and fine tune with the up and down buttons. Cruise must be off to use the buttons.

Drive the boat to the desired speed and press the SET button to enable cruise.

Use the up and down buttons to preselect a desired speed or adjust the speed after the cruise is engaged.



TIGÉ YOU

The TIGÉ YOU main menu shows three profiles with speeds of 21.5 and 6. Below it are four settings screens: 'NAME - TIGÉ YOU' with a QWERTY keyboard, 'SET SPEED' with a speed of 22.5, 'SET TAPS2' with a 3x3 grid of buttons, and 'SET BALLAST' with four percentage sliders set to 100.

Make sure the file you want to edit or delete has the green circle before pressing the EDIT PROFILE button.

If Edit Profile is selected

Select your desired speed

Select your desired TAPs setting

Select your desired Ballast settings

Ballast Setup and adjustments

The SETUP screen lists four ballast options: VE Base, VE Surf, VE Pro, RZ Base, RZ Surf, and RZ Pro. A green circle highlights the 'VE Pro' option.

ENTER BUTTON

Use the up and down arrows to select the correct ballast system optioned in the boat. Press the enter button to activate.

VE PRO Tank option

The screen shows a boat diagram with ballast tanks. The front left tank is at 25%, front right at 75%, rear left at 50%, and rear right at 25%. The water level is 44 FT.

VE BASE and SURF option

The screen shows a boat diagram with ballast tanks. The front left tank is at 25%, front right at 75%, rear left at 50%, and rear right at 25%. The water level is 44 FT.

RZ PRO Tank option

The screen shows a boat diagram with ballast tanks. The front left tank is at 25%, front right at 75%, rear left at 50%, and rear right at 25%. The water level is 44 FT.

RZ BASE and SURF option

The screen shows a boat diagram with ballast tanks. The front left tank is at 25%, front right at 75%, rear left at 50%, and rear right at 25%. The water level is 44 FT.

Edit the DRAIN and FILL times by pressing the up and down arrows on the screen. Press the HOME button when complete.


HOME BUTTON

The SETUP screen shows 'GET BALLAST TIMES' with 'REAR TIME = 9' and 'FRONT TIME = 7'. Green arrows indicate that these values can be adjusted.


Setup screen



Reset Factory Settings will take all adjustable information such as depth alarm, speed calibration, and Tigé You profiles.

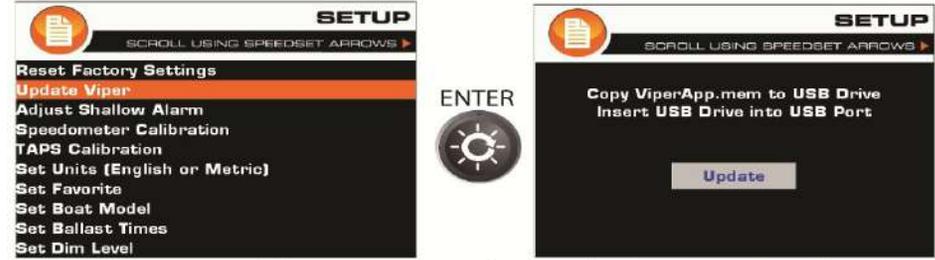


Update Viper is one of the two ways to upload updated software into the system. A software file that has been named ViperApp.mem is placed on a USB thumb drive. That thumb drive is placed into the USB connector that is attached to the Viper module on the boat. Once the UPDATE has been started by pressing enter the system will down load that file and updated the system. The system will reset when complete. This can also be done by having the thumb drive in the USB and reset ignition. Be sure to remove the USB when complete.

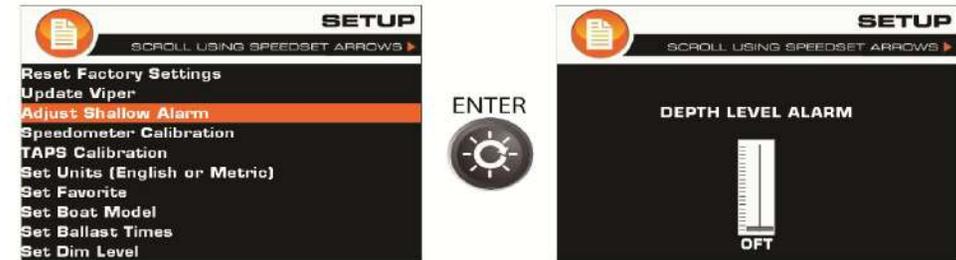

Use the up and down button to adjust the desired depth level alarm. Press the enter ENTER to accept the change.

Speed Calibration and TABs calibration

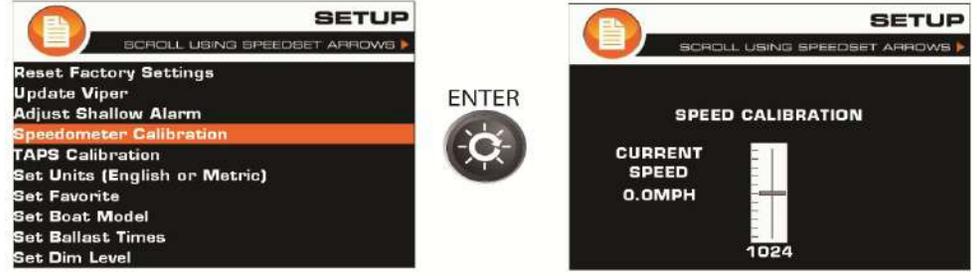


Changing the speed calibration is done from this screen. Using a GPS or other method use the up and down arrows to correct the speed calibration. Press the enter button to accept the changes.



Changing the TAPS calibration is accomplished by following the instructions as they appear on the screens. After each task is complete press the enter to move to the next task until complete.




English/Metric, Favorite setup, and DIM setting

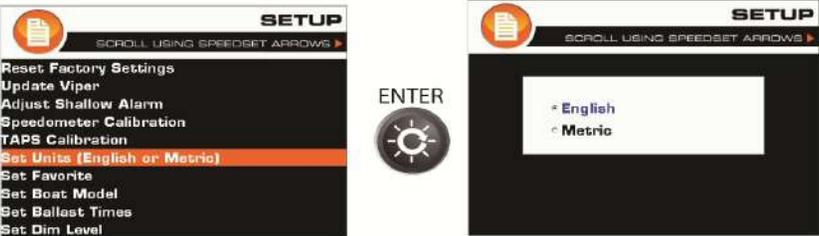

Flip the digital data in the display between English and Metric by use the up and down buttons to highlight the desired selections. Press the enter button to accept the highlighted selection.



The Set Favorite option will allow the user to define the favorite button. The user can choose between 5 different favorite screens. Use the up and down buttons to highlight the screen for your favorite button and press enter to accept.

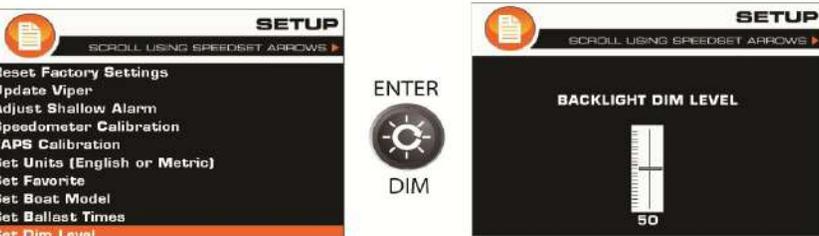


Set the DIM level by using the up and down arrow to the desired level. The ENTER button will toggle between 100% light to the DIM setpoint when in the HOME screen.


Output Setup and Gauge Diagnostics



The Output setup will allow for addition and deletion of optional output switches. If the output has a check mark the a button will be labeled with the appropriate label. If the output is not checked the button will be marked with AUX so the user can use the output for another purpose. When using the output for another load make sure the wire and load match the fused input being used.

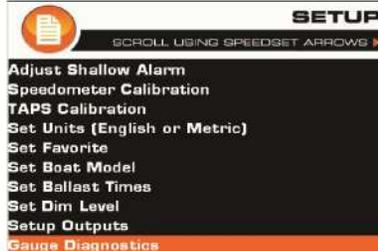

Gauge Diagnostics will automatically sweep the gauges to confirm operation. Press the HOME button to exit.

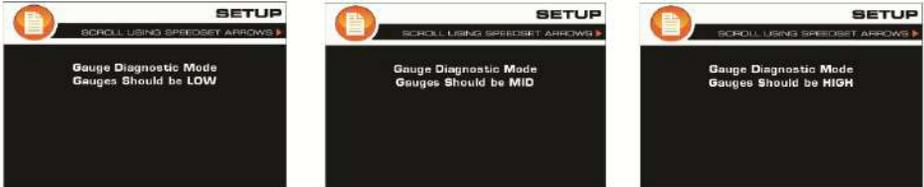

About Viper and Viper Diagnostics



About Viper will give the user the information on what is the current software version installed in the system.




SETUP
SCROLL USING SPEEDSET ARROWS ▶

GC_TRIM_NO_FLT	198	GC_BALLAST3_RAW	0	GC_ADC1	1023
GC_SPEED	0	GC_BALLAST4_RAW	0	GC_ADC2	1023
GC_SPD_FLT	329326	GC_BALLAST5_RAW	0	GC_ADC3	288
GC_TACH	0	GC_TRIM	199	GC_ADC4	1023
GC_TACH_FLT	330	GC_TRIM_RAW	737	GC_ADC5	1023
GC_FUEL	0	GC_IGN_RAW	3013720	GC_ADC6	1023
GC_FUEL_FLT	0	GC_ENGTMP	67	GC_ADC7	1023
GC_VOLT	7.42	GC_ENGTMP	0	GC_ADC8	777
GC_OIL_PRESS	0	GC_HOUR_METER	121	GC_ADC9	800
GC_BALLAST1	0	GC_AIR_TEMP	2016	GC_ADC10	561
GC_BALLAST2	0	GC_LANE_TEMP	2961	GC_ADC11	1023
GC_BALLAST3	0	GC_DEPTH	0	GC_ADC12	646
GC_BALLAST4	0	GC_DEPTH_STATUS	1	GC_ADC13	724
GC_BALLAST5	0	GC_BACKLIGHT	100	GC_ADC14	762
GC_BALLAST1_RAW	0	GC_HEADING	5	GC_ADC15	0
GC_BALLAST2_RAW	0	GC_ZONE	0	GC_ADC16	565

The Viper Diagnostic screen is used for trouble shooting any issues. May be used to gather information on what the inputs and outputs are doing during operation.

Viper Video Connections

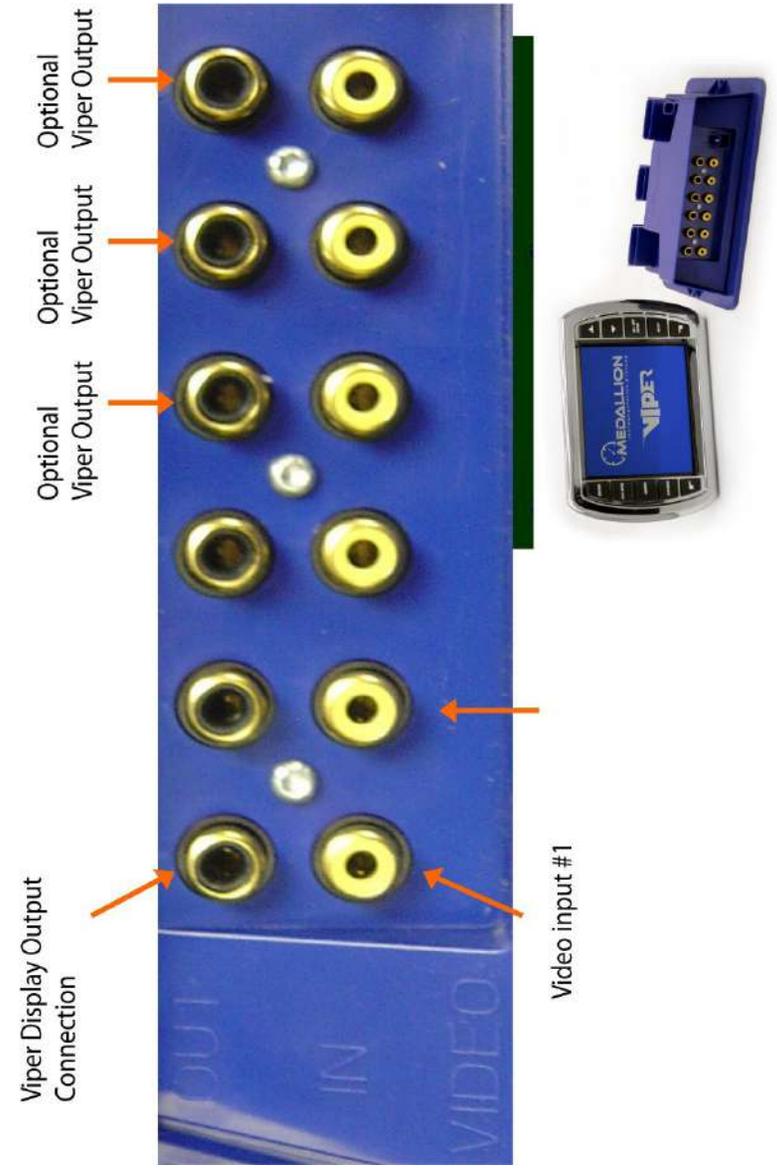



TROUBLESHOOTING & SERVICE REQUIREMENTS



The following chart will assist you in finding and correcting minor problems with your Tigé boat. Refer to your engine owner's manual for more detailed information concerning a problem starting, shifting or operating the engine. Some problems may require the skills of a trained technician and special service tools. Contact your Tigé Dealer for assistance.

Engine Symptom	Possible Cause
Engine will not crank	<p>Ignition safety switch not in place. Install ignition safety switch.</p> <p>Battery disconnect switch located in engine compartment is off. Turn switch ON.</p> <p>MAIN switch on breaker box located under dash is off. Turn switch ON.</p> <p>Circuit breaker is tripped. Run fingers over breaker face and reset any tripped circuit breakers.</p> <p>Bad starter connections. Check connections and tighten. If starter solenoid clicks when attempting to start engine, check battery connections. If condition persists, contact your Tigé Dealer.</p> <p>Engine circuit breaker open. Make sure breaker is in operating position.</p> <p>Faulty ignition switch or engine problem. See your Tigé Dealer.</p> <p>Shift position not in NEUTRAL. Make sure shifter is NEUTRAL.</p> <p>Starting procedure not followed.</p>

Engine Symptom	Possible Cause
Low starter speed Engine cranks but will not start	<p>Weak or bad battery. See your Tigé Dealer.</p> <p>Fuel level low or empty. Add fuel.</p> <p>Contaminated fuel. See your Tigé Dealer.</p>
Engine runs erratically	Contaminated fuel. See your Tigé Dealer.
Engine vibrates	Propeller damaged. Check for bent, broken or damaged propeller, misaligned propeller shaft, or weeds on propeller.
Engine runs but boat makes little or no progress	Fouled or damaged propeller. Check for weeds on propeller, bent or broken propeller, or contaminated fuel. See your Tigé Dealer.
Performance loss	<p>Throttles not fully open. Make sure throttle opens fully at engines.</p> <p>Improper fuel. Fill tank with correct fuel.</p>
Engine overheating	<p>Turn off engine immediately. Contact your Tigé Dealer.</p> <p>Boat overloaded. Reduce load or distribute boat load evenly.</p> <p>Improper propeller selection. See your Tigé Dealer.</p> <p>Excessive bilge water. Check for excessive water. Drain bilge.</p> <p>Boat hull buildup or blocked water pick-up. Clean if marine growth is present.</p> <p>Saltwater Flush Kit shut-off valve (if equipped), or water pickup seacock (seacock applies to all models sold in Canada), is CLOSED. Open shut-off valve or seacock (handle in-line [OPEN] with hose, not perpendicular [CLOSED]).</p>



SERVICE REQUIREMENTS

20-HOUR SERVICE REQUIREMENTS Boat # _____
This service must be performed to keep warranty active. Please see your dealer.

Electrical	Possible Cause
Electrical problem	Battery disconnect switch located in engine compartment is off. Turn switch ON.
	MAIN switch on breaker box located under dash is off. Turn switch ON.
	Circuit breaker is tripped. Run fingers over breaker face and reset any tripped circuit breakers.
	Loose wiring connection. Check connections.
	Defective switch or gauge. See your Tigé Dealer.
	Dim or no lights, circuit breaker tripped or in OFF position. Check breaker.
	Battery discharged. Charge battery.
Steering	
Steering problem	Corroded steering cable or worn rudder. See your Tigé Dealer.
Throttle/Shifting	
Throttle/shifting problems	Low transmission fluid level. Check level. Corroded cables, defective throttle return spring or sticking transmission shift lever. See your Tigé Dealer.

Tigé Maintenance Schedule	DAILY	WEEKLY	REGULAR	ANNUAL	20 HRS.
Smell bilge area for fuel vapors	X	X	X	X	X
Check and tighten all steering system bolts and connections					X
Check rudder, tiller arm bolt and safety setscrew					X
Lubricate rudder stuffing box and steering support tube					X
Lubricate cables					X
Replace cables	If stiffness continues after lubricating				
Check bilge pump operation	X	X	X		X
Check blower operation	X	X	X		X
Adjust and tighten throttle linkage					X
Inspect shaft packing			X		X
Check shaft alignment/ensure it is within .003					X
Check and tighten motor mounts					X
Tighten pylon and tower mounting bolts	X	X	X		X
Tighten all hardware and fasteners					X
Oil teak swim platform (as needed)					X
Change engine oil and filter					X
Change fuel water separator					X
Change transmission fluid					X
Check engine oil	X				
Check transmission		X			
Check water pickups for debris or marine growth		X			
If equipped with a strainer, check and clean		X			
If operated in salt water, flush engine/cooling system and boat	X			X	

IF PROPELLER STRIKES AN OBJECT, INSPECT DRIVE TRAIN IMMEDIATELY!

I certify that the 20-Hour Service has been conducted and a copy will be sent to: **Tigé Boats, Inc., 1801 Hwy. 36 Abilene, TX, 79602**

Place Stamp Here

Signature of Mechanic *Date*

TROUBLESHOOTING & SERVICE REQUIREMENTS



75-HOUR SERVICE REQUIREMENTS

Boat # _____

This service must be performed to keep warranty active. Please see your dealer.

Tigé Maintenance Schedule	DAILY	WEEKLY	REGULAR	ANNUAL	75 HRS.
Smell bilge area for fuel vapors	X	X	X		X
Check and tighten all steering system bolts and connections					X
Check rudder, tiller arm bolt and safety setscrew					X
Lubricate rudder stuffing box and steering support tube					X
Lubricate cables					
Replace cables	If stiffness continues after lubricating				
Check bilge pump operation	X	X	X		X
Check blower operation	X	X	X		X
Adjust and tighten throttle linkage					X
Inspect shaft packing			X		X
Check shaft alignment/ensure it is within .003					X
Check and tighten motor mounts					X
Tighten pylon and tower mounting bolts	X	X	X		X
Tighten all hardware and fasteners					X
Oil teak swim platform (as needed)					X
Change engine oil and filter (every 100 hrs. or annually)				X	
Change fuel water separator (every 100 hrs. or annually)				X	
Change transmission fluid (every 100 hrs. or annually)				X	
Check engine oil	X				
Check transmission		X			
Check water pickups for debris or marine growth		X			X
If equipped with a strainer, check and clean		X			X
If operated in salt water, flush engine/cooling system and boat	X				

IF PROPELLER STRIKES AN OBJECT, INSPECT DRIVE TRAIN IMMEDIATELY!

I certify that the 75-Hour Service has been conducted and a copy will be sent to: **Tigé Boats, Inc.,**

**1801 Hwy. 36
Abilene, TX, 79602**

Place Stamp Here

Signature of Mechanic

Date

150-HOUR SERVICE REQUIREMENTS

Boat # _____

This service must be performed to keep warranty active. Please see your dealer.

Tigé Maintenance Schedule	DAILY	WEEKLY	REGULAR	ANNUAL	150 HRS.
Smell bilge area for fuel vapors	X	X	X		X
Check and tighten all steering system bolts and connections					X
Check rudder, tiller arm bolt and safety setscrew					X
Lubricate rudder stuffing box and steering support tube					X
Lubricate cables					X
Replace cables	If stiffness continues after lubricating				
Check bilge pump operation	X	X	X		X
Check blower operation	X	X	X		X
Adjust and tighten throttle linkage					X
Inspect shaft packing			X		X
Check shaft alignment/ensure it is within .003					X
Check and tighten motor mounts					X
Tighten pylon and tower mounting bolts	X	X	X		X
Tighten all hardware and fasteners					X
Oil teak swim platform (as needed)					X
Change engine oil and filter (every 100 hrs. or annually)				X	
Change fuel water separator (every 100 hrs. or annually)				X	
Change transmission fluid (every 100 hrs. or annually)				X	
Check engine oil	X				
Check transmission		X			
Check water pickups for debris or marine growth		X			
If equipped with a strainer, check and clean		X			
If operated in salt water, flush engine/cooling system and boat	X				

IF PROPELLER STRIKES AN OBJECT, INSPECT DRIVE TRAIN IMMEDIATELY!

I certify that the 150-Hour Service has been conducted and a copy will be sent to: **Tigé Boats, Inc.,**

**1801 Hwy. 36
Abilene, TX, 79602**

Place Stamp Here

Signature of Mechanic

Date

TROUBLESHOOTING & SERVICE REQUIREMENTS



400-HOUR SERVICE REQUIREMENTS

Boat # _____

This service must be performed to keep warranty active. Please see your dealer.

Tigé Maintenance Schedule	DAILY	WEEKLY	REGULAR	ANNUAL	400 HRS.
Smell bilge area for fuel vapors	X	X	X		X
Check and tighten all steering system bolts and connections					X
Check rudder, tiller arm bolt and safety setscrew					X
Lubricate rudder stuffing box and steering support tube					X
Lubricate cables					X
Replace cables	If stiffness continues after lubricating				
Check bilge pump operation	X	X	X		X
Check blower operation	X	X	X		X
Adjust and tighten throttle linkage					X
Inspect shaft packing			X		X
Check shaft alignment/ensure it is within .003					X
Check and tighten motor mounts					X
Tighten pylon and tower mounting bolts	X	X	X		X
Tighten all hardware and fasteners					X
Oil teak swim platform (as needed)					X
Change engine oil and filter (every 100 hrs. or annually)				X	X
Change fuel water separator (every 100 hrs. or annually)				X	X
Change transmission fluid (every 100 hrs. or annually)				X	X
Check engine oil	X				
Check transmission		X			
Check water pickups for debris or marine growth		X			
If equipped with a strainer, check and clean		X			
If operated in salt water, flush engine/cooling system and boat	X				

IF PROPELLER STRIKES AN OBJECT, INSPECT DRIVE TRAIN IMMEDIATELY!

I certify that the 400-Hour Service has been conducted and a copy will be sent to: **Tigé Boats, Inc., 1801 Hwy. 36 Abilene, TX, 79602**

Place Stamp Here

Signature of Mechanic Date

500-HOUR SERVICE REQUIREMENTS

Boat # _____

This service must be performed to keep warranty active. Please see your dealer.

Tigé Maintenance Schedule	DAILY	WEEKLY	REGULAR	ANNUAL	500 HRS.
Smell bilge area for fuel vapors	X	X	X		X
Check and tighten all steering system bolts and connections					X
Check rudder, tiller arm bolt and safety setscrew					X
Lubricate rudder stuffing box and steering support tube					X
Lubricate cables					X
Replace cables	If stiffness continues after lubricating				
Check bilge pump operation	X	X	X		X
Check blower operation	X	X	X		X
Adjust and tighten throttle linkage					X
Inspect shaft packing			X		X
Check shaft alignment/ensure it is within .003					X
Check and tighten motor mounts					X
Tighten pylon and tower mounting bolts	X	X	X		X
Tighten all hardware and fasteners					X
Oil teak swim platform (as needed)					X
Change engine oil and filter (every 100 hrs. or annually)				X	X
Change fuel water separator (every 100 hrs. or annually)				X	X
Change transmission fluid (every 100 hrs. or annually)				X	X
Check engine oil	X				
Check transmission		X			
Check water pickups for debris or marine growth		X			
If equipped with a strainer, check and clean		X			
If operated in salt water, flush engine/cooling system and boat		X			

IF PROPELLER STRIKES AN OBJECT, INSPECT DRIVE TRAIN IMMEDIATELY!

I certify that the 500-Hour Service has been conducted and a copy will be sent to: **Tigé Boats, Inc., 1801 Hwy. 36 Abilene, TX, 79602**

Place Stamp Here

Signature of Mechanic Date

TROUBLESHOOTING & SERVICE REQUIREMENTS

FLOAT PLAN

Copy this page and fill out the copy before you boat. Leave the filled out copy with a reliable person who can be depended upon to notify the USCG or other rescue organization, should you not return as scheduled. Do not file this plan with the USCG.

Name: _____ Telephone: _____

Description of Boat: _____ Type: _____ Color Trim: _____

Registration Number: _____ Length: _____

Other Information:

Persons Aboard:

Name, Age, Address and Telephone:

_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Engine Type: _____ No. of Engines: _____ HP: _____

Fuel Capacity: _____

Survival Equipment:

PFDs: _____ Flares: _____ Mirror: _____

Smoke Signals: _____ Flashlight: _____ Paddles: _____

Water: _____ Food: _____ Anchor: _____

Raft or Dinghy: _____ EPIRB: _____

Radio: Yes No Type: _____ Freq: _____

Destination Est.: _____ Time of Arrival: _____

Expect to Return By: _____

If Not Returned By: _____ Call the Coast Guard, or: _____

Auto Type: _____ License No.: _____

Parked: _____

Coast Guard Telephone Number: _____

Local Authority Telephone Number: _____



WARNING LABELS

SECTION 9

You will find the following warning labels in and throughout your boat. The warning labels are placed to keep you safe and aware of possible dangers. It is required by law that you familiarize yourself and stay compliant with all warning labels.

BOATMAN'S CHECK LIST

For maximum enjoyment and safety, check each of these items **BEFORE** you start your engine:

- ✓ Drain plug (Securely in place?)
- ✓ Life saving devices (One for every person on board?)
- ✓ Steering system (Working smoothly and properly?)
- ✓ Fuel system (Adequate fuel? Leaks? Fumes?)
- ✓ Battery (Fully charged? Cable terminals clean and tight?)
- ✓ Engine (In neutral?)
- ✓ Capacity plate (Are you overloaded?)
- ✓ Weather conditions (Safe to go out?)
- ✓ Electrical equipment (Lights, horn, pump, etc?)
- ✓ Emergency gear (Fire extinguisher, bailer, paddle, anchor & line, signaling device, tool kit, etc.?)

WARNING

Stand alone ballast system

- The weight limit (total capacity) of this boat includes persons and gear with full ballast system(s) and fuel.
- Any additional ballast weight must be subtracted from the total capacity, thus reducing the number of persons and/or gear that may be on board the boat.
- See the owner's manual for additional information.


EXEMPTION NOTICE

“This boat complies with the U.S Coast Guard Safety Standards in effect on the date of certification with the exception of certain fuel systems requirements associated with its fuel injected engine as authorized by U.S. Coast Guard Grant of Exemption (XXX-XX-XXX). Maintenance of the fuel system in this boat should be performed only by a trained certified technician using identical fuel system components.”

! DANGER

**Use of tow towers can cause serious injury or death
Follow these instructions**


- Lock in place and secure all hardware before and during use.
- Do not tow more than two persons at one time from this tow tower.
- Only use tow towers for waterskiing, boarding, or recreational towables.
- Do not use tow towers for parasailing, kite flying, pyramids, group pulls, or towing other boats, etc.
- Do not climb on, sit on, stand on, jump off, or dive off the tow tower.
- Never allow passengers to sit in the path of the towrope.
- Look out for low obstacles such as tree limbs, bridges, or power lines at all times.

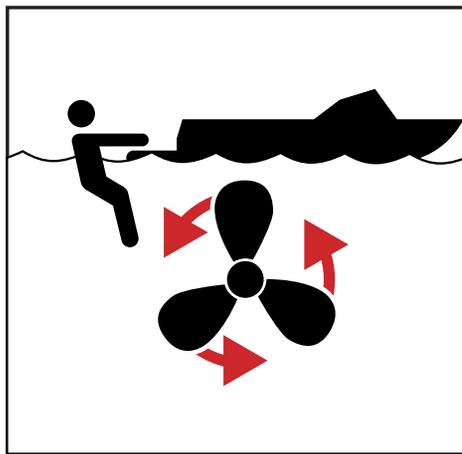

! DANGER

Being struck by spinning propeller will cause serious injury or death


- Do not start or run engine while anyone is on or near the boarding platform.

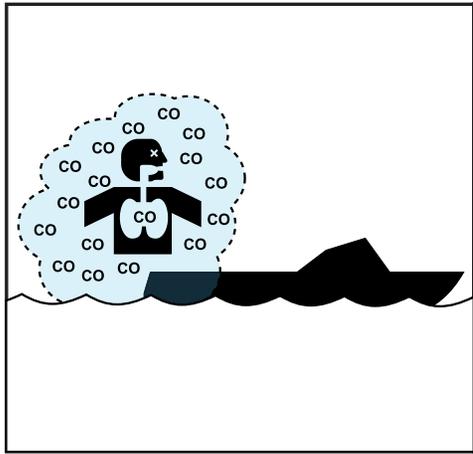

! DANGER

Carbon monoxide (CO) can cause brain damage or death.


- Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
- Carbon monoxide will be around the back of the boat when engine is running and after the engine is turned off.
- Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

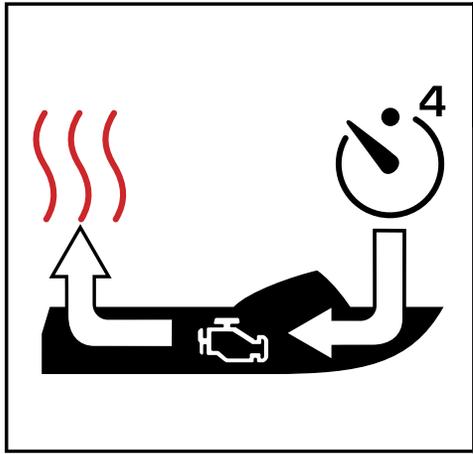

! DANGER

Gasoline vapors can explode resulting in serious injury or death

- Before starting engine, check the engine compartment for gasoline or gasoline vapors, then run blower for 4 minutes.
- Run blower at idle or below cruising speed and after stopping to clear vapors from engine compartment.

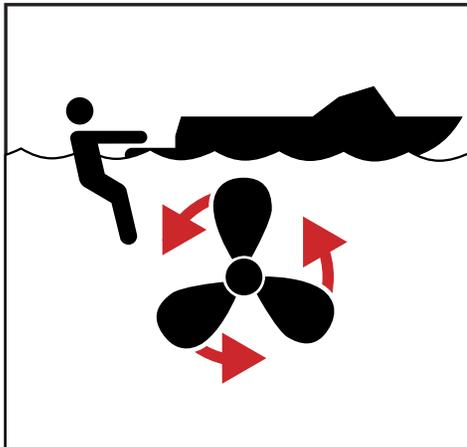

! DANGER

Coming into contact with spinning propeller will cause serious injury or death

- Stay away from stern of the boat and the swim platform whenever the engine is running.

! WARNING

LEAKING FUEL IS A FIRE AND EXPLOSION HAZARD. INSPECT SYSTEM REGULARLY. EXAMINE FUEL SYSTEM FOR LEAKS OR CORROSION AT LEAST ANNUALLY.

CAUTION!

DISCONNECT BATTERY BEFORE CHARGING. FAILURE TO COMPLY WILL RESULT IN ELECTRICAL MALFUNCTIONS.

! CAUTION

THE ENGINE BLOCK MAY OR MAY NOT HAVE BEEN DRAINED AT THE FACTORY. TAKE ALL MEASURES APPROPRIATE TO INSURE PROPER WINTERIZATION.

BATTERY DISCONNECTED

! DANGER
CRUSH HAZARD

Pedestal can cause serious injury or death if not properly secured in the up position.

Use securing device before working under or around pedestal.

! WARNING

Use of tow pylon can cause serious injury or death


- Only use tow pylon for waterskiing, boarding and tubing.
- Do not use for parasailing, kite flying, skier pyramids, towing boats, barefoot/teaching booms, pylon extensions, or group pulls that create loads which may over stress the pylon.
- Do not sit in the path of tow rope when it is in use.

WATERSPORTS RESPONSIBILITY CODE

Be aware that there are risks in boating and Watersports that good judgment and personal awareness can help reduce. To increase your enjoyment of Watersports, follow the ten elements of the Code.

In Watersports it is your responsibility to:


- **ALWAYS** familiarize yourself with applicable laws, waterways and inherent risks
- **ALWAYS** have a capable observer in addition to driver and agree on hand signals
- **ALWAYS** wear a USCG type III, ISO or other agency approved (PFD) life jacket
- **ALWAYS** read user's manual and inspect equipment before use
- **ALWAYS** ski or ride under control, at proper speeds and within your limits
- **ALWAYS** turn ignition off when anyone is near watercraft power drive unit
- **ALWAYS** stay clear of engine exhaust to avoid Carbon Monoxide poisoning
- **NEVER** "Platform Drag" or touch swim platform while the engine is running
- **NEVER** ski or ride near swimmers, shallow water, other boats, or obstacles
- **NEVER** operate watercraft, ski or ride under the influence of alcohol or drugs

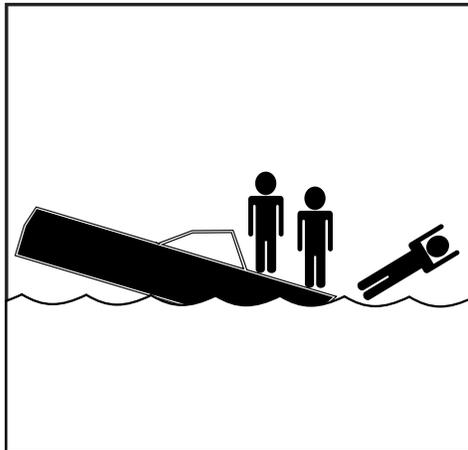

! WARNING

Overloading bow can cause loss of control and the boat to take on water, resulting in serious injury or death


- Do not exceed bow maximum capacity.
- Bow maximum capacity 2 persons, or 350 lbs.

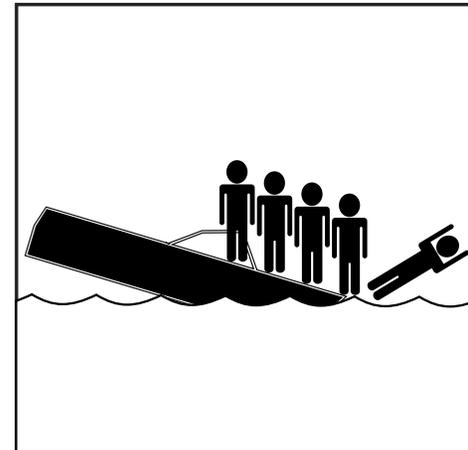

! WARNING

Overloading bow can cause loss of control and the boat to take on water, resulting in serious injury or death

- Do not exceed bow maximum capacity.
- Bow maximum capacity 4 persons, or 600 lbs.

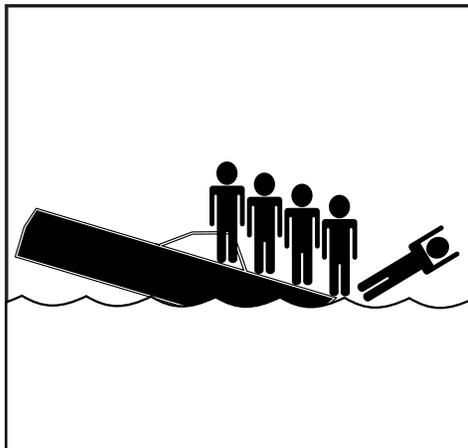

! WARNING


Overloading bow can cause loss of control and the boat to take on water, resulting in serious injury or death

- Do not exceed bow maximum capacity.
- Bow maximum capacity 3 persons, or 525 lbs.

! WARNING

Improper use of boat can cause serious injury or death

- Run engine only when operator is seated facing forward with hands on the controls.
- Leaking fuel is a fire and explosion hazard; inspect fuel system regularly and fix leaks immediately.
- Do not sit on seat backs, boat sides, or engine box while engine is running.
- Do not stand on boat sides at any time.
- Do not make high speed maneuvers with boat.
- Always test the emergency engine safety lanyard switch for proper function before operating the boat and never operate the boat unless lanyard is securely attached to the driver.
- Always empty all ballast systems before lifting or trailering boat.
- To help insure safe use and maintenance of this boat, read and understand the owner's manual thoroughly. If you do not have a manual, contact a dealer or your manufacturer
- [Manufacturer] installs a ballast system in some models. The full weight of this system has already been considered in the boat weight and therefore does not influence maximum capacity.

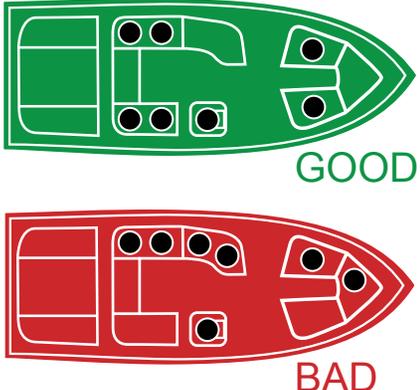	<p>! WARNING</p> <ul style="list-style-type: none"> • Uneven loading may cause instability and loss of control resulting in injury or death. • Distribute persons and gear evenly.
--	---

	<p>! WARNING</p> <ul style="list-style-type: none"> • Do not trailer boat with any equipment in board racks or erected bimini tops. • Failure to follow these guidelines can result in loss, damage, injury or death.
---	--

	<p>! CAUTION</p> <ul style="list-style-type: none"> • Avoid unintentional shifting. • Do not bump control lever.
---	---

<p align="center">EMMISSION CONTROL INFORMATION</p> <p align="center">THIS BOAT MEETS U.S. EPA EVAP STANDARDS UNDER 40 CFR 1045.625</p> <p>Date of MFG. May 2013</p> <p align="right"></p>	
--	--