

YAMAHA

SJ700AU

Service Manual

LIT-18616-01-43

PREFACE

This manual has been prepared by the Yamaha Motor Company Ltd. primarily for use by Yamaha dealers and their trained mechanics when performing maintenance procedures and repairs to Yamaha equipment. It has been written to suit the needs of persons who have a basic understanding of the mechanical and electrical concepts and procedures inherent in the work, for without such knowledge attempted repairs or service to the equipment could render it unsafe or unfit for use.

Because the Yamaha Motor Company Ltd. has a policy of continuously improving its products, models may differ in detail from the descriptions and illustrations given in this publication. Use only the latest edition of this manual. Authorized Yamaha dealers are notified periodically of modifications and significant changes in specifications and procedures, and these are incorporated in successive editions of this manual.

A10001-0*

SJ700AU SERVICE MANUAL

©1996 by Yamaha Motor Co., Ltd.

1st Edition, January 1996

All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means including photocopying and recording without the written permission of the copyright holder.

Such written permission must also be obtained before any part of this publication is stored in a retrieval system of any nature.

**Printed in U.S.A.
LIT-18616-01-43**

WARNINGS, CAUTIONS AND NOTES

Attention is drawn to the various Warnings, Cautions and Notes which distinguish important information in this manual in the following ways.

 The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

WARNING

Failure to follow WARNING instructions could result in severe injury or death to the machine operator, a bystander, or a person inspecting or repairing the water vehicle.

CAUTION:


A CAUTION indicates special precautions that must be taken to avoid damage to the water vehicle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

HOW TO READ DESCRIPTIONS

1. A disassembly installation job mainly consists of the exploded diagram ①.
2. The numerical figures represented by the number ② indicates the order of the job steps.
3. The symbols represented by the number ③ indicates the contents and notes of the job.
For the meanings of the symbols, refer to the next page(s).
4. The REMOVAL AND INSTALLATION CHART ④ is attached to the exploded diagram and explains the job steps, part names, notes for the jobs, etc.
5. The SERVICE POINTS, other than the exploded diagram, explains in detail the items difficult to explain in the exploded diagram or REMOVAL AND INSTALLATION CHART, the Service points requiring the detailed description ⑤, etc.

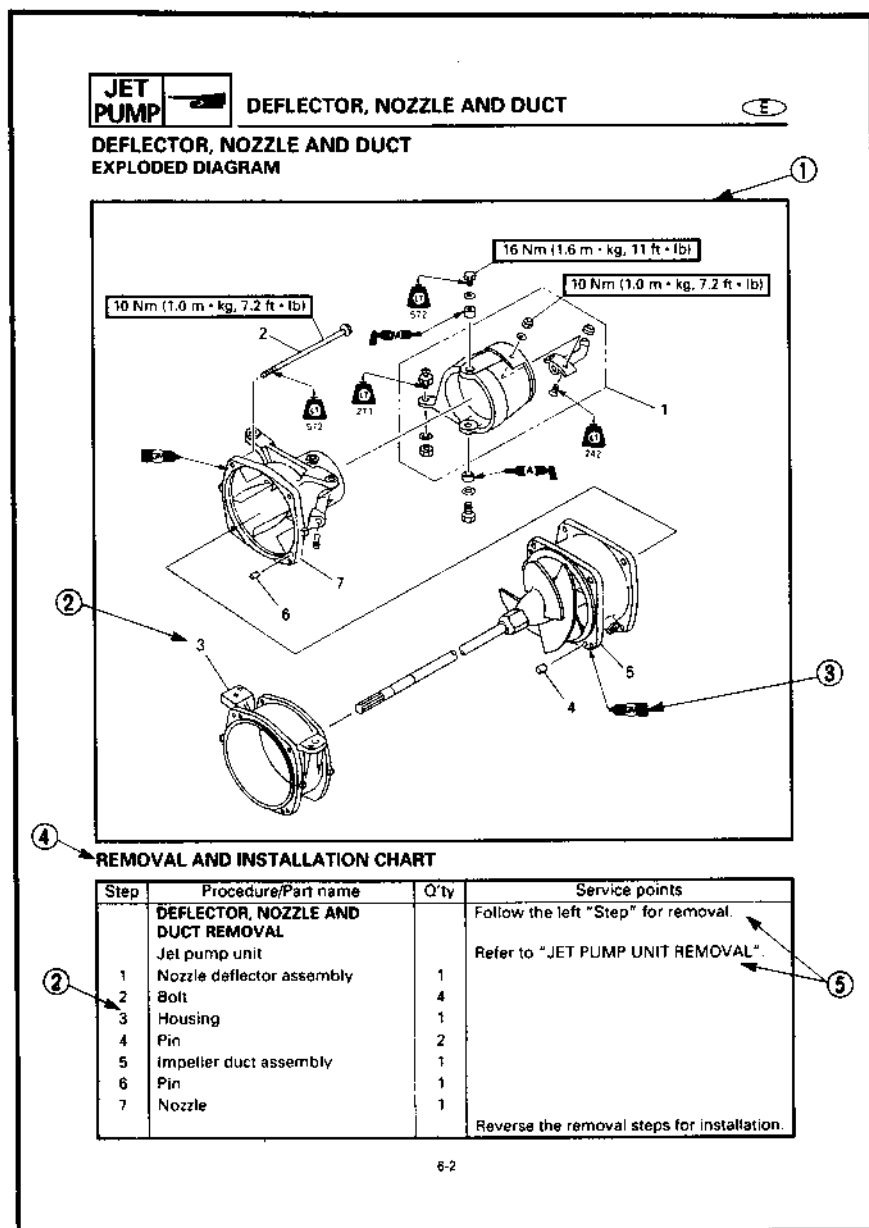

HOW TO USE THIS MANUAL

MANUAL FORMAT

All of the procedures in this manual are organized in a sequential, step-by-step format. The information has been compiled to provide the mechanic with an easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspection operations.

In this revised format, the condition of a faulty component will precede an arrow symbol and the course of action required will follow the symbol, e.g.,

- Bearings
Pitting/Damage → Replace.

To assist you to find your way about this manual, the Section Title and Major Heading is given at the head of every page.

An Index to contents is provided on the first page of each Section.

MODEL INDICATION

Multiple models are shown in this manual. These indications are noted as follows.

























Model name	Super Jet
	SJ700A
Indication	SJ700A

THE ILLUSTRATIONS

Some illustrations in this manual may differ from the model you have. This is because a procedure described may relate to several models, though only one may be illustrated. (The name of model described will be mentioned in the description).

REFERENCES

These have been kept to a minimum; however, when you are referred to another section of the manual, you are told the page number to go to.

① GEN INFO 	② SPEC 
③ INSP ADJ 	④ FUEL 
⑤ POWR 	⑥ JET PUMP 
⑦ ELEC 	⑧ HULL HOOD 
⑨ TRBL ANLS 	⑩ 
⑪ 	⑫ 
⑬ 	⑭ 
⑮ 	⑯ 
⑰ 	⑱ 
⑲ 	⑳ 
㉑ 	㉒ 
㉓ 	㉔ 

SYMBOLS

Symbols ① to ⑨ are designed as thumb-tabs to indicate the content of a chapter:

- ① General Information
- ② Specifications
- ③ Periodic Inspection and Adjustment
- ④ Fuel System
- ⑤ Power Unit
- ⑥ Jet pump Unit
- ⑦ Electrical System
- ⑧ Hull and Hood
- ⑨ Trouble-analysis

Symbols ⑩ to ⑮ indicate specific data:

- ⑩ Special tool
- ⑪ Specified liquid
- ⑫ Specified engine speed
- ⑬ Specified torque
- ⑭ Specified measurement
- ⑮ Specified electrical valve
[Resistance (Ω), Voltage (V), Electric current (A)]

Symbol ⑯ to ⑳ in an exploded diagram indicate grade of lubricant and location of lubrication point:

- ⑯ Apply Yamaha 2-stroke outboard motor oil
- ⑰ Apply water resistant grease (Yamaha grease A, Yamaha marine grease)
- ⑱ Apply molybdenum disulfide grease









Symbols ㉑ to ㉔ in an exploded diagram indicate grade of sealing or locking agent, and location of application point:

- ㉑ Apply Gasket Maker®
- ㉒ Apply Yamahabond #4 (Yamaha bond No.4)
- ㉓ Apply LOCTITE® No. 271 (Red LOCTITE)
- ㉔ Apply LOCTITE® No. 242 (Blue LOCTITE)
- ㉕ Apply LOCTITE® No. 572
- ㉖ Apply Silicon sealant

NOTE:

In this manual, the above symbols may not be used in every case.

INDEX


GENERAL INFORMATION	 GEN INFO	1
SPECIFICATIONS	 SPEC	2
PERIODIC INSPECTION AND ADJUSTMENT	 INSP ADJ	3
FUEL SYSTEM	 FUEL	4
POWER UNIT	 POWR	5
JET PUMP UNIT	 JET PUMP	6
ELECTRICAL SYSTEM	 ELEC	7
HULL AND HOOD	 HULL HOOD	8
TROUBLE-ANALYSIS	? TRBL ANLS	9

CHAPTER 1

GENERAL INFORMATION




IDENTIFICATION NUMBERS	1-1
PRIMARY I.D. NUMBER	1-1
ENGINE SERIAL NUMBER	1-1
PUMP SERIAL NUMBER.....	1-1
HULL IDENTIFICATION NUMBER	
(H.I.N.)	1-1
 SAFETY WHILE WORKING	 1-2
FIRE PREVENTION	1-2
VENTILATION	1-2
SELF-PROTECTION	1-2
OILS, GREASES AND SEALING FLUIDS	1-2
GOOD WORKING PRACTICES	1-3
DISASSEMBLY AND ASSEMBLY	1-4
 SPECIAL TOOLS	 1-5
MEASURING	1-5
REMOVAL AND INSTALLATION.....	1-6

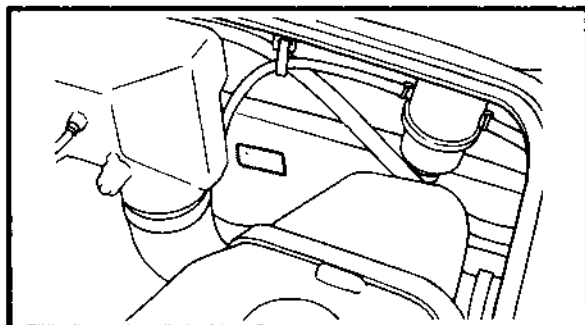

A60700-0*


IDENTIFICATION NUMBERS PRIMARY I.D. NUMBER

The primary I.D. number is stamped on a label attached to the inside of the engine compartment.

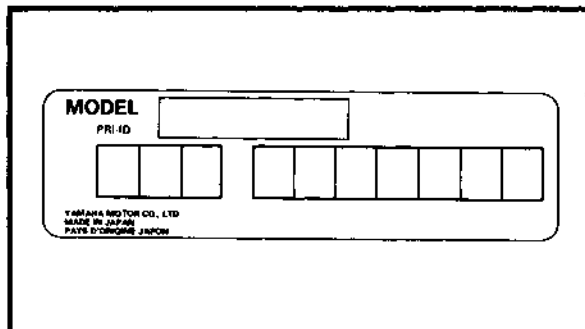

Starting primary I.D. number:

**GM6: 900101 ~,
910101 ~ (FRA),
930101 ~ (GUM, AUS)**

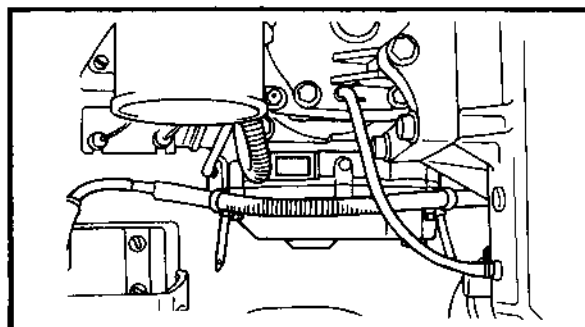


ENGINE SERIAL NUMBER

The engine serial number is stamped on a label attached to the crankcase.

Starting serial number:

64V: 000101 ~

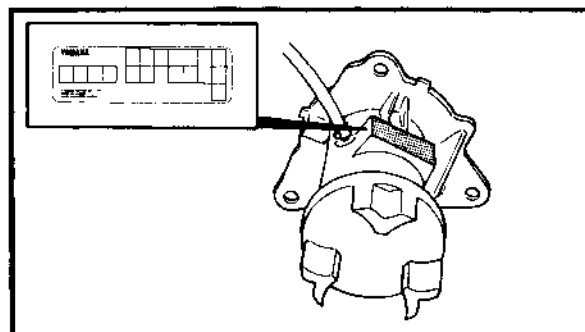


PUMP SERIAL NUMBER

The jet pump unit serial number is stamped on a label attached on the intermediate housing.

Starting serial number:

64V: 500101 ~

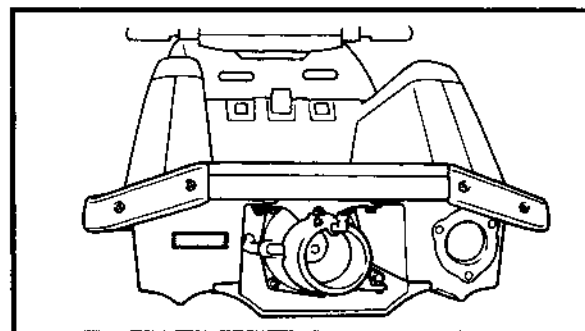

HULL IDENTIFICATION NUMBER (H.I.N.)

The H.I.N. is stamped on a plate attached to the hull beside the jet nozzle.

SAFETY WHILE WORKING

The procedures given in this manual are those recommended by Yamaha to be followed by Yamaha dealers and their mechanics.




FIRE PREVENTION

Gasoline (petrol) is highly flammable. Petroleum vapor is explosive if ignited. Do not smoke while handling gasoline (petrol), and keep it away from heat, sparks, and open flames.

VENTILATION


Petroleum vapor is heavier than air and if inhaled in large quantities will not support life. Engine exhaust gases are harmful to breathe. When test-running an engine indoors, maintain good ventilation.

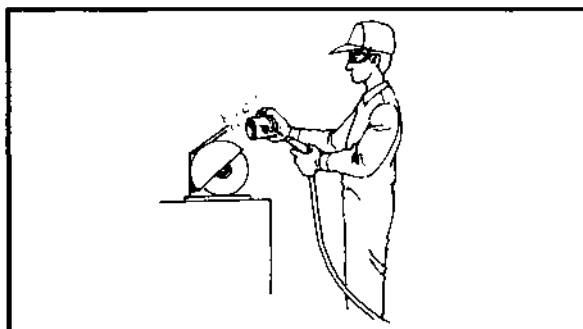

SELF-PROTECTION

Protect your eyes with suitable safety spectacles or safety goggles when using compressed air, when grinding or when doing any operation which may cause particles to fly off.

Protect hands and feet by wearing safety gloves or protective shoes if appropriate to the work you are doing.

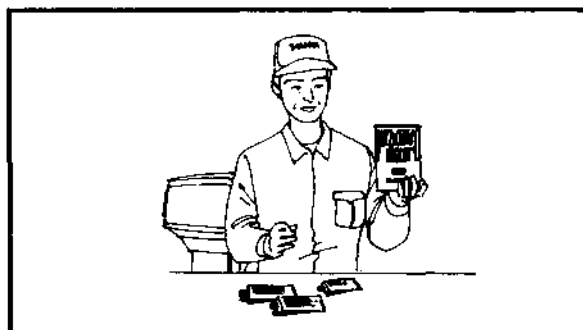

OILS, GREASES AND SEALING FLUIDS

Use only genuine Yamaha oils, greases and sealing fluids or those recommended by Yamaha.




Under normal conditions of use, there should be no hazards from the use of the lubricants mentioned in this manual, but safety is all-important, and by adopting good safety practises, any risk is minimized. A summary of the most important precautions is as follows

1. While working, maintain good standards of personal and industrial hygiene.
2. Clothing which has become contaminated with lubricants should be changed as soon as practicable, and laundered before further use.
3. Avoid skin contact with lubricants; do not, for example, place a soiled wiping-rag in one's pocket.
4. Hands, and any other part of the body which have been in contact with lubricants or lubricant-contaminated clothing, should be thoroughly washed with hot water and soap as soon as practicable.
5. To protect the skin, the application of a suitable barrier cream to the hands before working is recommended.
6. A supply of clean lint-free cloths should be available for wiping purposes.




GOOD WORKING PRACTICES

1. The right tools
Use the special tools that are designed to protect parts from damage. Use the right tool in the right manner — don't improvise.
2. Tightening torque
Follow the torque tightening instructions. When tightening bolts, nuts and screws, tighten the larger sizes first, and tighten inner-positioned fixings before outer-positioned ones.

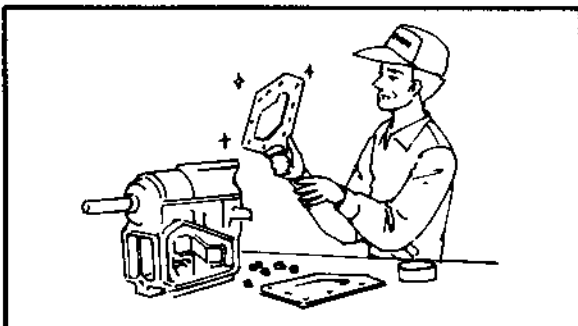


3. Non-reusable items

Always use new gaskets, packings, O-rings, oil seals, split-pins and circlips etc. on reassembly.

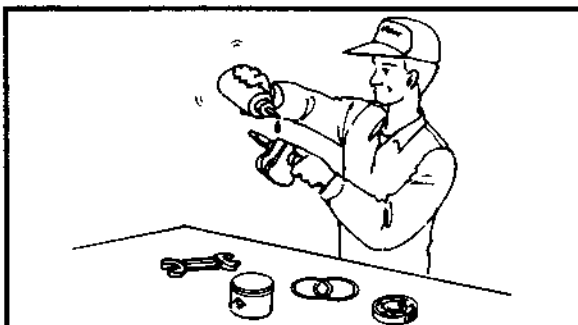

DISASSEMBLY AND ASSEMBLY

1. Clean parts with compressed-air on disassembling them.
2. Oil the contact surfaces of moving parts on assembly.

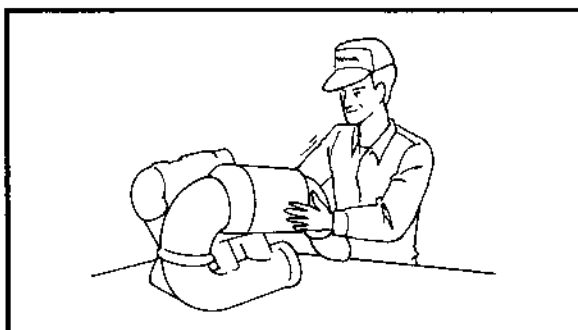

3. After assembly, check that moving parts operate normally.

4. Install bearings with the manufacturer's markings on the side exposed to view, and liberally oil the bearings.

CAUTION:

Do not use compressed air to spin the bearings dry. This causes damage to the bearing surfaces.

5. When installing oil seals, apply a light coating of water-resistant grease to the outside diameter.

SPECIAL TOOLS


Use of the correct special tools recommended by Yamaha will aid the work and enable accurate assembly and tune-up. Improvisations and use of improper tools can cause damage to the equipment.


NOTE:

- For U.S.A. and Canada, use part numbers starting with "YB-", "YU-" or "YW-".
- For other countries, use part numbers starting with "90890-".

MEASURING

1. Dial gauge and stand
P/N. YU-03097, YU-01256
90890-01252
2. Digital multi meter
P/N. YU-34899-A
90890-06752
3. Pocket tester
P/N. YU-03112
90890-03112
4. Compression gauge
P/N. YU-33223
90890-06751
5. Cylinder gauge set
P/N. YU-03017
90890-06759
6. Engine tachometer
P/N. YU-08036-A
90890-06760
7. Spark gap tester
P/N. YM-34487
90890-06754

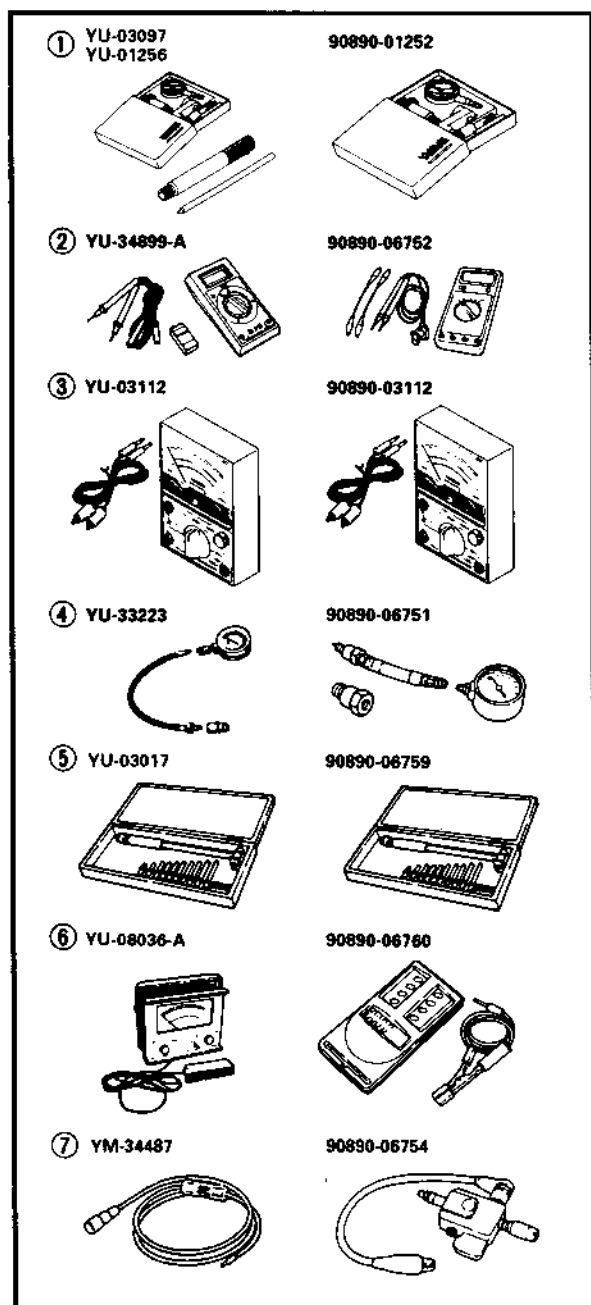

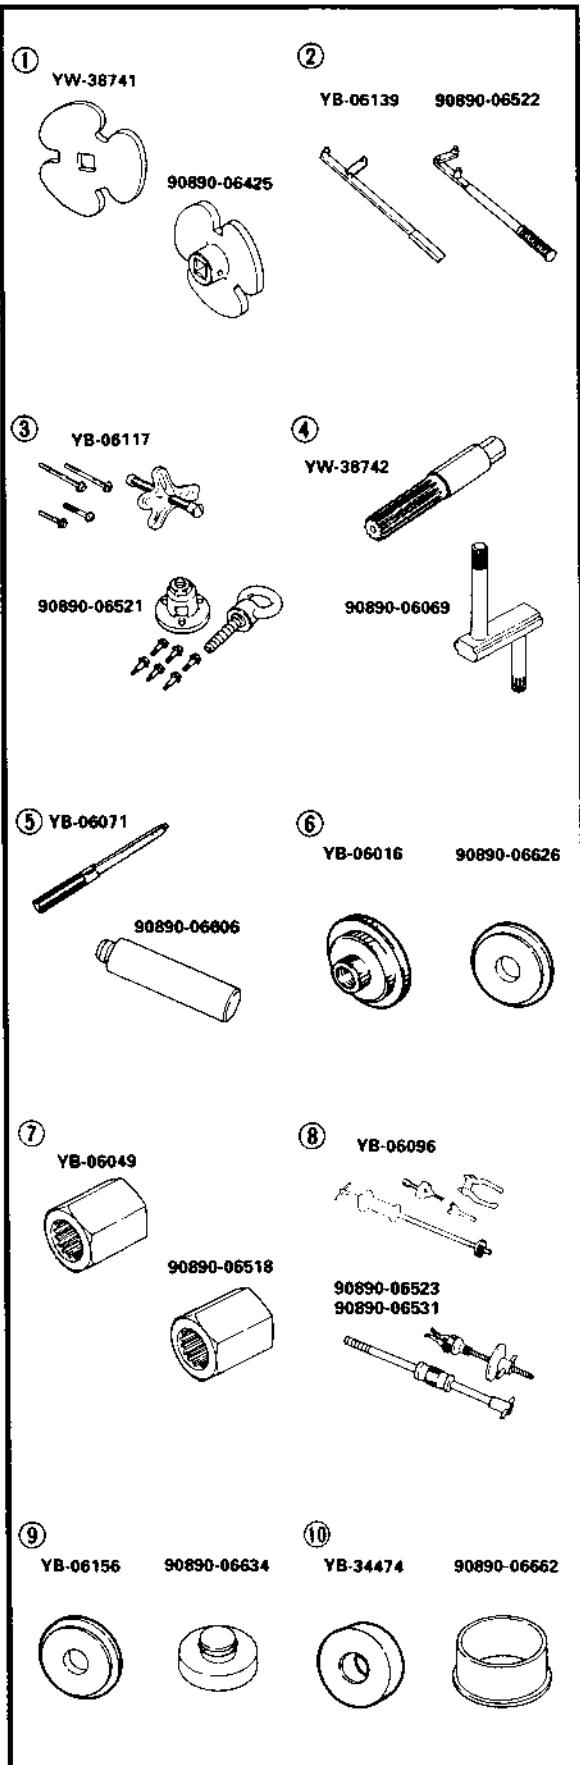
REMOVAL AND INSTALLATION

1. Coupler wrench
P/N. YW-38741
90890-06425
2. Flywheel holder
P/N. YB-06139
90890-06522
3. Flywheel puller
P/N. YB-06117
90890-06521
4. Shaft holder (Intermediate shaft)
P/N. YW-38742
90890-06069
5. Driver rod
(Intermediate shaft and jet pump)
P/N. YB-06071
90890-06606
6. Bearing outer race attachment
(Intermediate shaft)
P/N. YB-06016
90890-06626
7. Drive shaft holder (Impeller)
P/N. YB-06049
90890-06518
8. Slide hammer set (Jet pump bearing)
P/N. YB-06096
90890-06523
90890-06531
9. Ball bearing attachment
(Jet pump oil seal)
P/N. YB-06156
90890-06634
10. Bearing inner race attachment
(Jet pump bearing)
P/N. YB-34474
90890-06662



CHAPTER 2 SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
MAINTENANCE SPECIFICATIONS	2-2
ENGINE	2-2
JET UNIT	2-3
ELECTRICAL	2-3
TIGHTENING TORQUE	2-4
SPECIFIED TORQUE	2-4
GENERAL TORQUE	2-5



GENERAL SPECIFICATIONS

Item	Unit	Model
		SJ700A
DIMENSIONS:		
Length	mm (in)	2,240 (88.2)
Width	mm (in)	680 (26.8)
Height	mm (in)	660 (26.0)
Dry weight	kg (lb)	132 (291)
PERFORMANCE:		
Maximum speed	km/h (mph)	73 (45.4)
Maximum output	kW (hp) @r/min	53.7 (73) @6,300
Maximum fuel consumption	ℓ/h (US gal/h, Imp gal/h)	29 (7.7, 6.4)
Crusing range (at full throttle)	hr.	0.6
ENGINE:		
Engine type		2-stroke
Number of cylinders		2
Displacement	cm ³ (cu. in)	701 (42.78)
Bore × stroke	mm (in)	81 × 68 (3.19 × 2.68)
Compression ratio		7.2 : 1
Intake system		Reed valve
Carburetor type		Floatless type
Number of carburetor		2
Carburetor starting system		Choke
Scavenging system		Loop charged
Lubrication system		Pre-Mixed fuel and oil
Cooling system		Water-cooled
Starting system		Electric starter
Ignition system		C.D.I.
Ignition timing	Degree	15 BTDC ~ 21 BTDC
Spark plug (NGK)		B8HS/BR8HS
Battery capacity	V/kC (A·h)	12/68.4 (19)
Lighting coil	A @r/min	2 ~ 4 @5,500
DRIVE UNIT:		
Propulsion system		Jet pump
Jet pump type		Axial flow, single stage
Impeller rotation (rear view)		Counter clockwise
Transmission		Direct drive from engine
Nozzle angle	Degree	18.5, 20.5, 22.5, 24.5
FUEL AND OIL:		
Fuel		Regular gasoline
Engine oil type		2 stroke outboard motor oil
Engine oil grade		TC-W3
Fuel and oil mixing ratio (wide open throttle)		50 : 1
Fuel tank capacity	ℓ (US gal, Imp gal)	18 (4.8, 4.0)
reserve	ℓ (US gal, Imp gal)	5.5 (1.5, 1.2)



MAINTENANCE SPECIFICATIONS

ENGINE

Item	Unit	Model
		SJ700A
Cylinder head: Warpage limit	mm (in)	0.1 (0.004)
Cylinder:		
Bore size	mm (in)	81.00 ~ 81.02 (3.189 ~ 3.190)
Wear limit	mm (in)	81.10 (3.193)
Taper limit	mm (in)	0.08 (0.003)
Out of round limit	mm (in)	0.05 (0.002)
Piston:		
Piston size	mm (in)	80.925 ~ 80.950 (3.186 ~ 3.187)
Measuring point*	mm (in)	10 (0.4)
Piston clearance	mm (in)	0.070 ~ 0.075 (0.0028 ~ 0.0030)
Wear limit	mm (in)	0.125 (0.0049)
Piston ring:		
Type		Keystone
Sectional sketch (B × T)	mm (in)	1.2 × 2.9 (0.047 × 0.114)
Side clearance	mm (in)	0.01 ~ 0.03 (0.0004 ~ 0.0012)
End gap (installed)	mm (in)	0.2 ~ 0.4 (0.008 ~ 0.016)
Piston pin:		
Outside diameter	mm (in)	19.995 ~ 20.000 (0.7872 ~ 0.7874)
Limit	mm (in)	19.98 (0.786)
Crankshaft:		
Crank width "A"	mm (in)	61.95 ~ 62.00 (2.439 ~ 2.441)
Run out limit "B"	mm (in)	0.05 (0.002)
Connection rod big end clearance "C"	mm (in)	0.25 ~ 0.75 (0.010 ~ 0.030)
Small end free play limit "D"	mm (in)	2.0 (0.08)
Carburetor:		
Stamped mark		64U00F/R
Main nozzle	∅ mm (in)	2.5 (0.10)
Main jet 2 (M.J.2)		130
Pilot jet (P.J.)		70
Low speed screw	Turns out	7/8 ± 1/4
Throttle valve (Th. V.)		190
Valve seat (V.S.)	∅ mm (in)	1.5 (0.06)
High speed screw	Turns out	1-1/8 (F), 1-1/2 (R) ± 1/4
Trolling speed	r/min	1,300 ± 50
Reed valve:		
Thickness	mm (in)	0.2 (0.008)
Valve lift	mm (in)	9.0 ± 0.2 (0.35 ± 0.01)
Bending limit	mm (in)	0.2 (0.008)



JET UNIT


















Item	Unit	Model
		SJ700A
Jet pump:		
Impeller clearance	mm (in)	0.3 ~ 0.4 (0.01 ~ 0.02)
Service limit	mm (in)	0.6 (0.024)
Impeller shaft run out	mm (in)	0.3 (0.012)

ELECTRICAL

Item	Unit	Model
		SJ700A
Ignition system:		
Type		CDI magneto
Ignition timing at 1,200 rpm	Degree	15 BTDC
at 5,500 rpm	Degree	21 BTDC
Stator:		
Model/Manufacturer		F-2192HR/MITSUBISHI
Pulser coil resistance (color)	Ω	12.6 ~ 15.4 (W/R - B)
Charging coil resistance (color)	Ω	497.7 ~ 608.3 (Br/W - B)
CDI unit:		
Stamped mark		62T-00
Model/Manufacturer		F-6192X/MITSUBISHI
Over revolution limit	r/min	7,000 ~ 7,400
Overheat revolution control	r/min	3,000 ~ 3,800
Ignition coil:		
Stamped mark		62E-00
Model/Manufacturer		F6T532/MITSUBISHI
Primary winding resistance	Ω	0.078 ~ 0.106 (O - B)
Secondary winding resistance	k Ω	3.5 ~ 4.7 (high tension cords)
Charging system:		
Type		Flywheel magneto
Lighting coil resistance (color)	Ω	1.14 ~ 1.40 (G - G)
Rectifier regulator:		
Model/Manufacturer		SH589-12/SHINDENGEN
Regulate voltage	V	14.3 ~ 15.3
Thermo sensor:		
ON	$^{\circ}\text{C}$ ($^{\circ}\text{F}$)	76 ~ 84 (169 ~ 183)
OFF	$^{\circ}\text{C}$ ($^{\circ}\text{F}$)	63 ~ 77 (145 ~ 171)
Starter motor:		
Model/Manufacturer		SM13237/MITSUBA
Brush length limit	mm (in)	6.5 (0.26)
Commutator undercut limit	mm (in)	0.2 (0.01)
diameter limit	mm (in)	27 (1.06)
Fuse:		
Rating	A	10



TIGHTENING TORQUE SPECIFIED TORQUE


Part to tightened		Part name	Size	Q'ty	Tightening torque			Remarks
					Nm	m.kg	ft.lb	
ENGINE:								
Electric box		Bolt	M8	2	13	1.3	9.4	
Mounting bolt		Bolt	M8	4	17	1.7	12	
Reed valve		Screw	M4	16	1	0.1	0.7	
Muffler stay	1st	Bolt	M10	5	4	0.4	2.9	
	2nd				40	4.0	29	
Muffler 2- Muffler stay	1st	Bolt	M10	3	28	2.8	20	
	2nd				53	5.3	38	
Muffler 1	1st	Bolt	M10	8	15	1.5	11	
	2nd				30	3.0	22	
Cylinder body	1st	Bolt	M10	6	23	2.3	17	
	2nd				40	4.0	29	
Cylinder head	1st	Bolt	M8	10	15	1.5	11	
	2nd				36	3.6	26	
Spark plug		Bolt	M14	2	20	2.0	14	
Flywheel bolt		Bolt	M10	1	70	7.0	51	
Crankcase	1st	Bolt	M8	8	15	1.5	11	
	2nd				28	2.8	20	
Mount bracket	1st	Bolt	M10	7	23	2.3	17	
	2nd				47	4.7	34	
Coupling		Nut	M27	1	37	3.7	27	
Frame arrestor cover		Bolt	M6	6	2	0.2	1.4	
Starter motor terminal nut		Nut	M6	1	5	0.5	3.6	
JET UNIT:								
Mounting bolt		Bolt	M10	4	17	1.7	12	
Ride plate		Bolt	M8	4	17	1.7	12	
Impeller (left-hand threads)		Bolt	M20	1	18	1.8	13	
Coupling		Nut	M27	1	37	3.7	27	
Intermediate housing		Bolt	M8	3	17	1.7	12	



Nut (A)	Bolt (B)	General torque specifications		
		Nm	m•kg	ft•lb
8 mm	M5	5.0	0.5	3.6
10 mm	M6	8.0	0.8	5.8
12 mm	M8	18	1.8	13
14 mm	M10	36	3.6	25
17 mm	M12	43	4.3	31

GENERAL TORQUE

This chart specifies the torques for tightening standard fasteners with standard clean dry ISO threads at room temperature. Torque specifications for special components or assemblies are given in applicable sections of this manual. To avoid causing warpage, tighten multifastener assemblies in a criss-cross fashion, in progressive stages until the specified torque is reached.

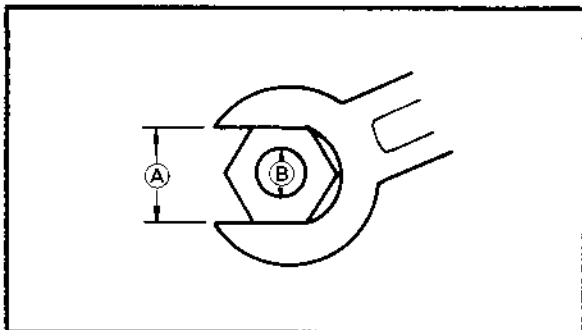

CHAPTER 3

PERIODIC INSPECTION AND ADJUSTMENT

MAINTENANCE INTERVAL CHART	3-1
PERIODIC SERVICE.....	3-2
CONTROL SYSTEM	3-2
Steering friction inspection and adjustment.....	3-2
Steering pole pivot shaft bushing inspection	3-2
Steering cable inspection and adjustment.....	3-3
Throttle cable inspection and adjustment.....	3-4
Choke cable inspection and adjustment.....	3-5
FUEL SYSTEM.....	3-6
Fuel filter inspection.....	3-6
Trolling speed inspection and adjustment.....	3-6
Carburetor adjustment.....	3-7
POWER UNIT.....	3-8
Spark plug inspection	3-8
ELECTRICAL	3-9
Battery inspection.....	3-9
JET PUMP UNIT	3-11
Impeller inspection.....	3-11
Bilge strainer inspection	3-12
GENERAL.....	3-12
Greasing point	3-12

MAINTENANCE INTERVAL CHART



The following chart should be considered strictly as a guide to general maintenance intervals.

Depending on operating conditions, the intervals of maintenance should be changed.

Item	Initial		Every		Refer to page
	10 hours (Break-in)	50 hours (3 months)	100 hours (6 months)	200 hours (1 year)	
CONTROL SYSTEM:					
Steering cable			○		3-3
Throttle cable			○		3-4
Carburetor throttle shaft			○		—
Choke cable			○		3-5
Steering pivot	○		○		3-2
Steering friction	○		○		3-2
FUEL SYSTEM:					
Fuel tank				○	4-7
Fuel filter	○			○	3-6
Fuel line			○		4-1
Trolling speed			○		3-6
Carburetor setting	○		○		3-7
POWER UNIT:					
Spark plug	○	○	○		3-8
Cooling-water passage		○			—
Coupling rubber				○	—
ELECTRICAL:					
Battery	○				3-9
JET PUMP UNIT:					
Impeller		○	○		3-11
Bilge strainer		○	○		3-12
GENERAL:					
Bolt and nut	○		○		—
Greasing point			○		3-12
Bearing housing	○ *1		○ *2		3-12

*1: Grease capacity 20.0 ~ 22.0 cm³ (0.68 ~ 0.74 oz.)

*2: Grease capacity 3.0 ~ 5.0 cm³ (0.10 ~ 0.17 oz.)

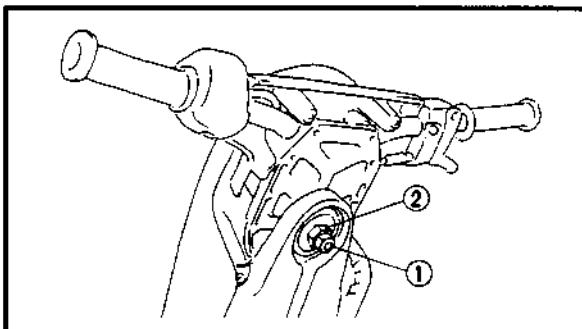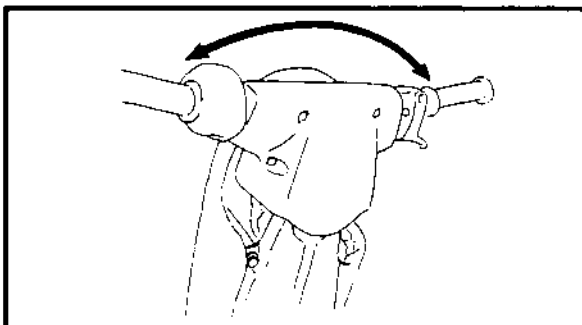

PERIODIC SERVICE CONTROL SYSTEM

Steering friction inspection and adjustment

1. Check:

- Pivot shaft bearing
Turn the handlebar lock to lock.
Rough action → Adjust.
Excessive play → Replace bearings.
Refer to "HANDLE COLUMN" in chapter 8.

2. Adjust:

- Bearing friction


Adjustment steps:

- Remove the handle lower cover.
- Loosen the lock nut ①.
- Turn the adjusting nut ② until the desired amount of friction is reached.
- Tighten the lock nut while holding the adjusting nut.



Lock nut:
29 Nm (2.9 m • kg, 21 ft • lb)





- Install the handle lower cover.

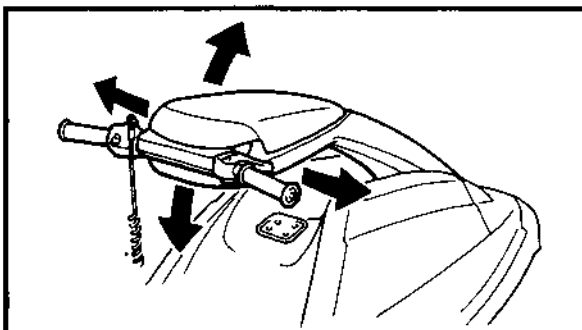

Steering pole pivot shaft bushing inspection

1. Check:

- Steering pole pivot shaft bushing
Excessive play → Replace bearings.
Refer to "STEERING POLE" in chapter 8.

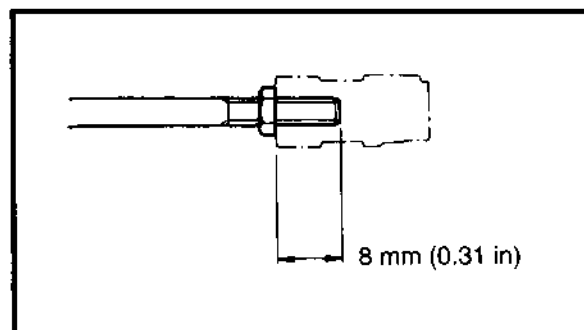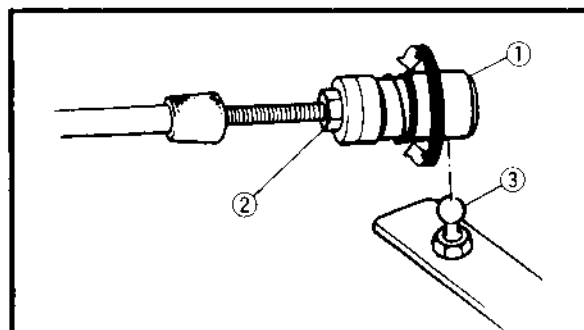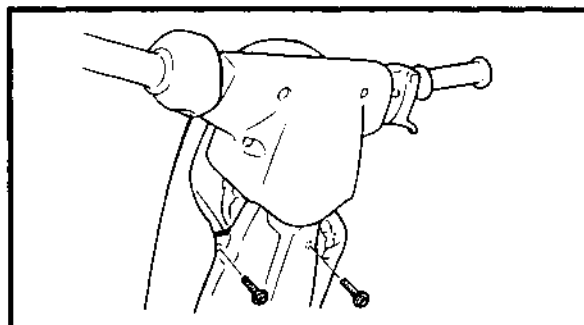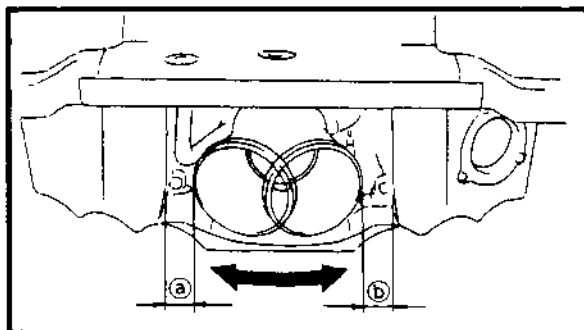
Steering cable inspection and adjustment
1. Check:

- Jet nozzle clearance (a), (b)

Incorrect → Adjust.

Checking steps:

- Turn the handlebar lock to lock.
- Measure the clearances (a) and (b).
- If the (a) and (b) clearances are not even, adjust the clearances.

2. Adjust:

- Cable joint (handle side) (1)

Adjustment steps:

- Remove the steering pad.
- Loosen the lock nut (2).
- Disconnect the cable joint from the ball joint (3).
- Turn the cable joint to adjust.

Turn in	Clearance (a) is increased.
Turn out	Clearance (b) is increased.

⚠ WARNING

The cable joint must be screwed in more than 8 mm (0.31 in).

- Connect the cable joint and tighten the lock nut.



Lock nut:

3 Nm (0.3 m · kg, 2.2 ft · lb)

- Install the steering pad.

NOTE:

If correct adjustment cannot be obtained using the cable joint at the handlebar end adjust the cable joint at the steering nozzle end.

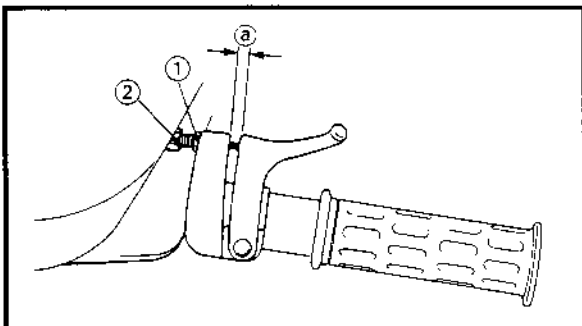
Throttle cable inspection and adjustment
NOTE:

Before adjusting the throttle lever free play, the trolling speed should be adjusted.

1. Measure:

- Throttle lever free play (a)
Out of specification → Adjust.



Throttle lever free play:
7 ~ 10 mm (0.28 ~ 0.39 in)

2. Adjust:

- Throttle lever free play


Adjustment steps:

- Loosen the lock nut (1).
- Turn the adjuster (2) in/out until the specified free play is obtained.

Turn in	Free play is increased.
Turn out	Free play is decreased.
● Tighten the lock nut.	

⚠ WARNING

After adjusting the free play, turn the handlebar to right and left, and make sure that the trolling speed does not increase.

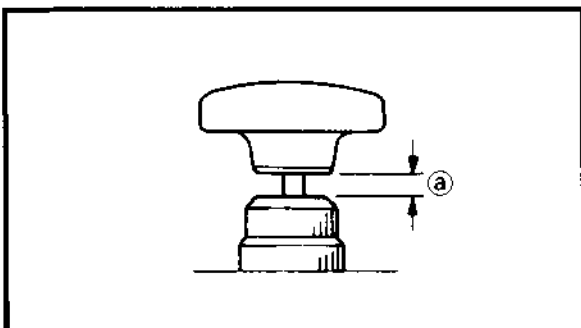


Choke cable inspection and adjustment

1. Measure:

- Choke cable free play (a)
Out of specification → Adjust.



Choke cable free play:
1 ~ 6 mm (0.04 ~ 0.24 in)

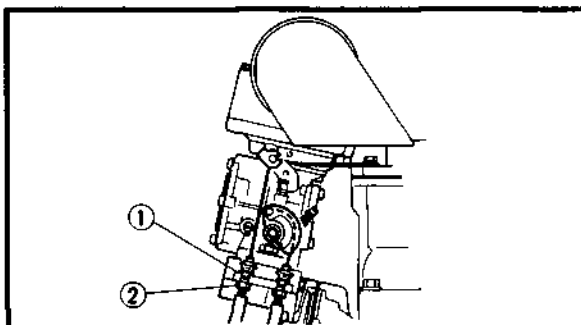

2. Adjust:

- Choke cable free play

Adjustment steps:


- Loosen the lock nut (1).
- Turn the adjuster (2) in/out until the specified free play is obtained.

Turn in	Free play is increased.
Turn out	Free play is decreased.

- Tighten the lock nut.



Lock nut:
8 Nm (0.8 m • kg, 5.8 ft • lb)

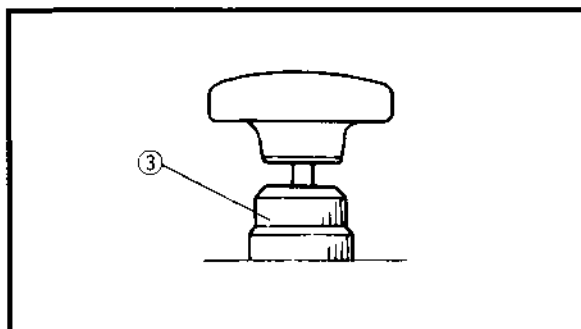

3. Inspect:

- Pull knob farthest toward
Knob automatically returns → Adjust.

4. Adjust:

- Adjust nut (3)
Turn in to stop automatic return.

FUEL SYSTEM

⚠ WARNING



- Stop the engine, set the fuel cock to "OFF" and loosen the fuel filler cap before a fuel system service.
- When removing fuel system parts, hold them in a cloth and take care that no fuel spills into the engine compartment.

Fuel filter inspection

1. Inspect:
 - Filter element
Contamination → Replace.
 - Filter body
Crack/Damage → Replace.
 - Filter assembly
Water contamination → Replace and check the fuel tank.

Trolling speed inspection and adjustment


1. Check:
 - Trolling speed
Out of specification → Adjust.


	Trolling speed: 1,300 ± 50 r/min
Checking steps: (vehicle on water) <ul style="list-style-type: none"> ● Start the engine and allow it to warm up for a few minutes. ● Attach the engine tachometer to the spark plug lead. 	
	Engine tachometer: YU-8036-A/90890-06760
<ul style="list-style-type: none"> ● Measure the engine trolling speed. 	

2. Adjust:
 - Trolling speed

Adjustment steps:

- Screw in the low speed screws ① until they are lightly seated.
- Back the screws out by the specified number of turns.

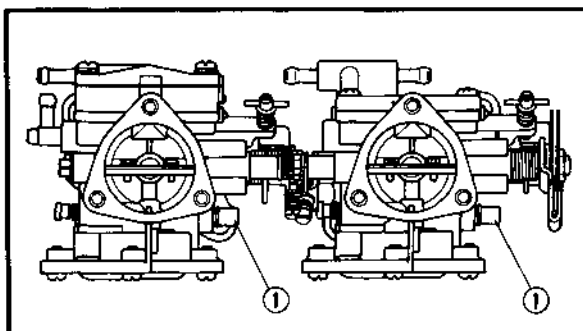

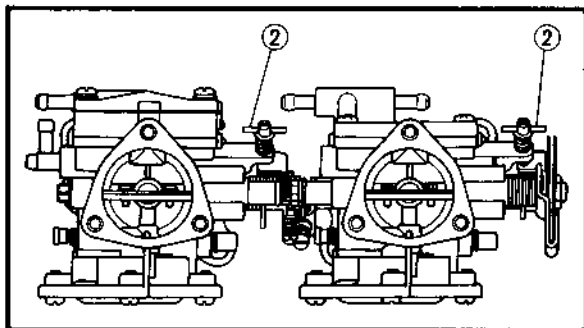

Low speed screw:
 $7/8 \pm 1/4$ (turns out)


- Start the engine and allow it to warm up for a few minutes.
- Turn the throttle stop screws ② in or out until the specified speed is obtained.

Turning in

Increase trolling speed.

Turning out

Decrease trolling speed.

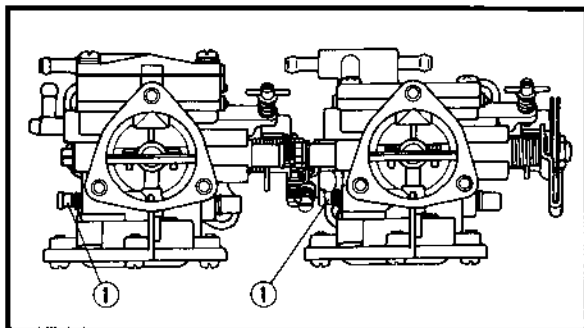

Carburetor adjustment

1. Adjust:


- High speed screw

Adjustment steps:

- Screw in the high speed screws ① until they are lightly seated.
- Back the screws out by the specified number of turns.



High speed screw:
 $1-1/8$ (F), $1-1/2$ (R) $\pm 1/4$
 (turns out)

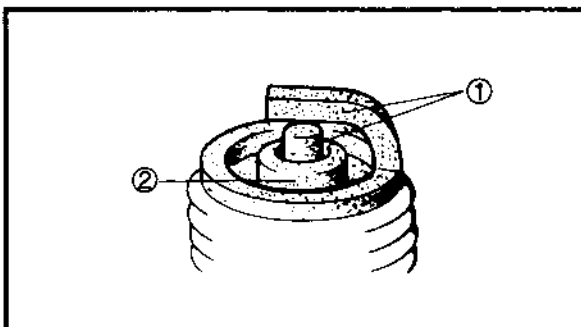

POWER UNIT

Spark plug inspection

1. Inspect:

- Electrode ①
Wear/Damage → Replace.
- Insulator color ②
Discolor → Check the engine condition.




Color guide:

Medium to light tan color:
Normal

Whitish color:
Lean fuel mixture
Plugged fuel mixture
Air leak
Incorrect settings

Blackish color:
Overly rich mixture
Electrical malfunction
Excess oil used
Defective spark plug

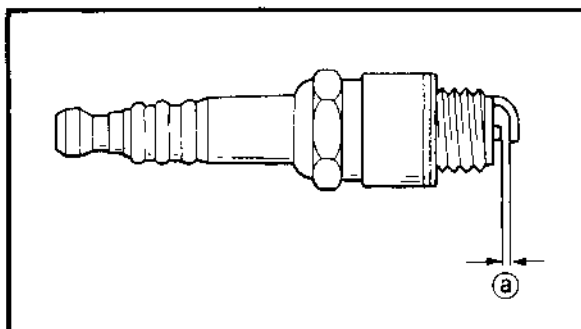

2. Clean:

- Spark plug
Clean the spark plug with a spark plug cleaner or wire brush.

3. Measure:

- Spark plug gap ③
Out of specification → Alter gap.
Use a wire gauge.



Spark plug gap:

0.6 ~ 0.7 mm (0.024 ~ 0.028 in)


4. Tighten:

- Spark plug



Spark plug:

20 Nm (2.0 m • kg, 14 ft • lb)

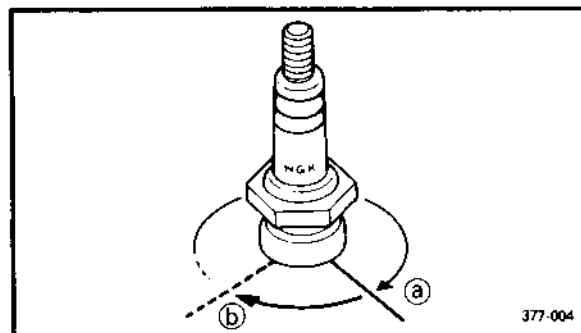

NOTE:

- Before installing a spark plug, clean the gasket surface and plug surface. Also it is advisable to apply a thin film of Anti Seize Compound to the spark plug threads to prevent future thread seizure.
- If a torque wrench is not available, a good estimate of the correct torque for the spark plug is a further 1/4 to 1/2 turns ④ on from finger tightness ③.

ELECTRICAL

Battery inspection

CAUTION:

Be careful not to place the battery on its side. Before adding the battery fluid or recharging, be sure to remove it from the engine compartment. When checking the battery, make sure the breather hose is connected to the battery and is not pinched shut anywhere in the engine compartment.


⚠ WARNING

- Battery electrolyte is poisonous and dangerous, causing severe burns, etc. Contains sulfuric acid.
- Avoid contact with skin, eyes or clothing.
- Antidote: EXTERNAL-Flush with water.
- INTERNAL-Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Call a physician immediately.
- Eyes: Flush with water for 15 minutes and get prompt medical attention. Batteries produce explosive gases.
- Keep sparks, flame, cigarettes, etc., away. Ventilate when charging or using in an enclosed space. Always shield your eyes when working near batteries.
- KEEP OUT OF REACH OF CHILDREN.

1. Remove:
 - Battery

⚠ WARNING

- When removing the battery, disconnect the negative lead first.
- Remove the battery to prevent acid loss during the impeller service.

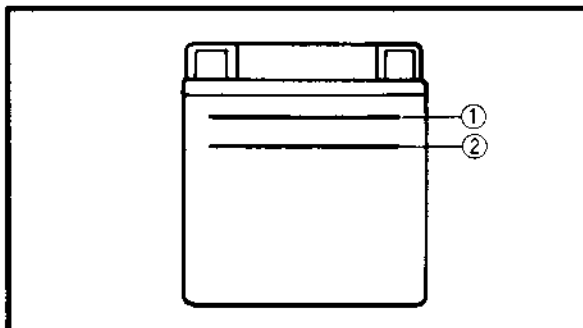

2. Inspect:
 - Battery fluid level
 Battery fluid level low → Top up with distilled water.
 Fluid level should be between upper ① and lower ② level marks.

Filling steps:

- Remove each filler cap using pliers.
- Fill with distilled water using a jug.
- When the acid is up to the UPPER LEVEL, allow the cell to stand for 20 minutes. If the acid level has dropped, add more acid up to the UPPER LEVEL once again.

CAUTION

Water other than distilled water contains minerals which are harmful to a battery; top up only with distilled water.

3. Inspect:
 - Battery fluid specific gravity
 Out of specification → Charge.




Specific gravity at 20°C (68°F):
1.28
Charging current:
68.4 kC (1.9 Amps × 10 Hrs)

4. Install:
 - Filler cap

CAUTION



Rinse off any acid from the battery case and wipe the battery dry prior to installation.

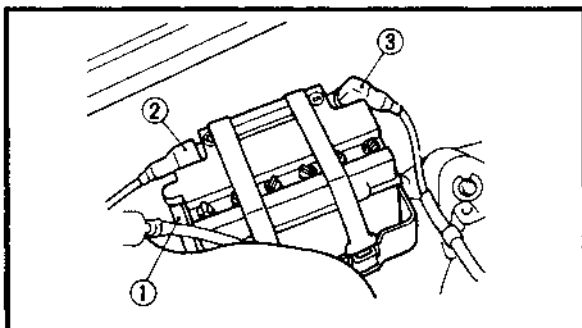
5. Install:

- Breather hose ①
- Battery
- Positive lead ②
- Negative lead ③
- Battery band

CAUTION:

- Connect the positive red lead \oplus to the battery terminal first.
- Make sure the battery leads are connected properly. Reversing the leads can seriously damage the electrical system.
- Make sure the breather hose is properly connected and is not obstructed.
- Coat the terminals with a water resistant grease to minimize terminal corrosion.

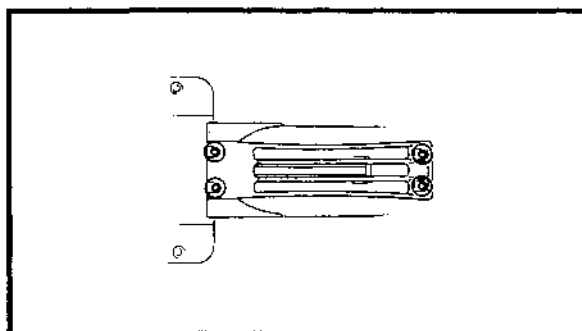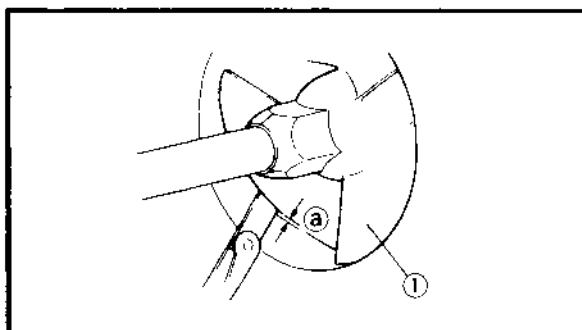
JET PUMP UNIT
Impeller inspection
1. Check:

- Impeller ①
- Wear/Damage → Replace.
- Scratch/Nick → File/Grind.

2. Measure:



- Impeller clearance ②
- Out of specification → Replace.


Impeller clearance limit:
0.6 mm (0.024 in)
Measurement steps:

- Remove the battery.
- Remove the intake screen.
- Measure the clearance at all four points.
- Install the intake screen.


Bolt:
5 Nm (0.5 m · kg, 3.6 ft · lb)

- Install the battery.

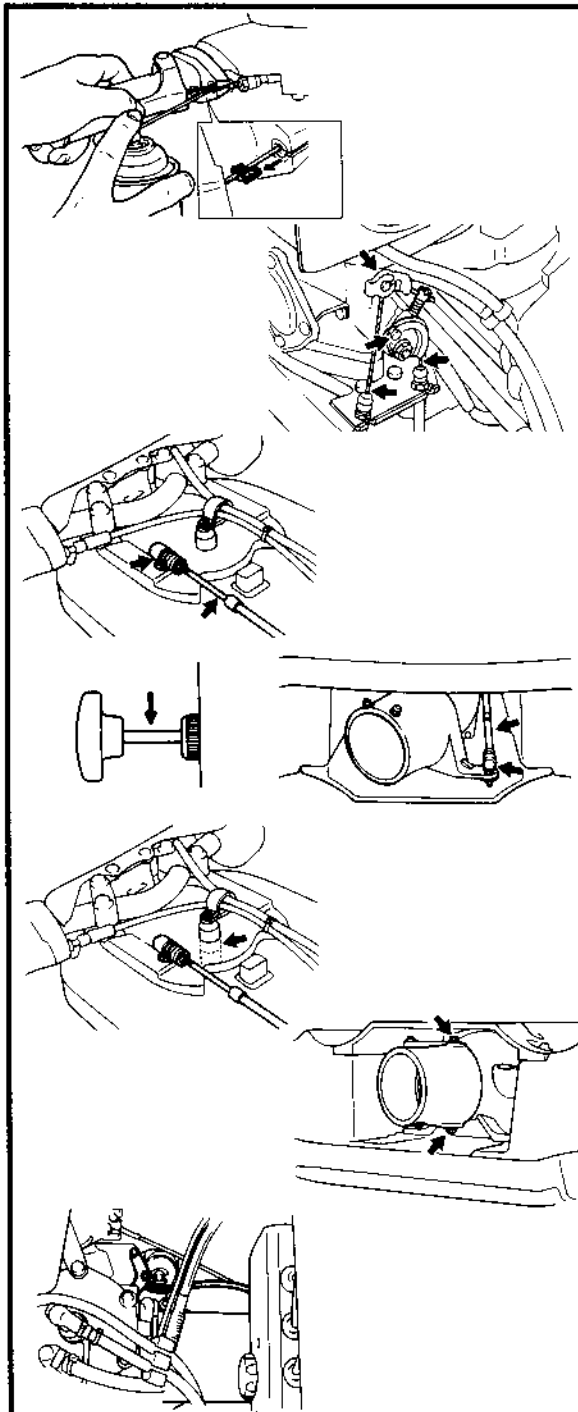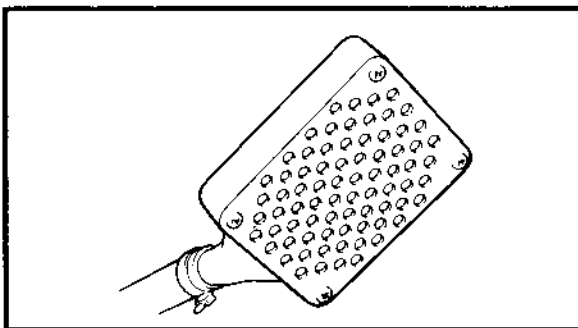
Bilge strainer inspection
1. Inspect:

- Strainer
Contamination → Clean.
Crack/Damage → Replace.

Inspection steps:

- Remove the coupling cover.
- Disconnect the bilge strainer from the strainer holder.
- Inspect the bilge strainer.

GENERAL
Greasing point
1. Apply:

- Throttle cable inner wire

NOTE:

Squeeze the throttle lever and remove the seal. Spray a rust-inhibitor into the outer cable.



Recommended fluid:
Rust-inhibitor

- Throttle cable inner wire
- Choke cable inner wire
- Cable joint
- Steering cable

NOTE:

Remove the cable joint and apply a small amount of grease to the following parts.

- Steering pivot shaft bearing
- Choke knob shaft
- Bearing housing



Recommended grease:
Water resistant grease

NOTE:

- Fill in the bearing housing with water resistant grease from a nipple.
- Fill the grease slowly and carefully, as it can damage the hose and the joints.
- Refer to the "MAINTENANCE INTERVAL CHART".



CHAPTER 4

FUEL SYSTEM


FUEL LINE	4-1
EXPLODED DIAGRAM	4-1
REMOVAL AND INSTALLATION CHART.....	4-1
SERVICE POINTS	4-2
Fuel filter inspection.....	4-2
Fuel cock inspection	4-2
Check valve inspection.....	4-2
 FUEL TANK	4-3
EXPLODED DIAGRAM	4-3
REMOVAL AND INSTALLATION CHART.....	4-3
Pipe joint inspection.....	4-4
Pipe joint installation.....	4-4
 CARBURETOR REMOVAL	4-5
EXPLODED DIAGRAM	4-5
REMOVAL AND INSTALLATION CHART.....	4-5
 CARBURETOR	4-6
EXPLODED DIAGRAM	4-6
REMOVAL AND INSTALLATION CHART.....	4-6
SERVICE POINTS	4-7
Diaphragm inspection.....	4-7
Float arm inspection.....	4-7
Body assembly inspection.....	4-7
Needle valve inspection.....	4-7
Jet and carburetor body inspection.....	4-8
High and low speed screws inspection	4-8
High and low speed screws adjustment.....	4-8
Throttle valve synchronization inspection and adjustment.....	4-8
Choke valve synchronization inspection and adjustment.....	4-9
Carburetor assembly.....	4-9
 FUEL PUMP	4-10
EXPLODED DIAGRAM	4-10
REMOVAL AND INSTALLATION CHART.....	4-10
SERVICE POINTS	4-11
Fuel pump inspection.....	4-11
Filter inspection	4-11



⚠ WARNING

Gasoline (petrol) is highly flammable and explosive. Handle with special care.

FUEL LINE EXPLODED DIAGRAM

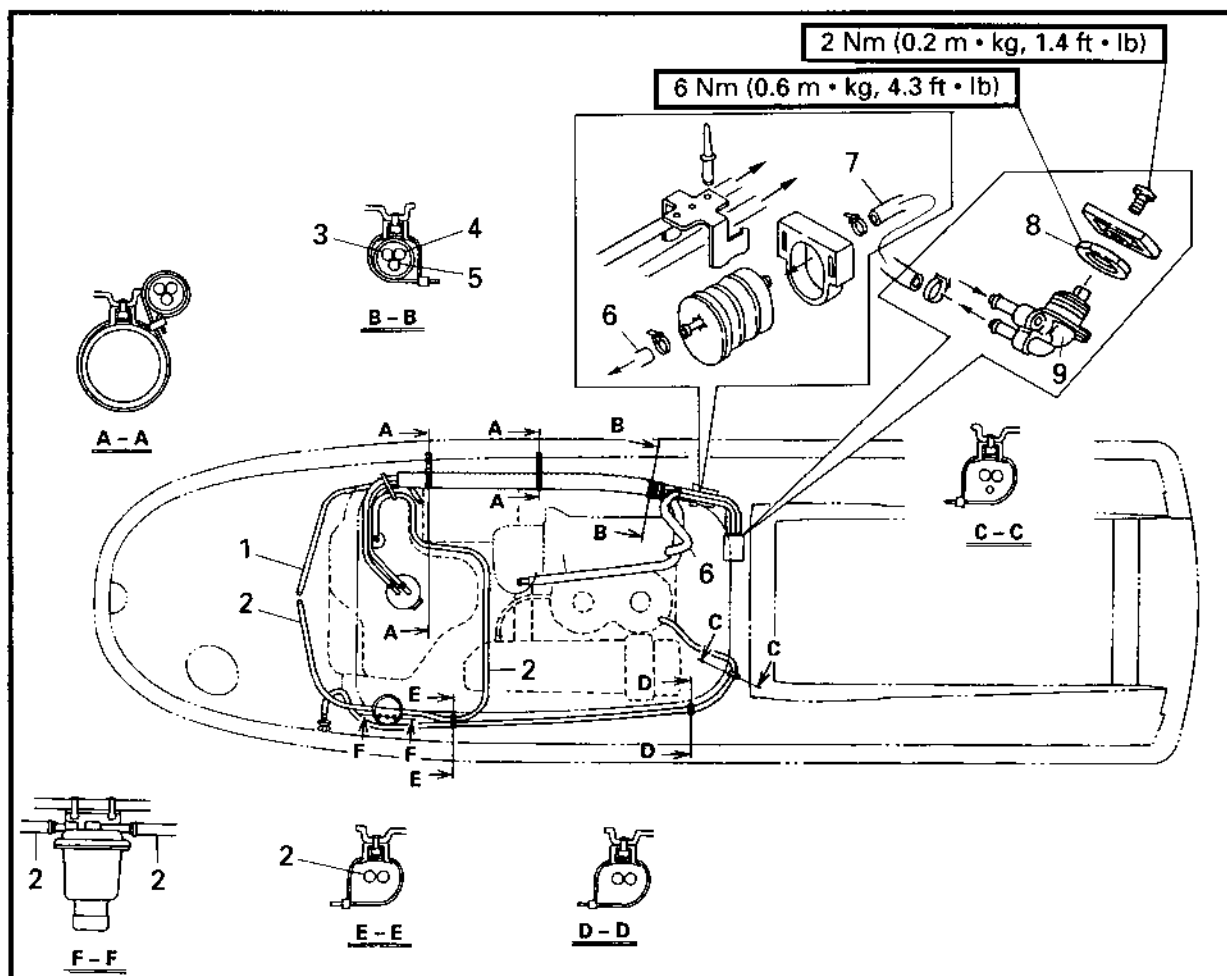

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	FUEL HOSE REMOVAL		Follow the left "Step" for removal.
1	Battery breather hose	1	
2	Air ventilation hose	3	
3	Fuel hose (RES)	1	
4	Fuel hose (ON)	1	
5	Fuel hose (return)	1	
6	Fuel hose (filter - pump)	1	
7	Fuel hose (OUT)	1	
8	Nut	1	
9	Fuel cock body	1	
			Reverse the removal steps for installation.

**SERVICE POINTS****Fuel filter inspection**

Refer to "FUEL SYSTEM" in chapter 3.

Fuel cock inspection

1. Check:

- Fuel cock

Unsmooth movement → Replace.


Clog → Clean.

Check valve inspection

1. Check:


- Check valve

Out of specification → Replace.

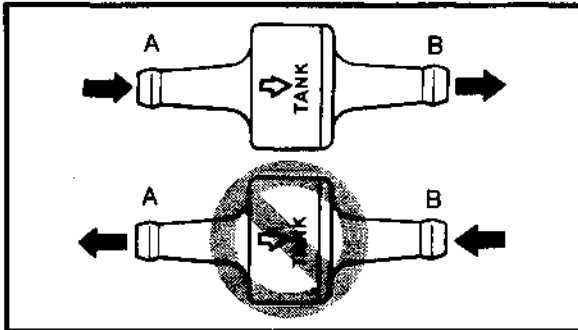

Flow from A to B

FUEL TANK EXPLODED DIAGRAM

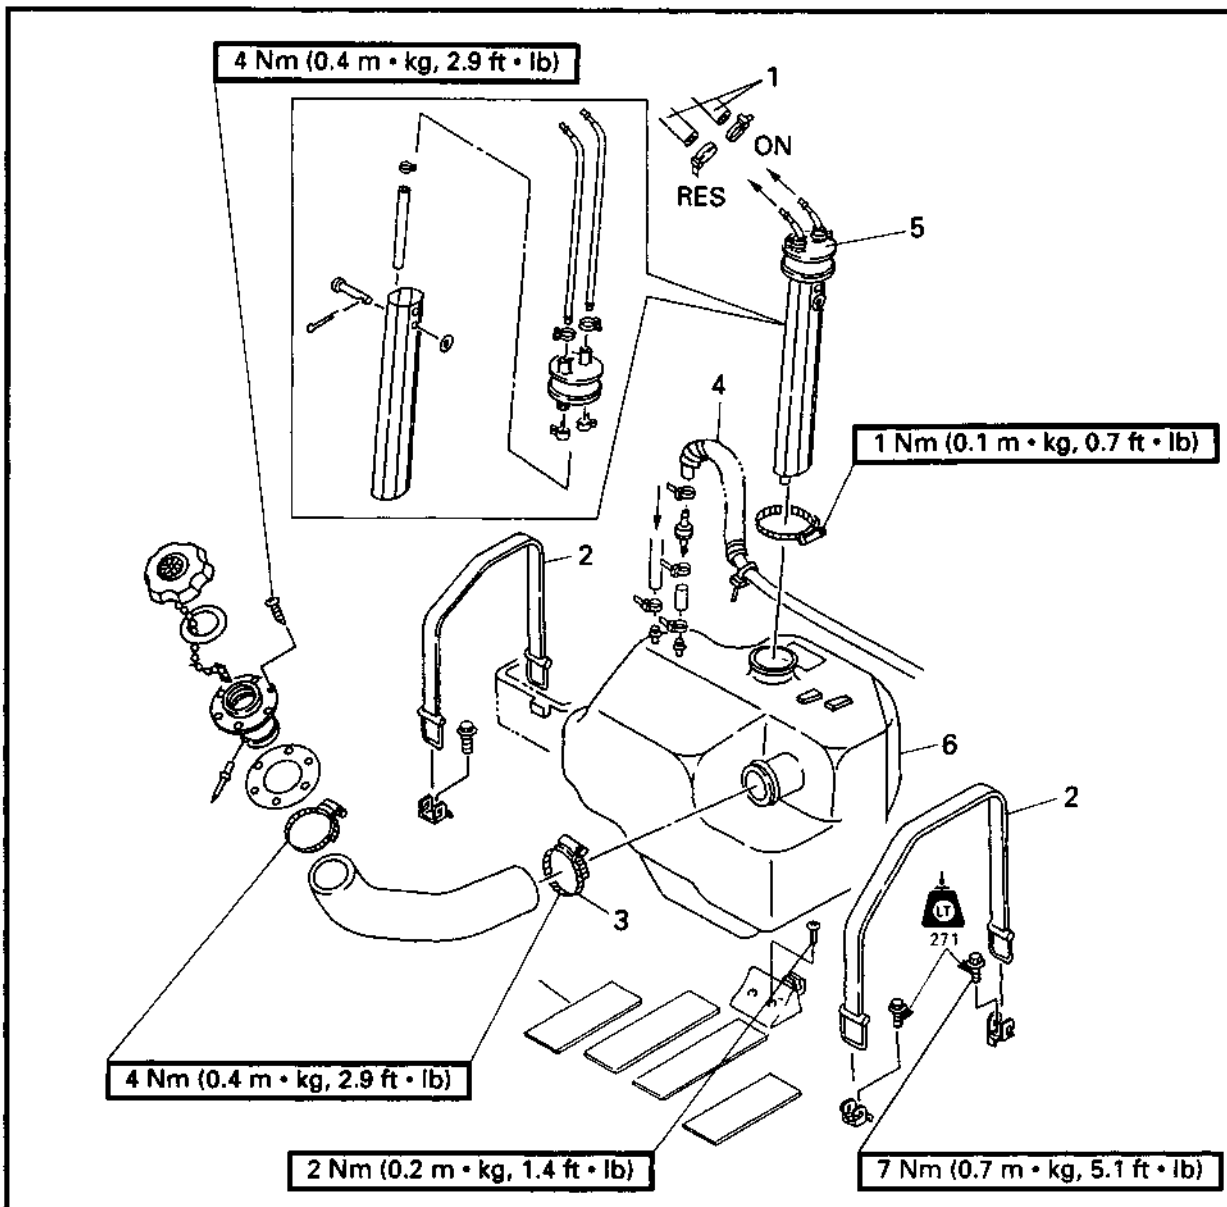

REMOVAL AND INSTALLATION CHART



Step	Procedure/Part name	Q'ty	Service points
	FUEL TANK REMOVAL		Follow the left "Step" for removal.
	Battery		
1	Fuel hose	2	
2	Tank band	2	
3	Clamp	1	
4	Air ventilation hose	1	
5	Pipe joint assembly	1	
6	Fuel tank	1	
			Reverse the removal steps for installation.



Pipe joint inspection

1. Inspect:

- Pipe
Bending/Damage → Replace.
Contamination → Clean.
- Pipe joint
Wear/Crack → Replace.

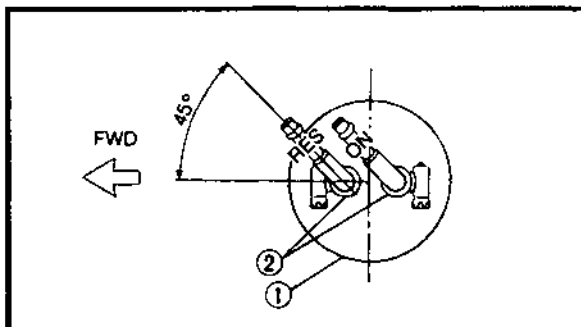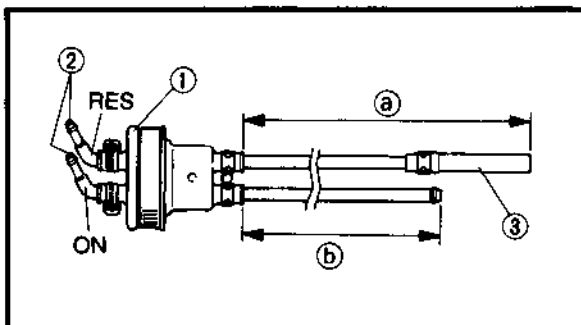

Pipe joint installation

1. Install:

- Pipe joint ①
- Pipe ②
- Hose ③
- Clamp




Length ③:
 $242 \pm 2 \text{ mm}$ ($9.53 \pm 0.08 \text{ in}$)
Length ⑥:
 $165 \pm 2 \text{ mm}$ ($6.50 \pm 0.08 \text{ in}$)

NOTE:


Connect the hose for "RES" on the pipe side.



CARBURETOR REMOVAL **EXPLODED DIAGRAM**

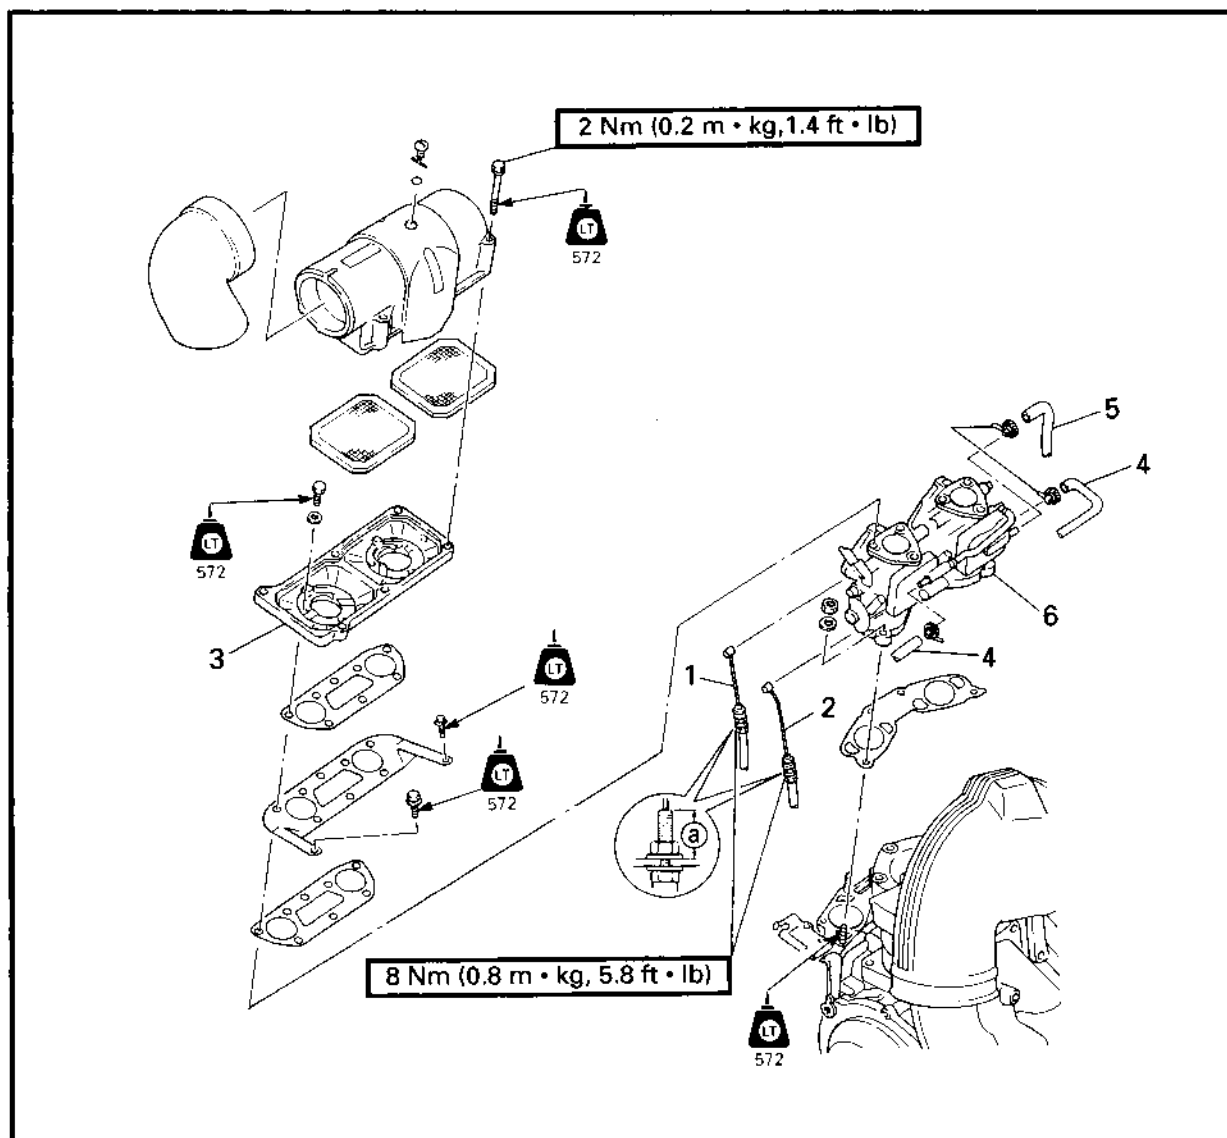


REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	CARBURETOR REMOVAL		
	Fuel cock		Follow the left "Step" for removal. NOTE: _____ Turn the fuel cock to "OFF".
1	Choke cable	1	 Cable guide set position ①: 17 mm (0.67 in) Between cable guide top and plate top.
2	Throttle cable	1	
3	Cover 2	1	
4	Fuel hose	2	
5	Pulse hose	1	
6	Carburetor assembly	1	
			Reverse the removal steps for installation.



CARBURETOR EXPLODED DIAGRAM

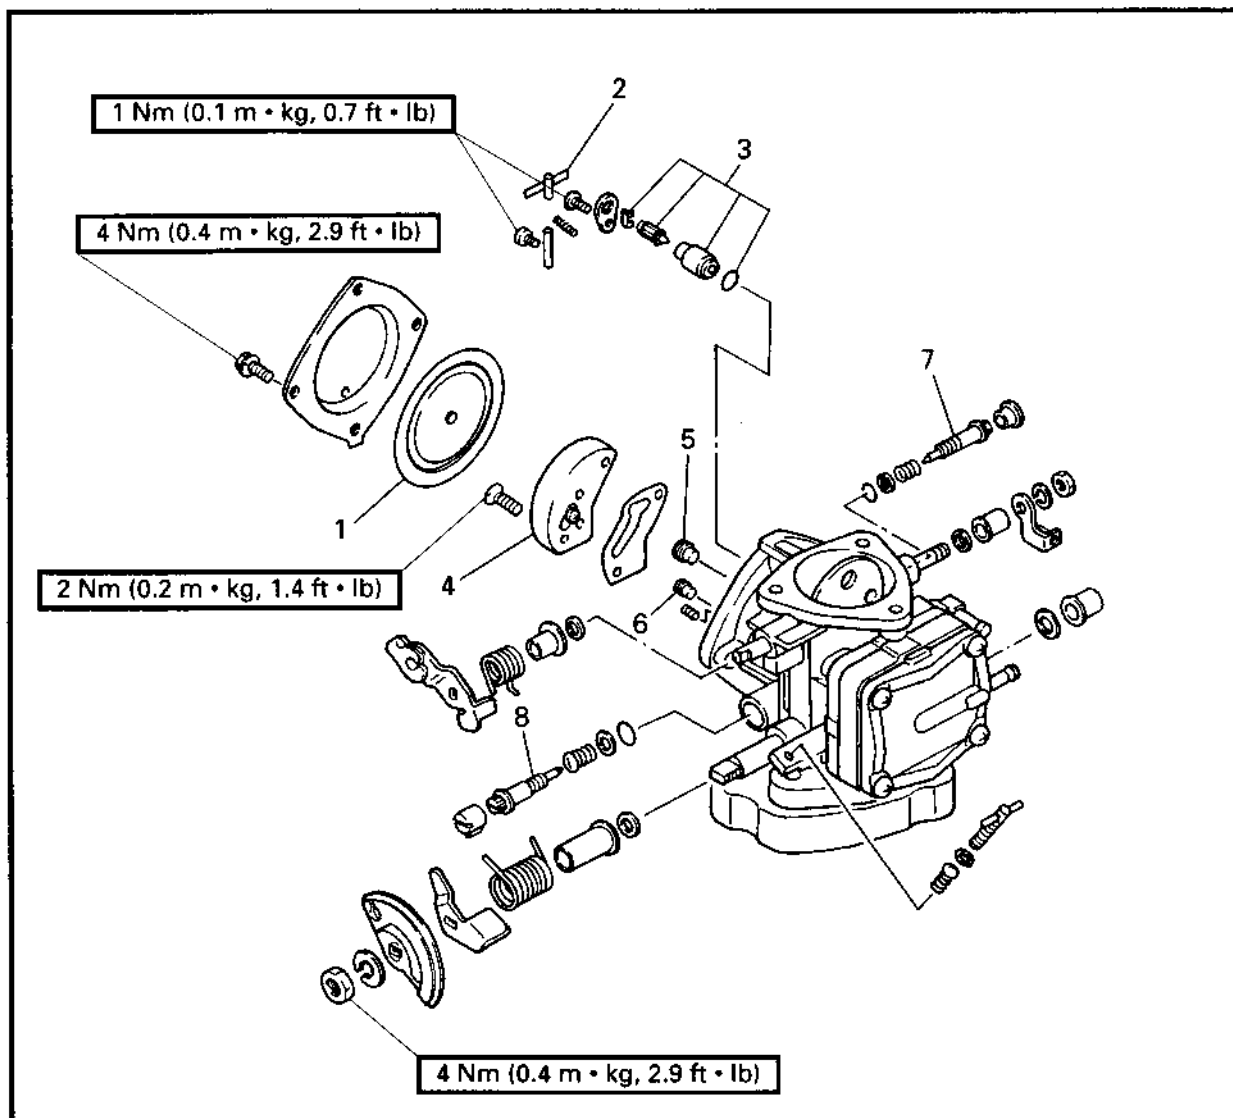

REMOVAL AND INSTALLATION CHART





Step	Procedure/Part name	Q'ty	Service points
	CARBURETOR DISASSEMBLY		
	Carburetor assembly		Follow the left "Step" for removal. Refer to "CARBURETOR REMOVAL".
1	Diaphragm assembly	1	
2	Float arm	1	
3	Needle valve assembly	1	
4	Body assembly	1	
5	Main jet	1	
6	Pilot jet	1	
7	High speed screw	1	
8	Low speed screw	1	
			Reverse the removal steps for installation.



SERVICE POINTS

CAUTION:

Do not use steel wire for cleaning the jets as this may enlarge the jet diameters and seriously affect performance.

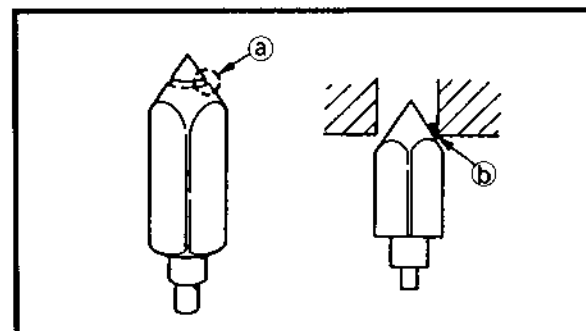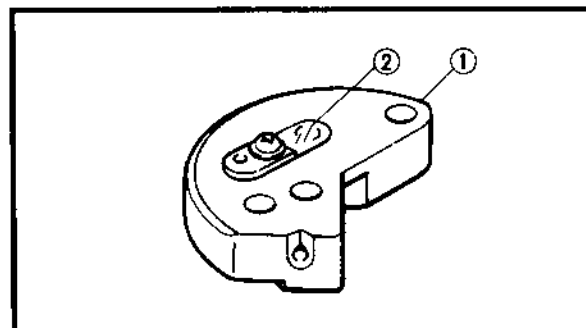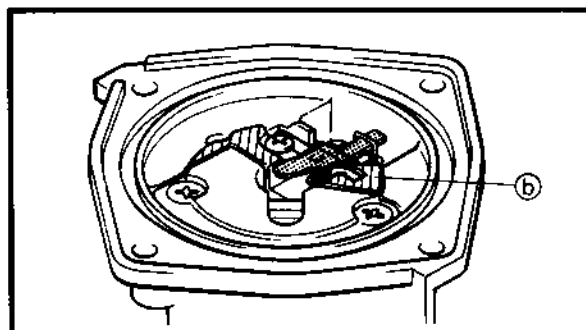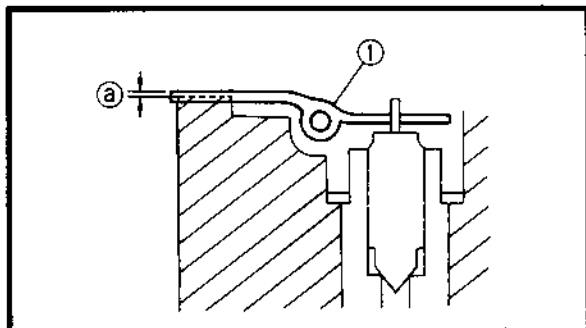

Diaphragm inspection

1. Inspect:
 - Diaphragm assembly
 - Damage → Replace.

Float arm inspection

1. Inspect:
 - Float arm ①
 - Bend/Damage → Repair or replace.
2. Measure:
 - Float arm height ②



Float arm height:
0 ~ 0.2 mm (0 ~ 0.008 in)

NOTE:

- Measure the distance between the surface ② of the carburetor body and the top surface of the float arm.
- The float arm should be resting on the needle valve, but not compressing the needle valve.

Body assembly inspection

1. Inspect:
 - Body assembly ①
 - Contamination → Clean.
 - Valve ②
 - Damage → Replace.

Needle valve inspection

1. Inspect:
 - Needle valve
 - Valve seat
 - Grooved wear ② → Replace.
 - Dust ③ → Clean.

NOTE:

Always replace the needle valve and valve seat as a set.



Jet and carburetor body inspection


1. Inspect:

- Main jet
 - Pilot jet
 - Carburetor body
- Contamination → Clean.

High and low speed screws inspection

1. Inspect:

- High speed screw
 - Low speed screw
- Bend/Wear → Replace.

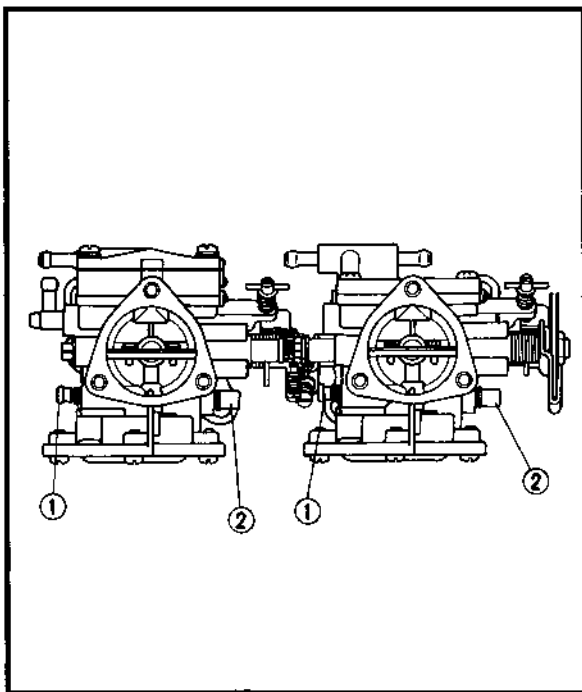

High and low speed screws adjustment

1. Adjust:


- High speed screw
- Low speed screw

Adjustment steps:

- Screw in the high speed screws ① or lower speed screws ② until it is lightly seated.
- Back out by the specified number of turns.



High speed screw:
 $1\frac{1}{8}$ (F), $1\frac{1}{2}$ (R) $\pm \frac{1}{4}$
 turns out
Low speed screw:
 $\frac{7}{8} \pm \frac{1}{4}$ turns out

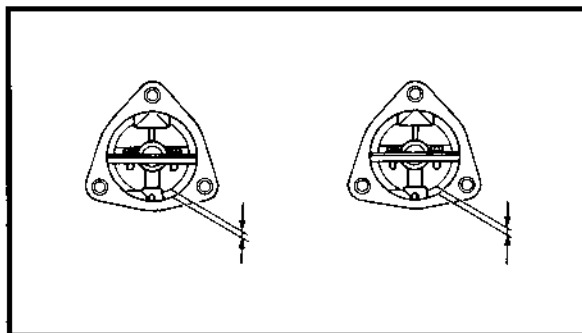


Throttle valve synchronization inspection and adjustment

1. Check:

- Throttle valve synchronization
- Out of specification → Adjust.

Checking steps:

- While turning the throttle lever, check the opening of all throttle valves.

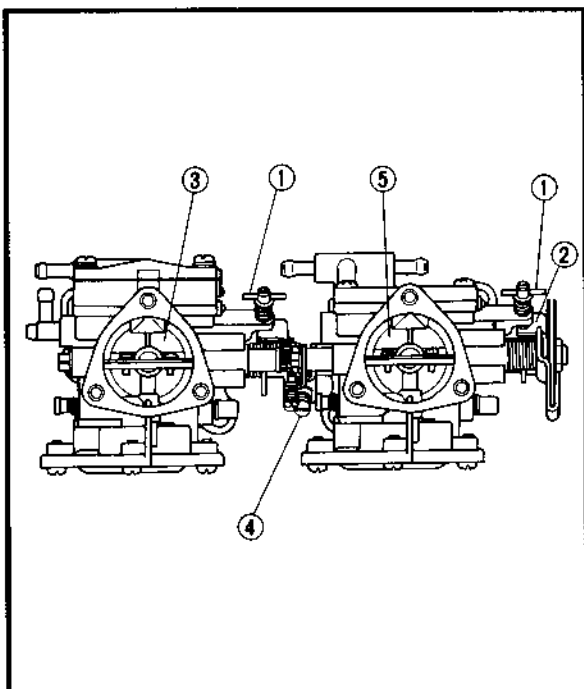

2. Adjust:

- Throttle valve synchronization


Adjustment steps:

- Turn out the idle adjust screws ① until their tips are apart from the throttle lever ②.

NOTE:

Record the set position of the idle adjust screw.

- Check that the R throttle valve ③ is fully closed.
- Turn the synchronization screw ④ in or out until the F throttle valve ⑤ is fully closed.
- Turn in the idle adjust screws to the set position.

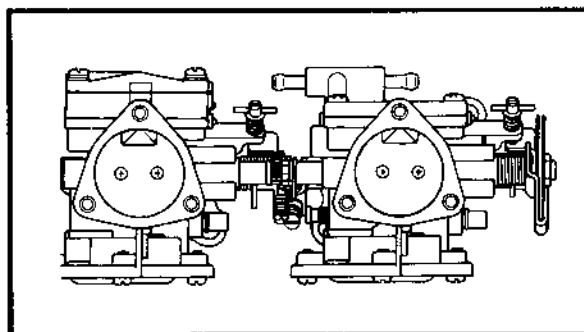
**Choke valve synchronization inspection and adjustment**

1. Check:

- Choke valve synchronization
Out of specification → Adjust.

Checking steps:

- While turning the choke lever, check the opening of all choke valves.

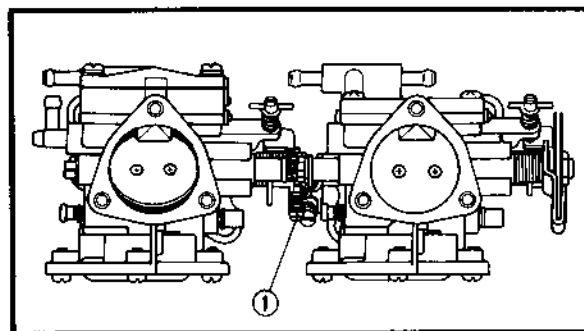

2. Adjust:

- Choke valve synchronization

Adjustment steps:

- Turn in or out the synchronization screw ① to bring all the choke valves into a fully closed position when the choke lever is turned on the closed side.


Carburetor assembly

1. Adjust:

- Trolling speed
Refer to "FUEL SYSTEM" in chapter 3.



FUEL PUMP EXPLODED DIAGRAM

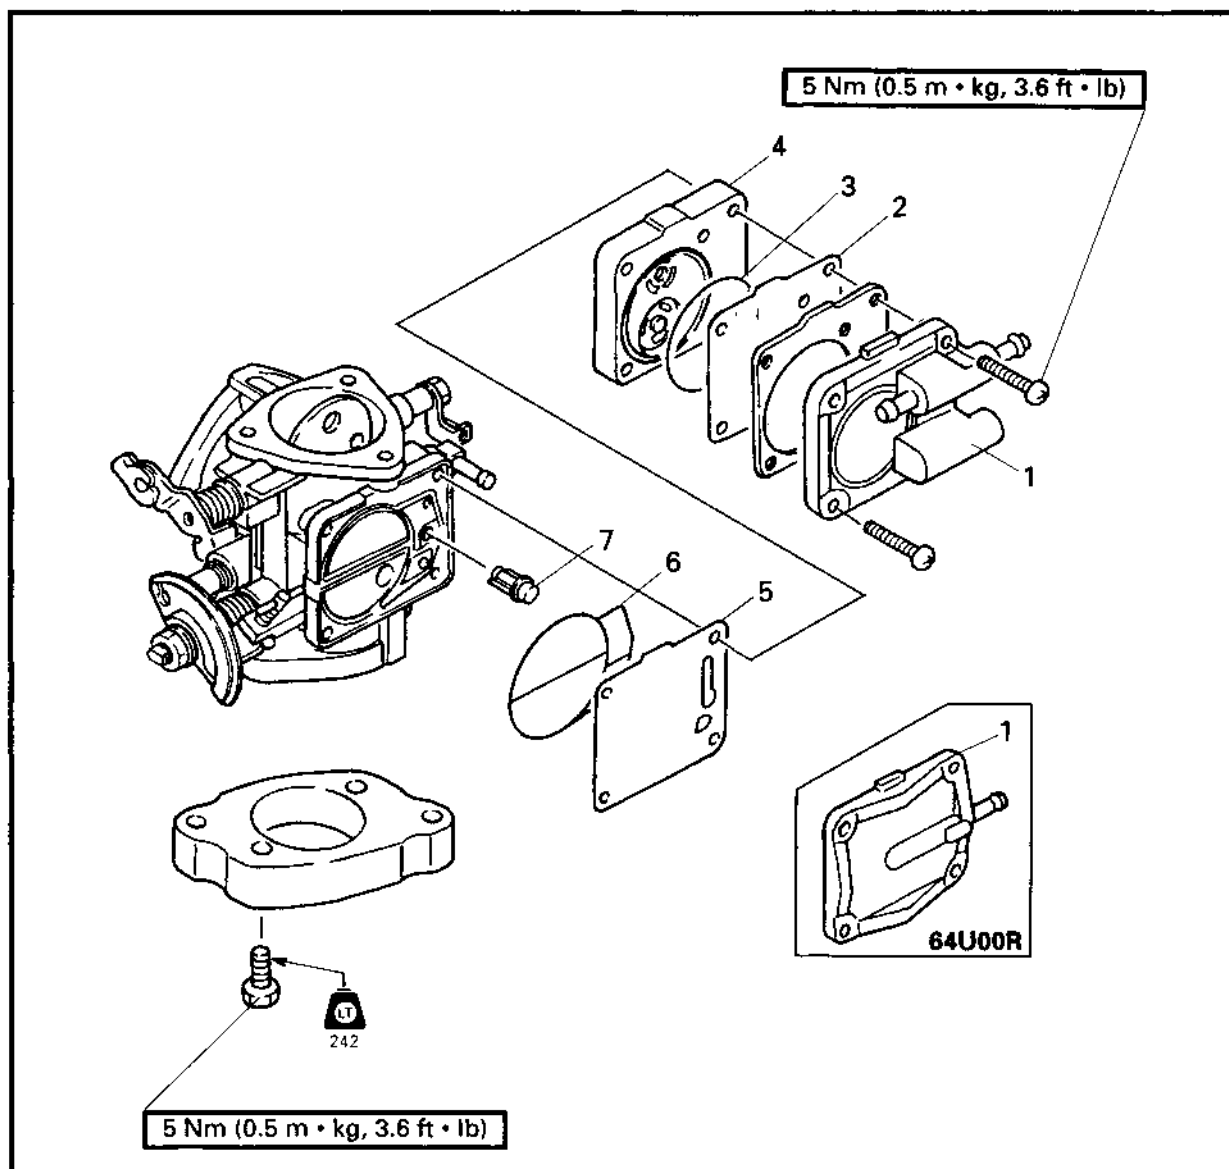

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	FUEL PUMP DISASSEMBLY		
	Carburetor assembly		Follow the left "Step" for removal. Refer to "CARBURETOR REMOVAL".
1	Pump cover	1	
2	Diaphragm	1	
3	O-ring	1	
4	Diaphragm body assembly	1	
5	Diaphragm	1	
6	O-ring	1	
7	Filter	1	
			Reverse the removal steps for installation.

**SERVICE POINTS****Fuel pump inspection**

1. Inspect:

- Diaphragm
 - Diaphragm body assembly
- Damage → Replace.

Filter inspection

1. Inspect:

- Filter
- Contamination → Clean.
Damage → Replace.


CHAPTER 5 POWER UNIT

REED VALVE	5-1
EXPLODED DIAGRAM	5-1
REMOVAL AND INSTALLATION CHART	5-1
SERVICE POINTS	5-2
Reed valve inspection	5-2
EXHAUST RING	5-3
EXPLODED DIAGRAM	5-3
REMOVAL AND INSTALLATION CHART	5-3
EXHAUST CHAMBER	5-4
EXPLODED DIAGRAM	5-4
REMOVAL AND INSTALLATION CHART	5-4
MUFFLER	5-5
EXPLODED DIAGRAM	5-5
REMOVAL AND INSTALLATION CHART	5-5
CYLINDER HEAD	5-6
EXPLODED DIAGRAM	5-6
REMOVAL AND INSTALLATION CHART	5-6
SERVICE POINTS	5-7
Cylinder head inspection	5-7
CYLINDER	5-8
EXPLODED DIAGRAM	5-8
REMOVAL AND INSTALLATION CHART	5-8
SERVICE POINTS	5-9
Cylinder inspection	5-9
PISTON	5-10
EXPLODED DIAGRAM	5-10
REMOVAL AND INSTALLATION CHART	5-10
SERVICE POINTS	5-11
Piston inspection	5-11
Piston ring inspection	5-12
Piston pin and bearing inspection	5-12

ENGINE UNIT REMOVAL	5-14
EXPLODED DIAGRAM	5-14
REMOVAL AND INSTALLATION CHART.....	5-14
SERVICE POINTS	5-15
Shim removal	5-15
Mount bracket inspection	5-15
Coupling clearance inspection	5-15
 FLYWHEEL MAGNETO AND BASE	5-16
EXPLODED DIAGRAM	5-16
REMOVAL AND INSTALLATION CHART.....	5-16
SERVICE POINTS	5-17
Coupling flange removal and installation	5-17
Flywheel magneto removal and installation.....	5-17
Coupling flange inspection.....	5-17
Flywheel magneto inspection	5-17
Idle gear assembly inspection.....	5-17
 ELECTRICAL UNIT	5-18
EXPLODED DIAGRAM	5-18
REMOVAL AND INSTALLATION CHART.....	5-18
 STARTER MOTOR	5-19
EXPLODED DIAGRAM	5-19
REMOVAL AND INSTALLATION CHART.....	5-19
SERVICE POINTS	5-20
Pinion inspection	5-20
Armature inspection.....	5-20
Brush holder inspection.....	5-21
Cover inspection.....	5-21
 CRANKCASE	5-22
EXPLODED DIAGRAM	5-22
REMOVAL AND INSTALLATION CHART.....	5-22
SERVICE POINTS	5-23
Crankcase inspection	5-23
Crankcase installation	5-23
 CRANKSHAFT	5-24
EXPLODED DIAGRAM	5-24
REMOVAL AND INSTALLATION CHART.....	5-24
SERVICE POINTS	5-25
Crankshaft inspection.....	5-25



INTERMEDIATE HOUSING REMOVAL	5-26
EXPLODED DIAGRAM	5-26
REMOVAL AND INSTALLATION CHART.....	5-26
 INTERMEDIATE HOUSING	5-27
EXPLODED DIAGRAM	5-27
REMOVAL AND INSTALLATION CHART.....	5-27
SERVICE POINTS	5-28
Coupling removal and installation.....	5-28
Bearing removal and installation	5-28
Bearing inspection.....	5-28
Coupling inspection	5-28
Oil seal installation	5-28

REED VALVE EXPLODED DIAGRAM

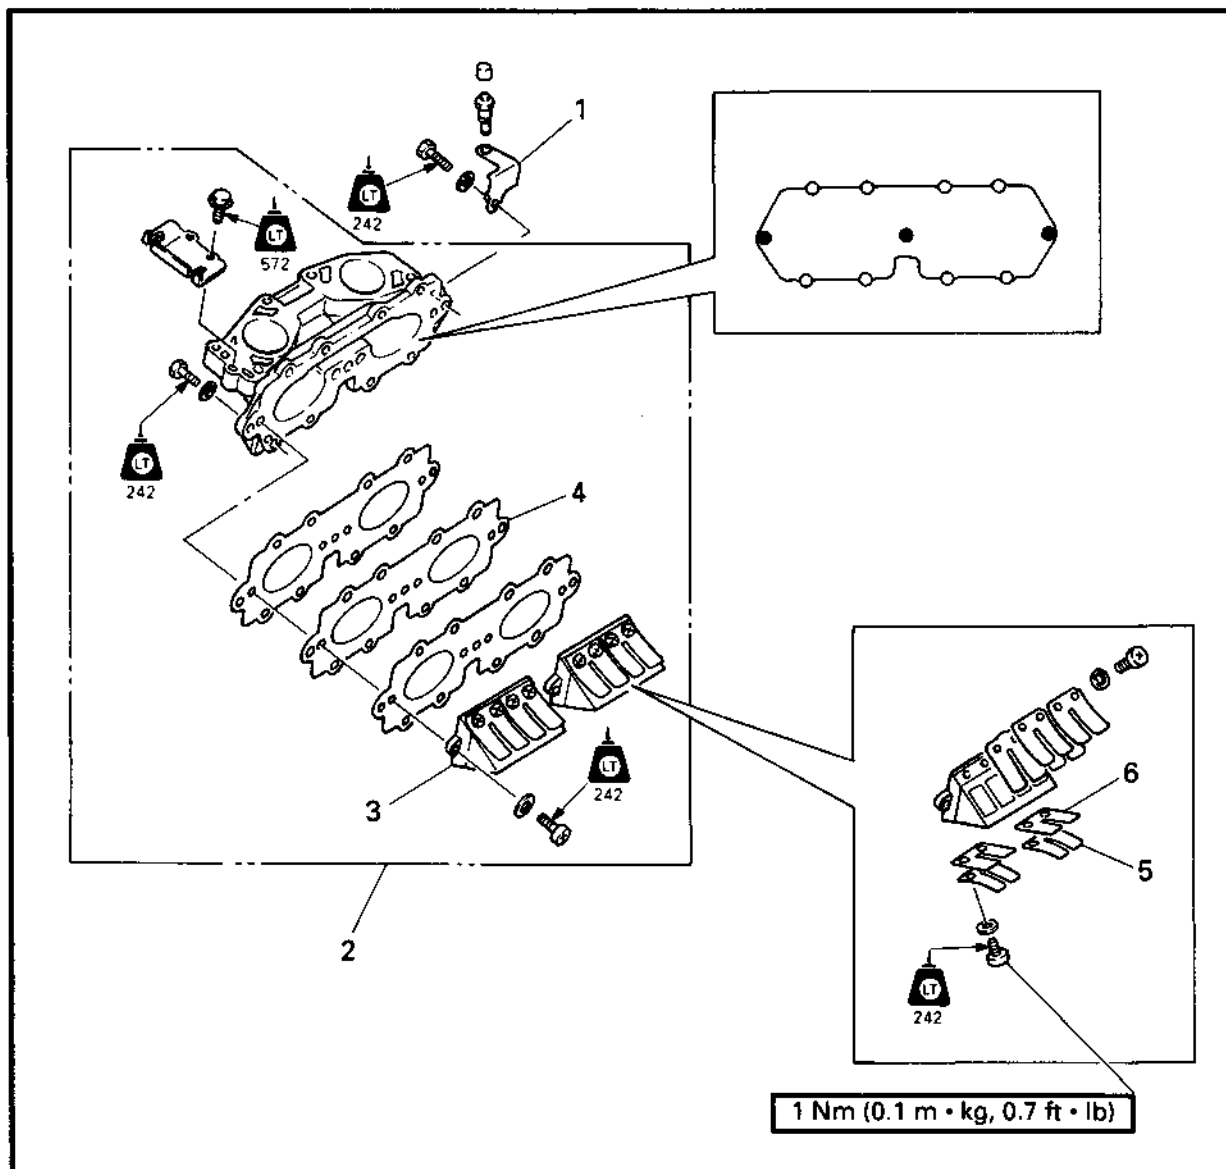

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	REED VALVE REMOVAL		
	Carburetor assembly		Follow the left "Step" for removal. Refer to "CARBURETOR REMOVAL" in chapter 4.
1	Plate	1	
2	Intake manifold assembly	1	
3	Reed valve assembly	2	
4	Plate	1	
5	Valve stopper	4	
6	Reed valve	4	
			Reverse the removal steps for installation.

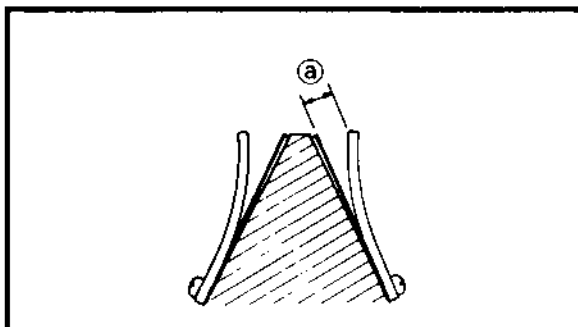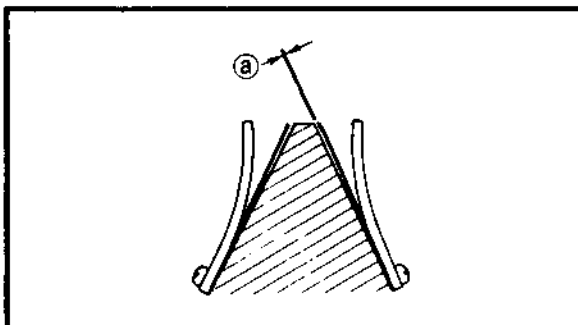**SERVICE POINTS****Reed valve inspection****1. Inspect:**

- Reed valve
Crack/Damage → Replace.

2. Measure:

- Valve bending (a)
Out of specification → Replace.



Valve bending limit:
0.2 mm (0.008 in)


3. Measure:

- Valve stopper height (a)
Out of specification → Adjust or replace.



Valve stopper height:
9.0 ± 0.2 mm (0.35 ± 0.01 in)


**EXHAUST RING
EXPLODED DIAGRAM**

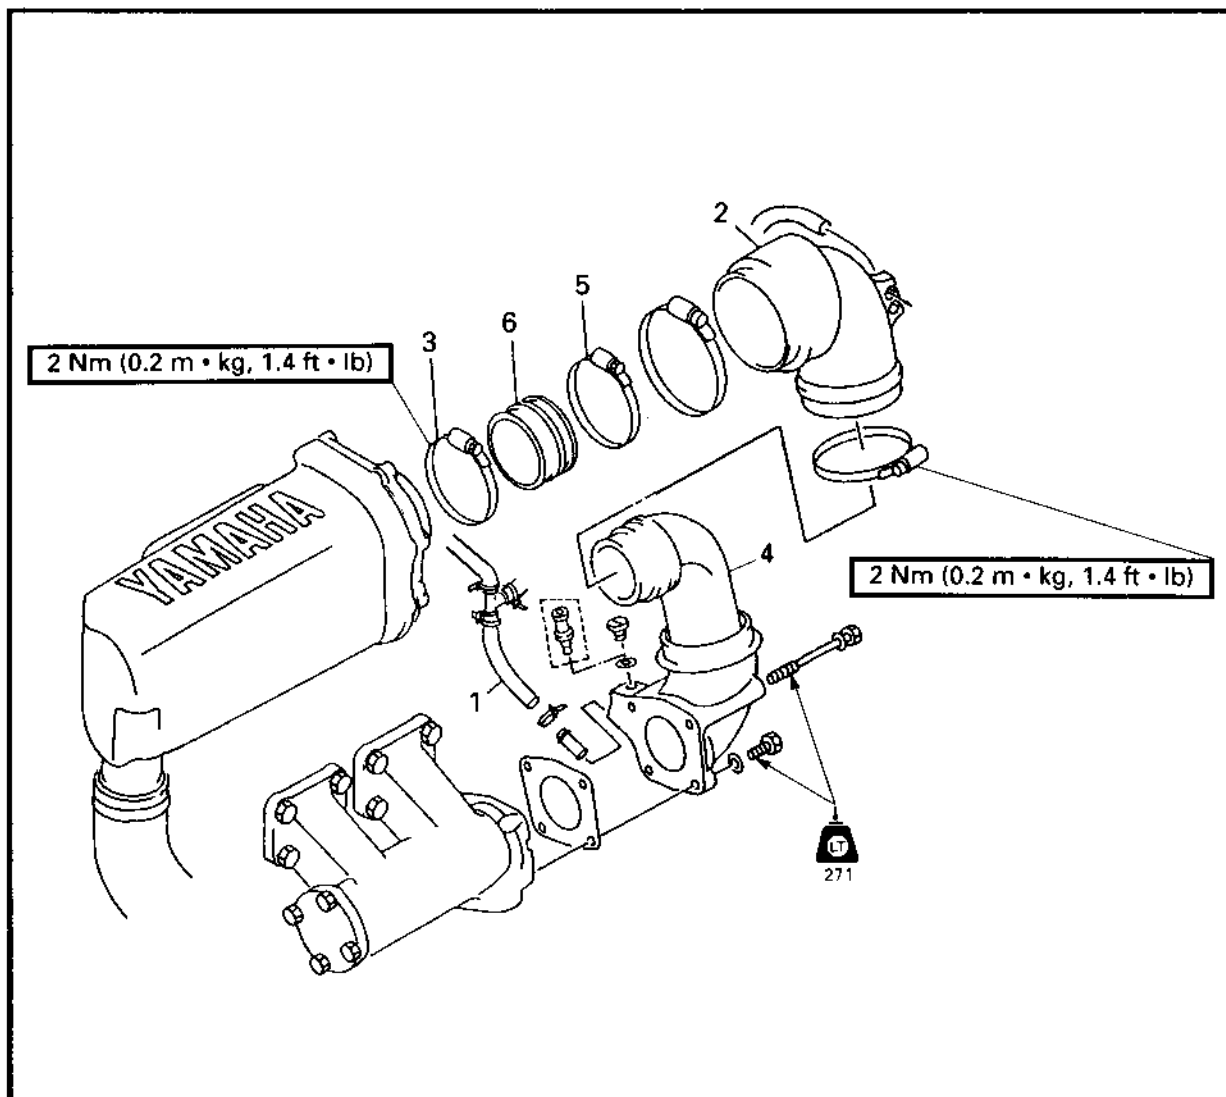

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	EXHAUST RING REMOVAL		Follow the left "Step" for removal.
1	Water hose	1	NOTE: _____ ● Pull and side the exhaust joint. ● Loosen the clamp at the muffler side.
2	Exhaust joint	1	
3	Clamp	1	
4	Ring	1	
5	Clamp	1	CAUTION: _____ Tighten the clamp, before installing the ring on the muffler.
6	Joint	1	Reverse the removal steps for installation.


EXHAUST CHAMBER EXPLODED DIAGRAM

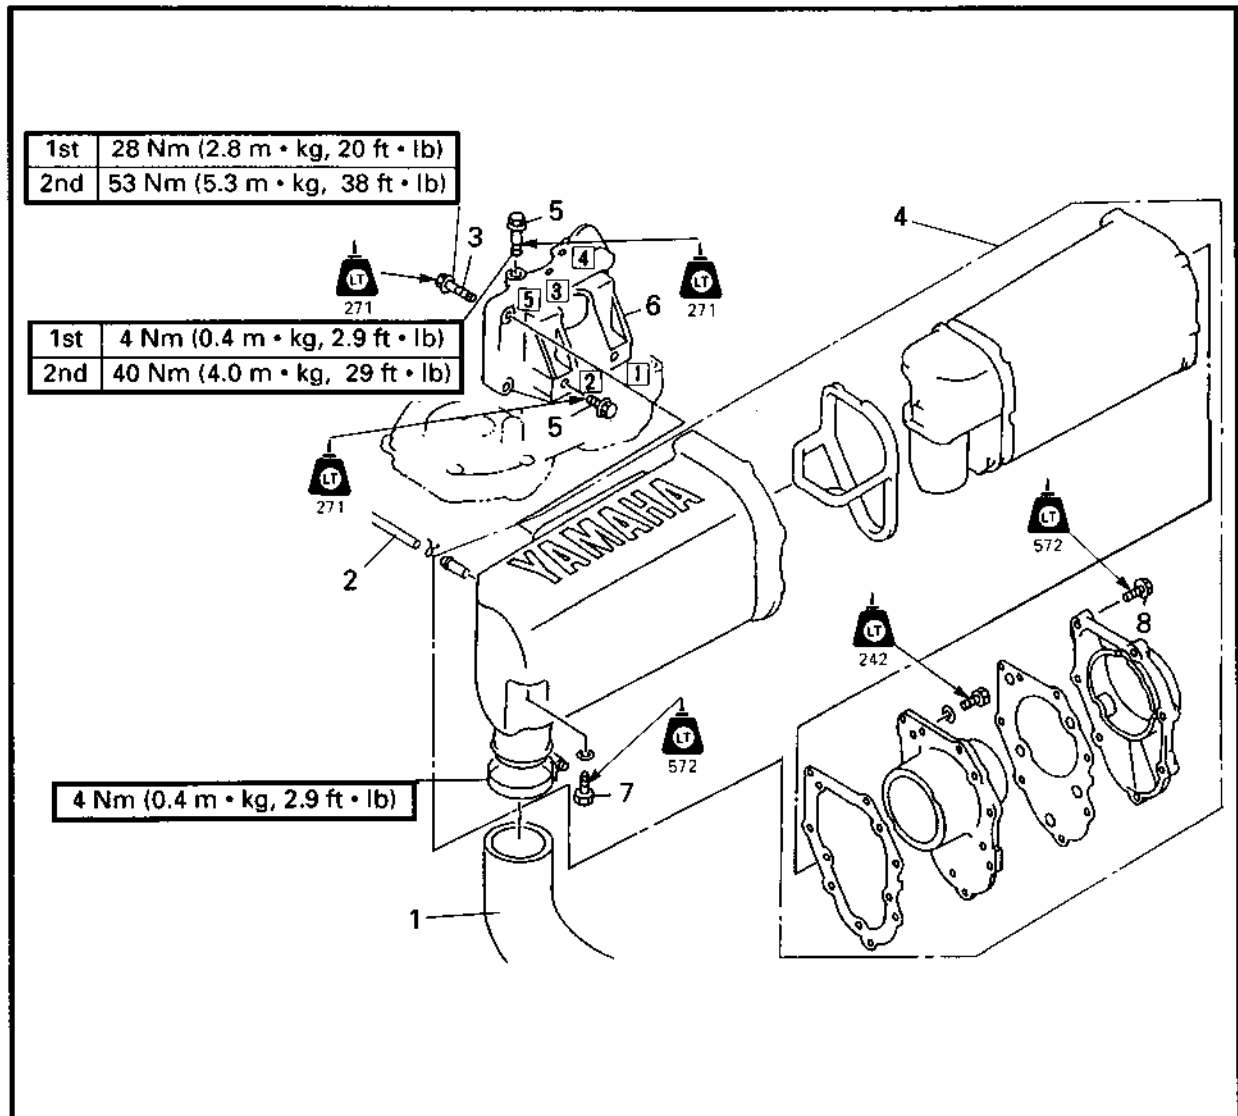

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	EXHAUST CHAMBER REMOVAL		Follow the left "Step" for removal. Refer to "EXHAUST RING".
	Ring		
1	Exhaust hose	1	
2	Water hose	1	
3	Bolt (muffler)	3	
4	Chamber assembly	1	
5	Bolt (muffler stay)	5	CAUTION: _____
6	Muffler stay	1	Tighten the bolts in sequence. _____
7	Bolt (with washer)	1	
8	Bolt (with washer)	7	Reverse the removal steps for installation.


MUFFLER EXPLODED DIAGRAM

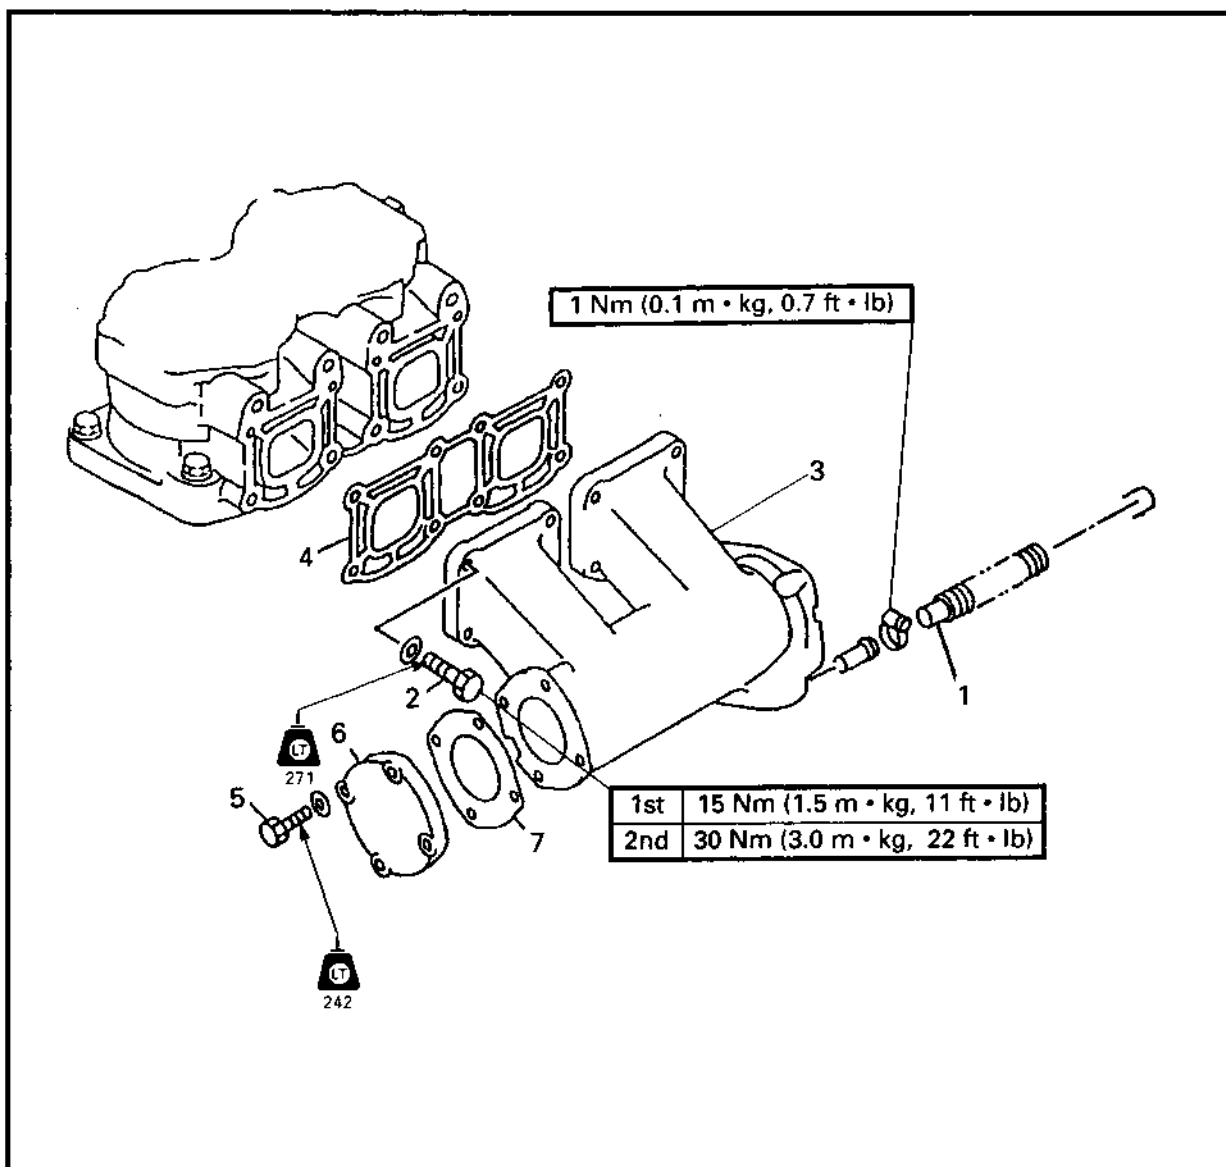

REMOVAL AND INSTALLATION CHART



Step	Procedure/Part name	Q'ty	Service points
	MUFFLER REMOVAL		
	Exhaust chamber		Follow the left "Step" for removal. Refer to "EXHAUST CHAMBER".
1	Water inlet hose	1	
2	Bolt (with washer)	8	
3	Muffer	1	
4	Gasket	1	
5	Bolt (with washer)	4	
6	Protector	1	
7	Gasket	1	
			Reverse the removal steps for installation.

CYLINDER HEAD EXPLODED DIAGRAM

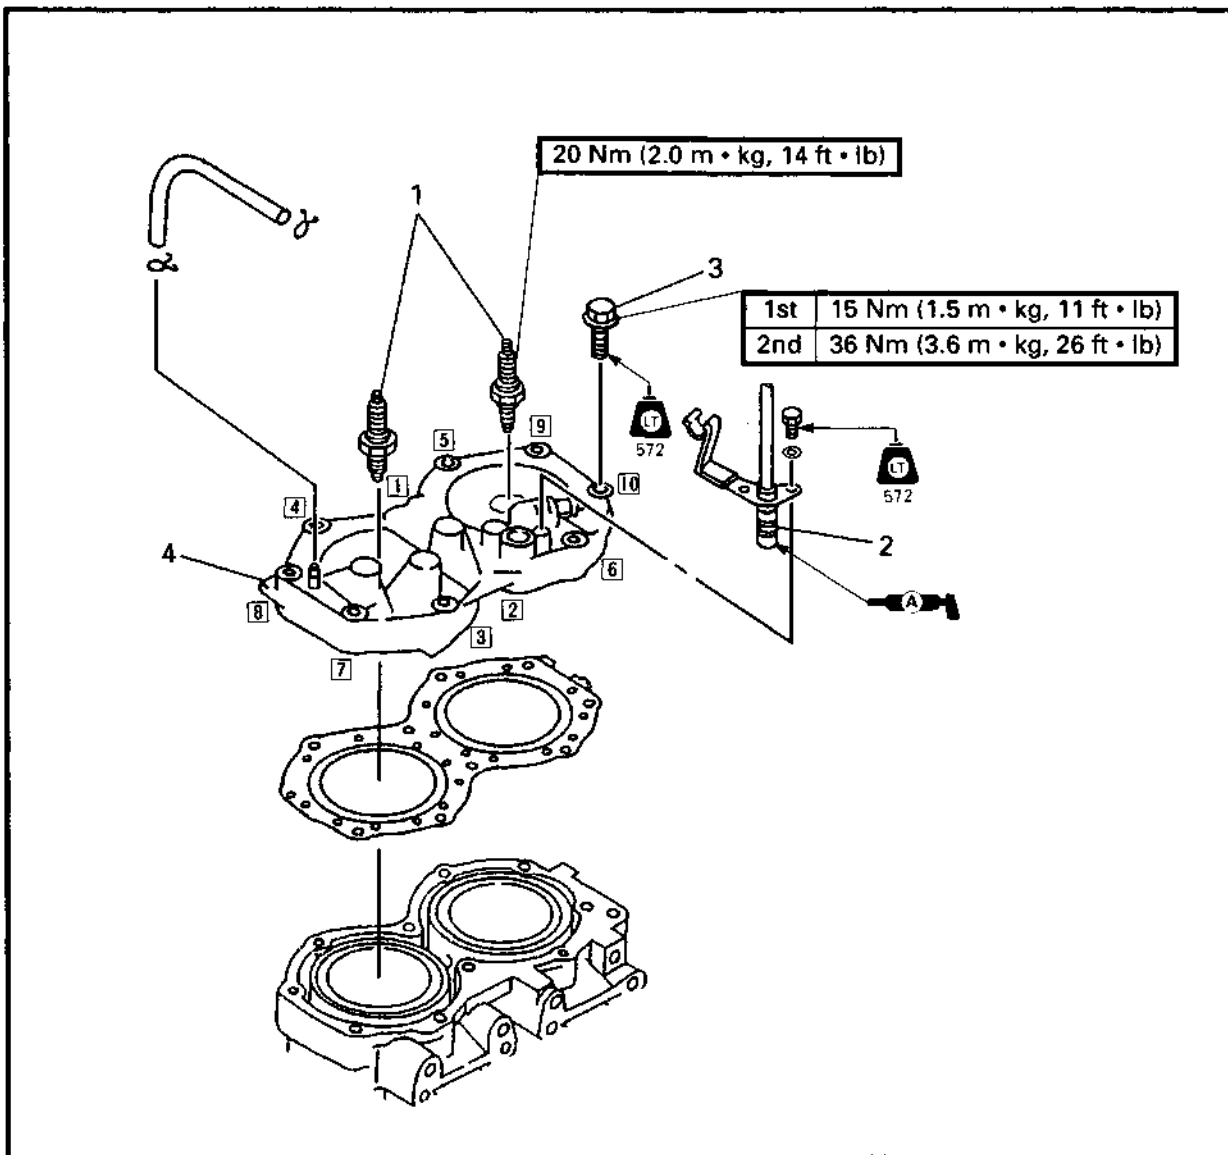

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	CYLINDER HEAD REMOVAL		
	Muffler		Follow the left "Step" for removal. Refer to "MUFFLER".
1	Spark plug	2	
2	Thermo switch assembly	1	
3	Bolt (with washer)	10	CAUTION: _____ Tighten the bolts in sequence and in two steps of torque. _____
4	Cylinder head	1	Reverse the removal steps for installation.

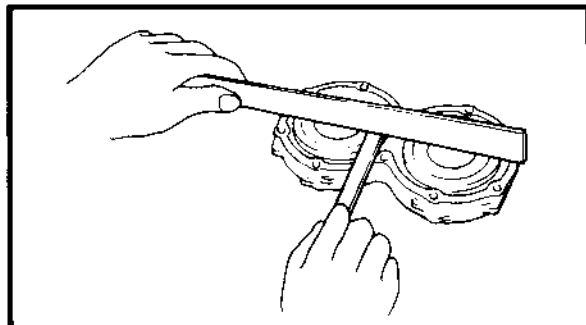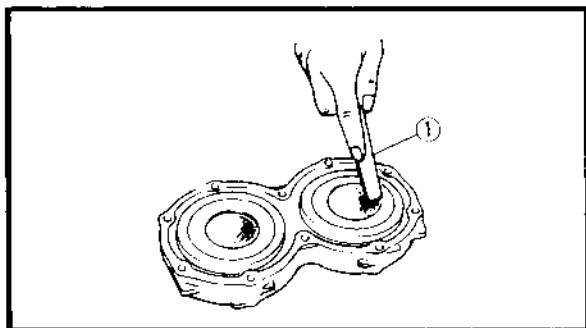**SERVICE POINTS****Cylinder head inspection****1. Eliminate:**

- Carbon deposits
Use a rounded scraper ①.

NOTE:

Take care to avoid damaging the spark plug threads. Do not use a sharp instrument. Avoid scratching the aluminum.

2. Inspect:

- Cylinder head water jacket
Mineral deposits/Corrosion → Clean.

3. Measure:

- Cylinder head warpage
Out of specification → Resurface.




Warpage limit:
0.1 mm (0.004 in)

Measurement steps:


- Attach a straight edge and a thickness gauge to the cylinder head.
- Measure the warpage.

**CYLINDER
EXPLODED DIAGRAM**

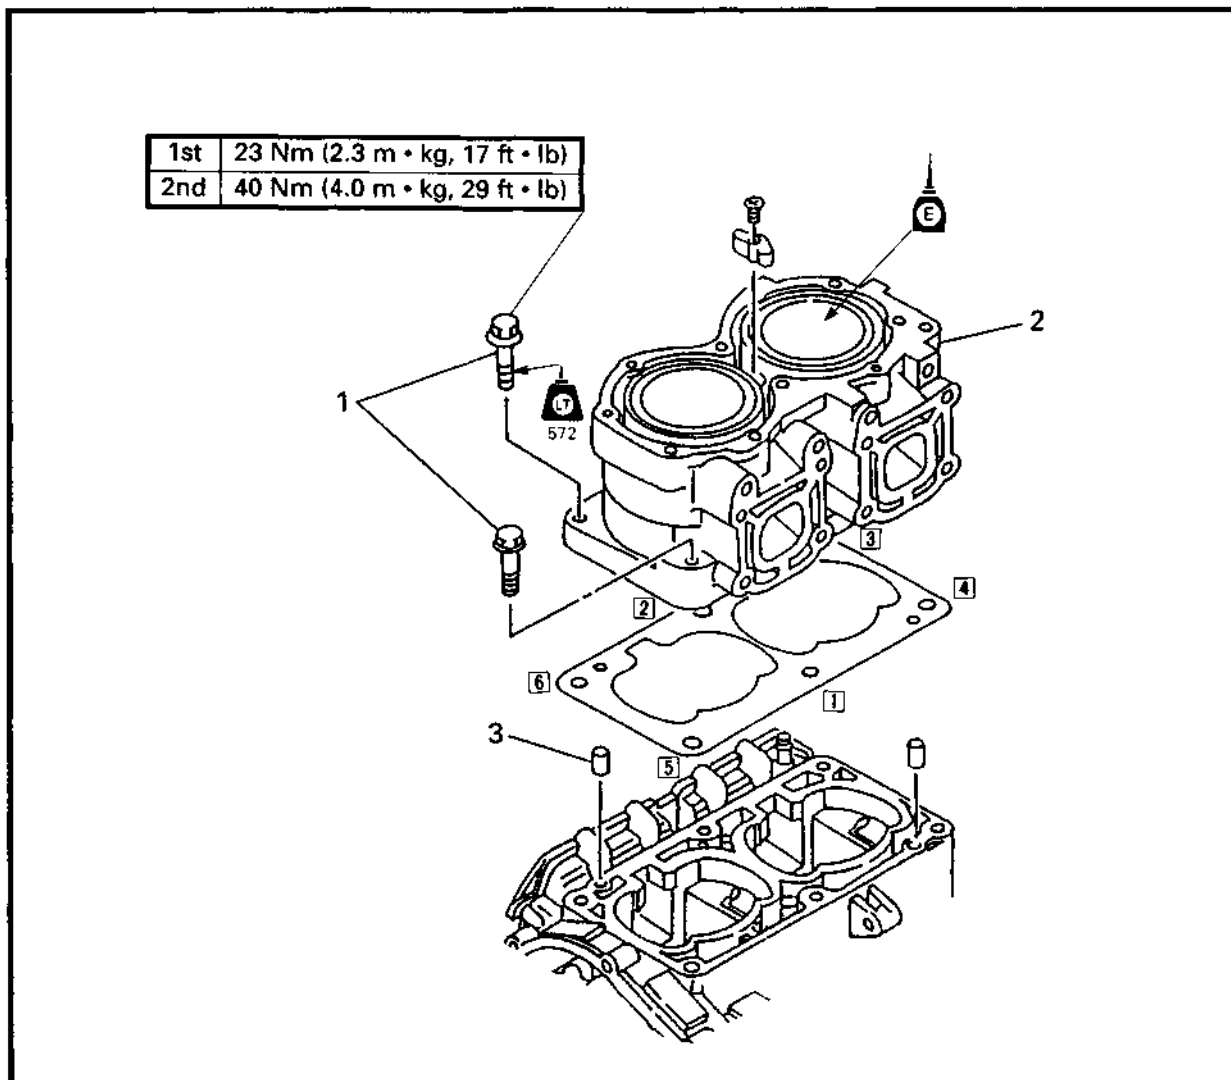

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
CYLINDER REMOVAL			
1	Cylinder head Bolt (with washer)	6	Follow the left "Step" for removal. Refer to "CYLINDER HEAD". CAUTION: Tighten the bolts in sequence and in two steps of torque.
2	Cylinder	1	CAUTION: After installing, check the smooth movement of the piston.
3	Pin	2	Reverse the removal steps for installation.

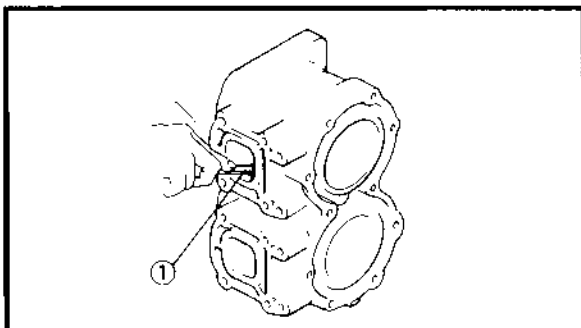

SERVICE POINTS


Cylinder inspection

1. Eliminate:

- Carbon deposits
Use a rounded scraper ①.

2. Inspect:

- Cylinder water jacket
Mineral deposits/Corrosion → Clean.
- Cylinder inner surface
Score marks → Repair or replace.
Use #600 ~ 800 grit wet sandpaper.

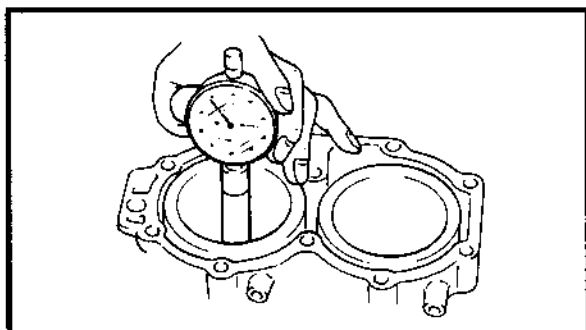



3. Measure:


- Cylinder bore "D"
Use cylinder gauge.
Out of specification → Replace.

NOTE:

Measure the cylinder bore "D" in several different directions. Then find the average of the measurements.

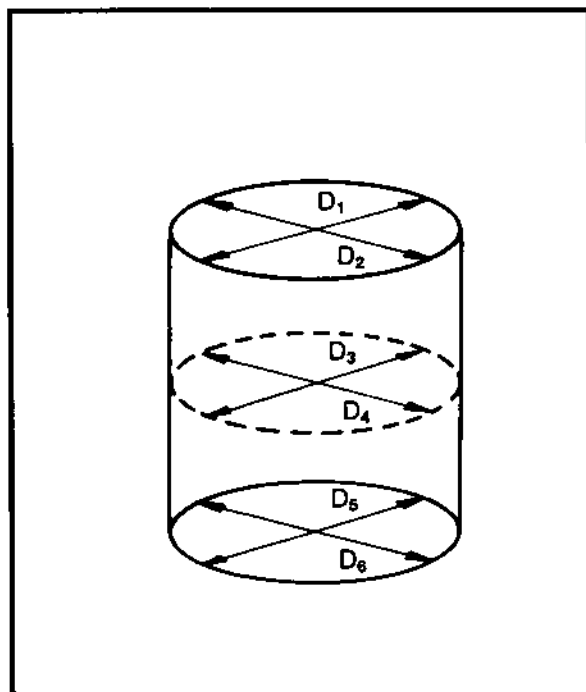

	Standard	Limit
Cylinder bore "D"	81.00 ~ 81.02 mm (3.189 ~ 3.190 in)	81.10 mm (3.193 in)
Taper "T"	—	0.08 mm (0.003 in)
Out of round "R"	—	0.05 mm (0.002 in)
D = Maximum (D ₁ ~ D ₆) T = (Maximum D ₁ or D ₂) – (Maximum D ₅ or D ₆) R = (Maximum D ₁ , D ₃ or D ₅) – (Minimum D ₂ , D ₄ or D ₆)		

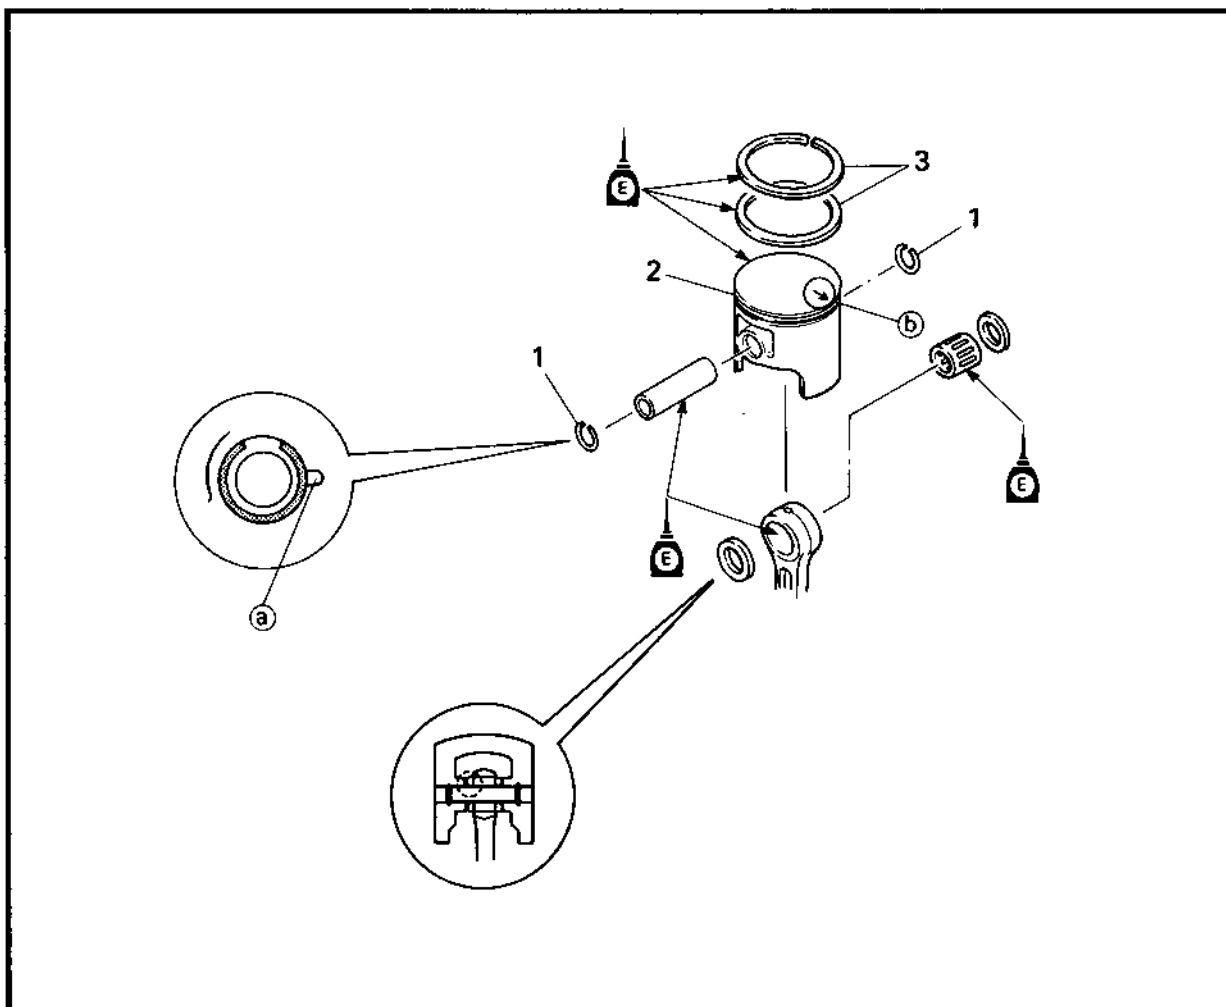**PISTON
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART


Step	Procedure/Part name	Q'ty	Service points
1	PISTON REMOVAL		Follow the left "Step" for removal. Refer to "CYLINDER".
	Cylinder		
	Piston pin clip	4	CAUTION: _____ Do not allow the clip open ends to meet the piston pin slot ③.
2	Piston	2	NOTE: _____ Be sure the arrow ⑥ side is positioned exhaust side.
3	Piston ring	4	CAUTION: _____ Align each end gap with the locating pin. Reverse the removal steps for installation.

SERVICE POINTS

Piston inspection

1. Eliminate:

- Carbon deposits
From the piston crown and ring groove.

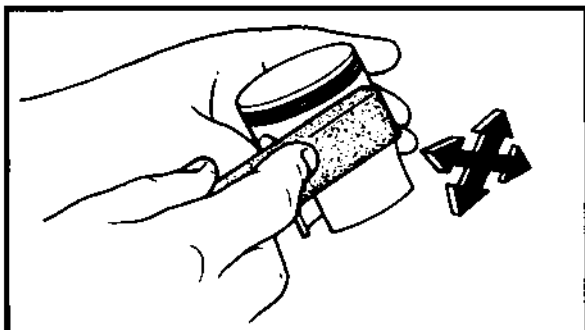


2. Inspect:

- Piston wall
Score marks → Repair or replace.
Use #600 ~ 800 grit wet sandpaper.


NOTE:

Sand in a criss-cross pattern. Do not sand excessively.

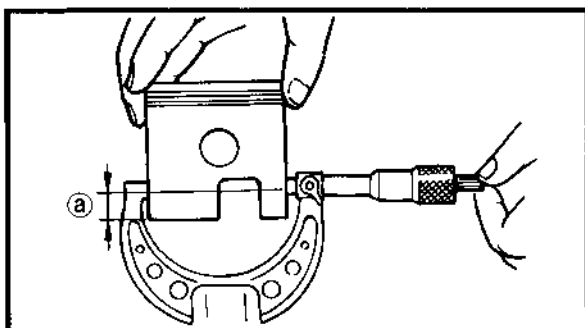

3. Measure:


- Piston skirt diameter
Use micrometer.
Out of specification → Replace.




 Piston diameter	Distance ①
80.925 ~ 80.950 mm (3.186 ~ 3.187 in)	10 mm (0.39 in)

4. Calculate:

- Piston clearance
Out of specification → Replace piston, piston rings as a set.

PISTON CLEARANCE	=	CYLINDER BORE	-	PISTON DIAMETER
-----------------------------	----------	--------------------------	----------	----------------------------

	Piston clearance: 0.070 ~ 0.075 mm (0.0028 ~ 0.0030 in)
---	--

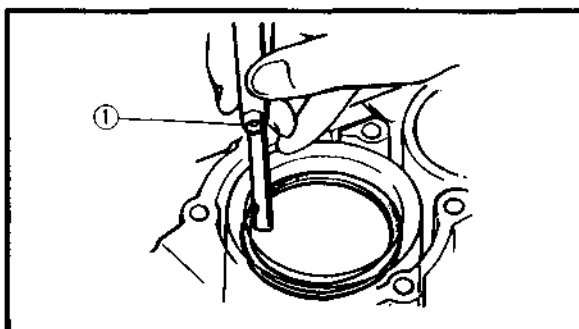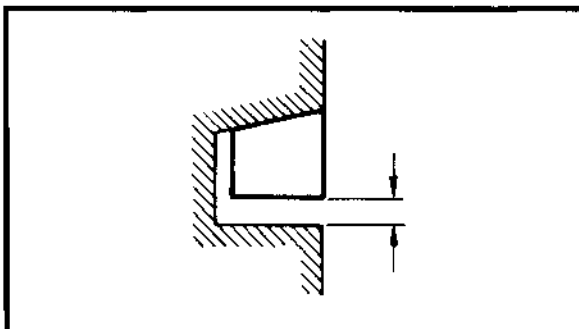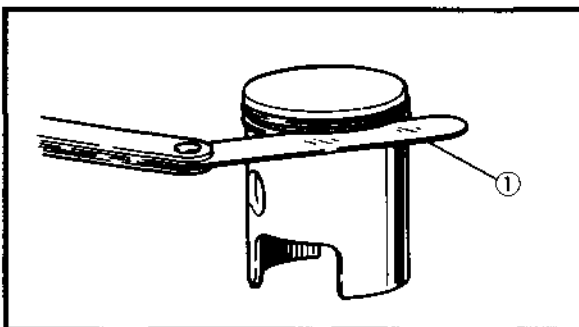

Piston ring inspection

1. Measure:

- Side clearance
Out of specification → Replace piston and/or ring.
Use a thickness gauge ①.



Side clearance:

Top
2nd
0.01 ~ 0.03 mm
(0.0004 ~ 0.0012 in)

2. Measure:

- End gap
Out of specification → Replace rings as a set.
Use a thickness gauge ①.



End gap:

Top
2nd
0.2 ~ 0.4 mm (0.008 ~ 0.016 in)


NOTE:

- Install the piston ring in the cylinder.
- Push the ring with the piston crown.

Piston pin and bearing inspection

1. Inspect:

- Piston pin
- Bearing
Signs of heat discoloration → Replace.

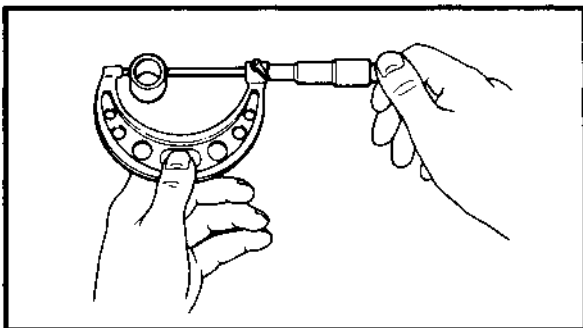

2. Measure:


- Piston pin outside diameter
Use micrometer.
Out of limit → Replace.

**Piston pin outside diameter:****Standard**

19.995 ~ 20.000 mm
(0.7872 ~ 0.7874 in)


Limit

19.98 mm (0.786 in)

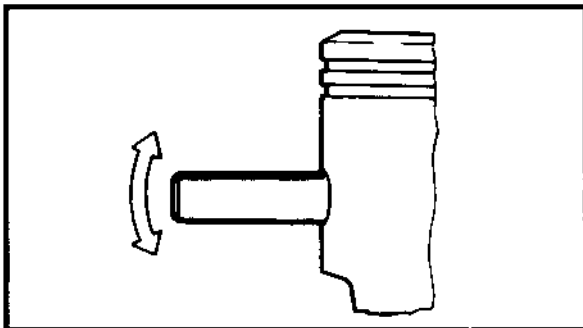


3. Check:

- Free play (when the piston pin is in place in the piston)
There should be no noticeable free play.
Free play is noticeable → Replace piston pin and/or piston.

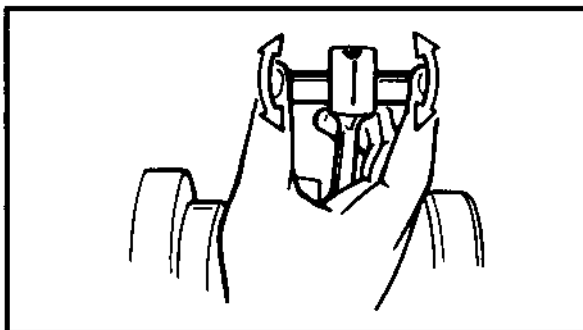

4. Check:

- Free play
There should be no noticeable free play.
Free play is noticeable → Inspect the connecting rod for wear/Replace the pin and/or connecting rod as required.

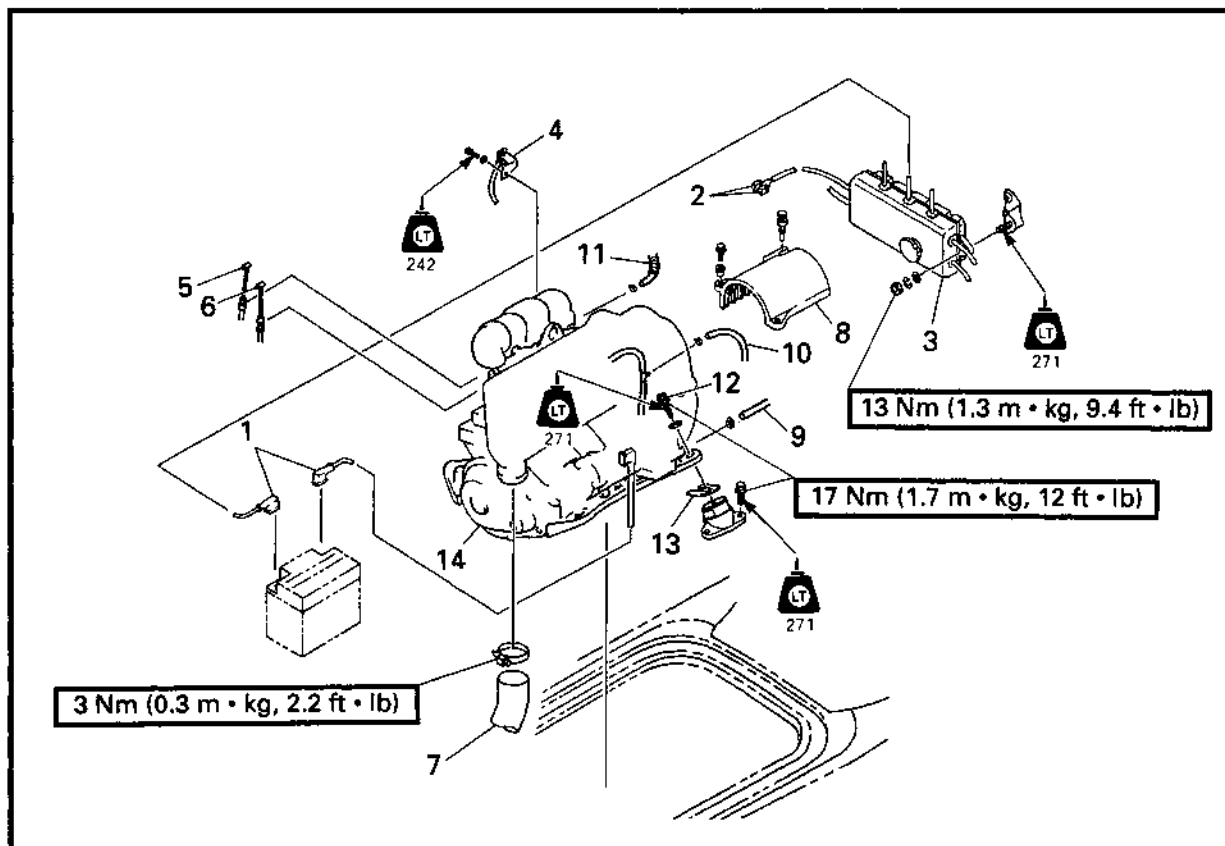**ENGINE UNIT REMOVAL
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	ENGINE UNIT REMOVAL		Follow the left "Step" for removal. Refer to "FUEL TANK" in chapter 4.
1	Fuel tank assembly	2	
2	Battery lead	2	
3	Handle switch lead coupler	1	
4	Electrical box	1	
5	Grease nipple plate	1	
6	Choke cable	1	
7	Throttle cable	1	
8	Exhaust hose	1	
9	Coupling cover	1	
10	Water inlet hose	1	
11	Pilot water hose	1	
12	Fuel hose (fuel filter - carburetor)	1	
13	Engine mounting bolt	4	
14	Shim	*	
	Engine unit	1	Reverse the removal steps for installation.

*: As required

**SERVICE POINTS****Shim removal**


1. Remove:
 - Shim

NOTE:

Mark the engine mounting shim packs prior to the mounting bolt removal for ease of reassembly and coupling alignment.

Mount bracket inspection

1. Inspect:
 - Mount bracketCrack/Damage → Replace.

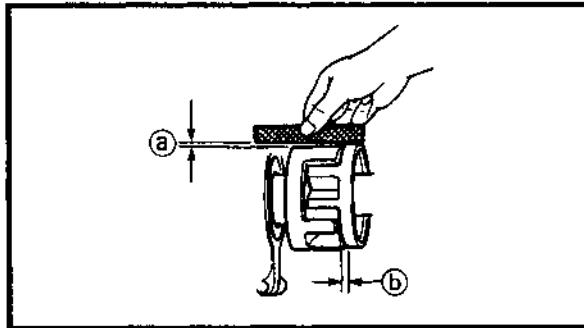**Coupling clearance inspection**

1. Check:
 - Clearance ①
 - Clearance ②Out of specification → Adjust using shim.

NOTE:

- Before measuring the clearance, remove the coupling rubber.
- Attach a straight edge and a thickness gauge.


**Clearance ①:**

0 ~ 1.0 mm (0 ~ 0.039 in)

Clearance ②:


2 ~ 4 mm (0.079 ~ 0.157 in)

FLYWHEEL MAGNETO AND BASE EXPLODED DIAGRAM

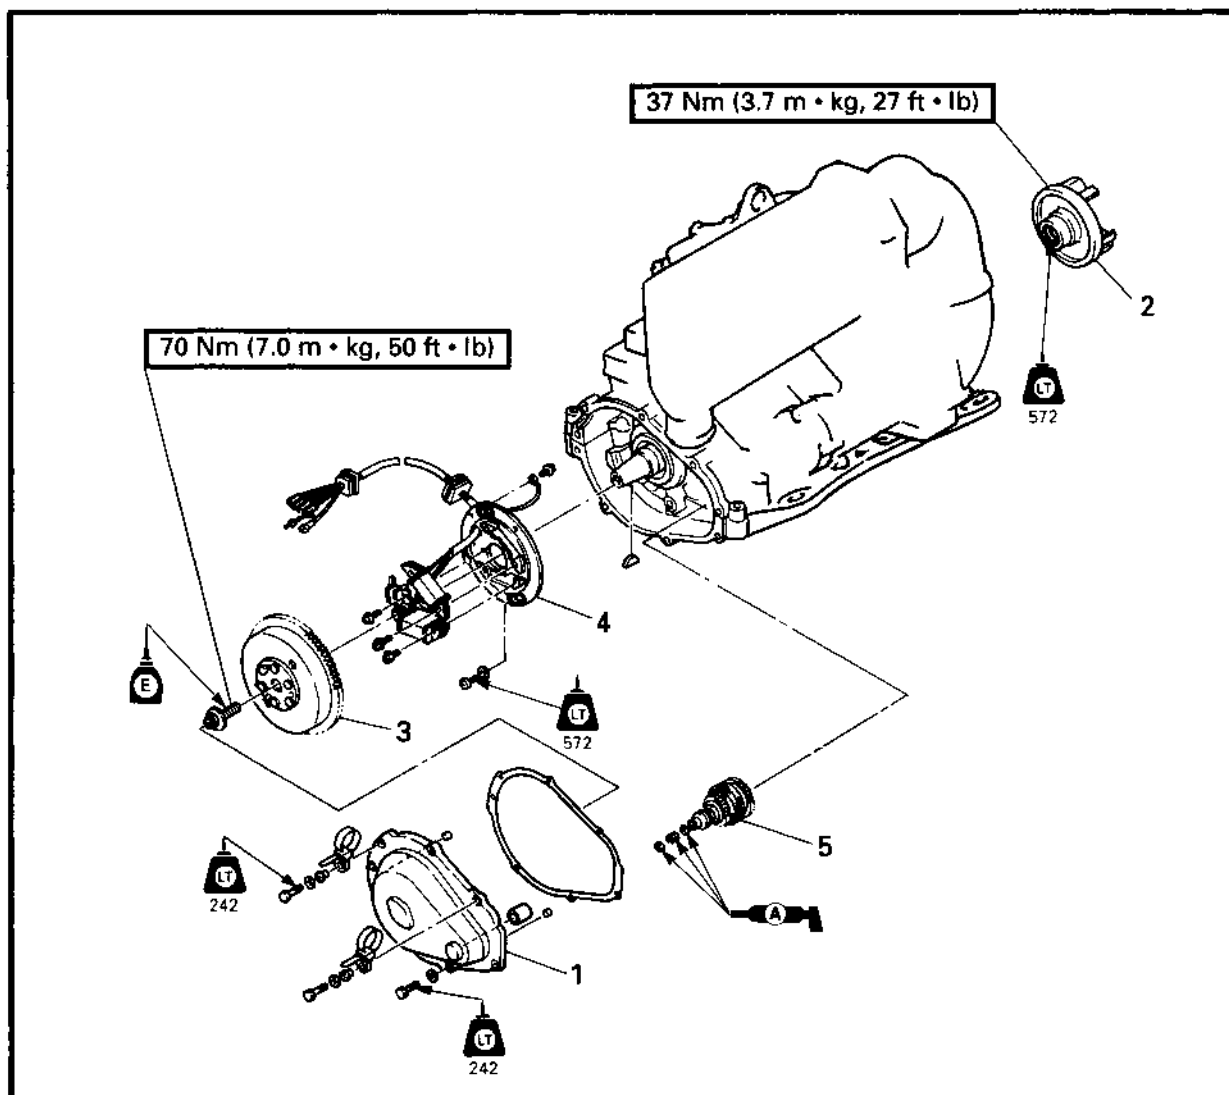

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	FLYWHEEL MAGNETO AND BASE DISASSEMBLY		Follow the left "Step" for removal.
	Fuel tank		Refer to "FUEL TANK" in chapter 4.
1	Flywheel cover	1	
2	Coupling flange	1	
3	Flywheel magneto	1	
4	Base assembly	1	NOTE: _____ Align the punch mark on the crankcase with punch mark on the base assembly.
5	Idle gear assembly	1	Reverse the removal steps for installation.

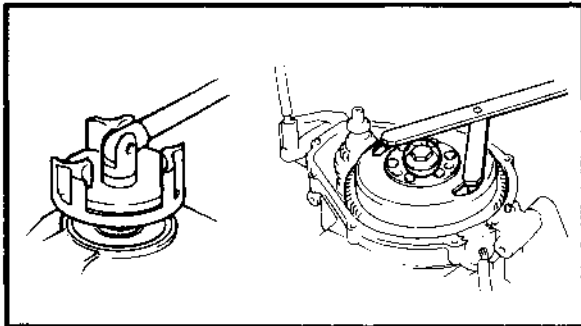

SERVICE POINTS

Coupling flange removal and installation

1. Remove and install:
 - Coupling flange



Coupler wrench:
YW-38741/90890-06425
Flywheel holder:
YB-06139/90890-06522

Flywheel magneto removal and installation

1. Remove and install:
 - Bolt




Flywheel holder:
YB-06139/90890-06522

2. Remove:
 - Flywheel magneto



Flywheel puller:
YB-06117/90890-06521

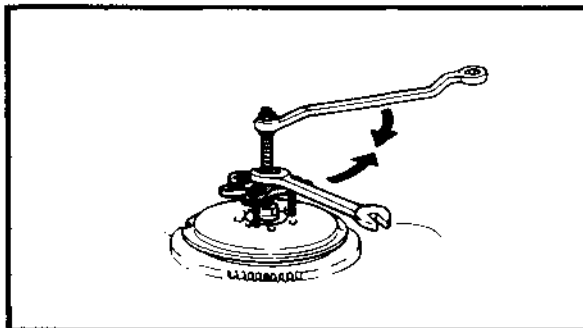

CAUTION

To prevent damage to the engine or tools, screw in the flywheel puller set-bolts evenly and completely so that the puller plate is parallel to the flywheel.

Coupling flange inspection


1. Inspect:
 - Coupling flange
 Wear/Damage → Replace.


Flywheel magneto inspection

1. Inspect:
 - Flywheel gear
 Wear/Damage → Replace.

Idle gear assembly inspection


1. Inspect:
 - Pinion gear (a)
 - Inner gear (b)
 Wear/Damage → Replace.
2. Check:
 - Clutch movement
 Unsmooth movement → Replace.

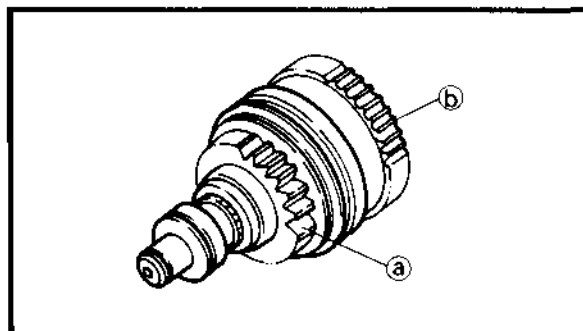

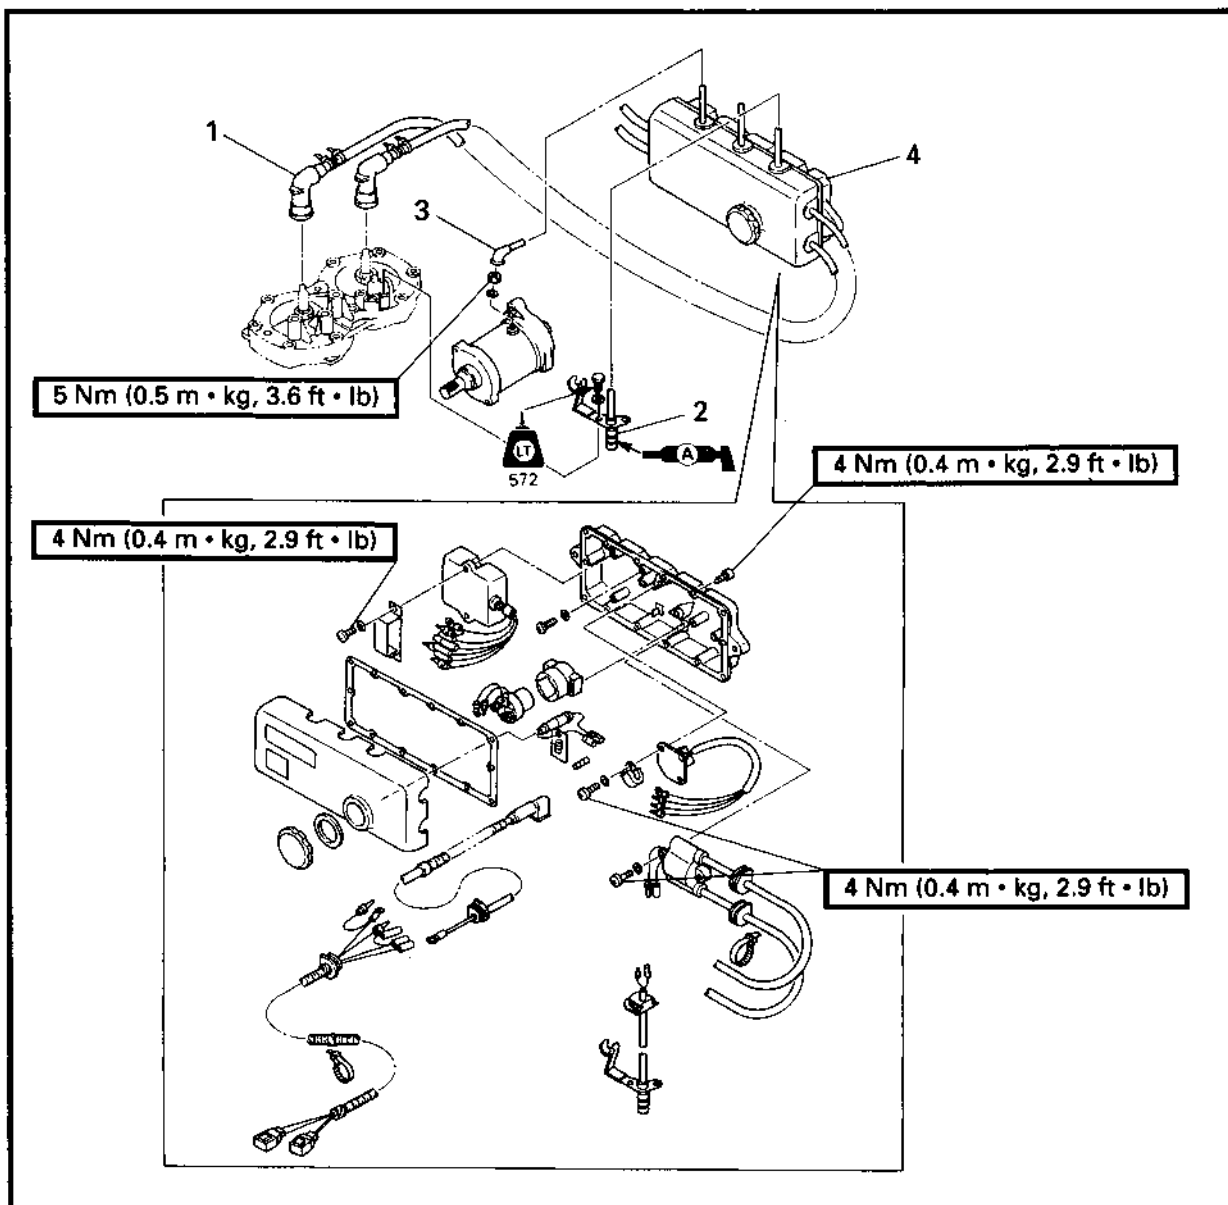**ELECTRICAL UNIT
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART


Step	Procedure/Part name	Q'ty	Service points
	ELECTRICAL UNIT REMOVAL		
	Electrical box		Follow the left "Step" for removal.
	Base assembly		Refer to "ENGINE UNIT REMOVAL".
1	Spark plug cap	2	Refer to "FLYWHEEL MAGNETO AND BASE".
2	Thermo switch	1	
3	Starter motor negative lead	1	
4	Housing	1	
			Reverse the removal steps for installation.

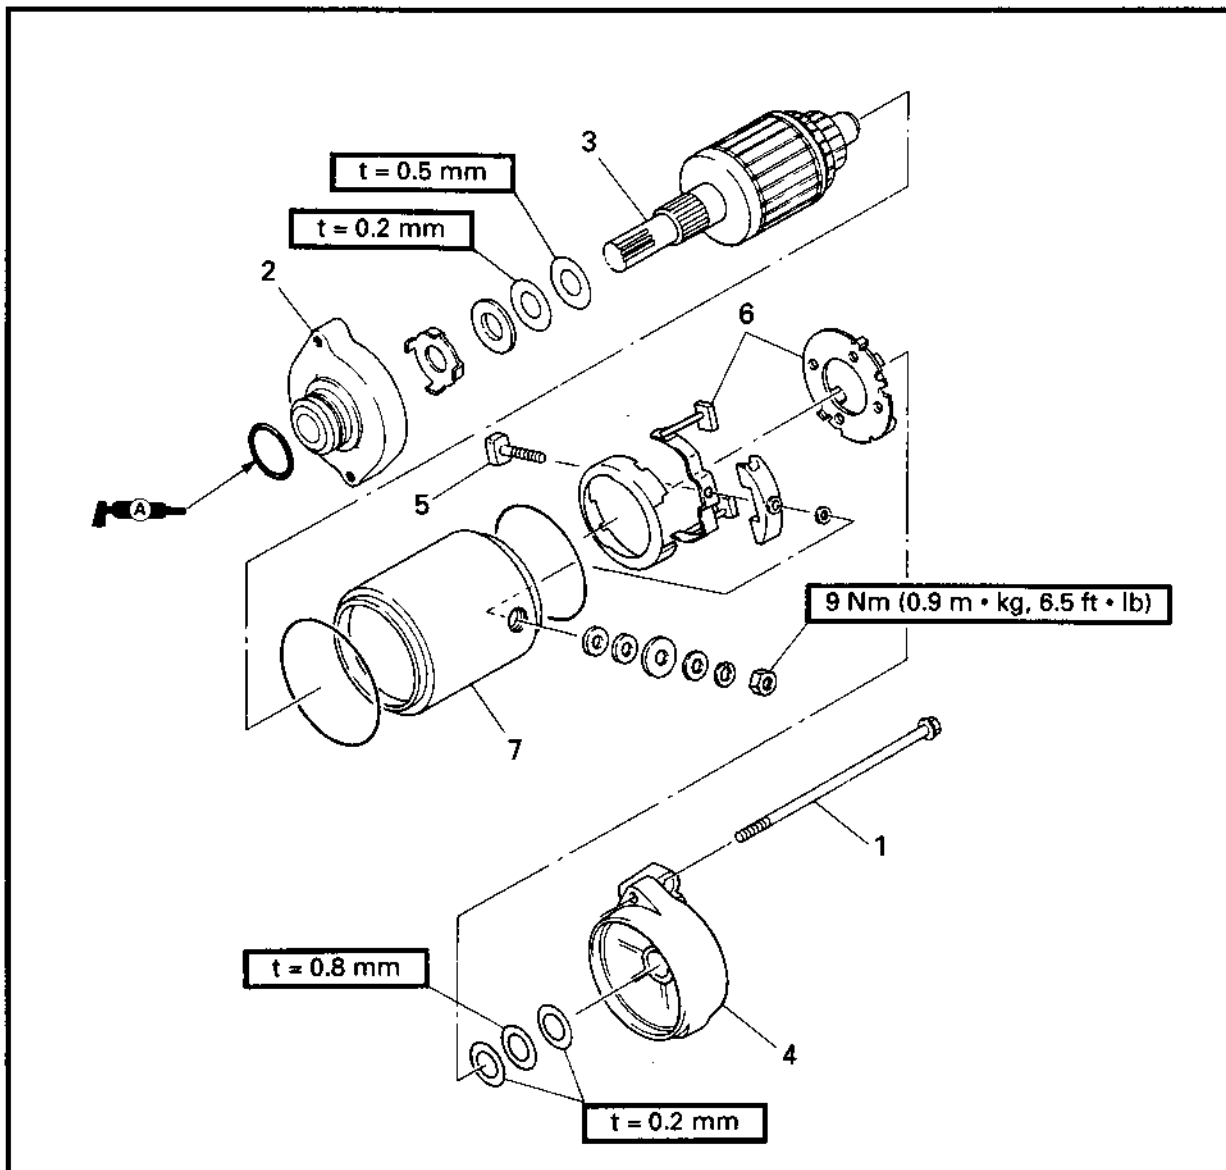STARTER MOTOR EXPLODED DIAGRAM



REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	STARTER MOTOR DISASSEMBLY		
	Starter motor assembly		Follow the left "Step" for removal. Refer to "CRANKCASE".
1	Through bolt	2	
2	Front bracket	1	
3	Armature assembly	1	
4	Rear bracket	1	
5	Bolt	1	
6	Brush holder	1	
7	York assembly	1	
			Reverse the removal steps for installation.

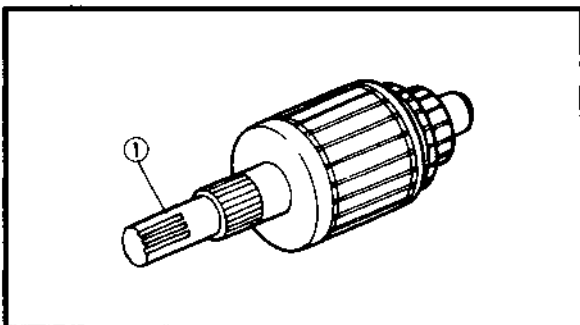


SERVICE POINTS

Pinion inspection

1. Inspect:


- Pinion teeth ①
Wear/Damage → Replace.

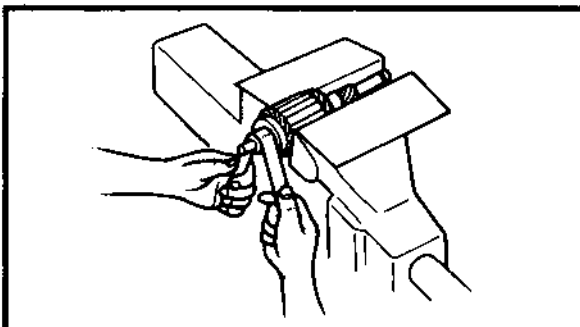

Armature inspection

1. Inspect:

- Commutator
Dirty → Clean with #600 abrasive paper.

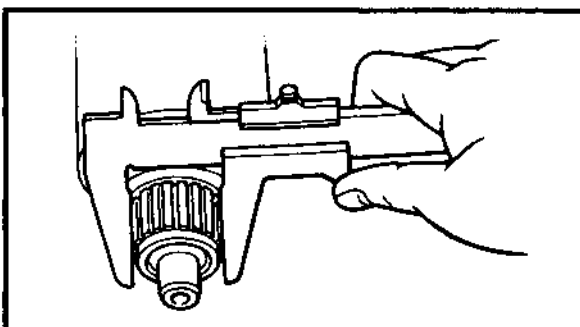


2. Measure:

- Commutator diameter
Out of specification → Replace.



Commutator diameter:
Limit 27 mm (1.06 in)

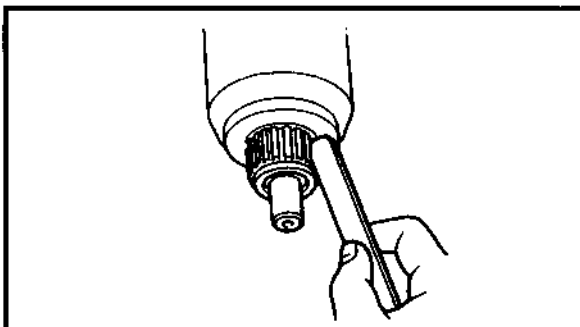


3. Check:

- Commutator undercut
Clog/Dirt → Clean.

NOTE:

Remove all particles of mica and metal using compressed air.

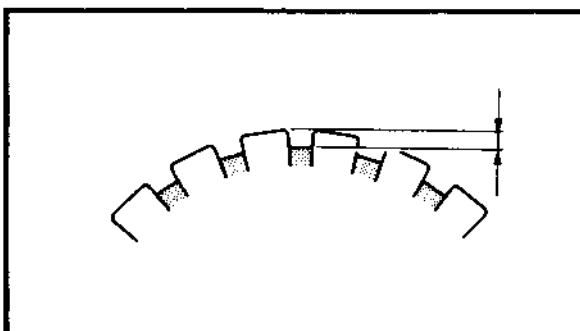


4. Measure:

- Commutator undercut
Out of specification → Replace.



Commutator undercut:
Limit 0.2 mm (0.01 in)

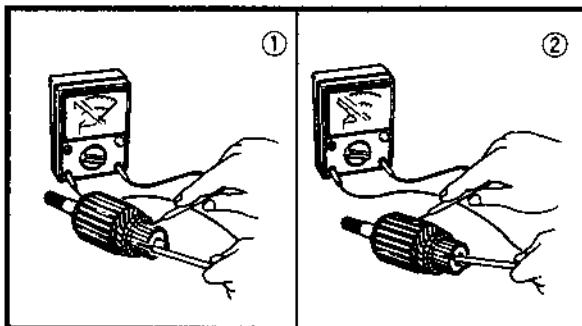


5. Inspect:

- Armature coil continuity
Out of specification → Replace.



Armature coil continuity:

Commutator segments ①	Continuity
Segment - Laminations ②	Discontinuity
Segment - Shaft	Discontinuity

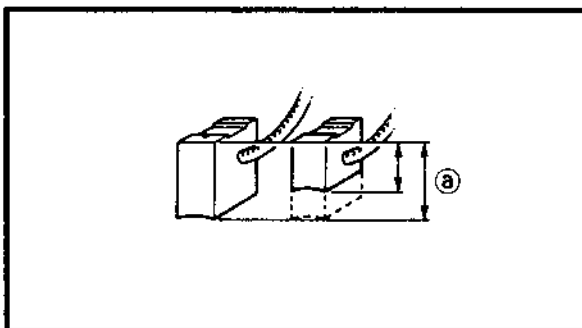


Brush holder inspection

1. Measure:

- Brush length ①
Out of specification → Replace.



Brush length:
Limit 6.5 mm (0.26 in)

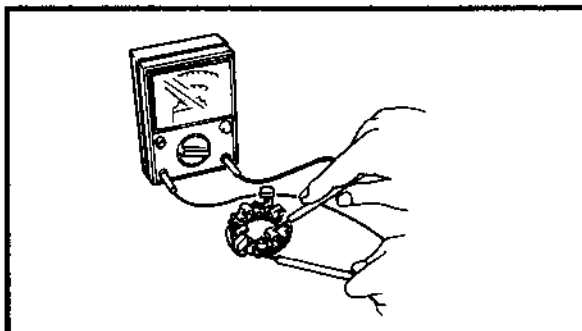


2. Check:

- Brush holder continuity
Out of specification → Replace.



Brush holder continuity:

Brush holder - Base	Discontinuity
---------------------	---------------

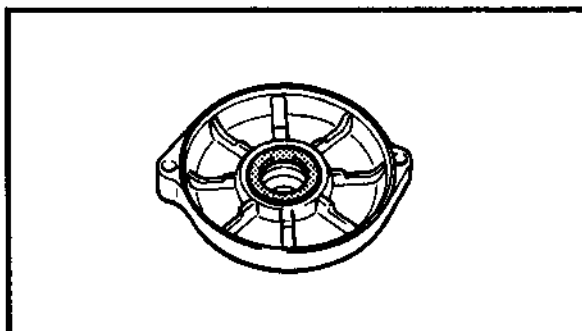


Cover inspection

1. Inspect:

- Cover bushing
Wear/Damage → Replace the cover.

CRANKCASE EXPLODED DIAGRAM

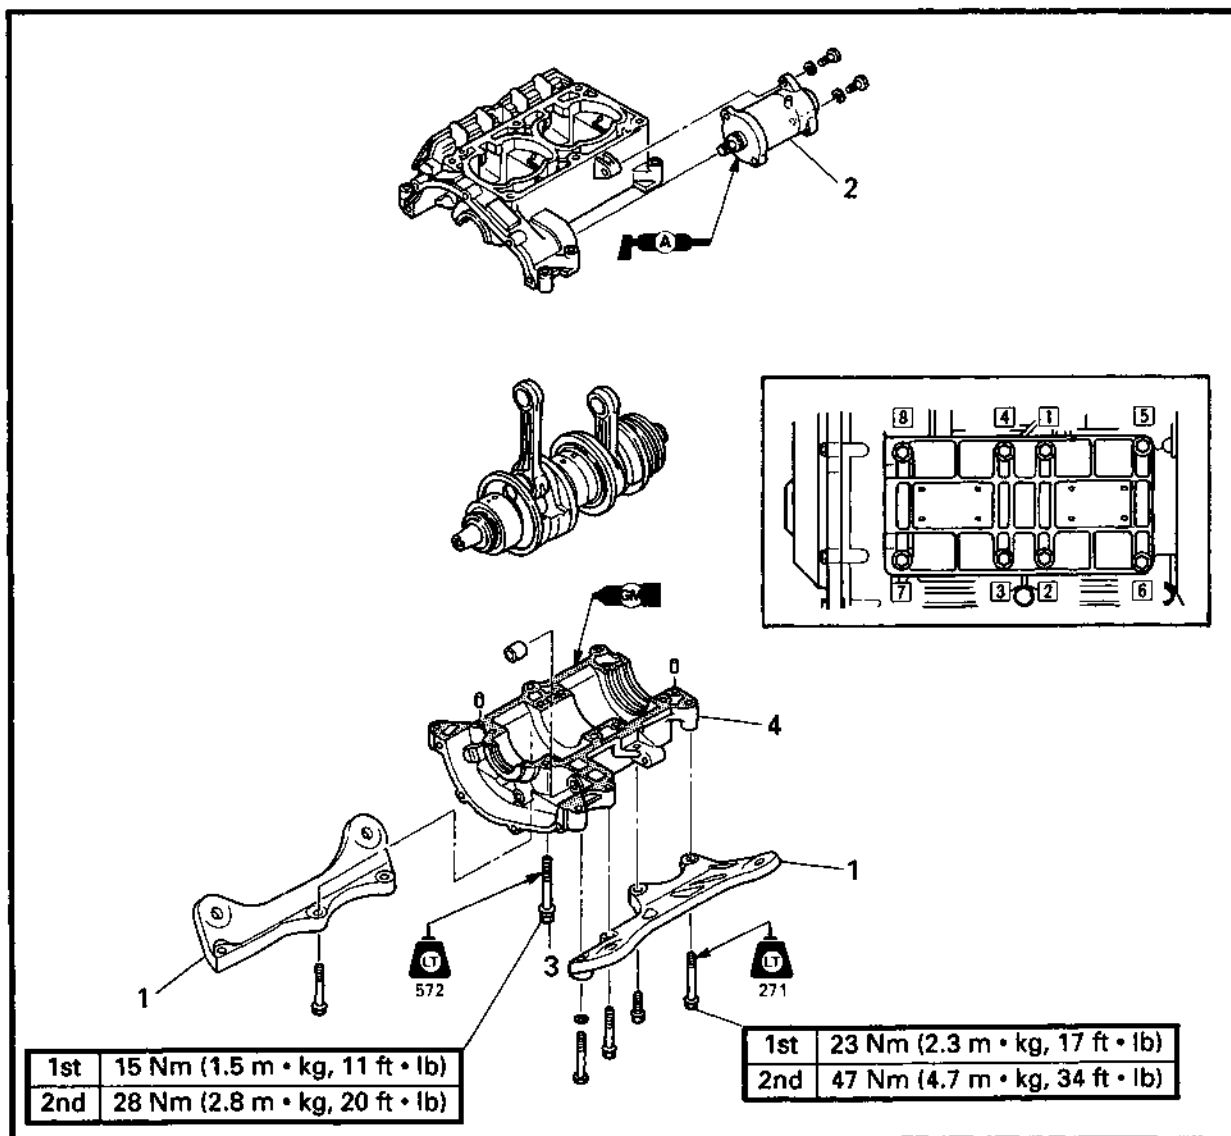


REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	CRANKCASE DISASSEMBLY		
	Base assembly		Follow the left "Step" for removal. Refer to "FLYWHEEL MAGNETO AND BASE".
	Piston		Refer to "PISTON".
1	Engine mount bracket	2	
2	Starter motor	1	
3	Bolt (with washer)	8	NOTE: _____
4	Crankcase	1	Tighten the bolts in sequence and in two steps of torque.
			Reverse the removal steps for installation.

SERVICE POINTS

Crankcase inspection

1. Inspect:
 - Contacting surface
Scratch → Replace.
 - Crankcase
Crack/Damage → Replace.

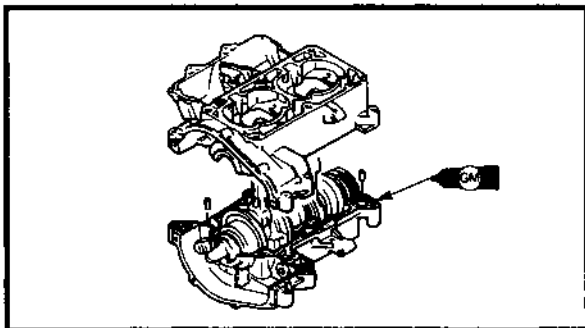


Crankcase installation

1. Apply:
 - Gasket Maker

NOTE: _____
Clean the contacting surface of crankcase before applying the Gasket Maker.


2. Check:
 - Crankshaft
Rough action → Repair.

CRANKSHAFT EXPLODED DIAGRAM

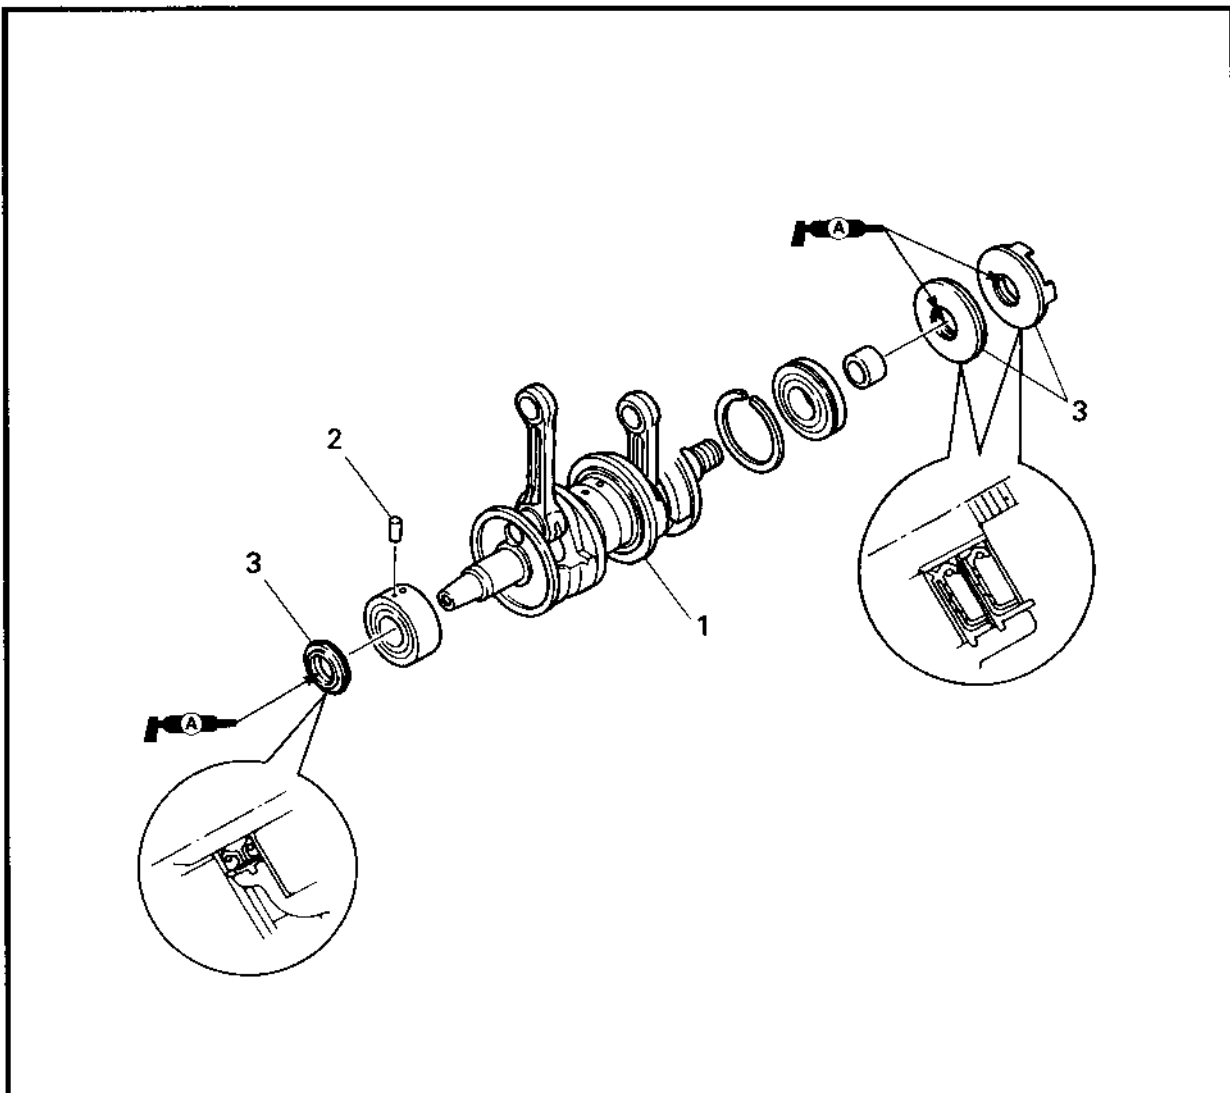

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
1	CRANKSHAFT REMOVAL	1	Follow the left "Step" for removal. Refer to "CRANKCASE". CAUTION: ● Do not allow the bearing clip open ends to meet the crankcase contacting surface. ● Place the locating pins on the bearing into the crankcase body groove.
	Crankcase		
	Crankshaft assembly		
2	Dowel pin	5	Reverse the removal steps for installation.
3	Oil seal	3	

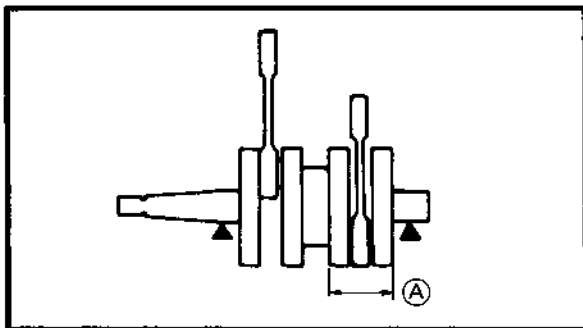

SERVICE POINTS

Crankshaft inspection


1. Measure:

- Crank width (A)

Out of specification → Replace.



Crank width:
61.95 ~ 62.00 mm
(2.439 ~ 2.441 in)

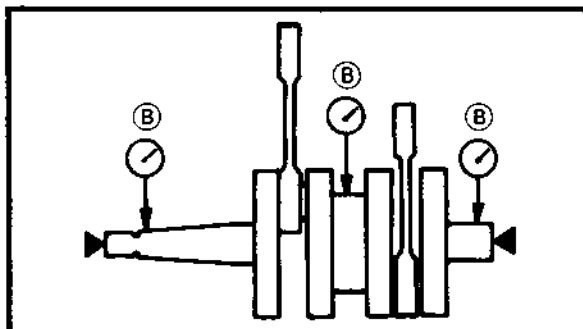

2. Measure:


- Deflection (B)

Use a dial gauge.

Out of specification → Replace.



Maximum deflection:
0.05 mm (0.002 in)

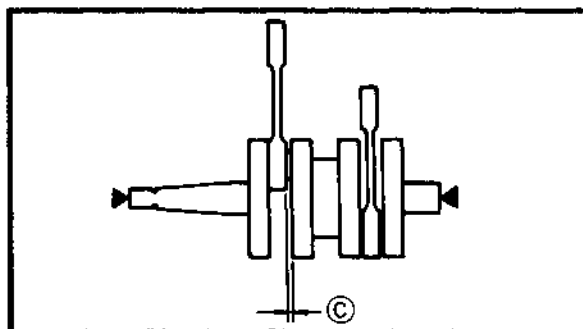

3. Measure:


- Big end side clearance (C)

Use a thickness gauge.

Out of specification → Replace.



Big end side clearance:
0.25 ~ 0.75 mm
(0.010 ~ 0.030 in)

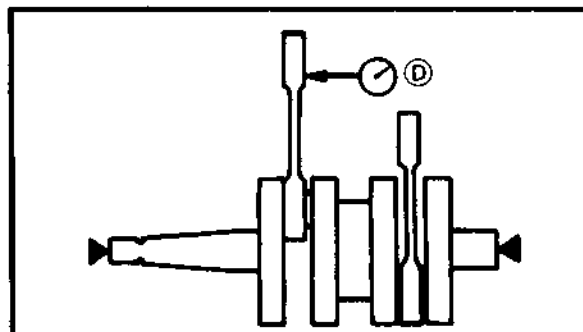

4. Measure:


- Small end free play (D)

Use a dial gauge.

Out of specification → Replace.



Small end free play:
2.0 mm (0.08 in)

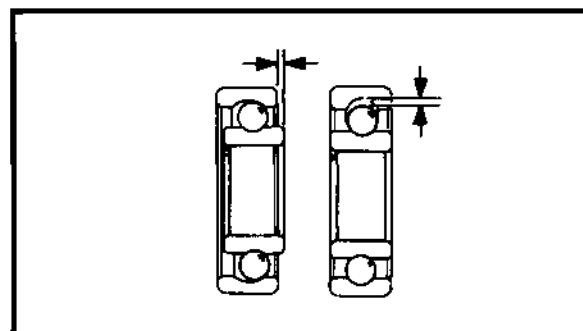

5. Inspect:

- Crankshaft bearing

Pitting/Damage → Replace.

NOTE:


Lubricate the bearings immediately after examining them to prevent rusting.

6. Inspect:

- Crankshaft oil seal

Wear/Damage → Replace.

INTERMEDIATE HOUSING REMOVAL EXPLODED DIAGRAM

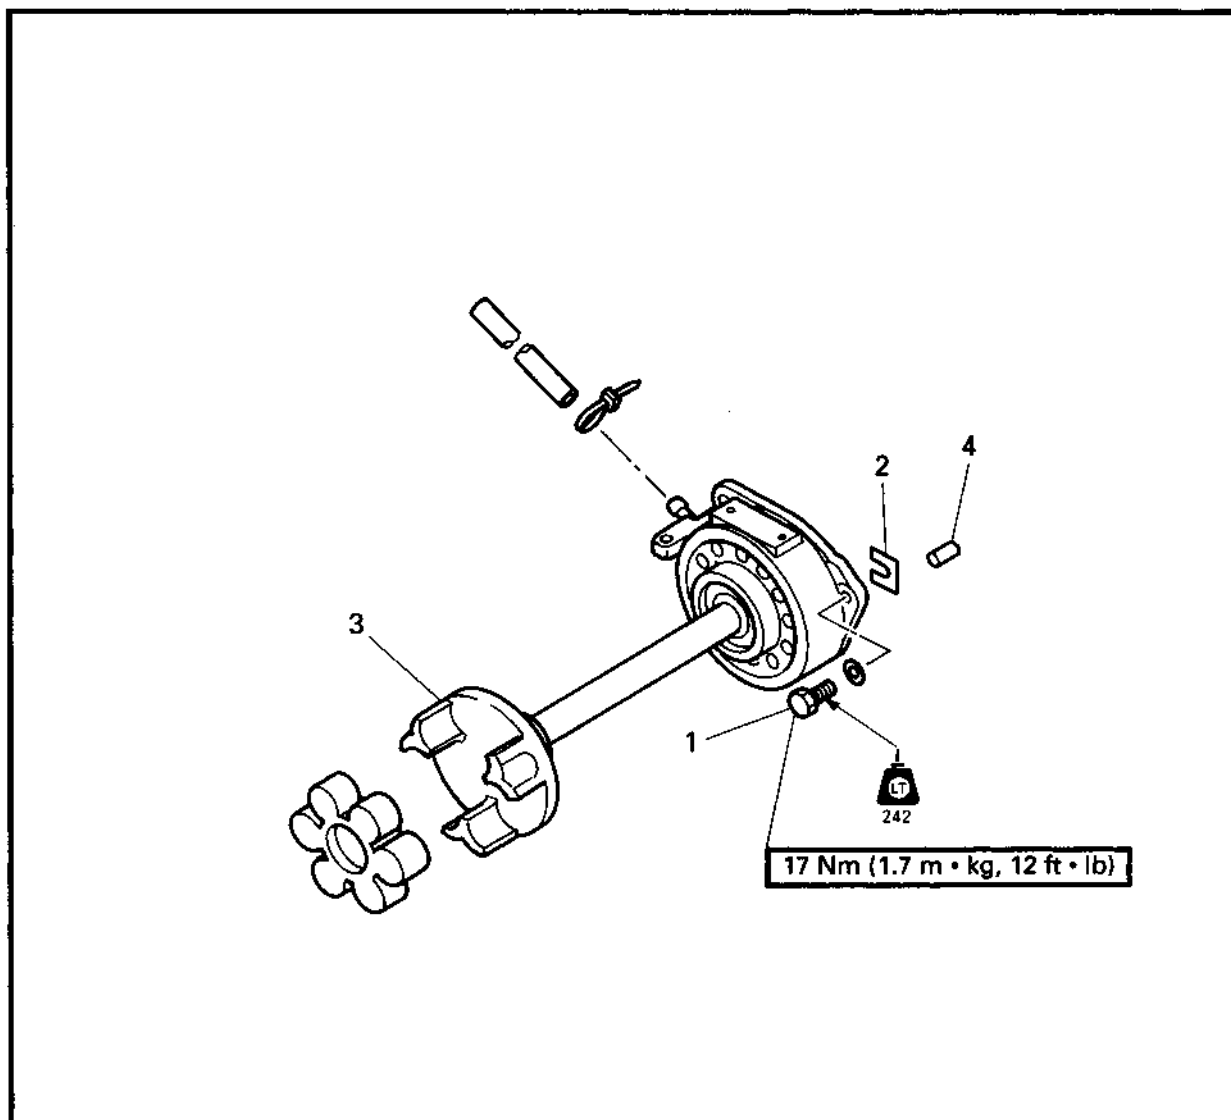


REMOVAL AND INSTALLATION CHART


Step	Procedure/Part name	Q'ty	Service points
	INTERMEDIATE HOUSING REMOVAL		
1	Engine unit	3	Follow the left "Step" for removal.
2	Bolt (with washer)	*	Refer to "ENGINE UNIT REMOVAL".
	Shim		NOTE: _____ Install the previously marked shims back into their original location.
3	Bearing housing assembly	1	
4	Pin	2	
			Reverse the removal steps for installation.


*: As required

**INTERMEDIATE HOUSING
EXPLODED DIAGRAM**

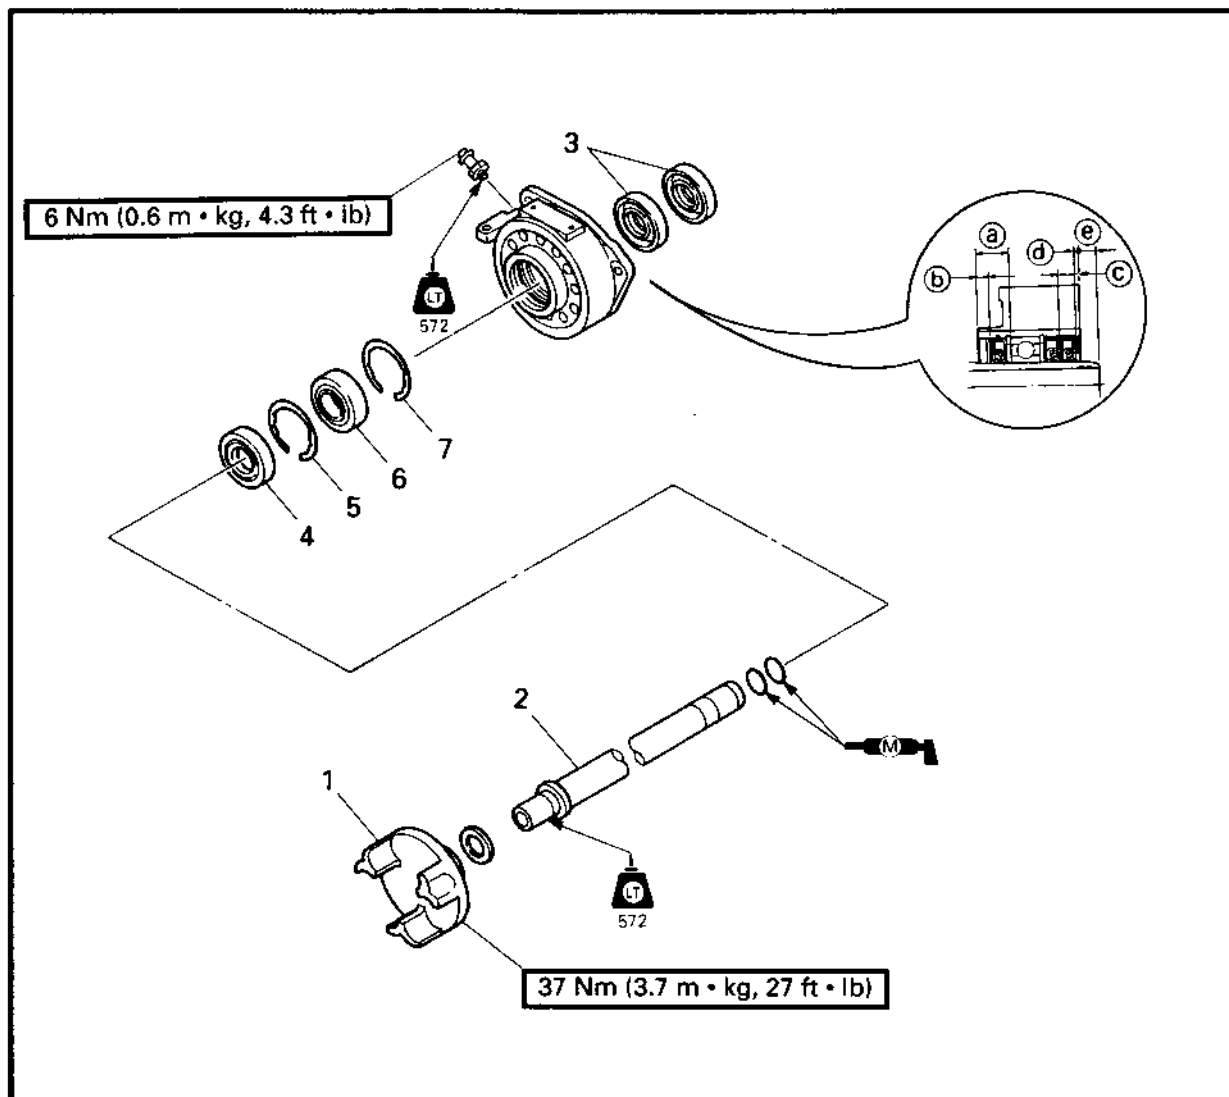

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	INTERMEDIATE HOUSING DISASSEMBLY		Follow the left "Step" for removal.
	Bearing housing assembly		Refer to "INTERMEDIATE HOUSING REMOVAL".
1	Coupling	1	 Distance: a: 17.6 ~ 18.0 mm (0.69 ~ 0.71 in) b: 6.4 ~ 7.2 mm (0.25 ~ 0.28 in) c: 10.3 ~ 10.7 mm (0.41 ~ 0.42 in) d: 1.6 ~ 2.0 mm (0.06 ~ 0.08 in) e: 19.5 ~ 20.5 mm (0.77 ~ 0.81 in)
2	Shaft	1	
3	Oil seal	2	
4	Oil seal	1	
5	Clip	1	
6	Bearing	1	
7	Clip	1	
			Reverse the removal steps for installation.

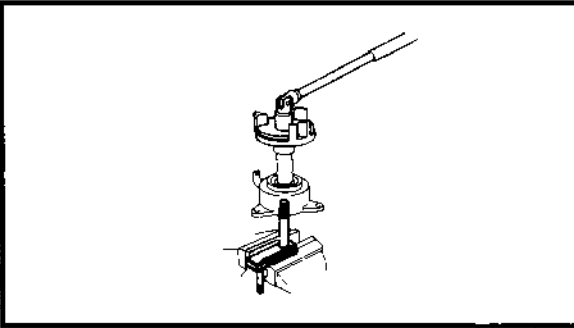

SERVICE POINTS


Coupling removal and installation

1. Remove and install:

- Coupling



Coupler wrench:
YW-38741/90890-06425
Shaft holder:
YW-38742/90890-06069

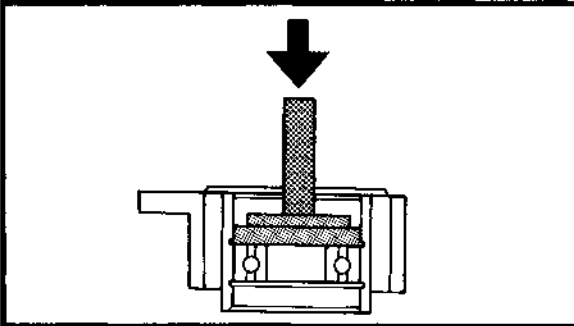


Bearing removal and installation

1. Remove and install:

- Bearing



Driver rod:
YB-06071/90890-06606
Bearing outer race attachment:
YB-06016/90890-06626

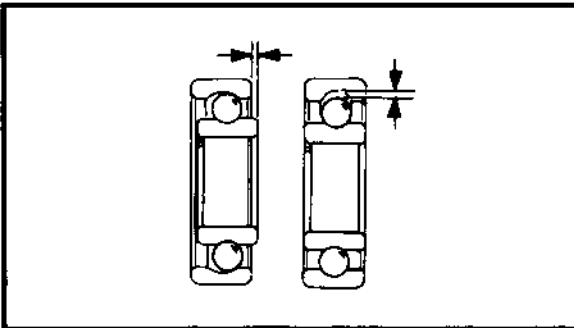

Bearing inspection

1. Inspect:

- Bearing
Rotate inner race by hand.
Rough spots/Seizure → Replace.
- Shaft
Pitting/Damage → Replace.
- Hose
Wear/Cracks → Replace.

Coupling inspection

1. Inspect:

- Coupling flange
- Coupling rubber
Wear/Damage → Replace.


Oil seal installation

1. Install:

- Oil seal [T = 10 mm (0.38 in)]




Driver rod:
YB-06071/90890-06606
Bearing outer race attachment:
YB-06016/90890-06626

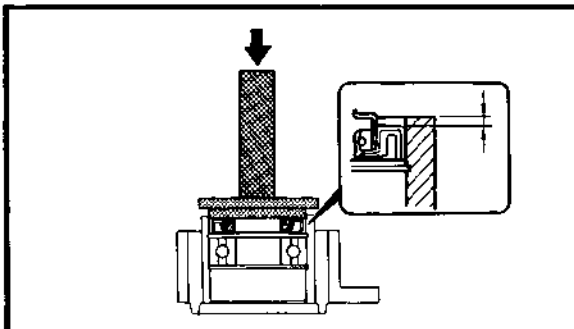

NOTE:

Fill the with water resistant grease clip inner circumference before installing the oil seal.

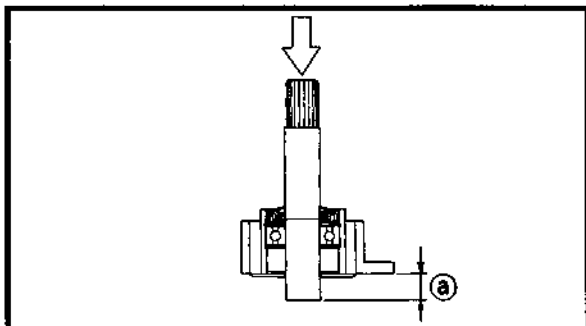


2. Install:

- Shaft



Distance ①:
19.5 ~ 20.5 mm (0.77 ~ 0.81 in)

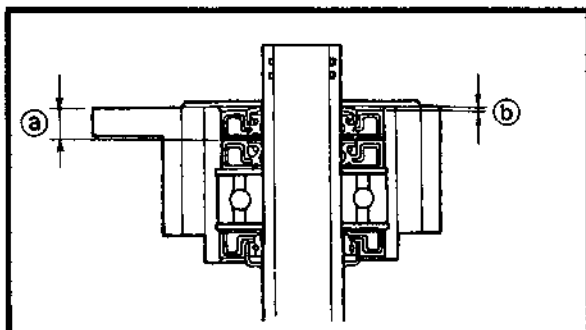

3. Install:

- Oil seal



Distance ①:
10.3 ~ 10.7 mm (0.41 ~ 0.42 in)
Distance ②:
1.6 ~ 2.0 mm (0.06 ~ 0.08 in)

NOTE:

Fill the with water resistant grease clip inner circumference before installing the oil seal.

4. Fill:

- Shaft




Water resistant grease:
8 cm³ (0.5 cu.in)

CHAPTER 6


JET PUMP UNIT

JET PUMP UNIT REMOVAL	6-1
EXPLODED DIAGRAM	6-1
REMOVAL AND INSTALLATION CHART.....	6-1
 DEFLECTOR, NOZZLE AND DUCT	6-2
EXPLODED DIAGRAM	6-2
REMOVAL AND INSTALLATION CHART.....	6-2
 IMPELLER AND DRIVE SHAFT	6-3
EXPLODED DIAGRAM	6-3
REMOVAL AND INSTALLATION CHART.....	6-3
SERVICE POINTS	6-4
Impeller removal	6-4
Drive shaft and bearing removal	6-4
Impeller inspection.....	6-4
Drive shaft inspection	6-4
Bearing inspection.....	6-4
Oil seal and bearing installation.....	6-5
Impeller installation.....	6-5
 BILGE SYSTEM	6-6
EXPLODED DIAGRAM	6-6
REMOVAL AND INSTALLATION CHART.....	6-6
SERVICE POINTS	6-6
Bilge strainer inspection	6-6
Hose inspection	6-6

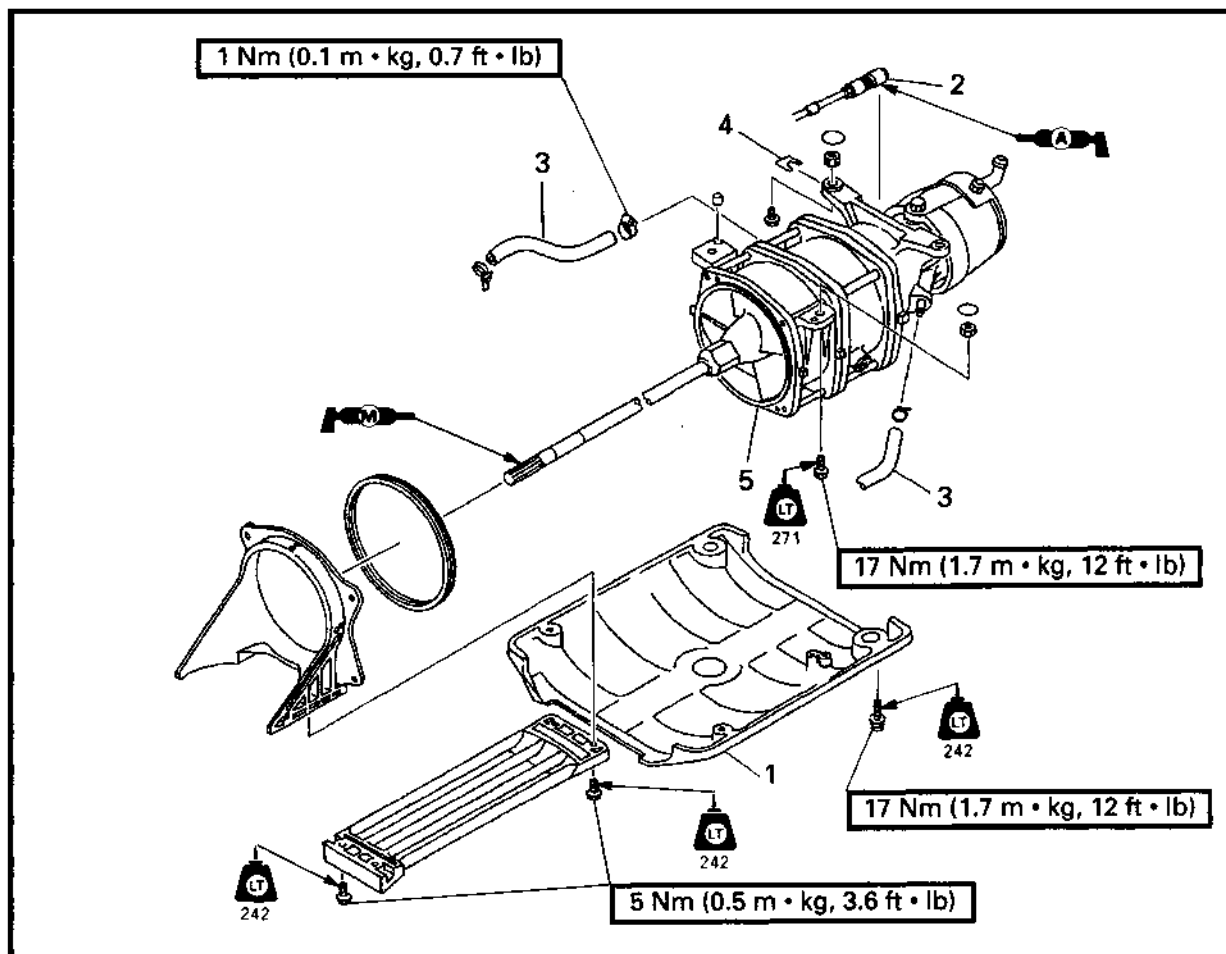
**JET PUMP UNIT REMOVAL
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	JET PUMP UNIT REMOVAL		Follow the left "Step" for removal.
1	Ride plate	1	
2	Steering cable joint	1	
3	Water hose	2	
4	Shim	*	NOTE: _____ Mark jet pump mounting shim packs prior to the mounting bolt removal for ease of reassembly.
5	Jet pump unit	1	NOTE: _____ Pull the jet pump unit until upward (if the hull is upside down) to release it from the knock pins and pull it straight backward. Reverse the removal steps for installation.

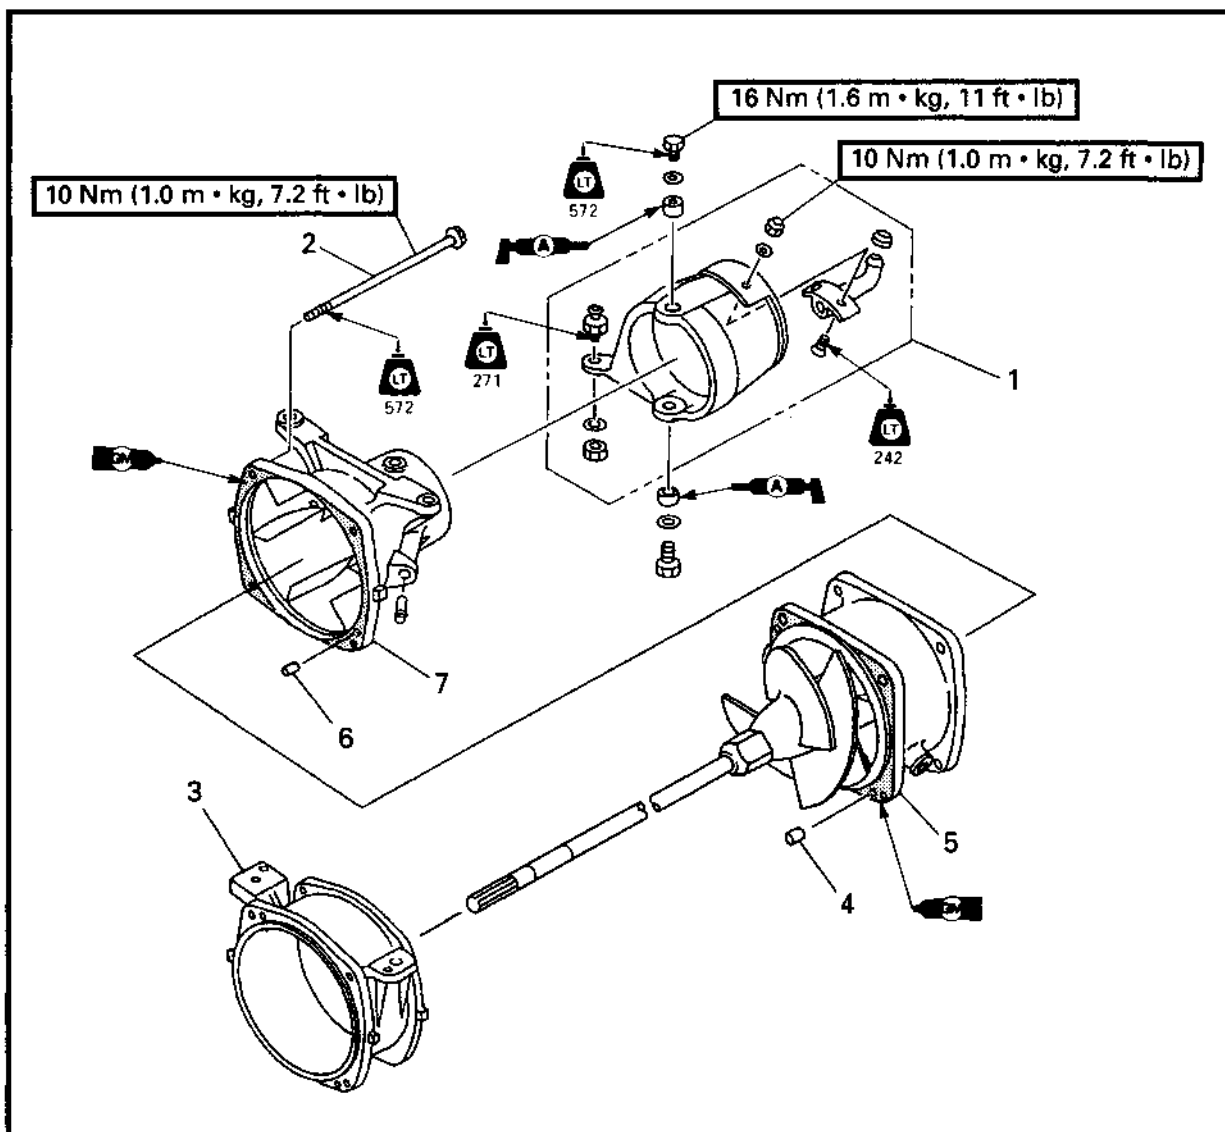
*: As required

**DEFLECTOR, NOZZLE AND DUCT
EXPLODED DIAGRAM**

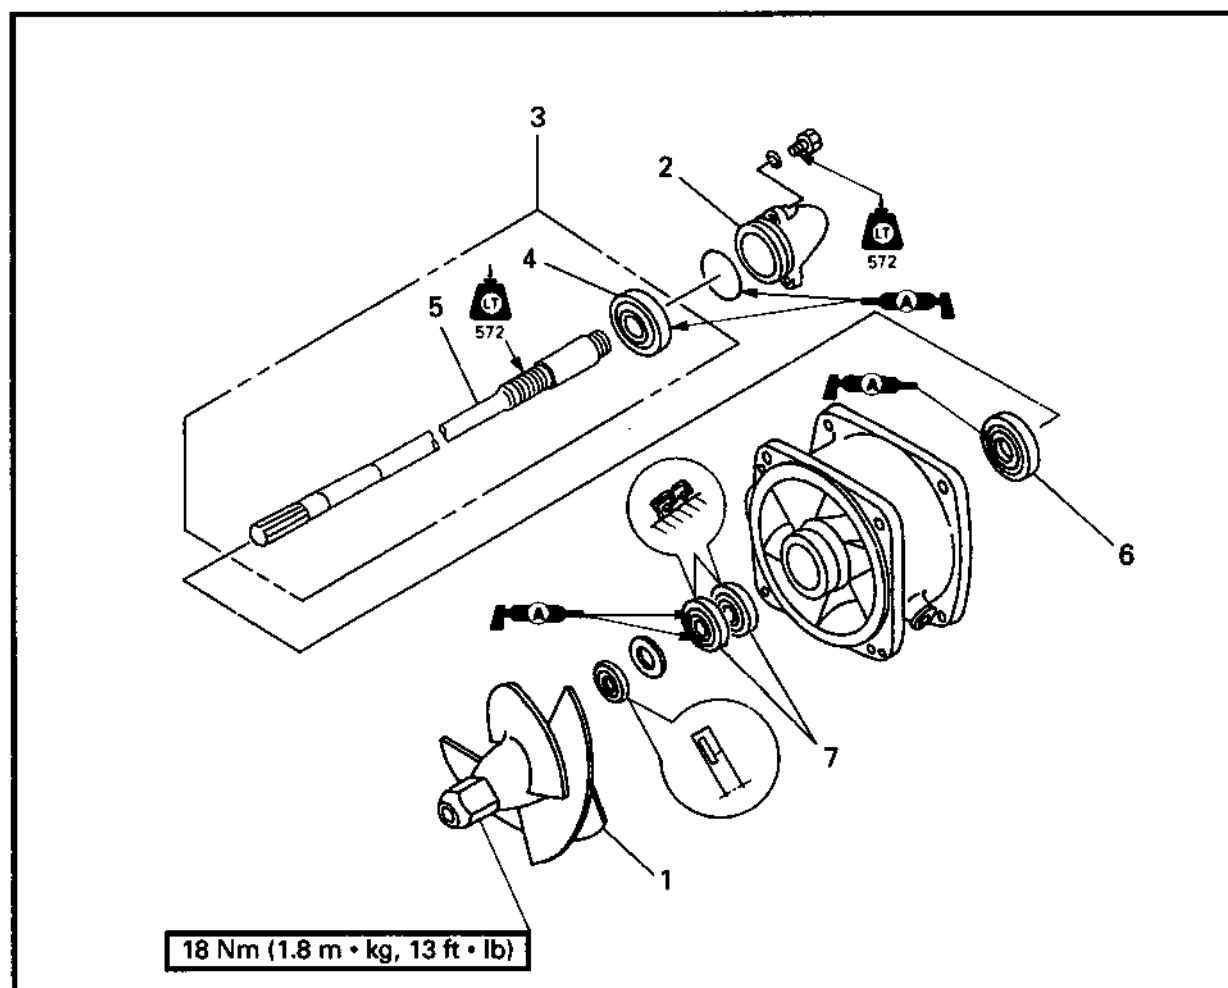REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	DEFLECTOR, NOZZLE AND DUCT REMOVAL		Follow the left "Step" for removal.
	Jet pump unit		Refer to "JET PUMP UNIT REMOVAL".
1	Nozzle deflector assembly	1	
2	Bolt	4	
3	Housing	1	
4	Pin	2	
5	Impeller duct assembly	1	
6	Pin	1	
7	Nozzle	1	
			Reverse the removal steps for installation.

**IMPELLER AND DRIVE SHAFT
EXPLODED DIAGRAM**

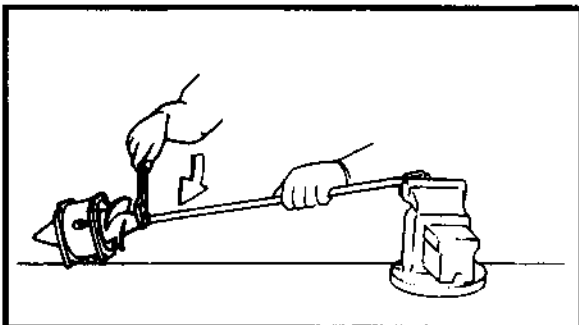REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	IMPELLER AND DRIVE SHAFT DISASSEMBLY		Follow the left "Step" for removal.
	Impeller duct assembly		Refer to "DEFLECTOR, NOZZLE AND DUCT".
1	Impeller	1	NOTE: _____ The impeller has a left-hand thread. Turn the impeller clockwise to loosen it.
2	Cap	1	
3	Drive shaft assembly	1	
4	Bearing (rear)	1	
5	Drive shaft	1	
6	Bearing (front)	1	
7	Oil seal	2	
			Reverse the removal steps for installation.




SERVICE POINTS

Impeller removal

1. Remove:
 - Impeller



Drive shaft holder:
YB-06049/90890-06518

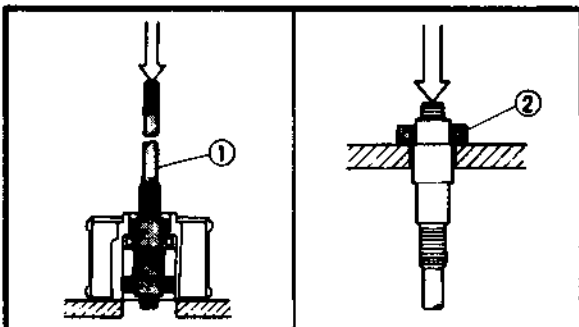


Drive shaft and bearing removal

1. Remove:
 - Drive shaft and bearing (rear) ①
 - Bearing (rear) ②

NOTE:

Use a press.

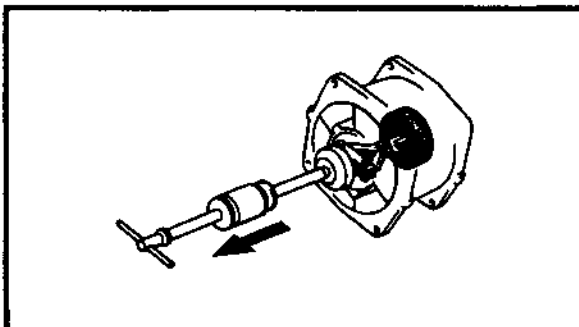

2. Remove:
 - Bearing (front)



Slide hammer set:
90890-06523
YB-06096/90890-06531

Impeller inspection

Refer to "JET PUMP UNIT" in chapter 3.

Drive shaft inspection


1. Inspect:
 - Drive shaft

Wear/Damage → Replace.

Bearing inspection

1. Inspect:
 - Bearing (front and rear)

Rotate inner race by hand.
Rough spot/Seizure → Replace.

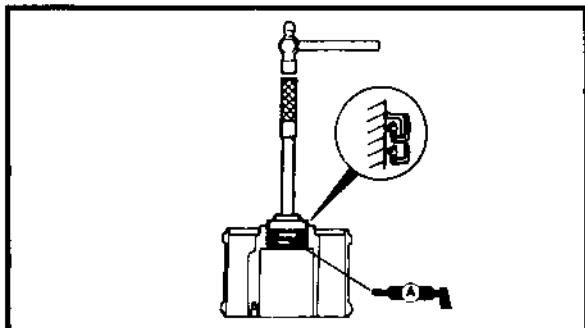


Oil seal and bearing installation

1. Install:
 - Oil seal



Driver rod:
YB-06071/90890-06606
Ball bearing attachment:
YB-06156/90890-06634

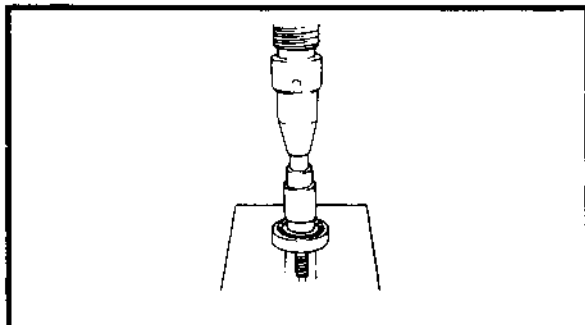

2. Install:
 - Bearing (front)
 - Drive shaft and bearing


NOTE:

Use a press.

3. Fill:
 - Between the drive shaft and duct



Water resistant grease:
24 cm³ (1.45 cu. in)

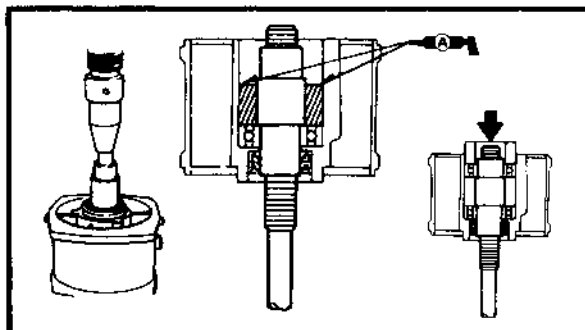

4. Install:
 - Bearing (rear)




Bearing inner race attachment:
YB-34474/90890-06662

5. Fill:
 - Into the cap



Water resistant grease:
21 cm³ (1.3 cu. in)

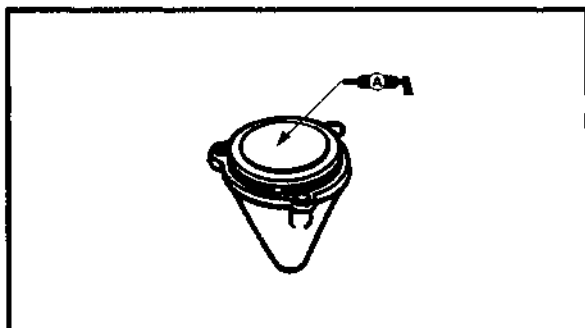



Impeller installation

1. Install:
 - Impeller



Drive shaft holder:
YB-06049/90890-06518

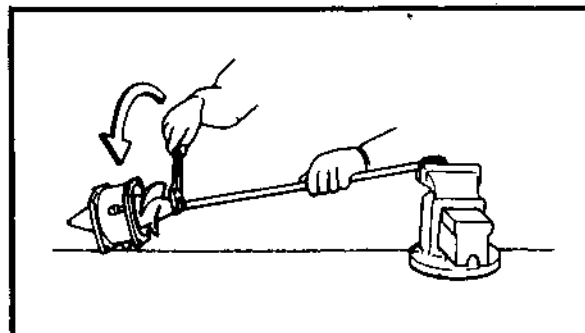

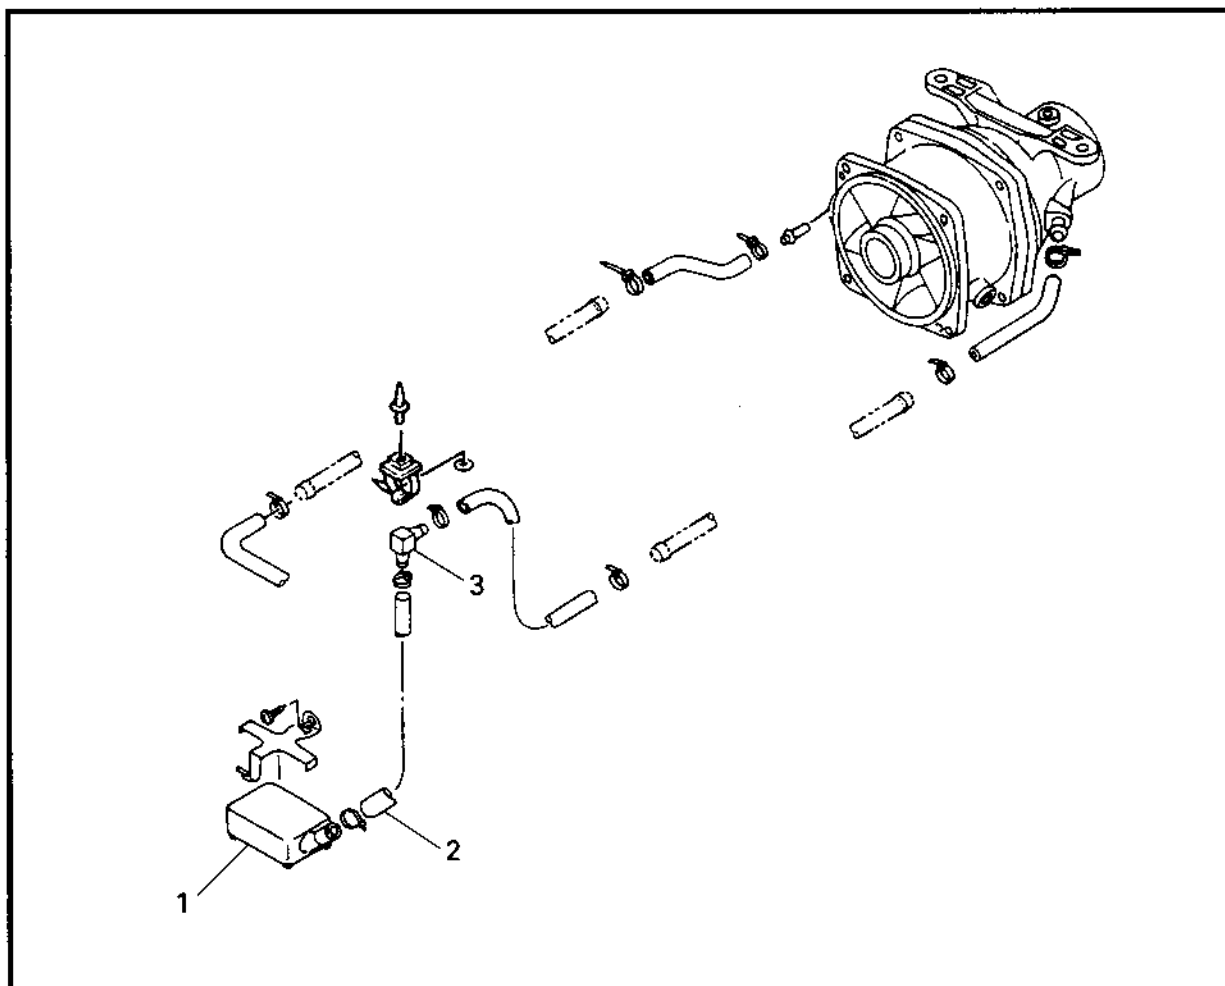**BILGE SYSTEM
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	BILGE SYSTEM REMOVAL		Follow the left "Step" for removal.
1	Bilge strainer	1	
2	Bilge hose	1	
3	Hose joint	1	
			Reverse the removal steps for installation.

SERVICE POINTS
Bilge strainer inspection

Refer to "JET PUMP UNIT" in chapter 3.

Hose inspection

1. Inspect:

- Hose

Crack/Wear/Damage → Replace.




CHAPTER 7

ELECTRICAL SYSTEM

ELECTRICAL COMPONENTS	7-1
ELECTRICAL ANALYSIS	7-2
INSPECTION	7-2
Low resistance measurement	7-2
IGNITION SYSTEM	7-3
WIRING DIAGRAM	7-3
IGNITION SPARK GAP	7-4
SPARK PLUG	7-5
SPARK PLUG CAP	7-5
IGNITION COIL	7-5
ENGINE STOP SWITCH	7-6
CHARGE COIL	7-6
PULSER COIL	7-6
THERMO SWITCH	7-7
CDI UNIT	7-7
STARTING SYSTEM	7-8
WIRING DIAGRAM	7-8
BATTERY	7-9
STARTER MOTOR	7-9
WIRING CONNECTION	7-9
FUSE	7-9
STARTER SWITCH	7-9
STARTER RELAY	7-10
CHARGING SYSTEM	7-11
WIRING DIAGRAM	7-11
FUSE	7-12
BATTERY	7-12
LIGHTING COIL	7-12
RECTIFIER REGULATOR	7-12



ELECTRICAL COMPONENTS

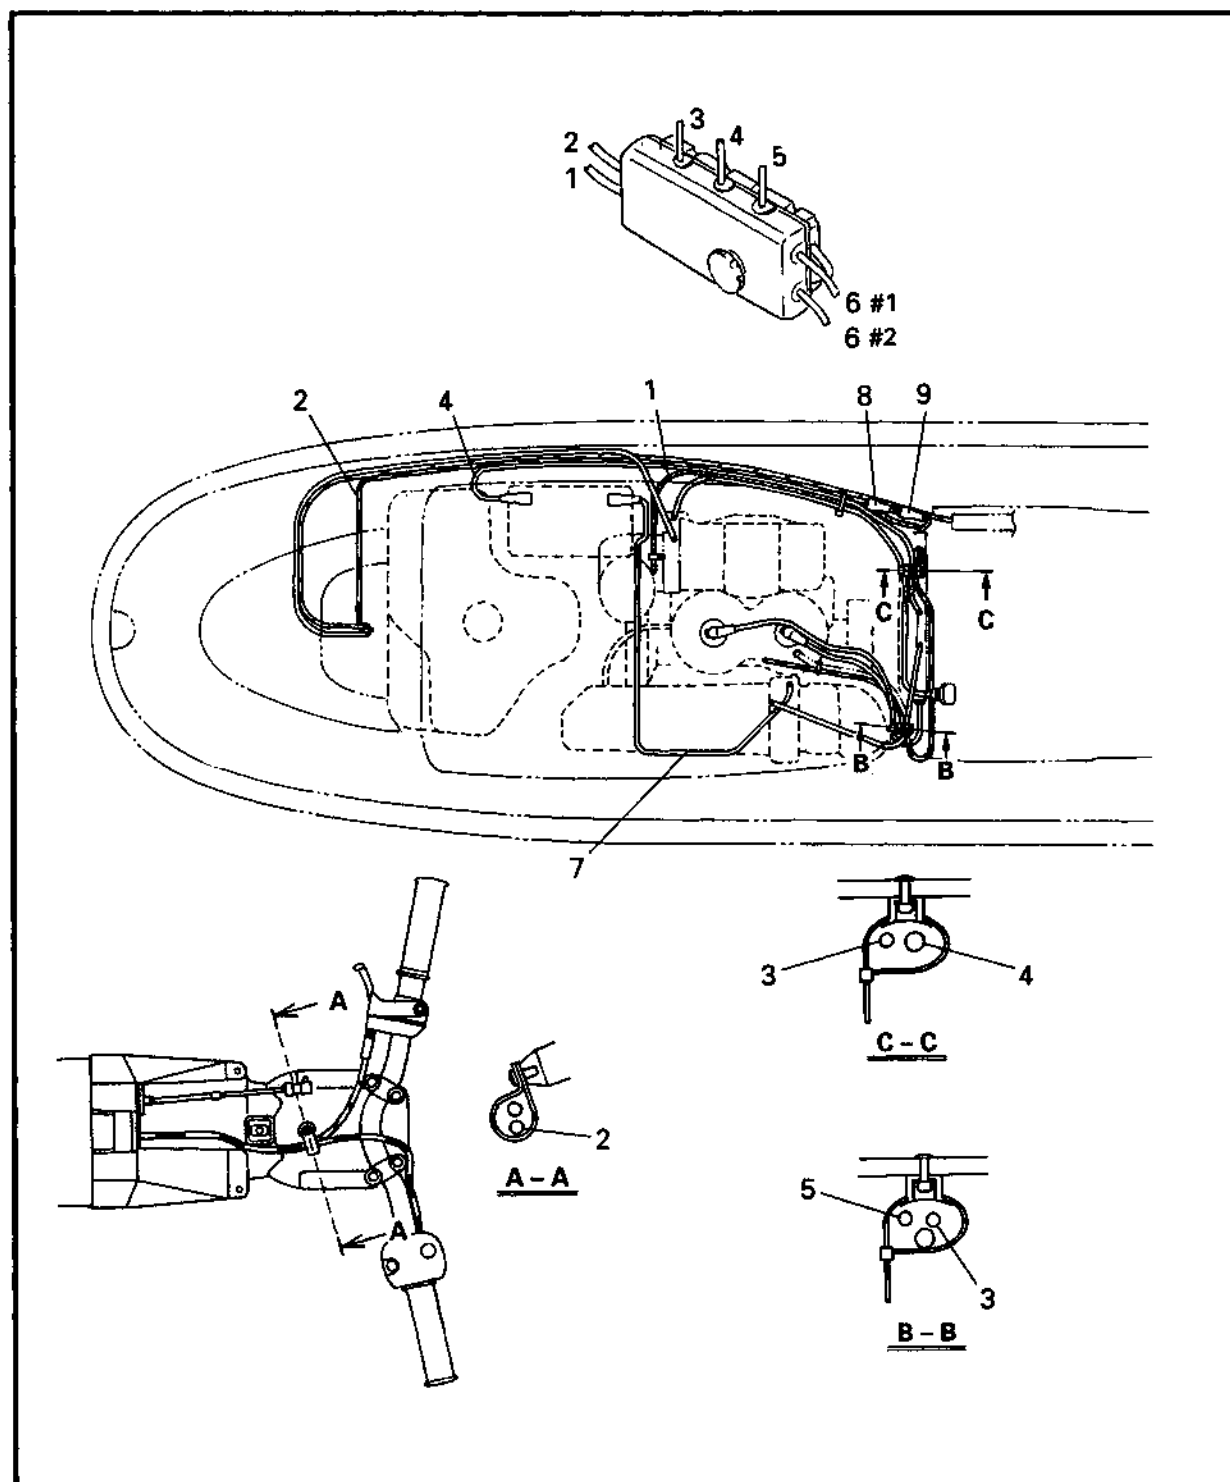

- 1 Flywheel magneto base lead
- 2 Handle switch lead
- 3 Thermo sensor lead
- 4 Battery (positive) lead
- 5 Starter motor (positive) lead

- 6 High tension cord
- 7 Battery (negative) lead
- 8 2P connector (Black)
- 9 2P connector (White)



ELECTRICAL ANALYSIS INSPECTION

CAUTION

All measuring instruments should be handled with special care, or correct measurement is impossible.

On an instrument powered by dry batteries, the batteries' voltage should be checked periodically and the batteries replaced, if necessary.

NOTE:

"○—○" indicates the terminals between which there is electrical continuity; i.e., a closed circuit in the given switch position.

Low resistance measurement

When measuring resistance of $10\ \Omega$ or less using the digital tester, the correct measurement cannot be obtained because of the tester's internal resistance.


To obtain the correct value, subtract this internal resistance from the displayed measurement.




Correct value =
Displayed measurement –
Internal resistance

NOTE:

The internal resistance of the tester can be obtained by connecting both of its terminals.







IGNITION SYSTEM WIRING DIAGRAM

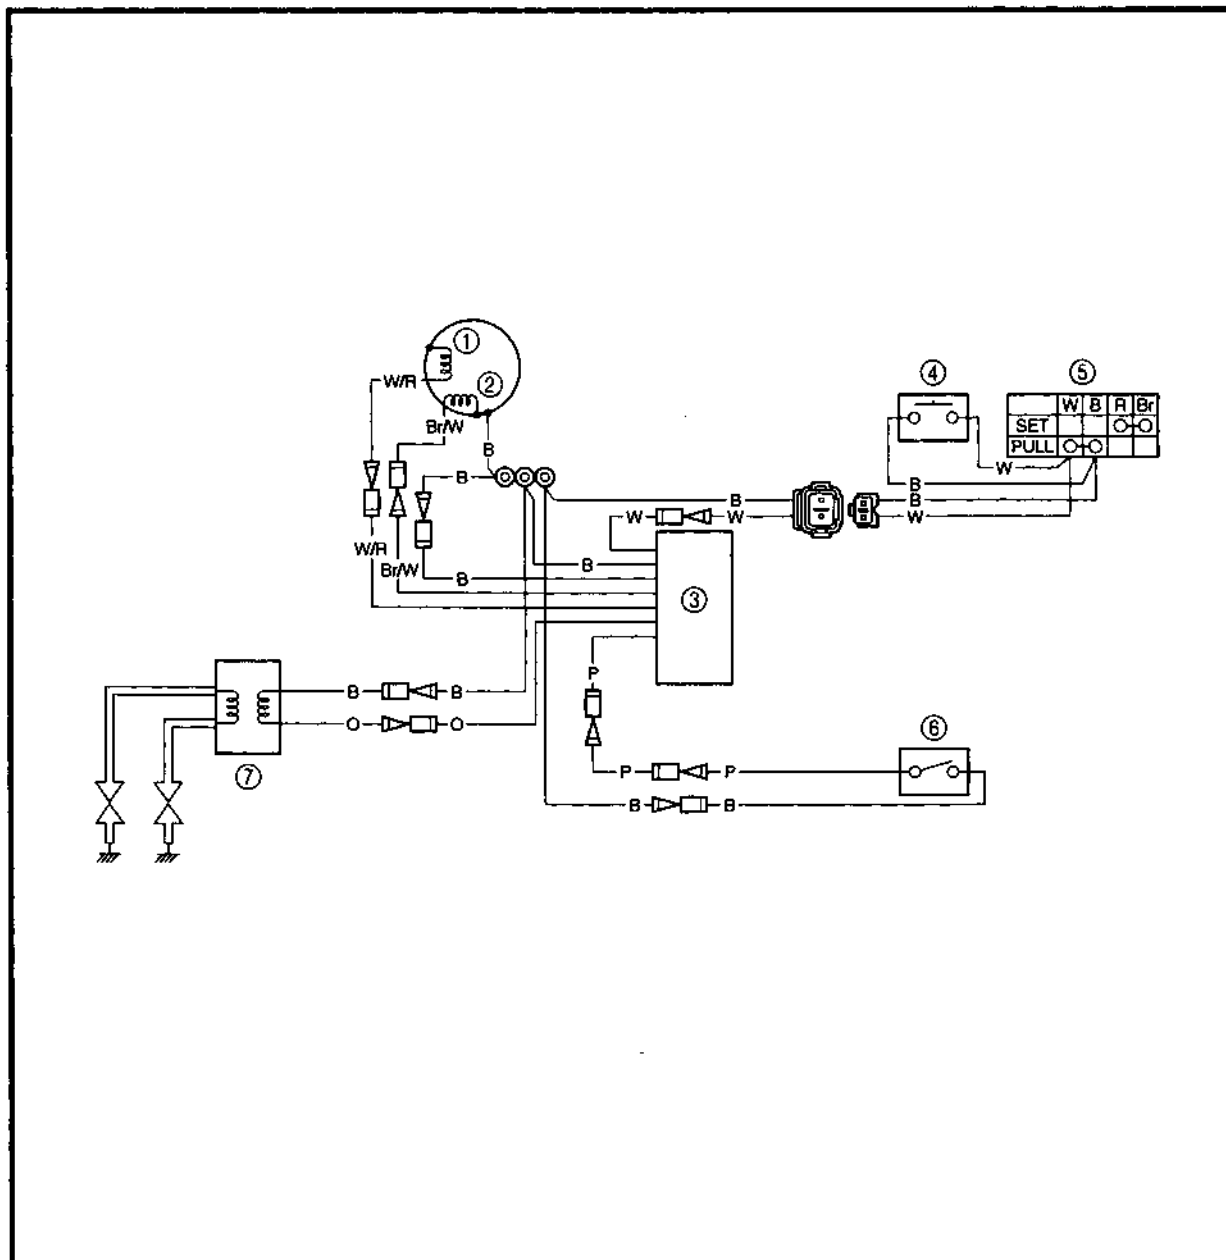

- ① Pulser coil
- ② Charge coil
- ③ CDI unit
- ④ Stop switch
- ⑤ Engine stop switch
- ⑥ Thermo switch
- ⑦ Ignition coil

B : Black
 Br/W: Brown/White
 O : Orange
 P : Pink
 W : White
 W/R : White/Red

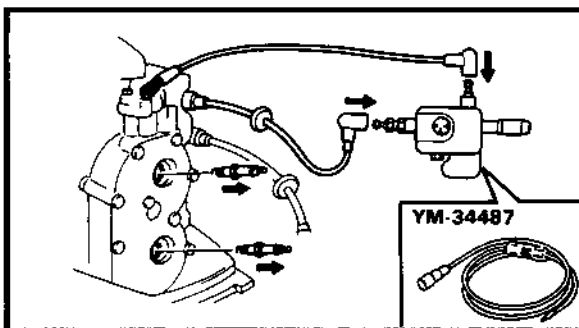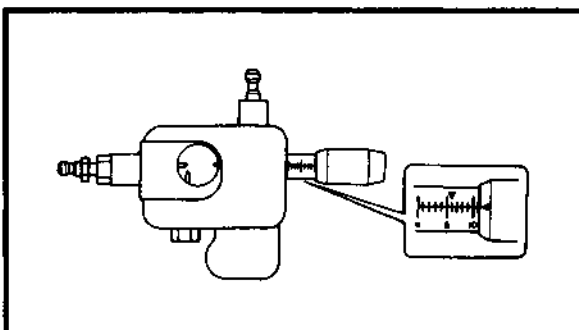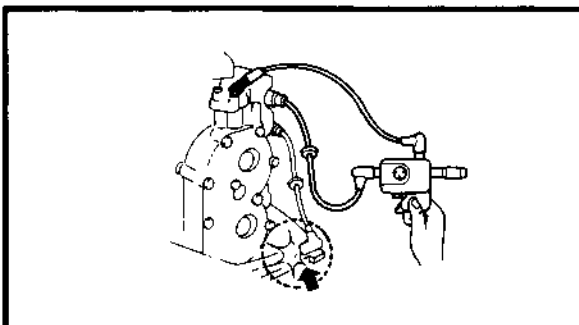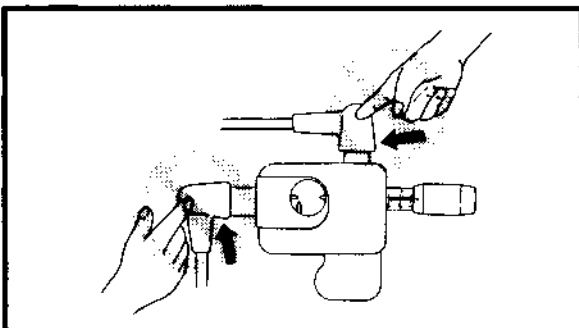

IGNITION SPARK GAP

⚠ WARNING

- While making a spark check be careful not to touch any of the "Ignition spark gap tester" lead wires.
- When doing the spark test, take special care not to allow leakage from the removed plug cap.
- This check is likely to produce sparks, so be sure that no flammable gas or fluid is in the vicinity.

1. Check:

- Ignition spark gap
Out of specification → Replace.



Spark gap:
9 mm (0.35 in)

Checking steps:

- Adjust the spark gap to specification by turning the adjusting knob.



Spark gap tester:
YM-34487/90890-06754


- Connect the spark plug cap to the spark gap tester.
- Remove the spark plugs from the engine.
- Crank the engine and check the sparks from the ignition system through the discharge window.

**SPARK PLUG**

Refer to "GENERAL" in CHAPTER 3.

SPARK PLUG CAP

1. Inspect:
 - Spark plug capLoosen → Tighten.
Crack/Damage → Replace.

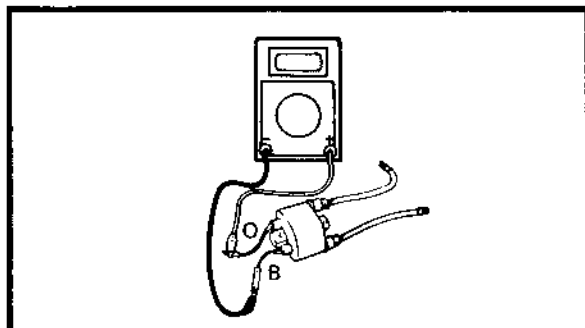**IGNITION COIL**

1. Inspect:
 - High tension cordCracks/Damage → Replace.
2. Measure:
 - Primary coil resistanceOut of specification → Replace.



Primary coil resistance:
Orange (O) – Black (B)
0.078 ~ 0.106 Ω at 20°C (68°F)

NOTE:

When measuring the resistance of 10 Ω or less using the digital tester, the correct measurement cannot be obtained. Refer to "Lower resistance measurement".


3. Measure:
 - Secondary coil resistanceOut of specification → Replace.



Secondary coil resistance:
High tension cords
3.5 ~ 4.7 k Ω at 20°C (68°F)

NOTE:

Remove the spark plug cap from the high tension cord.

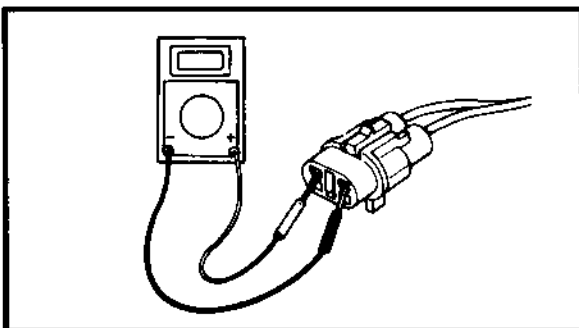**ENGINE STOP SWITCH**

1. Check:


- Continuity

Out of specification → Replace.



Engine stop continuity:
(Black coupler)

Lock plate	Position	Leads	
		White	Black
Installed	Free		
	Push	○—○	○—○
Removed	Free	○—○	○—○
	Push	○—○	○—○

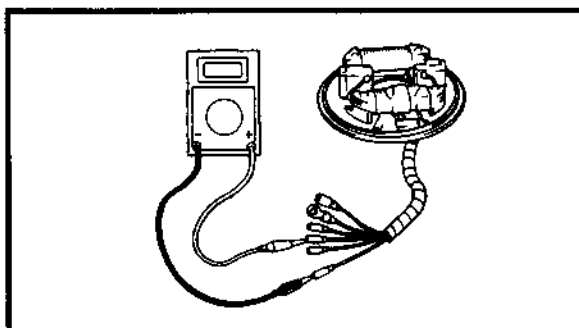**CHARGE COIL**


1. Measure:

- Charge coil resistance

Out of specification → Replace.



Charge coil resistance:
Brown/White (Br/W) – Black (B)
497.7 ~ 608.3 Ω at 20°C (68°F)

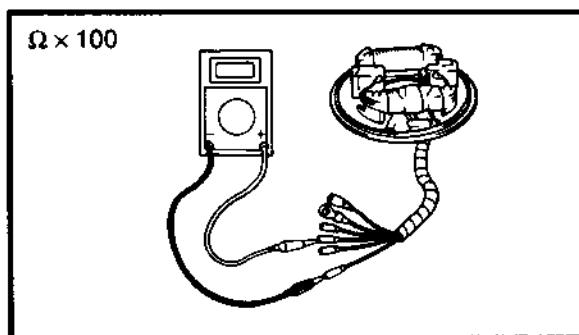**PULSER COIL**



1. Measure:

- Pulser coil resistance

Out of specification → Replace.



Pulser coil resistance:
White/Red (W/R) – Black (B)
12.6 ~ 15.4 Ω at 20°C (68°F)

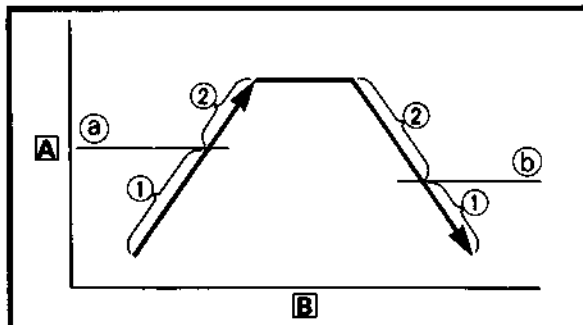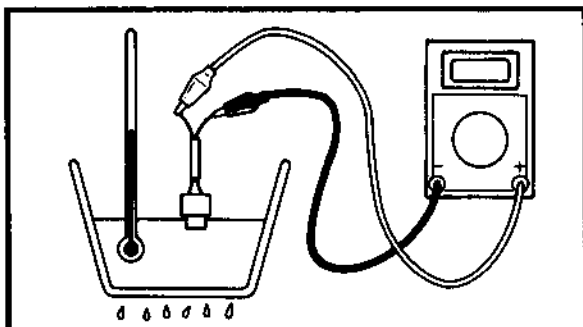

THERMO SWITCH

1. Measure:

- Thermo switch continuity
- Out of specification → Replace.



Thermo switch continuity temperature:

Pink (P) – Black (B)

Ⓐ 76 ~ 84°C (169 ~ 183 °F)

Ⓑ 63 ~ 77°C (145 ~ 171 °F)

① Discontinuity

Ⓐ Temperature

② Continuity

Ⓑ Time

Measurement steps:

- Suspend thermostat in a vessel.
- Place known reliable thermometer in water.
- Heat water slowly.
- Observe thermometer, while stirring water continually.

CDI UNIT

1. Measure:

- CDI unit resistance
- Out of specification → Replace.



Pocket tester:

YU-03112/90890-03112

NOTE:

- The resistance values will vary from meter to meter, especially with electronic digital meters. For some testers, the polarity of the leads is reversed.
- The needle swings once to the “.” mark and then returns to the home position.
- The “∞” mark stands for discontinuity.

62T00

Unit: kΩ

⊕	⊖	B	Br/W	O	P	W	W/R
B			2~6	•	3~11	10~40	150~600
Br/W		20~80		•	50~200	15~60	250 ~ 1000
O		•	•		•	•	•
P		∞	∞	∞		∞	∞
W		∞	∞	∞	∞		∞
W/R		9~36	17~70	•	10~40	50~200	

B : Black

Br/W: Brown/White

O : Orange

L : Blue


P : Pink

W : White

W/R : White/Red




STARTING SYSTEM WIRING DIAGRAM

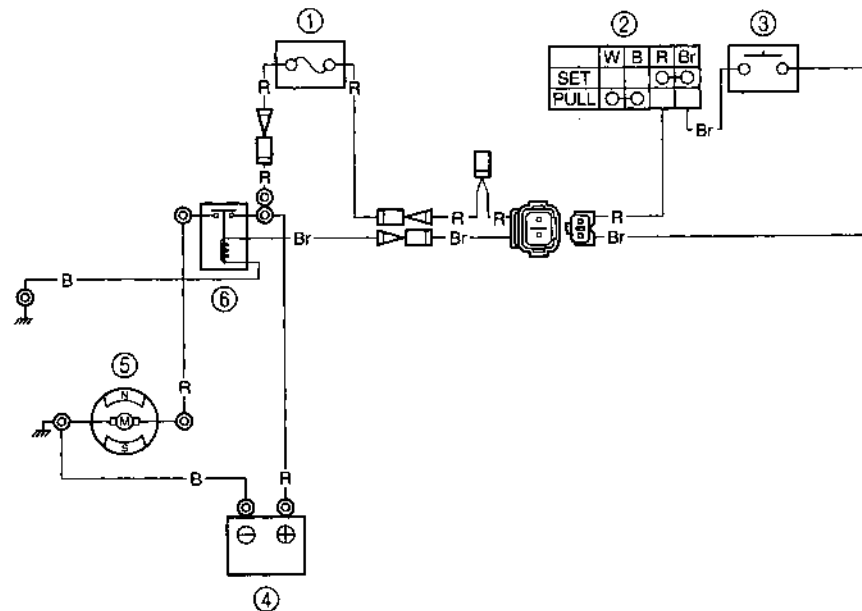

- ① Fuse
- ② Engine stop switch
- ③ Starter switch
- ④ Battery
- ⑤ Starter motor
- ⑥ Starter relay

B : Black
Br : Brown
R : Red

**BATTERY**

Refer to "GENERAL" in chapter 3.

STARTER MOTOR

Refer to "STARTER MOTOR" in chapter 5.

WIRING CONNECTION

1. Check:

- Wiring connection
- Poor connection → Correct.


FUSE

1. Check:

- Fuse
- Blown → Replace.



Fuse rating:
12 V/10 A

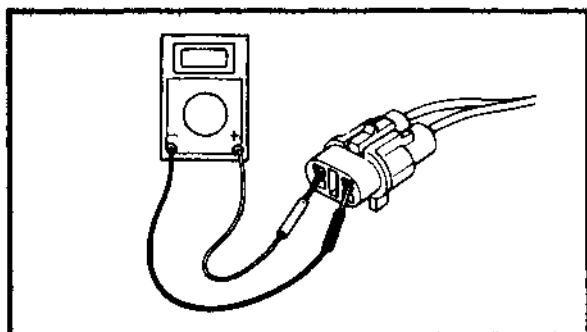**STARTER SWITCH**

1. Check:

- Continuity
- Out of specification → Replace.




Starter continuity:
(White coupler)

Lock plate	Position	Leads	
		Red	Brown
Installed	Free		
	Push	○—○	○—○
Removed	Free		
	Push		

**STARTER RELAY**

1. Inspect:

- Brown lead terminal
 - Black lead terminal
- Loose → Tighten.

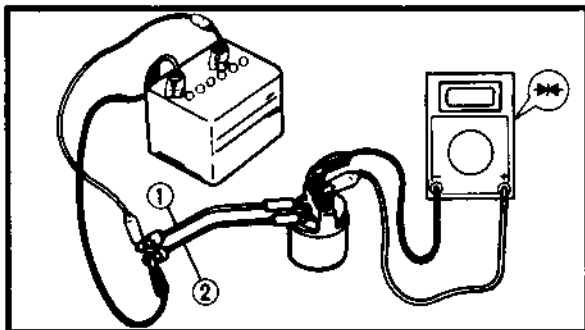

2. Check:

- Relay operation
- Does not function → Replace.

Checking steps:


- Connect the tester between the terminals of the starter relay as shown.
- Connect a 12 V battery.

Brown lead ① → Positive terminal
Black lead ② → Negative terminal

- Check that there is continuity between the starter relay terminals.



CHARGING SYSTEM WIRING DIAGRAM

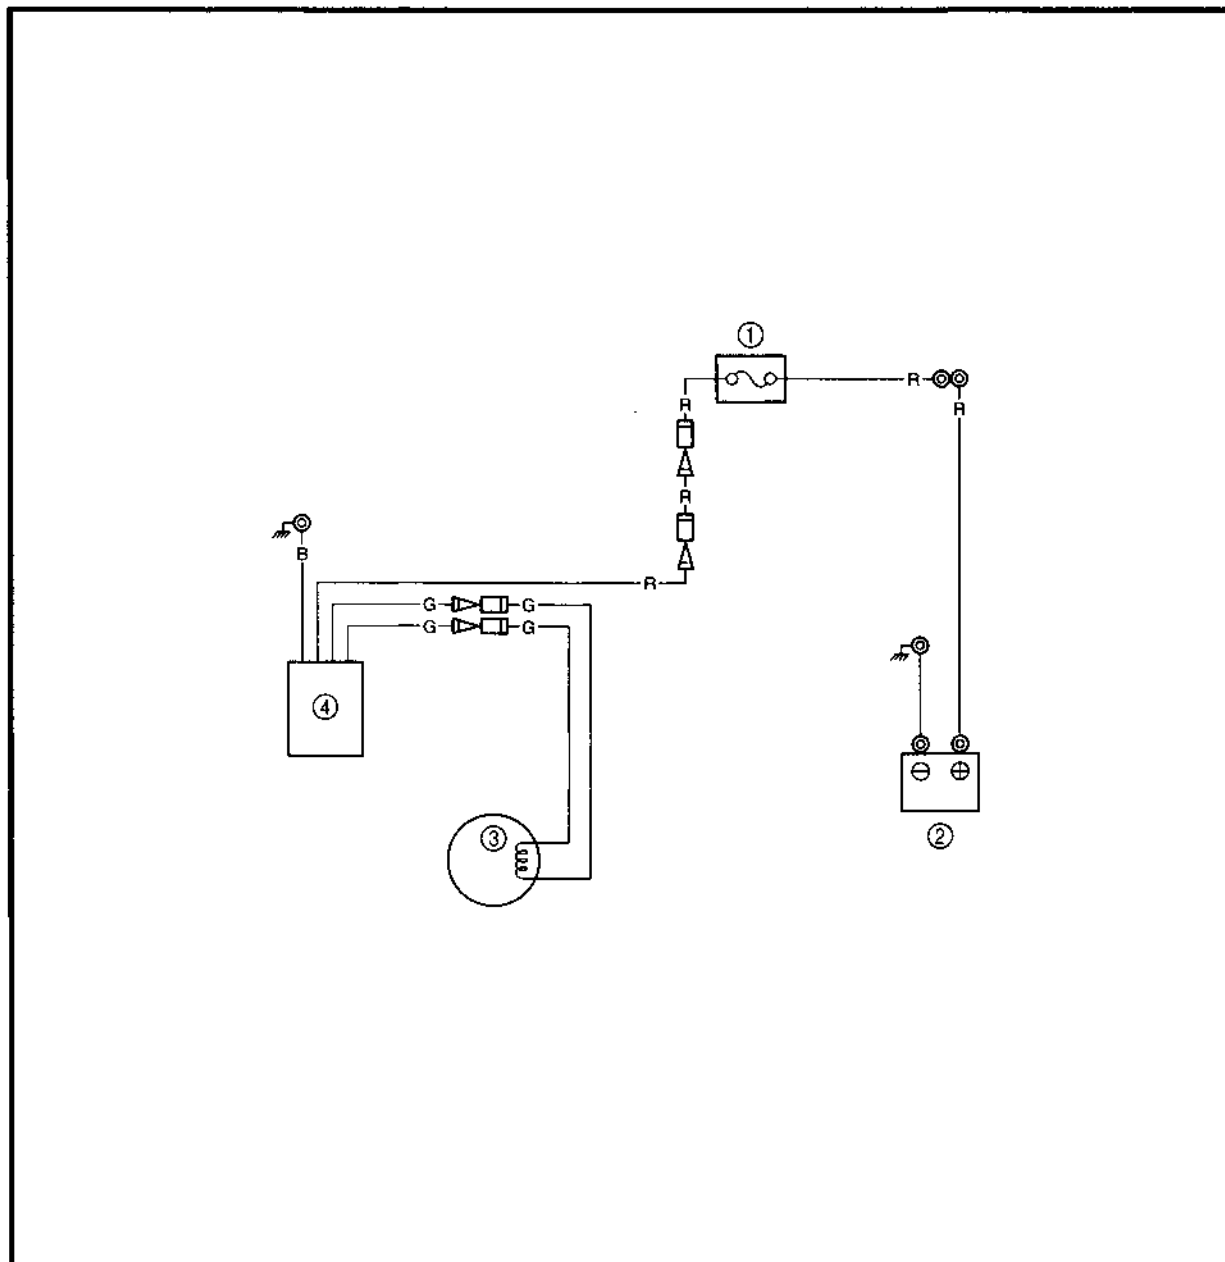

- ① Fuse
- ② Battery
- ③ Lighting coil
- ④ Rectifier regulator


B : Black
G : Green
R : Red

**FUSE**

Refer to "STARTING SYSTEM".

BATTERY

Refer to "ELECTRICAL" in chapter 3.

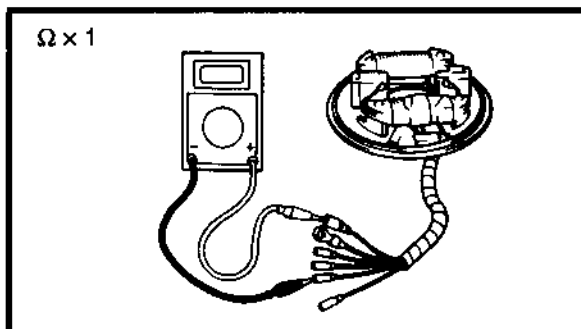**LIGHTING COIL**

1. Measure:

- Lighting coil resistance
- Out of specification → Replace.



Lighting coil resistance:
Green (G) – Green (G)
1.14 ~ 1.40 Ω at 20°C (68°F)

NOTE:

When measuring the resistance of 10 Ω or less using the digital tester, the correct measurement cannot be obtained. Refer to "Lower resistance measurement".

RECTIFIER REGULATOR

1. Check:

- Continuity
- Out of specification → Replace.



Pocket tester:
YU-03112/90890-03112

∞: Discontinuity

Unit: kΩ


⊕	⊖	R	B	G	G
R			∞	∞	∞
B		2~20		1~10	1~10
G		1~10	2~15		3~30
G		1~10	2~15	3~30	

CHAPTER 8

HULL AND HOOD

BATTERY CASE AND WATER LOCK	8-1
EXPLODED DIAGRAM	8-1
REMOVAL AND INSTALLATION CHART.....	8-1
SERVICE POINTS	8-2
Exhaust system inspection	8-2
 HANDLE.....	 8-3
EXPLODED DIAGRAM	8-3
REMOVAL AND INSTALLATION CHART.....	8-3
SERVICE POINTS	8-4
Handle inspection.....	8-4
Handle switch installation.....	8-4
Handle holder installation.....	8-4
 HANDLE COLUMN	 8-5
EXPLODED DIAGRAM	8-5
REMOVAL AND INSTALLATION CHART.....	8-5
SERVICE POINTS	8-6
Column bushing inspection.....	8-6
Handle column inspection	8-6
 STEERING CABLE.....	 8-7
EXPLODED DIAGRAM	8-7
REMOVAL AND INSTALLATION CHART.....	8-7
SERVICE POINTS	8-8
Cable inspection	8-8
Cable joint installation	8-8
 THROTTLE CABLE AND CHOKE CABLE	 8-9
EXPLODED DIAGRAM	8-9
REMOVAL AND INSTALLATION CHART.....	8-9
SERVICE POINTS	8-10
Cable inspection	8-10
Cable installation	8-10
 STEERING POLE	 8-11
EXPLODED DIAGRAM	8-11
REMOVAL AND INSTALLATION CHART.....	8-11
SERVICE POINTS	8-12
Pivot inspection	8-12

STEERING POLE BRACKET	8-13
EXPLODED DIAGRAM	8-13
REMOVAL AND INSTALLATION CHART.....	8-13
SERVICE POINTS	8-14
Steering pole bracket inspection.....	8-14
 ENGINE HOOD	8-15
EXPLODED DIAGRAM	8-15
REMOVAL AND INSTALLATION CHART.....	8-15
SERVICE POINTS	8-16
Hood lock hook inspection	8-16
Engine hood inspection	8-16
 DECK	8-17
EXPLODED DIAGRAM	8-17
REMOVAL AND INSTALLATION CHART.....	8-17
 GUNWALE	8-18
EXPLODED DIAGRAM	8-18
REMOVAL AND INSTALLATION CHART.....	8-18
 MAT	8-19
EXPLODED DIAGRAM	8-19
REMOVAL AND INSTALLATION CHART.....	8-19
SERVICE POINTS	8-19
Mat installation	8-19
 HULL	8-20
EXPLODED DIAGRAM	8-20
REMOVAL AND INSTALLATION CHART.....	8-20
HULL REPAIR.....	8-21
Light scratching	8-21
Deep scratching	8-21
Hull damage (punctured)	8-22
Insert nut	8-23
Removing a graphic	8-25
Applying a graphic	8-25

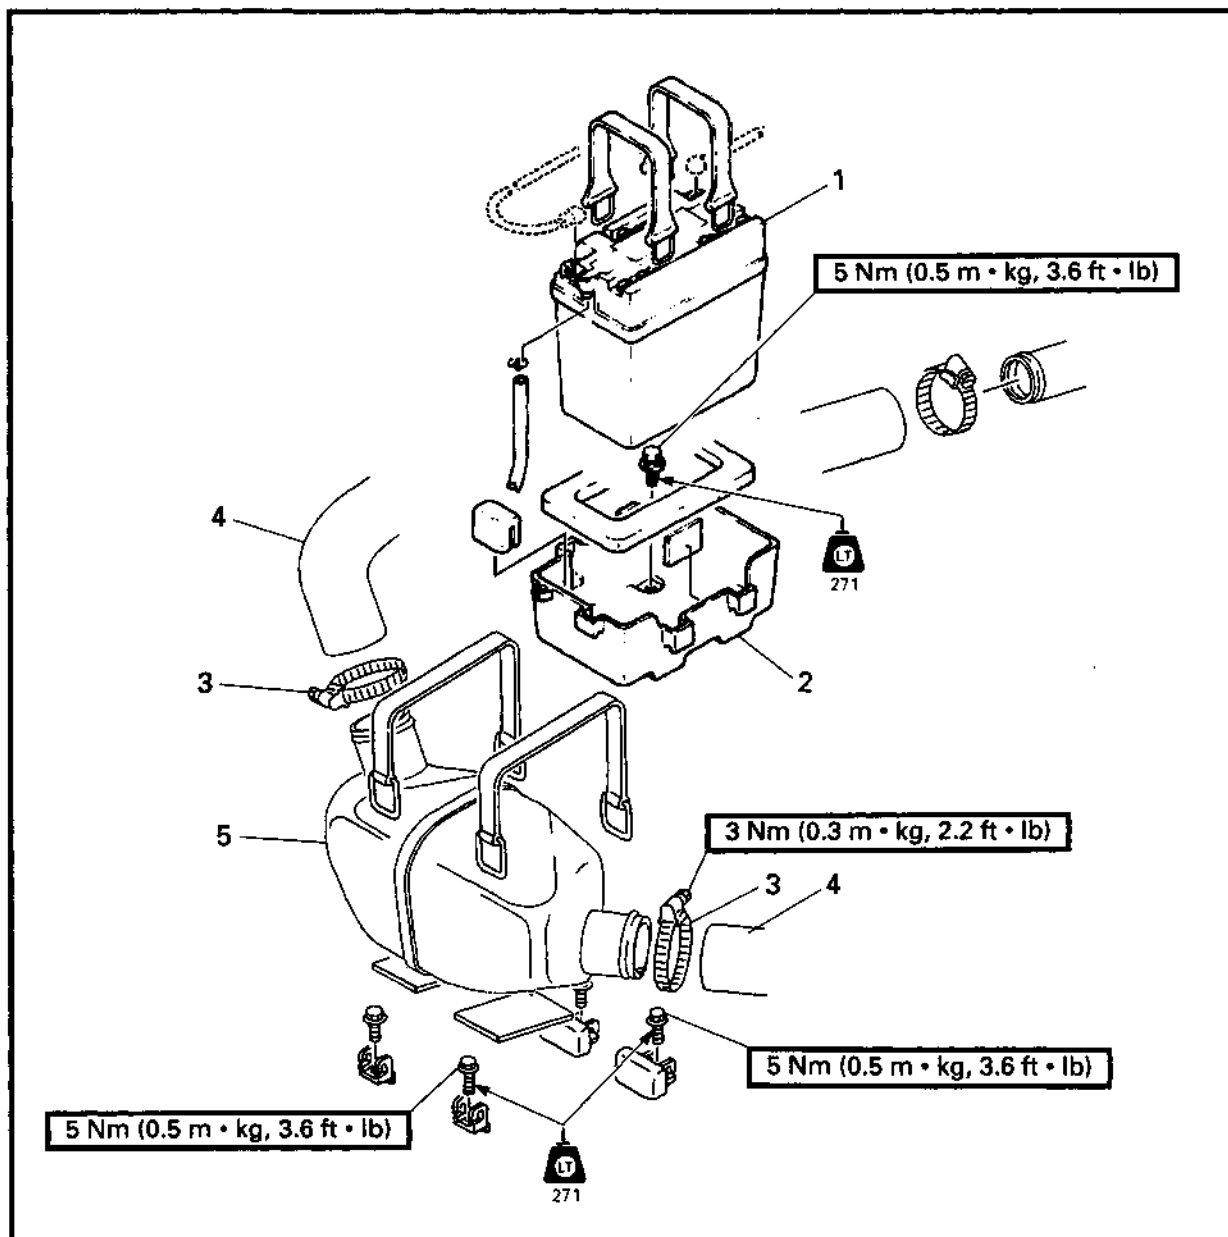
**BATTERY CASE AND WATER LOCK
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART


Step	Procedure/Part name	Q'ty	Service points
	BATTERY CASE AND WATER LOCK REMOVAL		Follow the left "Step" for removal.
1	Battery	1	
2	Battery case	1	
3	Clamp	2	
4	Exhaust hose	2	
5	Water lock	1	
			Reverse the removal steps for installation.



SERVICE POINTS

Exhaust system inspection

1. Inspect:
 - Band
Crack → Replace.
2. Inspect:
 - Exhaust hose
Crack/Wear/Burn → Replace.
3. Inspect:
 - Water lock
Crack/Leak → Replace.
Gathered water → Drain.

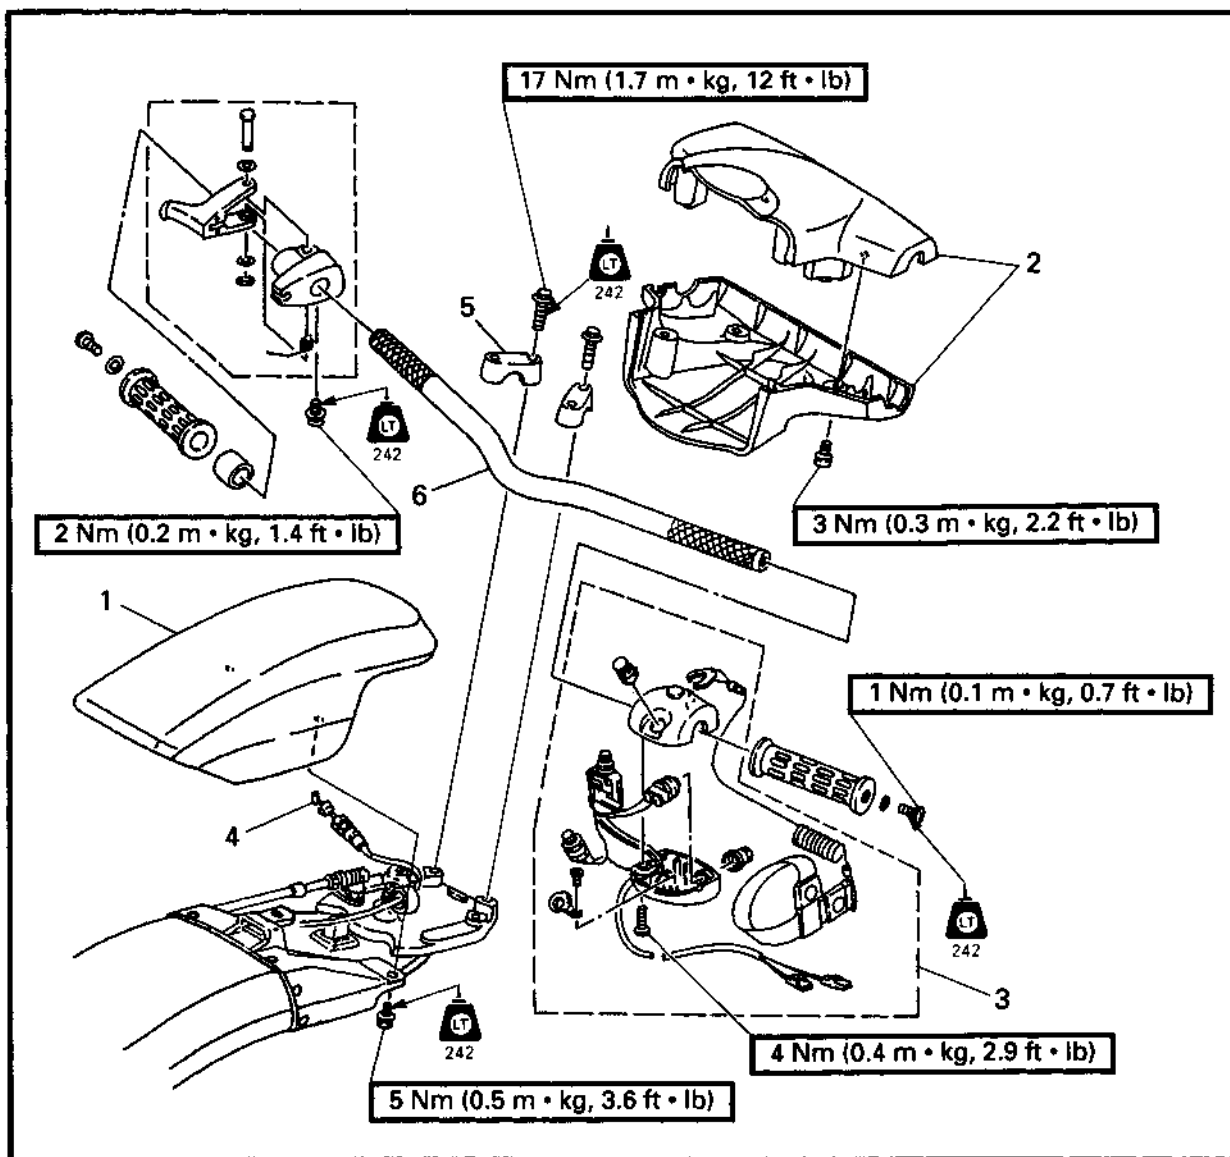

**HANDLE
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
HANDLE REMOVAL			Follow the left "Step" for removal.
1	Steering pad	1	NOTE: _____ Disconnect the throttle cable from the throttle lever. _____
2	Handle cover	2	
3	Handle switch	1	
4	Throttle cable	1	
5	Handle holder	2	Reverse the removal steps for installation.
6	Handlebar	1	

SERVICE POINTS

Handle inspection

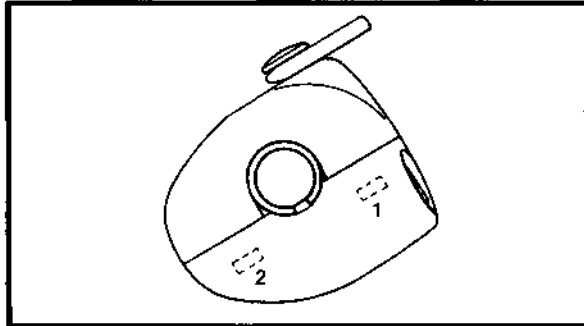
1. Inspect:
 - Handlebar
- Bend/Crack/Damage → Replace.



Handle switch installation

1. Install:
 - Handle switch


NOTE: _____
Tighten the screw at the stop button side first.

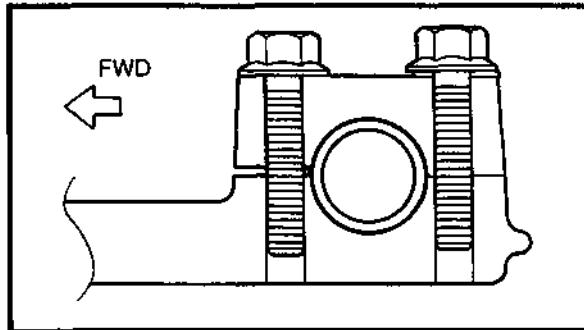

Handle holder installation

1. Install:
 - Handle holder

NOTE: _____
Tighten the bolt at stern side first.

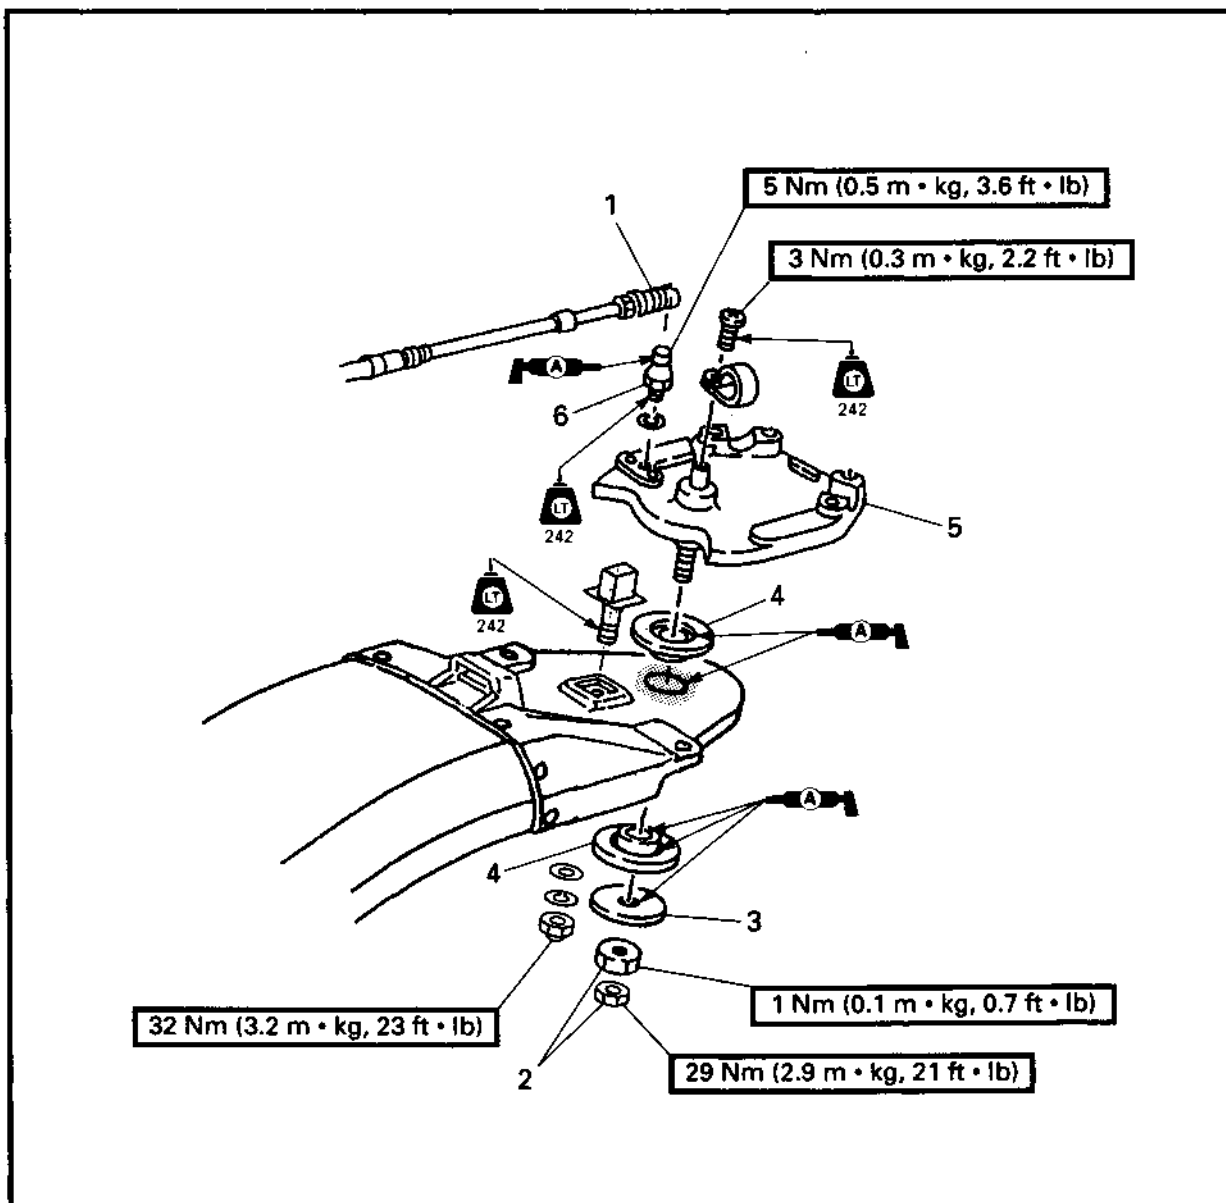
**HANDLE COLUMN
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	HANDLE COLUMN REMOVAL		
	Handlebar assembly		Follow the left "Step" for removal. Refer to "HANDLE".
1	Steering cable joint	1	
2	Nut	2	
3	Plane washer	1	
4	Column bushing	2	
5	Handle column	1	
6	Ball joint	1	
			Reverse the removal steps for installation.



SERVICE POINTS

Column bushing inspection


1. Inspect:

- Column bushing
Wear/Damage → Replace.

Handle column inspection

1. Inspect:

- Handle column
Bend/Crack/Damage → Replace.

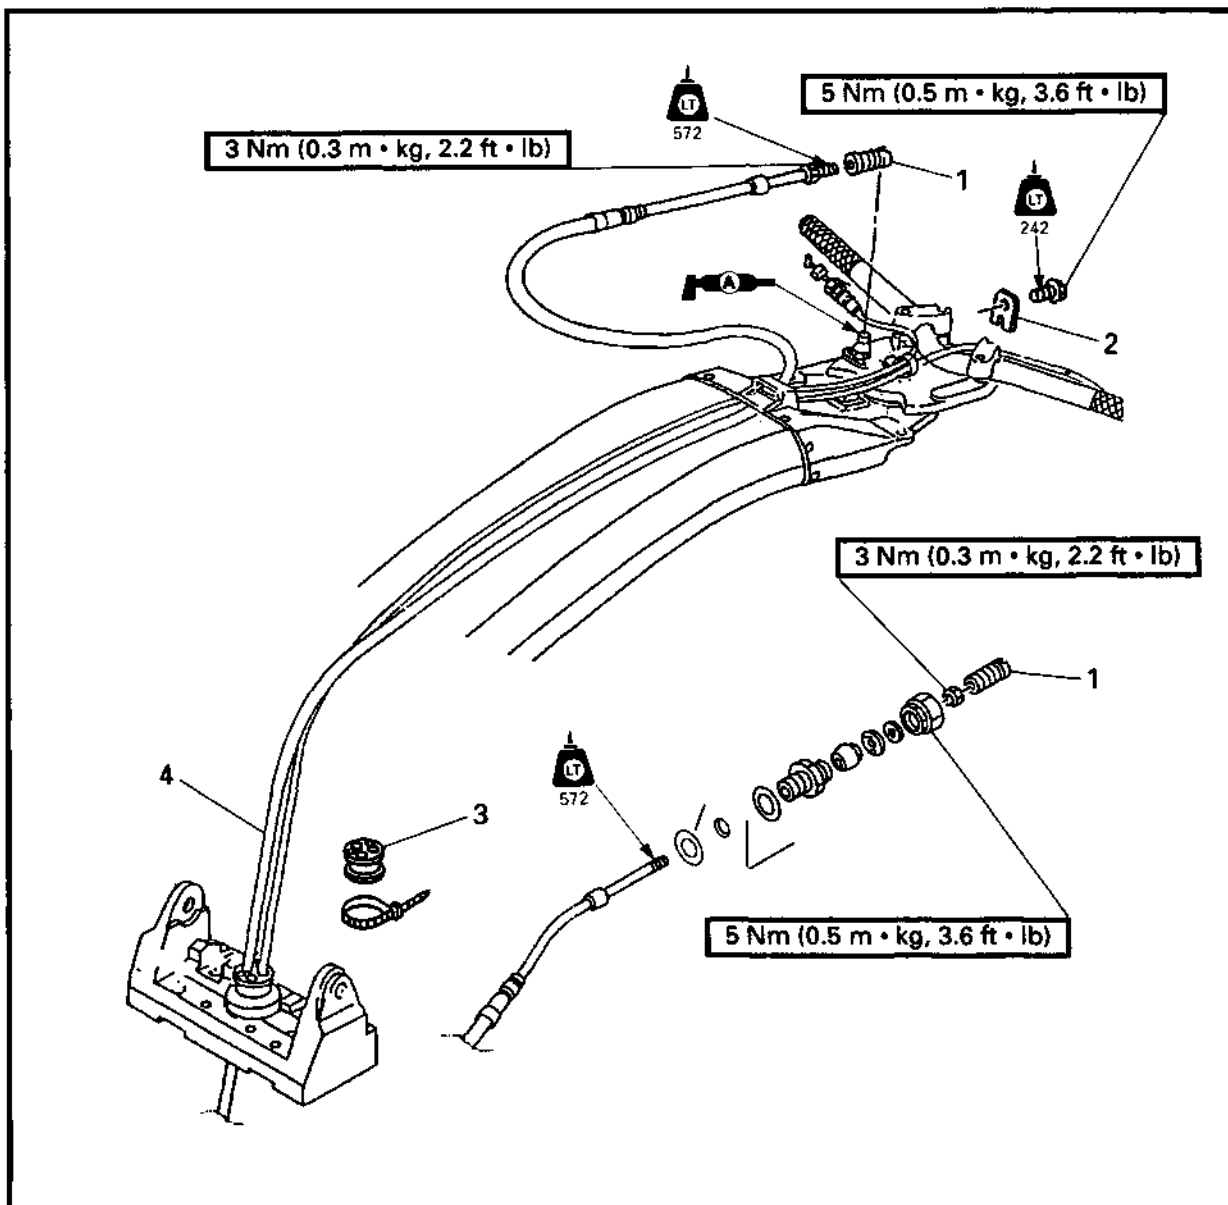
**STEERING CABLE
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	STEERING CABLE REMOVAL		
	Ride plate		Follow the left "Step" for removal. Refer to "JET PUMP UNIT REMOVAL" in chapter 6.
	Handle cover		Refer to "HANDLE".
1	Cable joint	2	
2	Cable stopper	1	
3	Grommet	1	
4	Steering cable	1	
			Reverse the removal steps for installation.

SERVICE POINTS**Cable inspection**

1. Inspect:

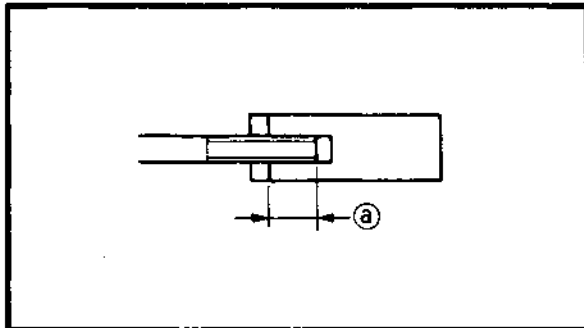- Steering cable
Kink/Fray/Stick → Replace.


**Cable joint installation**

1. Install:

- Cable joint

**Cable joint set length ①:****Jet pump side****12.8 ~ 14.4 mm (0.50 ~ 0.57 in)****⚠ WARNING**

The cable joint must be screwed in more than 8 mm (0.31 in).

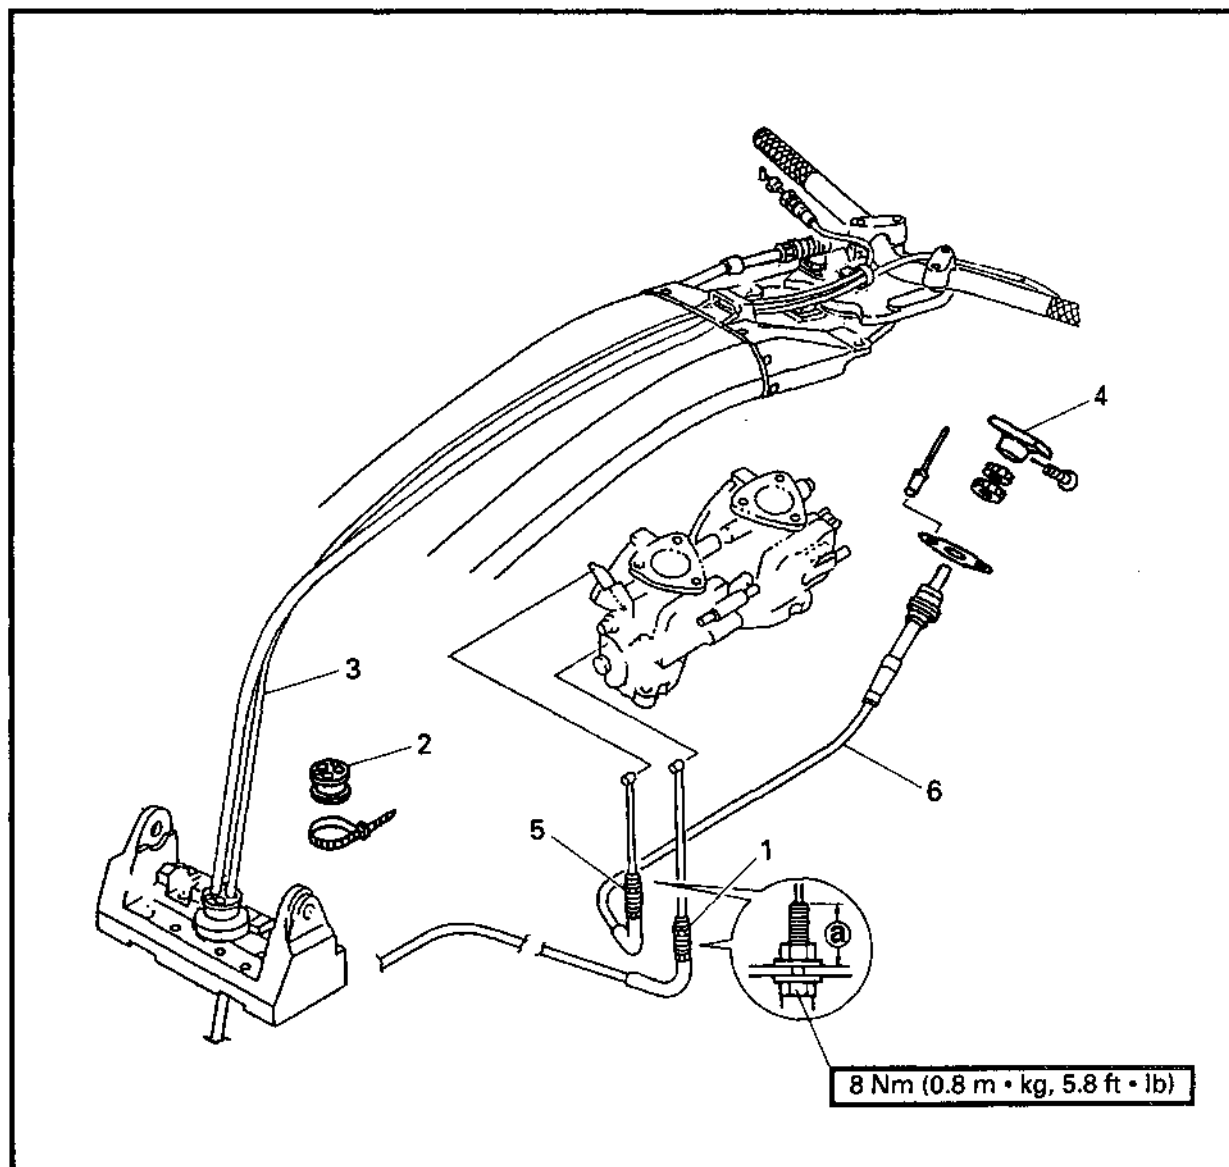

**THROTTLE CABLE AND CHOKE CABLE
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	THROTTLE CABLE REMOVAL		Follow the left "Step" for removal. Refer to "HANDLE".
1	Lock nut	1	
2	Grommet	1	
3	Throttle cable	1	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> Cable guide set position (a): 17 mm (0.67 in) </div>
	CHOKE CABLE REMOVAL		
4	Choke knob	1	
5	Lock nut	1	
6	Choke cable	1	Reverse the removal steps for installation.

SERVICE POINTS**Cable inspection**

1. Inspect:

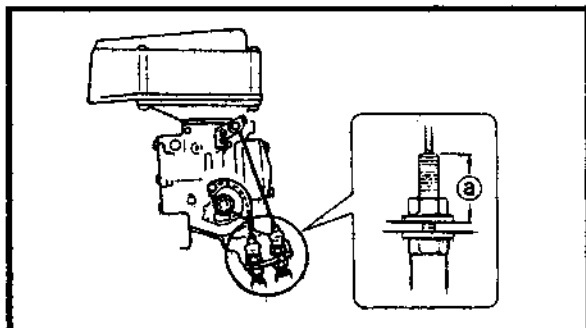- Throttle cable
 - Choke cable
- Kink/Fray/Stick → Replace.

**Cable installation**

1. Install:

- Cable guide




Cable guide set position ①:
17 mm (0.67 in)

2. Check:

- Throttle cable
- Choke cable

Free play → Repair.

Refer to "CONTROL SYSTEM" in
chapter 3.

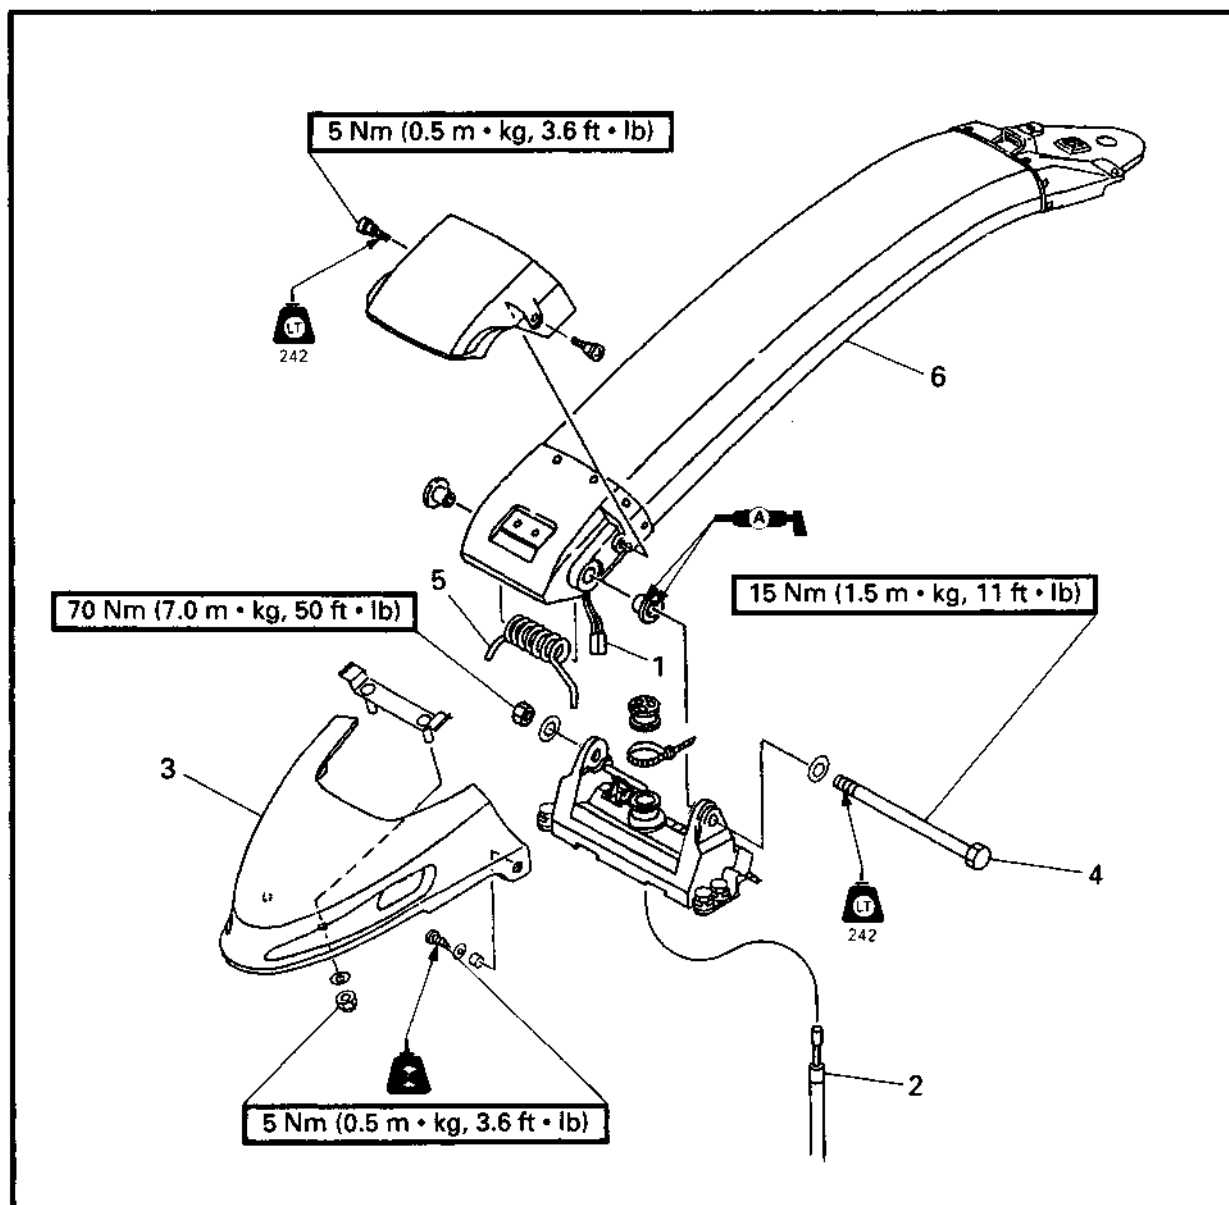
**STEERING POLE
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	STEERING POLE REMOVAL		
	Throttle cable		Follow the left "Step" for removal. Refer to "HANDLE".
1	Handle switch lead	1	
2	Steering cable	1	
3	Bow cover	1	
4	Shaft bolt	1	
5	Pivot spring	1	
6	Steering pole	1	
			Reverse the removal steps for installation.




SERVICE POINTS

Pivot inspection

1. Inspect:

- Shaft bolt
- Bushing
- Plain washer
- Pivot spring

Crack/Wear/Damage → Replace.

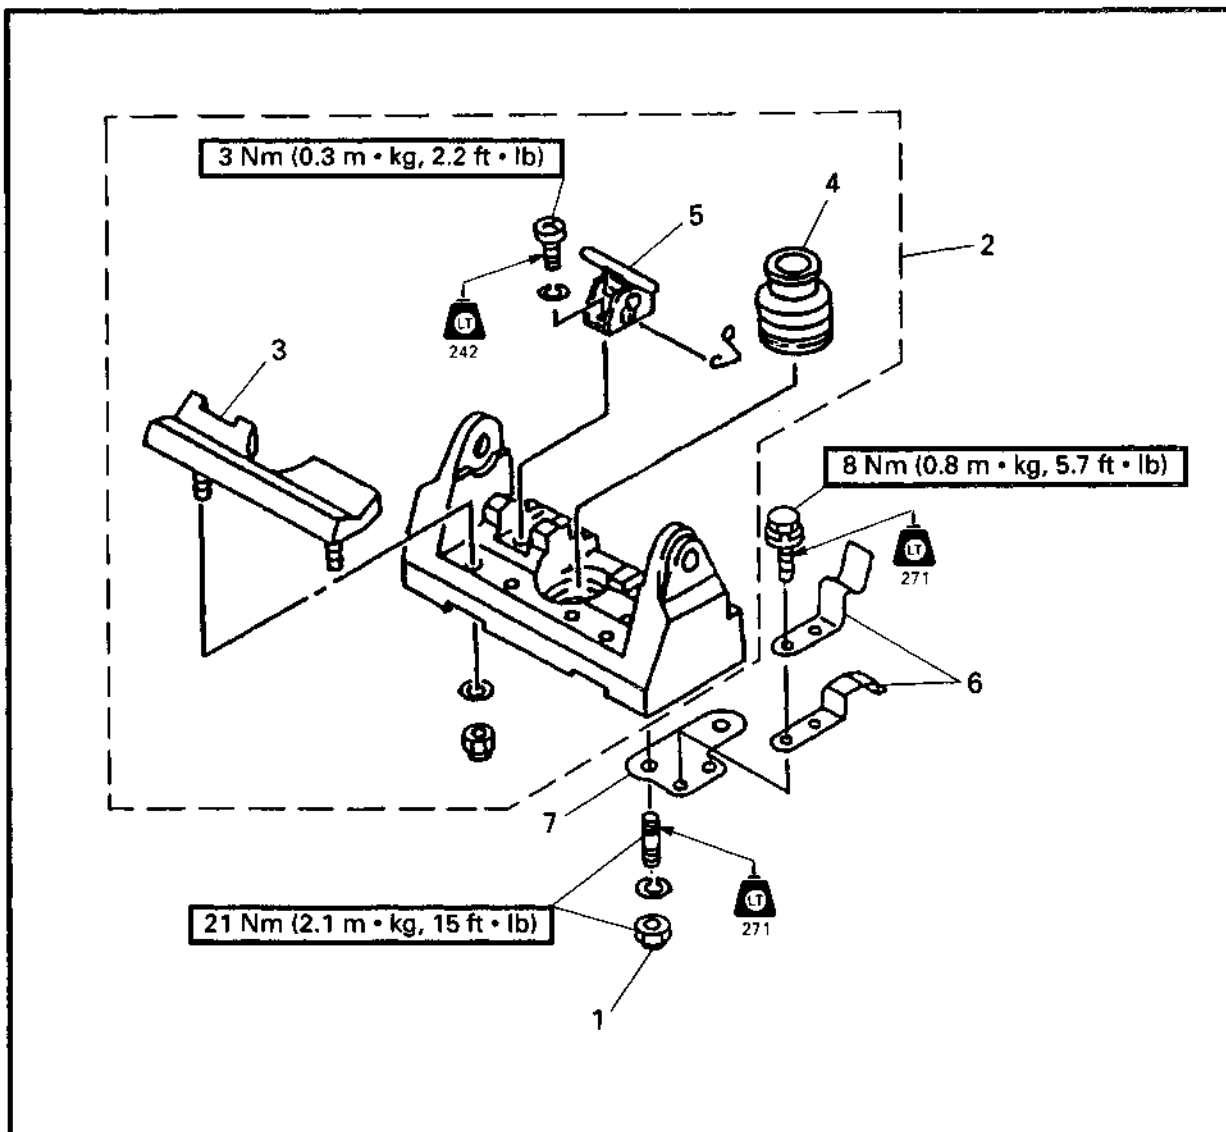
**STEERING POLE BRACKET
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	STEERING POLE BRACKET DISASSEMBLY		Follow the left "Step" for removal.
	Steering pole		Refer to "STEERING POLE".
1	Nylon nut	4	
2	Steering pole bracket assembly	1	
3	Stopper rubber	1	
4	Grommet	1	
5	Stopper pin	1	
6	Stopper	4	
7	Plate	2	
			Reverse the removal steps for installation.



STEERING POLE BRACKET


E

SERVICE POINTS

Steering pole bracket inspection

1. Inspect:

- Stopper rubber
- Stopper pin
- Stopper
- Steering pole bracket
Crack/Wear/Damage → Replace.

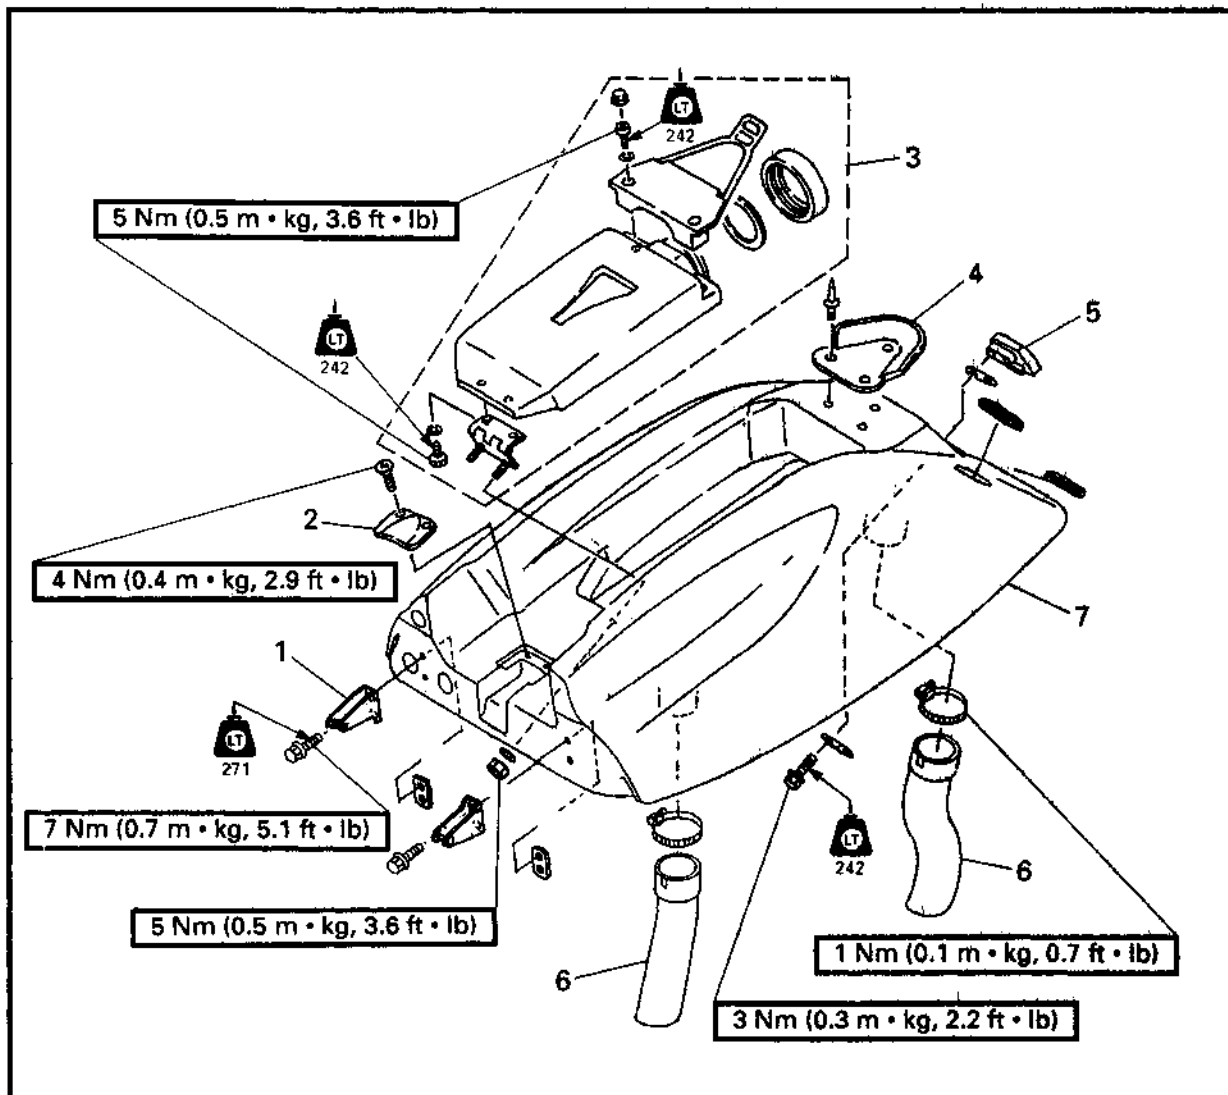
**ENGINE HOOD
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
ENGINE HOOD DISASSEMBLY			Follow the left "Step" for removal.
1	Stopper	2	NOTE: _____ Align the hose protrusion with hose joint protrusion. _____
2	Plate	1	
3	Fire extinguisher box assembly	1	
4	Damper	1	
5	Hook	1	
6	Ventilator hose	2	
7	Engine hood	1	Reverse the removal steps for installation.



SERVICE POINTS

Hood lock hook inspection


1. Inspect:

- Hood lock hook
Bend/Damage → Replace.


Engine hood inspection

1. Inspect:


- Engine hood
Crack/Damage → Replace.

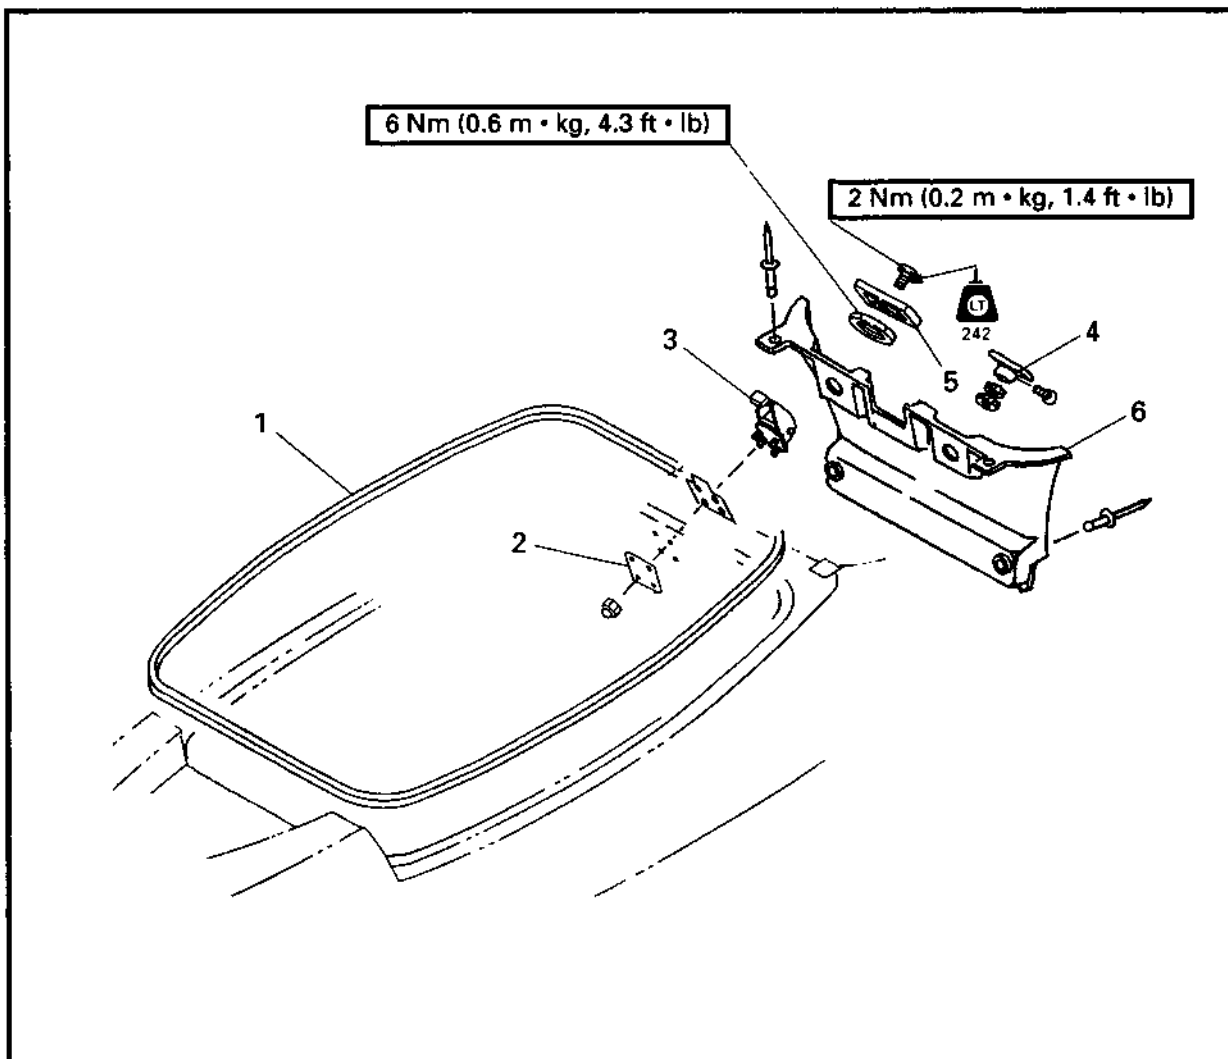
**DECK
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART

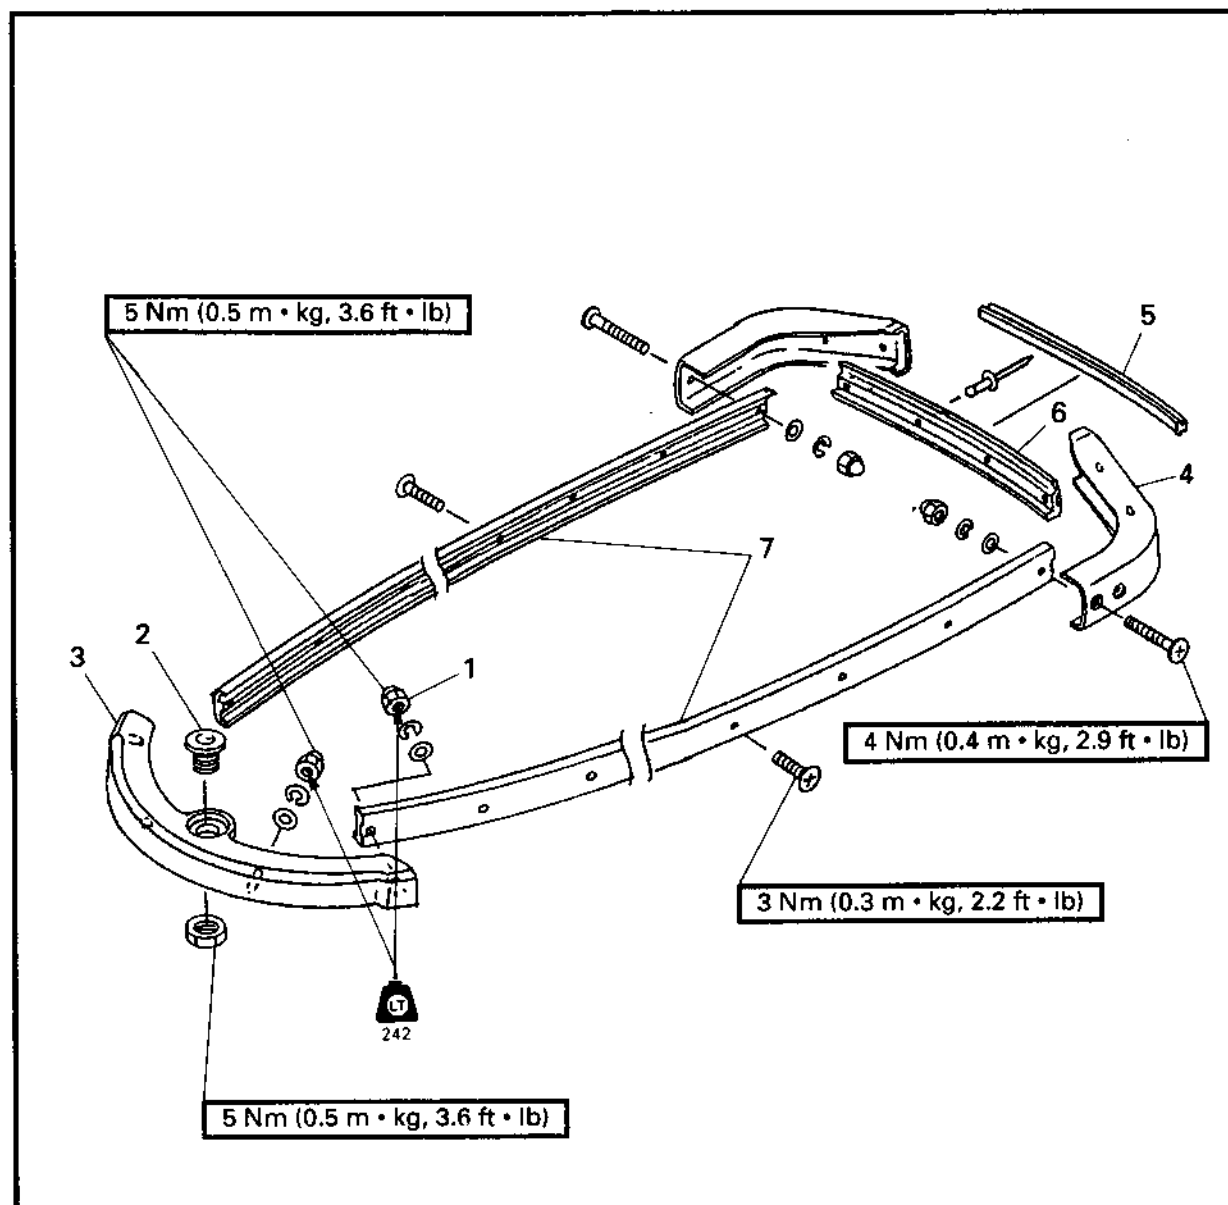Step	Procedure/Part name	Q'ty	Service points
1	DECK DISASSEMBLY Hood packing	1	Follow the left "Step" for removal. NOTE: ● Clean the seal rubber groove of the deck. ● Apply cyano-acrylate adhesive on the seal rubber.
2	Lock packing	1	
3	Hood lock	1	
4	Choke knob	1	
5	Fuel cock knob	1	
6	Bow mat	1	Reverse the removal steps for installation.


**GUNWALE
EXPLODED DIAGRAM**

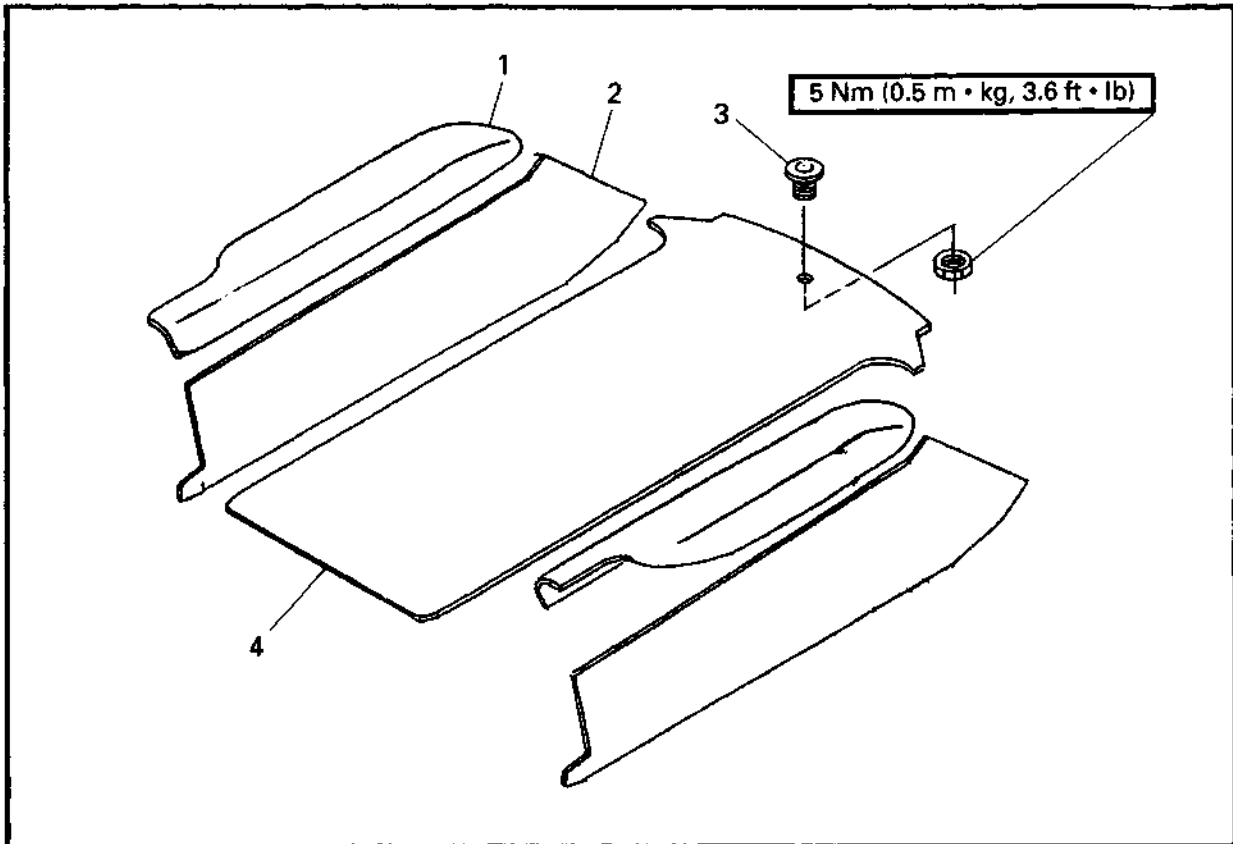REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
	GUNWALE REMOVAL		Follow the left "Step" for removal.
1	Cap nut	4	
2	Rope hole bolt	1	
3	Bow gunwale	1	
4	Stern gunwale	2	
5	Inner gunwale	1	
6	Cover gunwale	1	
7	Side gunwale	2	
			Reverse the removal steps for installation.


**MAT
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART



Step	Procedure/Part name	Q'ty	Service points
	MAT REMOVAL		
1	Pad	2	Follow the left "Step" for removal.
2	Upper mat	2	
3	Rope hole bolt	1	
4	Step mat	1	
			Reverse the removal steps for installation.

SERVICE POINTS
Mat installation

1. Install:
 - Mat

NOTE:

- Clean the riding tray surface before installing the mat.
- Apply cyanoacrylate adhesive on the mat.

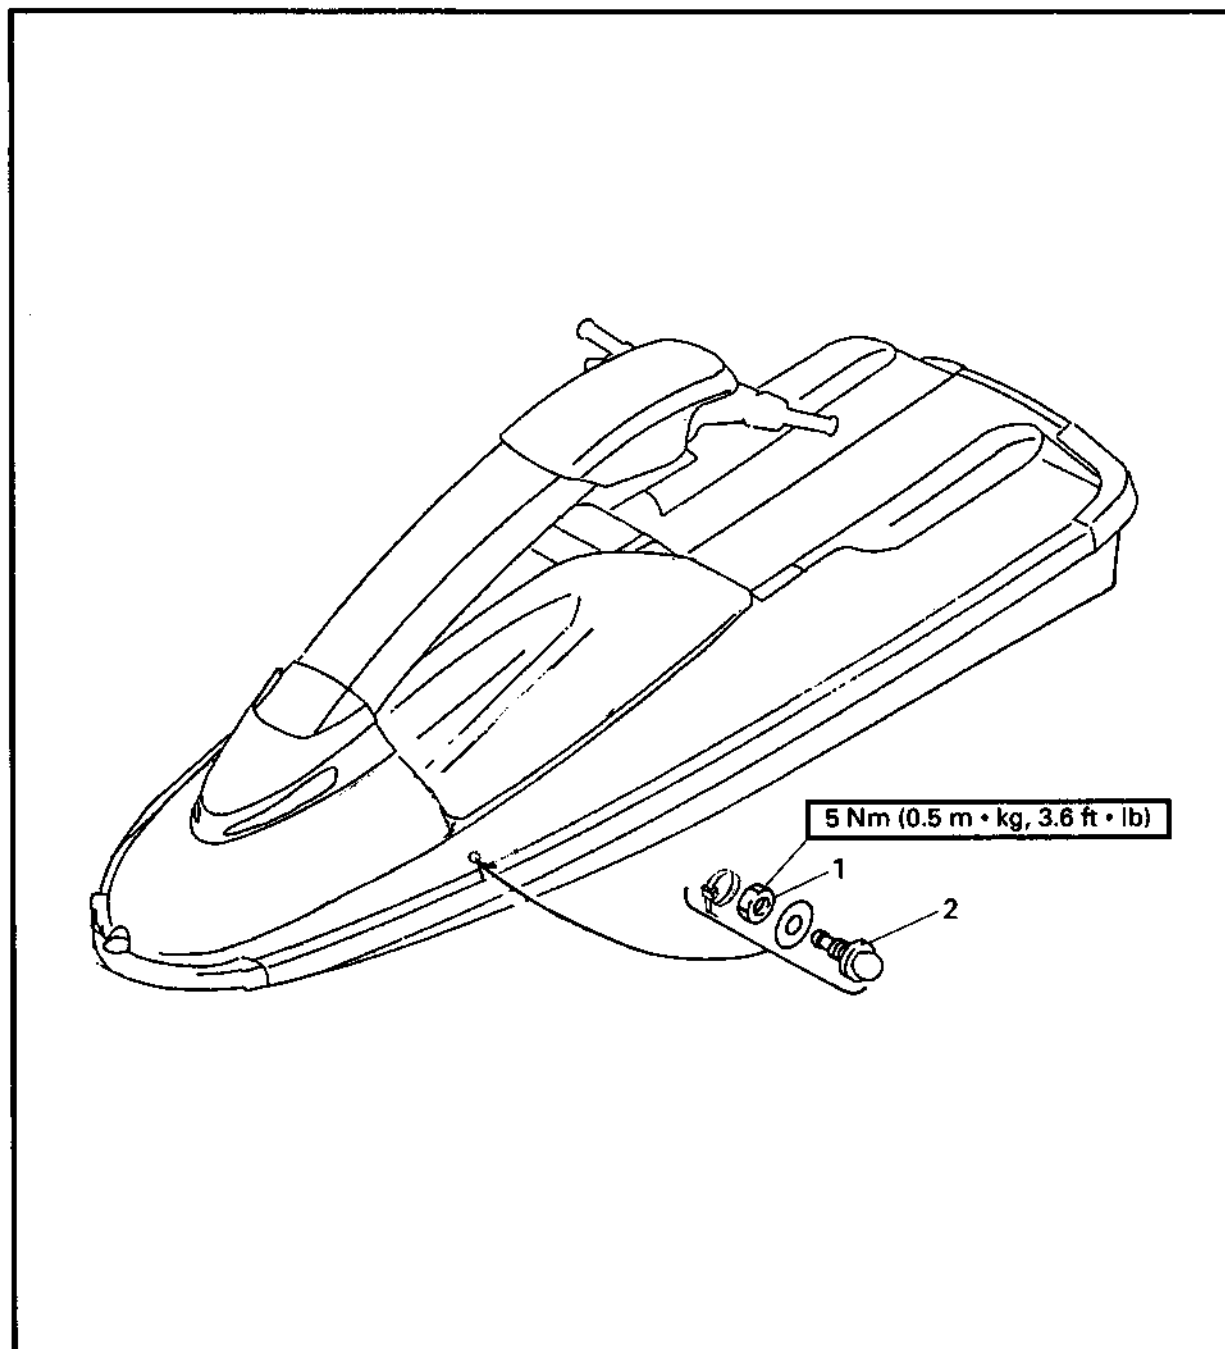
**HULL
EXPLODED DIAGRAM**

REMOVAL AND INSTALLATION CHART


Step	Procedure/Part name	Q'ty	Service points
	HULL DISASSEMBLY		
	Pilot water hose		Follow the left "Step" for removal.
1	Nut	1	
2	Pilot water plug	1	
			Reverse the removal steps for installation.



HULL REPAIR

Light scratching

1. Sand the scratched area smooth with #400 grit wet or dry paper, and then with #600 grit wet or dry paper.
2. Polish the area with rubbing compound and buff to a high gloss using a wool pad and automotive wax.




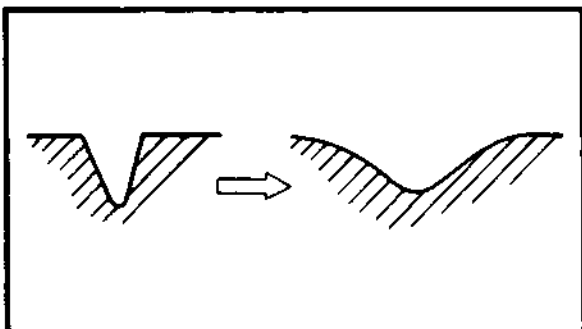


Deep scratching

1. Remove any sharp/rough edges from the surface.
2. Sand the area smooth for about one inch all around the scratch with #80 grit wet or dry paper.
3. Clean the area with acetone and dry it.
4. Mix gel-coat with gel-coat thickener to make gel-coat putty and then add the catalyst to make.
5. Apply and spread the catalyzed putty with a squeegee, then cover the putty with a piece of waxed paper.
6. When the putty has set, sand the area catalyzed putty. Smooth using #80 grit to #400 grit wet or dry paper and a sanding block.
7. Clean the area with a dry cloth and polish it.

⚠ WARNING



Resin, catalyst and solvent are flammable and toxic. Use only in a well-ventilated area and keep away from open flames and sparks. Observe all warnings given by the manufacturer.

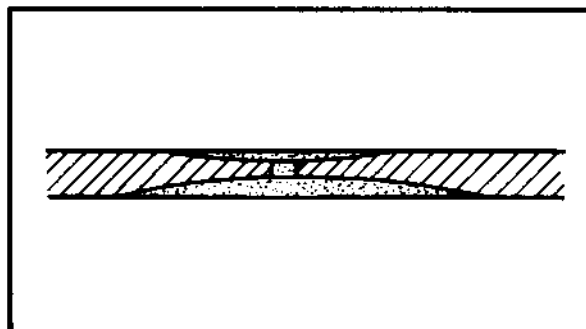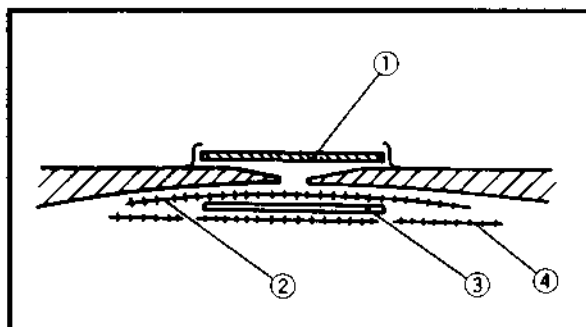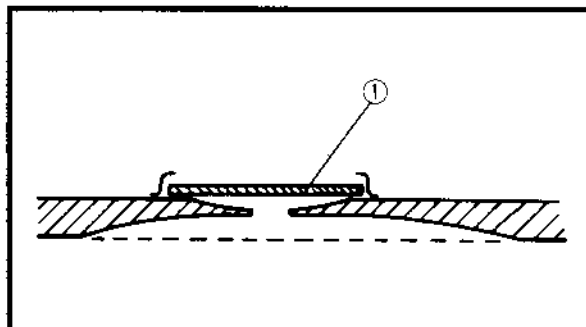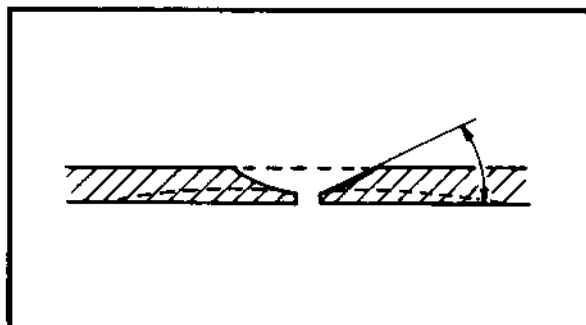
Hull damage (punctured)

1. Remove any damaged fiberglass.
2. Cut and open the crack approximately 1/4 inch.
3. Grind the opened edge less than 30° on the outside.
4. Grind the area from inside the hull approximately 4 inches beyond it.
5. Clean the area with acetone, apply BP-1 or an equivalent primer on both sides of the area and cure for 1/2 hour.
6. Tape a piece of cardboard covered with waxed paper ① over the damaged area.
7. Mix polyester resin and catalyst and apply it to the hull.
8. Apply a glass mat ② (2 inches smaller than the ground area).
9. Apply catalyzed resin.
10. Apply a 20 oz fiberglass cloth ③ (1 inch smaller than the glass mat).
11. Apply catalyzed resin.
12. Apply a final glass mat ④ (1 inch smaller than the ground area).
13. When the resin has hardened, remove the piece of cardboard.
14. Finish the outer surface using steps 3 - 7 in the "Deep scratching" section.

NOTE:

Refer to the "WATER VEHICLE FRP REPAIR MANUAL".

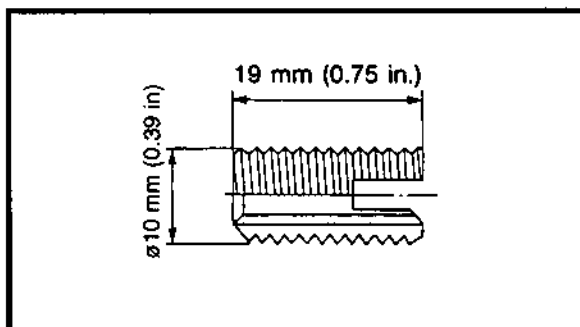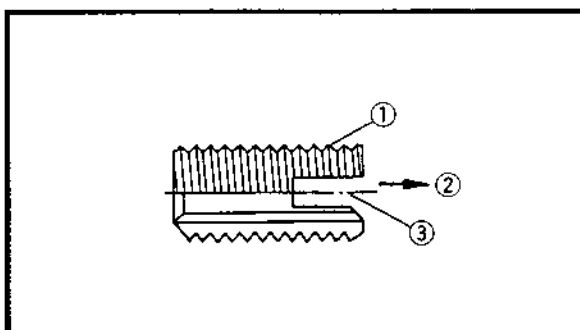
Insert nut
NOTE:



When a pop nut clinched to a hull slipped off or when a bolt fastened to an insert nut or pop nut was broken, use this insert nut.

Part No.	Part Name	Remarks
EW2-62733-09	nut	Stainless steel, M6

- Nut ①
- Direction of thread ②
- Slot to be threaded ③

NOTE:
Drilling size

Material	Pilot hold diameter
FRP or SMC	9.1 ~ 9.2 mm (0.36 in)
Brass	9.4 mm (0.37 in)

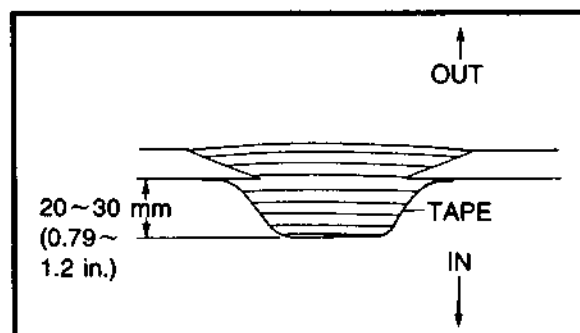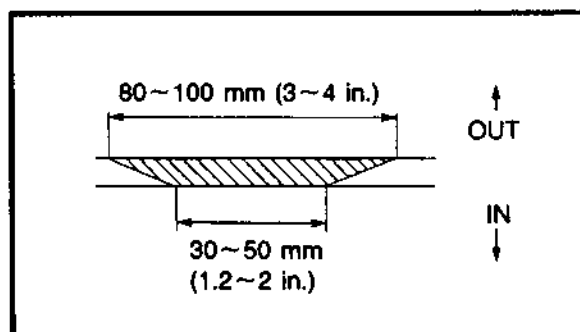
Example 1:

The nut is used to repair the pop nut designed for plate 2.

(by repairing the FRP portion, the new-type nut can be used for all models)

For details of repairs to the FRP portion, refer to the "Water Vehicle FRP Repair Manual".


1. Remove:
 - Pop nut
2. Scarf the shaded portion.
3. Clean the surface to be scarfed and the inside of the hull with acetone.
4. As shown, first tape up the inner surface of the hull and then laminate fiberglass mats over the tape using a resin.

NOTE:

When it is possible to work inside the hull, the mats should be laminated from the inside.



5. Smooth out the out surface by sanding it.
6. Install plate 2. Then, using a 9.2 mm (0.36 in) diameter drill, make a hole of depth 20 mm (0.79 in) in the center of the laminated fiberglass layers.
7. Pass the bolt ① through the insert nut, as shown, and lock the bolt with the nut ②. Screw in the insert nut so that the top is flush with the FRP surface. Loosen the lock nut and remove the bolt.

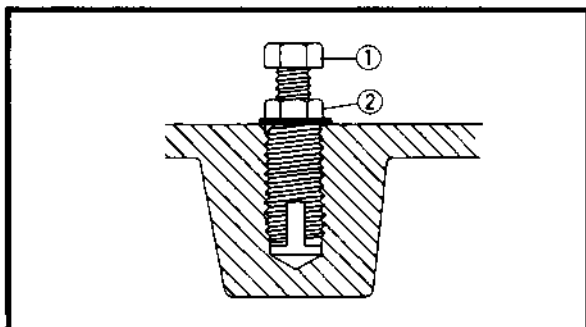
CAUTION

- The bolt should be made of steel and its strength should be 8T or more.
- If the bolt is inferior in strength, or is made of stainless steel, it may break.

- Bolt ① <Strength is 8T or more>
- Lock nut ②


Example 2:

The brass insert nut designed for the Super Jet Plate 2 or the screen intake is used:


1. If the bolt is broken, remove it using drills.

NOTE:

Use a small-diameter drill first, followed by drills of gradually increasing diameter.

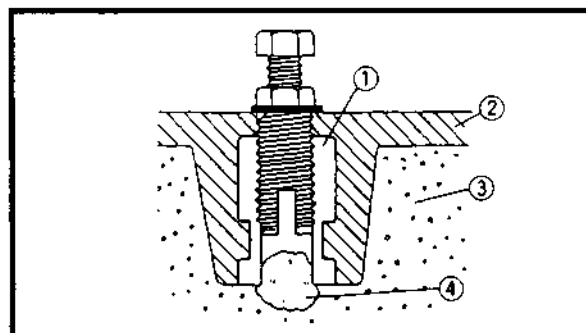

2. Use a 9.4 mm (0.37 in) drill for the final drilling.
3. Apply silicone sealant to the inside of the hole so that no water can enter the urethane foam.
4. As in Example 1 above, screw in the insert nut.
 - Brass insert ①
 - Hull ②
 - Urethane foam ③
 - Silicone sealant ④

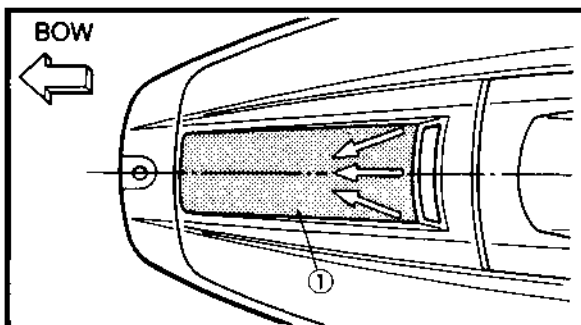

Removing a graphic

1. Remove:
 - Graphic ①

NOTE:

- Using a hair dryer, start at one corner and blow heat the graphic, holding the heat source at least 1-1/2" above the graphic.
- Slowly peel off the heated part and continue working towards the other side.

2. Clean:

Once the graphic is removed, clean the entire bow area with Isopropyl Alcohol to remove any residual adhesive.


Applying a graphic

1. Preparation:

Mix 1 tablespoon of liquid washing-up detergent with water in a 1qt spray bottle. Remove the backing from the new graphic and spray both sides and the area of the hull to which it is to be fitted.

NOTE:

Spraying the front of the graphic will protect it from being scratched during application.

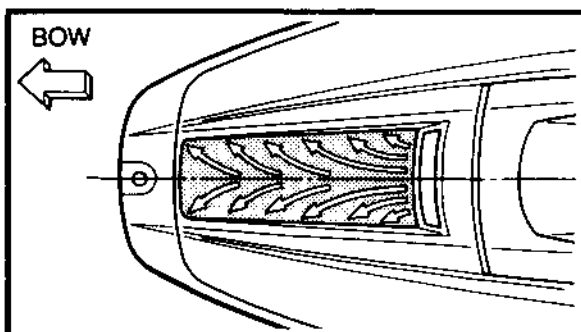

2. Apply:

Align the graphic on the fitting area and smooth it into position with a small rubber squeegee, removing all air bubbles in the process. Begin at the top of the graphic and work down and outwards from the center line of the graphic area.

3. Dry:

Let the graphic dry in place prior to waxing or using the vehicle.

CHAPTER 9

TROUBLE ANALYSIS

TROUBLE ANALYSIS	9-1
TROUBLE ANALYSIS CHART	9-1

TROUBLE ANALYSIS
NOTE:

Following items should be obtained before "trouble analysis".

1. Battery is charged and its specified gravity is in specification.
2. There is no incorrect wiring connection.
3. Wiring connections are surely engaged and without any rust.
4. Lanyard is installed to the engine stop switch.
5. Fuel is coming to the carburetor.

TROUBLE ANALYSIS CHART

Trouble mode										Check elements	
ENGINE WILL NOT START	ROUGH IDLING	ENGINE STALLS	ENGINE WILL NOT STOP	POOR PERFORMANCE	OVERHEATING	LOOSE STEERING	BILGE INCREASE	POOR BATTERY CHARGING		Relative part	Reference Chapter
										FUEL SYSTEM	
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>						Fuel tank	4
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>						Air vent hose	4
<input type="radio"/>		<input type="radio"/>		<input type="radio"/>						Fuel hose	4
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>						Fuel filter	4
<input type="radio"/>		<input type="radio"/>		<input type="radio"/>						Fuel pump	4
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>						Carburetor	4
	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>						Low speed screw setting	4
		<input type="radio"/>		<input type="radio"/>						High speed screw setting	4
		<input type="radio"/>		<input type="radio"/>						Carburetor synchronization	4
		<input type="radio"/>		<input type="radio"/>						Trolling speed	3
										POWER UNIT	
<input type="radio"/>	<input type="radio"/>			<input type="radio"/>						Compression	5
<input type="radio"/>	<input type="radio"/>			<input type="radio"/>						Reed valve	5
<input type="radio"/>	<input type="radio"/>									Cylinder head gasket	5
<input type="radio"/>				<input type="radio"/>						Piston ring	5
<input type="radio"/>				<input type="radio"/>						Cylinder block	5
<input type="radio"/>				<input type="radio"/>						Seal	5
<input type="radio"/>				<input type="radio"/>						Crank case	5
<input type="radio"/>				<input type="radio"/>						Piston	5
<input type="radio"/>				<input type="radio"/>						Bearing	5
<input type="radio"/>				<input type="radio"/>						Intermediate housing	5
				<input type="radio"/>						Coupling	5
				<input type="radio"/>						Coupling rubber	5
					<input type="radio"/>		<input type="radio"/>			Pilot water hose	5

Trouble mode											Check elements	
ENGINE WILL NOT START	ROUGH IDLING	ENGINE STALLS	ENGINE WILL NOT STOP	POOR PERFORMANCE	OVERHEATING	LOOSE STEERING	BILGE INCREASE	POOR BATTERY CHARGING			Relative part	Reference Chapter
					<input type="radio"/>		<input type="radio"/>				Water hose	5
					<input type="radio"/>		<input type="radio"/>				Water passage	5
											JET PUMP UNIT	
				<input type="radio"/>	<input type="radio"/>		<input type="radio"/>				Duct	6
				<input type="radio"/>							Impeller	6
				<input type="radio"/>							Intake screen	6
				<input type="radio"/>							Bearing	6
				<input type="radio"/>							Duct intake	6
					<input type="radio"/>		<input type="radio"/>				Water inlet hose	6
							<input type="radio"/>				Bilge hose	6
							<input type="radio"/>				Bilge strainer	6
							<input type="radio"/>				Bilge hose joint	6
							<input type="radio"/>				Valve body	6
											ELECTRICAL	
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>						Ignition system	7
<input type="radio"/>											Starting system	7
								<input type="radio"/>			Charging system	7
											HULL AND HOOD	
						<input type="radio"/>					Column bushing	8
				<input type="radio"/>			<input type="radio"/>				Water lock	8
				<input type="radio"/>			<input type="radio"/>				Exhaust hose	8

PROTECT YOUR INVESTMENT
Use Genuine YAMAHA Parts And Accessories

4/25/2000

LIBRARY COPY

**DO NOT REMOVE THIS ITEM FROM
THE YAMAHA LIBRARY!**

LIT-18616-01-43



**SJ700(U-W) 1996 Service
Manual**



LIT-18616-01-43