

STINGRAY® How To Properly Snap Your Canvas

NOTE: These instructions are for snapping your canvas, not anchoring the snaps to the deck.

Canvas snaps must be fastened in the order shown. Example - if you are snapping a cockpit cover, you must snap all of the •1 and •1 snaps first. Then you would proceed to the stern and fasten the •2 snaps...and so forth.

Refer to the chart below to determine the snaps used for each type of canvas.

Cockpit Cover

•1 & •2, 3, 4, 5, 6

Aft Curtain

•1 & •2, 3, 4, 5, 6

Bow Cover

•1 & •2, 3, 4


Cockpit Cover

1. Snap w/s, except for the last one on each w/s FRONT.
2. Pull & snap the two snaps above the ski tow at the transom.
3. Snap corner of aft deck, next to vents.
4. Snap the corner aft deck snaps.
5. Snap the stern snaps.
6. Snap the port & starboard hull snaps.

Aft Curtain

1. Install w/ connector to top and snap all snaps except the last two on the front.
2. Install the side curtains to the bimini top, but do NOT snap to wing.
3. Follow steps 2 - 4 from above.

•1 - represents both the snaps for the bow cover and the cockpit cover. The bow cover snaps to the underside of the windshield hatch. The cockpit cover snaps to the top side of the windshield hatch.

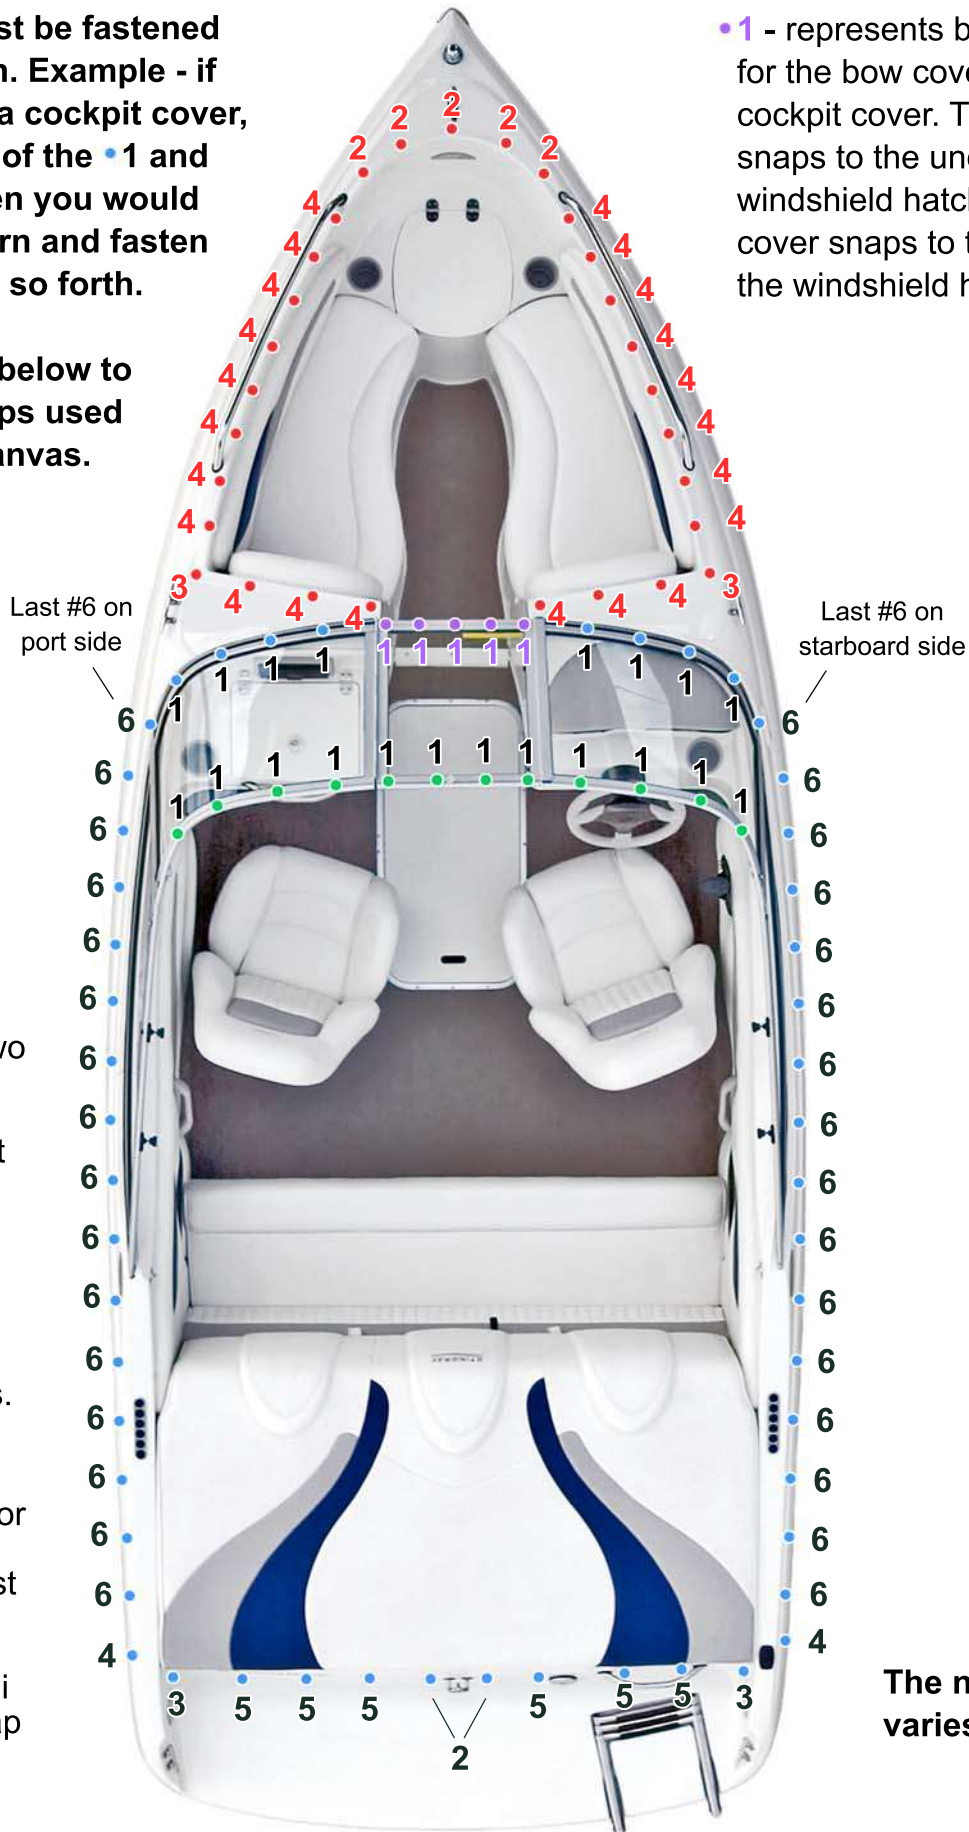

The number of snaps varies by model.